

Wind River[®] Compiler for MIPS

USER'S GUIDE

5.6

Copyright 11/6/07 Wind River Systems, Inc.

All rights reserved. No part of this publication may be reproduced or transmitted in any form or by any means without the prior written permission of Wind River Systems, Inc.

Wind River, the Wind River logo, Tornado, and VxWorks are registered trademarks of Wind River Systems, Inc. Any third-party trademarks referenced are the property of their respective owners. For further information regarding Wind River trademarks, please see:

<http://www.windriver.com/company/terms/trademark.html>

This product may include software licensed to Wind River by third parties. Relevant notices (if any) are provided in your product installation at the following location:
installDir\product_name\3rd_party_licensor_notice.pdf.

Wind River may refer to third-party documentation by listing publications or providing links to third-party Web sites for informational purposes. Wind River accepts no responsibility for the information provided in such third-party documentation.

Corporate Headquarters

Wind River Systems, Inc.
500 Wind River Way
Alameda, CA 94501-1153
U.S.A.

toll free (U.S.): (800) 545-WIND
telephone: (510) 748-4100
facsimile: (510) 749-2010

For additional contact information, please visit the Wind River URL:

<http://www.windriver.com>

For more information related to this product, or to contact Customer Support, please visit the following URL

<http://www.windriver.com/support>

Contents

PART I: INTRODUCTION

1	Overview	3
1.1	Introduction	3
1.2	Overview of the Tools	4
1.3	Documentation	7
2	Configuration and Directory Structure	9
2.1	Introduction	9
2.2	Components and Directories	9
2.3	Accessing Current and Other Versions of the Tools	15
2.4	Environment Variables	15
3	Drivers and Subprogram Flow	19
3.1	Introduction	19
3.2	Program Flow and Components	19

4	Selecting a Target and Its Components	23
4.1	Selecting a Target	23
4.2	Selected Startup Module and Libraries	28
4.3	Alternatives for Selecting a Target Configuration	29

PART II: WIND RIVER COMPILER

5	Invoking the Compiler	35
5.1	The Command Line	35
5.2	Rules for Writing Command-Line Options	36
5.3	Compiler Command-Line Options	39
5.4	Compiler -X Options	55
5.5	Examples of Processing Source Files	126
6	Additions to ANSI C and C++	131
6.1	Preprocessor Predefined Macros	131
6.2	Preprocessor Directives	134
6.3	Pragmas	137
6.4	Keywords	149
6.5	Attribute Specifiers	153
6.6	Intrinsic Functions	158
6.7	Other Additions	159

7	Embedding Assembly Code	165
7.1	Introduction	165
7.2	asm Macros	167
7.3	asm String Statements	172
7.4	Reordering in asm Code	174
7.5	Direct Functions	175
8	Internal Data Representation	177
8.1	Introduction	177
8.2	Basic Data Types	178
8.3	Byte Ordering	180
8.4	Arrays	180
8.5	Bit-fields	180
8.6	Classes, Structures, and Unions	181
8.7	C++ Classes	182
8.8	Linkage and Storage Allocation	186
9	Calling Conventions	189
9.1	Introduction	189
9.2	Stack Layout	190
9.3	Argument Passing	191
9.4	C++ Argument Passing	192
9.5	Returning Results	193

9.6	Register Use	194
9.7	Mixing MIPS16 and MIPS	197
10	Optimization	199
10.1	Introduction	199
10.2	Optimization Hints	200
10.3	Cross-Module Optimization	206
10.4	Target-Independent Optimizations	208
10.5	Target-Dependent Optimizations	221
10.6	Example of Optimizations	223
11	The Lint Facility	229
11.1	Introduction	229
11.2	Examples	230
12	Converting Existing Code	233
12.1	Introduction	233
12.2	Compilation Issues	233
12.3	Execution Issues	236
12.4	GNU Command-Line Options	238
13	C++ Features and Compatibility	239
13.1	Introduction	239
13.2	Header Files	240
13.3	C++ Standard Libraries	240

13.4	Migration From C to C++	241
13.5	Implementation-Specific C++ Features	243
13.6	C++ Name Mangling	246
13.7	Avoid setjmp and longjmp	249
13.8	Precompiled Headers	249
14	Locating Code and Data, Addressing, Access	253
14.1	Controlling Access to Code and Data	253
14.2	Addressing Mode - Functions, Variables, Strings	260
14.3	Access Mode — Read, Write, Execute	263
14.4	Local Data Area (-Xlocal-data-area)	270
14.5	Position-Independent Code and Data (PIC and PID)	271
15	Use in an Embedded Environment	275
15.1	Introduction	276
15.2	Compiler Options for Embedded Development	276
15.3	User Modifications	278
15.4	Startup and Termination Code	278
15.5	Hardware Exception Handling	285
15.6	Library Exception Handling	285
15.7	Linker Command File	286
15.8	Operating System Calls	287
15.9	Communicating with the Hardware	291

15.10	Reentrant and “Thread-Safe” Library Functions	293
15.11	Target Program Arguments, Environment Variables, and Predefined Files	294
15.12	Profiling in an Embedded Environment	296

PART III: WIND RIVER ASSEMBLER

16	The Wind River Assembler	301
16.1	Introduction	301
16.2	Selecting the Target	302
16.3	The das Command	302
16.4	Assembler Command-Line Options	303
16.5	Assembler -X Options	307
17	Syntax Rules	317
17.1	Format of an Assembly Language Line	317
17.2	Symbols	320
17.3	Direct Assignment Statements	320
17.4	External Symbols	321
17.5	Local Symbols	322
17.6	Constants	323
18	Sections and Location Counters	327
18.1	Program Sections	327
18.2	Location Counters	328

19	Assembler Expressions	331
19.1	Introduction	331
19.2	Evaluation of Terms and Expressions	331
19.3	Unary Operators	333
19.4	Binary Operators	335
20	Assembler Directives	339
20.1	Introduction	339
20.2	List of Directives	340
21	Assembler Macros	363
21.1	Introduction	363
21.2	Macro Definition	364
21.3	Invoking a Macro	367
21.4	Macros to “Define” Structures	367
22	Example Assembler Listing	369

PART IV: WIND RIVER LINKER

23	The Wind River Linker	373
23.1	Introduction	373
23.2	The Linking Process	374
23.3	Symbols Created By the Linker	378
23.4	.abs Sections	381

23.5	COMMON Sections	381
23.6	COMDAT Sections	382
23.7	Sorted Sections	383
23.8	Warning Sections	384
23.9	.frame_info sections	384
24	The dld Command	387
24.1	The dld Command	387
24.2	Defaults	390
24.3	Order on the Command Line	391
24.4	Linker Command-Line Options	391
24.5	Linker -X options	399
25	Linker Command Language	409
25.1	Introduction	410
25.2	Example "bubble.dld"	410
25.3	Syntax Notation	412
25.4	Pattern Matching in Linker Command Files	413
25.5	Numbers	414
25.6	Symbols	414
25.7	Expressions	415
25.8	Command File Structure	416
25.9	MEMORY Command	417

25.10	SECTIONS Command	418
25.11	Cache Optimization (CACHE and PROFILE Commands)	427
25.12	Assignment Commands	430
25.13	Examples	431

PART V: WIND RIVER COMPILER UTILITIES

26	Utilities	447
26.1	Introduction	447
26.2	Common Command-Line Options	447
27	D-AR Archiver	449
27.1	Synopsis	449
27.2	Syntax	449
27.3	Description	450
27.4	Examples	453
28	D-BCNT Profiling Basic Block Counter	455
28.1	Synopsis	455
28.2	Syntax	455
28.3	Description	456
28.4	Files	457
28.5	Examples	457
28.6	Coverage	458

28.7	Notes	458
29	D-DUMP File Dumper	459
29.1	Synopsis	459
29.2	Syntax	459
29.3	Description	460
29.4	Examples	465
30	dmake Makefile Utility	467
30.1	Introduction	467
30.2	Installation	467
30.3	Using dmake	468
31	WindISS Simulator and Disassembler	469
31.1	Introduction	469
31.2	Synopsis	469
31.3	Simulator Mode	470
31.4	Batch Disassembler Mode	476
31.5	Interactive Disassembler Mode	477
31.6	Examples	478

PART VI: C LIBRARY

32	Library Structure, Rebuilding	483
32.1	Introduction	483

32.2	Library Structure	484
32.3	Library Sources, Rebuilding the Libraries	493
33	Header Files	497
33.1	Introduction	497
33.2	Files	498
33.3	Defined Variables, Types, and Constants	500
34	C Library Functions	503
34.1	Format of Descriptions	503
34.2	Reentrant Versions	505
34.3	Function Listing	506

PART VII: APPENDICES

A	Configuration Files	587
A.1	Configuration Files	587
A.2	How Commands, Environment Variables, and Configuration Files Relate	588
A.3	Standard Configuration Files	590
A.4	The Configuration Language	594
B	Compatibility Modes: ANSI, PCC, and K&R C	601
C	Compiler Limits	607
D	Compiler Implementation-Defined Behavior	609
D.1	Introduction	609

D.2 Translation 610

D.3 Environment 612

D.4 Library functions 613

E Assembler Coding Notes 617

E.1 Introduction 617

E.2 Instruction Mnemonics 617

E.3 Operand Addressing Modes 618

F.4 Executable and Linking Format (ELF) 623

G Compiler -X Options Numeric List 637

Index 647

PART I

Introduction

1	Overview	3
2	Configuration and Directory Structure	9
3	Drivers and Subprogram Flow	19
4	Selecting a Target and Its Components	23

1

Overview

- 1.1 Introduction 3
- 1.2 Overview of the Tools 4
- 1.3 Documentation 7

1.1 Introduction

This manual describes all tools in the Wind River Compiler toolkit (formerly known as the Diab Compiler) for the MIPS family of RISC microprocessors, including the MIPS R3000 and R4000 series, MIPS64, and MIPS16 mode. It includes detailed information about each tool, optimization hints, and guidelines for porting existing code to the compilers and assembler.

For introductory information, including an example program, see the *Getting Started* manual.

1.2 Overview of the Tools

The compiler suite includes high-performance C and C++ tools designed for professional programmers. Besides the benefits of state-of-the-art optimization, they reduce time spent creating reliable code because the compilers and other tools are themselves fast, and they include built-in, customizable checking features that will help you find problems earlier.

With hundreds of command-line options and special pragmas, and a powerful linker command language for arranging code and data in memory, the tools can be customized to meet the needs of any device software project. Special options are provided for compatibility with other tools and to facilitate porting of existing code.

Important Compiler Features and Extensions

- Many compiler controls and options for greater flexibility over compiler operation and code generation.
- Many features and extensions targeted for the device programmer. See [15. Use in an Embedded Environment](#).
- Optimizations and features tailored individually for each processor type within the MIPS microprocessor family. See [4.3 Alternatives for Selecting a Target Configuration](#), p.29 for information on how to specify the target processor.
- Extensive compile-time checking to detect suspicious and nonportable constructs. See [11. The Lint Facility](#).
- Powerful profiling capabilities to locate bottlenecks in the code. The profiling information can also automatically be used as feedback to the compiler, enabling even more aggressive optimizations. See [10. Optimization](#), and the discussion of D-BCNT in [28. D-BCNT Profiling Basic Block Counter](#).
- C++ templates, exceptions, and run-time type information.

High Performance Optimizations

A wide range of optimizations, some of which are unique to the Wind River Compiler, produce fast and compact code as measured by independent

benchmarks. Special optimizations include superior interprocedural register allocations, inlining, and reaching analysis.

Optimizations fall into three categories: local, function-level, and program-level, as listed next. See [10. Optimization](#).

- Local optimizations within a block of code:
 - Constant folding
 - Integer divide optimization
 - Local common sub-expression elimination
 - Local strength reduction
 - Minor transformations
 - Peep-hole optimizations
 - Switch optimizations
- Function global optimizations within each function:
 - Auto increment/decrement optimizations
 - Automatic register allocation
 - Complex branch optimization
 - Condition code optimization
 - Constant propagation
 - Dead code elimination
 - Delayed branches optimization
 - Delayed register saving
 - Entry/exit code removal
 - Extend optimization
 - Global common sub-expression elimination
 - Global variable store delay
 - Lifetime analysis (coloring)
 - Link register optimization
 - Loop count-down optimization
 - Loop invariant code motion
 - Loop statics optimization
 - Loop strength reduction
 - Loop unrolling
 - Memory read/write optimizations
 - Reordering code scheduling
 - Restart optimization
 - Branch-chain optimization
 - Space optimization
 - Split optimization
 - Structure and bit-field member to registers

- Tail recursion
- Tail jump optimization
- Undefined variable propagation
- Unused assignment deletion
- Variable location optimization
- Variable propagation

- Program global optimizations across multiple functions:

- Argument address optimization
- Function inlining
- Glue function optimization
- Interprocedural optimizations
- Literal synthesis optimization
- Local data area optimization
- Profiling feedback optimization
- Static function optimization

Portability

The compiler implements the ANSI C++ standard (ISO/IEC FDIS 14882) as described in [13. C++ Features and Compatibility](#). Exceptions, templates, and run-time type Information (RTTI) are fully implemented.

For C modules, the compiler conforms fully to the ANSI X3.159-1989 standard (called ANSI C), with extensions for compatibility with other compilers to simplify porting of legacy code.

Standard C programs can be compiled with a strict ANSI option that turns off the extensions and reduces the language to the standard core. Alternatively, such programs can be gradually upgraded by using the extensions as desired. See [BCompatibility Modes: ANSI, PCC, and K&R C](#), p.601 for operational details when compiling in different modes.

Wind River tools produce identical binary output regardless of the host platform on which they run. The only exceptions occur when symbolic debugger information is generated (that is, when **-g** options are enabled), since path information differs from one build environment to another.

1.3 Documentation

This User’s Guide

This guide contains all information necessary to use the tools effectively. Please see the table of contents for a detailed overview.

Table 1-1 **User’s Guide Parts**

Part	Contents
<i>Part I. Introduction</i>	Overview, configuration, directory structure, subprograms, selecting a target for compilation.
<i>Part II. Wind River Compiler</i>	The compilers, including invocation, options, additions to C and C++ for device programming, internal data representation, calling conventions, and optimizations.
<i>Part III. Wind River Assembler</i>	The assembler, including invocation, options, syntax rules, expression syntax, and all assembler directives. See manufacturer’s manuals for details on MIPS instructions.
<i>Part IV. Wind River Linker</i>	The linker, including invocation, options, the linker command language, and object module format.
<i>Part V. Wind River Compiler Utilities</i>	The D-AR library archiver; the D-DUMP utility for converting and examining object, executable, and archive files; and others.
<i>Part VI. C Library</i>	The structure of the C libraries provided with the compiler for use in different environments, and the details of the functions in the libraries.
<i>Part VII. Appendices</i>	Configuration files, limits, implementation-defined behavior, assembler coding notes, object modules format details, -X options by number, and messages.

This manual does not explain the C or C++ language. See [Additional Documentation](#), p.8 below, for references to standard works.

Additional Documentation

Changes made for this release and information developed after publication of this manual may be found in the release notes.

The following C++ references are recommended: the ANSI C++ standard (ISO/IEC FDIS 14882), *The C++ Programming Language* by Bjarne Stroustrup, *The Annotated C++ Reference Manual* by Margaret A. Ellis and Bjarne Stroustrup, and *The C++ Standard Template Library* by P.J. Plauger et al.

For C, see the ANSI C standard X3.159-1989 and *The C Programming Language* by Brian Kernighan and Dennis Ritchie (K&R).

The following manual from Freescale may be consulted for details about microprocessor architecture and instructions:

- *MIPS RISC Architecture*

When this manual lists assembler code, the mnemonics are the assembler mnemonics used for embedded Freescale systems. The compiler tools are available with other mnemonics.

2

Configuration and Directory Structure

- 2.1 Introduction 9
- 2.2 Components and Directories 9
- 2.3 Accessing Current and Other Versions of the Tools 15
- 2.4 Environment Variables 15

2.1 Introduction

This chapter covers the layout of the various tools and components that make up the Wind River Compiler for MIPS and its associated programs, utilities, header files, and so on. It also covers how to access the tool (including previous versions of the compiler) and how to set environment variables for the compiler.

2.2 Components and Directories

All files are located in subdirectories of a single root directory. The following terminology is used throughout this manual to refer to that root and related subdirectories:

- *install_path* represents the full pathname of the root directory. The root directory contains *version_path* subdirectories, each acting as a sub-root for all files related to a single version of the compiler. This allows multiple versions of the tools to reside on the same file system.
- *version_path* is the name of the complete path for a single version of the compiler.
- *host_dir* is the name of a subdirectory under *version_path* containing directories specific to a single type of host, e.g. **Win32** or **SUNS** (Sun Solaris). This permits tools for different types of systems to reside on a single networked file system

These names for a default installation depend on the host file system. The following table assumes that the version number is 5.6.x and shows examples for common installations. For other systems, see the installation procedures shipped with the media.

Table 2-1 **Example Default Installation Pathnames**

System	Default <i>version_path</i>	Default with <i>host_dir</i>
UNIX	/usr/lib/diab/5.6.x	/usr/lib/diab/5.6.x/host
Solaris		/usr/lib/diab/5.6.x/SUNS
Linux		/usr/lib/diab/5.6.x/LINUX386
PCs	C:\diab\5.6.x	C:\diab\5.6.x\op-sys
Windows		C:\diab\5.6.x\WIN32



NOTE: In this manual, instructions and examples for Windows apply to all supported versions of Microsoft Windows.

Also, in cases where the Windows and UNIX pathnames are identical except for the path separator character, only one pathname is shown using the UNIX separator “/”.

The following table lists the subdirectories of *version_path* and important files contained in them. For brevity’s sake, files found in one directory may not necessarily be listed in other directories in which they may reside.

Table 2-2 **Version_path Subdirectories and Important Files**

Subdirectory or File	Contents or Use
Programs:	
<i>host_dir/bin/</i>	Programs intended for direct use by the user:
dcc	Main driver—assumes C libraries and headers.
dplus	Main driver—assumes C++ libraries and headers.
das	The assembler. A separate MIPS-specific description file controls assembly.
dld	The linker. Generates executable files from one or more object files and object libraries (archives).
dar	D-AR archiver. Creates an object library (archive) from one or more object files.
dbcnt	D-BCNT basic block counter. Generates profiling information from files compiled with -Xblock-count .
dctrl	Utility to set default target for compiler, assembler, and linker.
ddump	D-DUMP object file utility. Examines or converts object files, e.g. ELF to Motorola S-Records.
dmake	“make” utility; extended features are required to re-build the libraries. Not for use with VxWorks development tools.
flexlm* lm*	Programs and files for the license manager used by all Wind River tools.
llopt	Assembly-level optimizer. llopt runs between the compiler frontend and reorder . A -W1 compiler option is passed to llopt and -W2 is passed to reorder .
reorder	This program is started by the driver. It reschedules the instruction sequence to avoid stalls in the processor pipeline and does some peephole optimizations. See 10. Optimization .

Table 2-2 **Version_path Subdirectories and Important Files** (cont'd)

Subdirectory or File	Contents or Use
<i>host_dir/lib/</i>	Programs and files used by programs in bin .
cto eto , dtoa	C and C++ compilers. A separate MIPS-specific description file directs code generation. (The preferred C++ compiler is eto ; dtoa is an older version.)
Configuration, header, and source files	
conf/	Configuration files for compilers, assembler, and linker.
dtools.conf default.conf user.conf	Configuration files read by the compiler drivers at startup, primarily to supply command-line options. See A. Configuration Files for details. Other .conf files for particular boards or operating systems may also be present.
default.dld	Default linker command file. Alternative and sample .dld linker command files are also found in this directory. See 24.2 Defaults , p.390 in the Linker section of this manual.
dmake/	dmake startup files. See 30. dmake Makefile Utility .
example/	Example files used in the <i>Getting Started</i> manual and elsewhere.
include/	Standard and other header files for use in user programs, plus HP/SGI STL library header files.
libraries/	Library sources and build files. See 32.3 Library Sources, Rebuilding the Libraries , p.493 for details.
pdf/	PDF form for all manuals.
relhist/	Older Release Notes.
src/	Source code for replacement routines for system calls. These functions must be modified before they can be used in an embedded environment. See 15. Use in an Embedded Environment .
MIPS startup module and libraries	
MIPSE/	ELF library and startup code directories (big-endian).

Table 2-2 **Version_path Subdirectories and Important Files** (cont'd)

Subdirectory or File	Contents or Use
crt0.o	Start up code to initialize the environment and then call main . The source for crt0.o is src/crtmips/crt0.s .
libc.a cross/libc.a simple/libc.a	<p>ELF standard C libraries. Each libc.a is actually a short text file of -l options listing other libraries to be included. A libc.a file is selected based on the library search path (See 4.2 Selected Startup Module and Libraries, p.28).</p> <p>MIPSE/libc.a is a generic C library with no input/output support. It includes sublibraries libi.a, libcfp.a, libimpl.a, libimpfp.a, all described below.</p> <p>MIPSE/simple/libc.a includes the above four sublibraries plus libchar.a providing basic character I/O.</p> <p>MIPSE/cross/libc.a includes the above four sublibraries plus libram.a, which adds RAM-disk-based file I/O.</p> <p>For details, see 32.2 Library Structure, p.484.</p>
libchar.a	Basic character input/output support for stdin and stdout (stderr and named files are not supported); an alternative to libram.a .
libram.a	Adds to libchar.a RAM-disk-based file I/O for stdin and stdout only; an alternative to libchar.a .
libi.a	General library containing standard ANSI C functions.
libimpl.a	Utility functions called by compiler generated or runtime code, typically for constructs not implemented in hardware, e.g., low-level software floating point support, multiple register save and restore, and 64-bit integer support.
libd.a	Additional standard library functions for C++ (libc.a is also required).
libg.a	Functions to generate debug information for some debug targets.
windiss/libwindiss.a	Support library for WindISS instruction-set simulator when supplied. Note: implicitly also uses cross/libc.a .

Table 2-2 Version_path Subdirectories and Important Files (cont'd)

Subdirectory or File	Contents or Use
Floating point-specific libraries and sub-libraries	
MIPSEN/	ELF floating point stubs for floating point support of "None".
libcfp.a	Stubs to avoid undefined externals.
libimpfp.a	Empty file required by different versions of libc.a .
libstl.a, libstlstd.a	Support library for C++. Includes iostream and complex math classes.
MIPSES/	ELF software floating point libraries:
libcfp.a	Floating point functions called by user code.
libcomplex.a	C++ complex math class library.
libimpfp.a	Conversions between floating point and other types.
libios.a	C++ iostream class library.
libm.a	Math library.
libpthread.a	Unsupported implementation of POSIX threads for use with the example programs. Text file which includes sub-libraries libdk*.a .
MIPSEV/	ELF vector floating point libraries:
MIPS-64Ef/	MIPS-64 ELF hardware floating point versions of the floating point libraries above.
MIPSEH/	ELF hardware floating point versions of the floating point libraries above.
MIPSEf/	Parallel directories for ELF "far" libraries and startup code compiled with -Xsmall-data and -Xsmall-const both equal 0 as opposed to the default value of 8 (8 and 0 for MIPS16).
MIPSLf/	Parallel little-endian ELF library and startup code directories

2.3 Accessing Current and Other Versions of the Tools

The driver (**dcc** or **dplus**) automatically finds the subprograms it calls (it is modified with the directory selected during installation). Thus, running the compiler requires only that driver be accessed in any of the usual ways:

- Add *version_path/host_dir/bin* to your path for UNIX or *version_path\host_dir\bin* for Windows.
- Create an alias or batch file that includes the complete path directly.
- Copy **dcc** or **dplus** to an existing directory in your path, e.g., */usr/bin* on UNIX.

If the tools are installed on a remote server, Windows users should map a drive letter to the remote directory where they reside and use that drive letter when setting their path variable.

You can invoke an older copy of a driver as follows:

- Rename the main driver for the older version. For example, to execute version 4.4a of the C++ driver, rename **dplus** in the **bin** directory for version 4.4a **dplus44a**. Then access **dplus44a** in any of the usual ways described above.
- Modify your path to put the directory containing the desired version before the directory containing any other version. The driver command will then access the desired version.
- Create an alias or batch file that includes the complete path of the desired version.

2.4 Environment Variables



NOTE: This section is for unusual cases. It is usually sufficient to override the default setting by using the **-t** option on a command line when invoking a tool, or to use one of the other methods, all as described under [4.3 Alternatives for Selecting a Target Configuration](#), p.29.

The configuration information which controls default operation of the tools is usually stored as *configuration variables* in **default.conf** in the **conf** subdirectory of the *version_path* directory by the **dctrl** program. These configuration variables

include **DTARGET**, **DFP**, **DOBJECT**, and **DENVIRON**. However, if an environment variable having the same name as a configuration variable is set, the value of the environment variable will override the value stored in **default.conf**. (This can in turn be overridden by using a **-t** or **-WD** option on the command line when invoking a tool.)

The method used to set environment variables depends on the operating system as shown in the following table.

Table 2-3 **Setting Environment Variables**

System	Command
UNIX	<code>variable=value; export variable</code>
Windows	<code>set variable=value</code>

2.4.1 **Environment Variables Recognized by the Compiler**

This section describes the environment variables recognized by the compiler.

DCONFIG

Specifies the configuration file used to define the default behavior of the tools. documents the configuration file. If neither **DCONFIG** nor the **-WC** option is used (see [A.2.2 Startup](#), p.589), the drivers use:

<code>version_path/conf/dtools.conf</code>	(UNIX)
<code>%version_path%\conf\dtools.conf</code>	(Windows)

DTARGET

DOBJECT

DFP

DENVIRON

These four environment variables specify, respectively, the target processor, object file format and mnemonic type, floating point method, and execution environment. They may be used to override the values set in **default.conf** (and will in turn be overridden by a **-t** option on the command line). **DENVIRON** may also refer to an additional configuration file, for example to set options for a particular target operating system. For details, see:

- [4.3 Alternatives for Selecting a Target Configuration](#), p.29.
- [4.1 Selecting a Target](#), p.23 for valid settings for the four variables.
- [A.3.1 DENVIRON Configuration Variable](#), p.591 regarding **DENVIRON**.

DFLAGS

Specifies extra options for the drivers and is a convenient way to specify **-XO**, **-O** or other options with an environment variable (e.g., to avoid changing several makefiles or to override options given in a configuration file). The options in **DFLAGS** are evaluated before the options given on the command line. See [A.3 Standard Configuration Files](#), p.590, especially [Figure A-2](#) for details.

DIABLIB

Formerly used to tell the compiler and drivers where to look for the tools. If **DIABLIB** is defined, it should be set to the *version_path* selected during installation. If **DIABLIB** is not defined, the compiler and drivers are found on the user's path variable or from an absolute directory path specified on the command line.



NOTE: **DIABLIB** is deprecated and is maintained for backward compatibility only.

DIABTMPDIR

Specifies the directory for all temporary files generated by all tools in the tool suite.

3

Drivers and Subprogram Flow

3.1 Introduction 19

3.2 Program Flow and Components 19

3.1 Introduction


This chapter lists the steps involved when using the C or C++ drivers to compile a source program and describes the different components involved.

3.2 Program Flow and Components

The Wind River tools are most easily invoked using the **dcc** and **dplus** *driver programs* (often referred to simply as *drivers*). Depending on the input files and options on the command line, the driver may run up to five subprograms: the C preprocessor, either or both compilers, the assembler, and the linker. (The driver may also invoke optimization subcomponents.)

The following figure shows the subprogram flow graphically for a C file. A C++ file is processed similarly except **dplus** invokes the C++ **etoc** compiler instead of **ctoc**. The subprograms and the *stopping options* are described following the figure.

Figure 3-1 Subprogram Flow and Intermediate Files

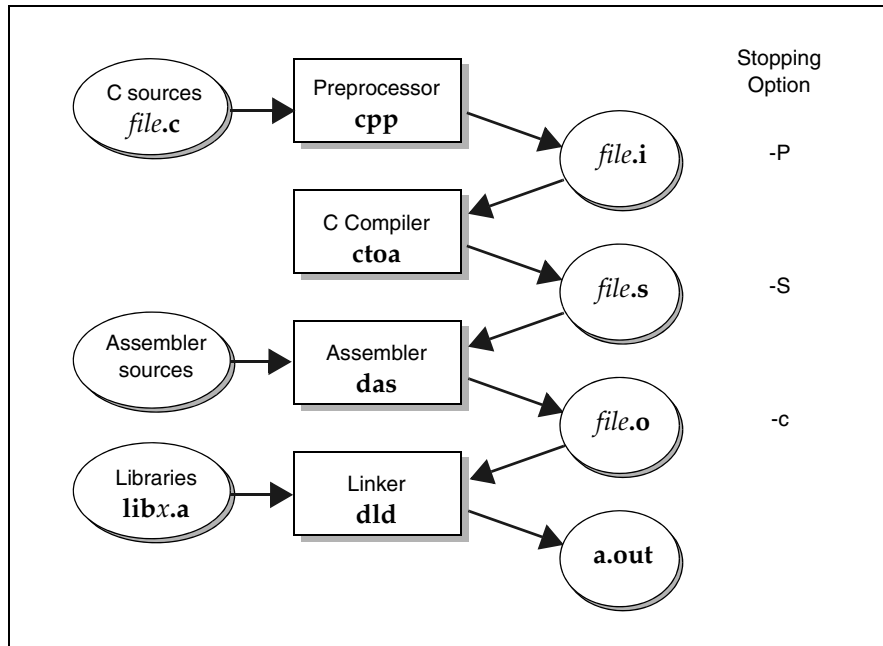

Driver command lines are described in detail in [5. Invoking the Compiler](#). The general form is:

dcc	[options]	[input-files]	Assumes Wind River C libraries.
dplus	[options]	[input-files]	Assumes Wind River C++ libraries.

The driver determines the starting subprogram to be applied to each *input-file* based on the file's extension suffix; for example, by default a file with extension **.s** is assembled and linked but not preprocessed or compiled. Command-line options may be used to stop processing early. The subprograms and stopping options are as follows.

Table 3-1 Driver Subprograms, Default Input and Output Extensions, and Stopping Options

Sub-program	Default Input Extension	Stopping Option	Default Output Extension	Function and Stopping Option
cpp		-P	.i	The preprocessor; takes a C or C++ module as input and processes all # directives. This program is included in the main compiler program. The -P option halts the driver after this phase, producing a file with the .i suffix. (The .i file is not produced unless -P is used.)
ctoa	.c	-S	.s	The C-to-assembly compiler; consists of several internal stages (parser, optimizer, and code generator), and generates assembly source from preprocessed C source.
etoa	.cpp .cxxx .cc .c (capital, UNIX)	-S	.s	The C++-to-assembly compiler; generates assembly source from preprocessed C++ source.
das	.s	-c	.o	The assembler; generates linkable object code from assembly source.
dld	.o (object) .a (archive) .dld .lnk (commands)		a.out (default)	The linker; generates an executable file from one or more object files and object libraries, as directed by a .dld linker command file (obsolete: .lnk). The default output name is a.out if the -o outputfile option is not given.

4

Selecting a Target and Its Components

[4.1 Selecting a Target 23](#)

[4.2 Selected Startup Module and Libraries 28](#)

[4.3 Alternatives for Selecting a Target Configuration 29](#)

4.1 Selecting a Target

The compiler, assembler, and linker all require specification of a *target configuration*.

A complete target configuration specifies the target processor, the type of floating point support, the object module format (ELF), and the execution environment (default libraries for input/output and target operating system support). To determine the current default, execute the command:

```
dcc -Xshow-target
```

or print the file **default.conf** in the *version_path/conf* subdirectory.

The easiest methods for selecting a target configuration are as follows. The first method is preferred. For special cases or more details, see [4.3 Alternatives for Selecting a Target Configuration](#), p.29.

- Use the `-ttof` or `-ttof:environ` option when invoking the compiler, assembler, or linker. The table below describes this option.
- Invoke the `dctrl` command with the `-t` option to set the defaults used when no `-t` option is present on the compiler, assembler, or linker command line. Note that this sets the default for all users.

The `tof:environ` string given with the `-t` option has four parts, as follows. See [4.2 Selected Startup Module and Libraries](#), p.28 for examples.

Table 4-1 **-t Option Values**

<i>t</i>	Target processor, a several-character code — <i>see the Notes following the table</i> (sets DTARGET):	
	BCMSB1*	Broadcom SB1 64-bit MIPS processor family
	MIPS = MIPS1 = R30*	MIPS R30xx
	R39*	MIPS R39xx
	R4100*	MIPS R4100
	R4200* = R4300*	MIPS R4300
	R4600*	MIPS R4600
	R4640* = R4650*	MIPS R4650
	R4700*	MIPS R4700
	TX49*	
	MIPS2 = MIPS3 = R4*	MIPS R4xxx core instructions

Table 4-1 **-t Option Values** (cont'd)

MIPS16 MIPS16-*	MIPS16 is a 16-bit mode that can be used with several processors. See the MIPS manufacturer's documentation for additional information. MIPS16 objects link interchangeably with MIPS32 objects. See also page 105 on passing floating point parameters from MIPS32 modules to MIPS16 modules, and page 197 on mixing MIPS16 and MIPS32 modules.
MIPS32*	MIPS32
MIPS32R2	MIPS32R2
MIPS4 = R50* = R51* = R52* = R53*	MIPS R5432
R5432*	MIPS R5432
R5464*	MIPS R5464
RM9K	MIPS RM9000
MIPS64*	MIPS64. The compiler supports 64-bit registers, but not 64-bit addressing and pointers.
MIPS64R2	
XLR*	RMI XLR MIPS64 processor family
*-64	

Table 4-1 **-t Option Values** (cont'd)

o	<div>Object format (sets DOBJECT):</div> <div>E for ELF big-endian</div> <div>F for ELF big-endian with -Xsmall-data=0 and -Xsmall-const=0 instead of the default values of 8 and 8 (8 and 0 for MIPS16)</div> <div>L for ELF little-endian</div> <div>M for ELF little-endian with -Xsmall-data=0 and -Xsmall-const=0 instead of the default values of 8 and 8 (8 and 0 for MIPS16)</div> <div>W for ELF big-endian, MIPS64</div> <div>X for ELF big-endian, MIPS64, with -Xsmall-data=0 and -Xsmall-const=0 instead of the default values of 8 and 8</div> <div>Y for ELF little-endian, MIPS64</div> <div>Z for ELF little-endian, MIPS64, with -Xsmall-data=0 and -Xsmall-const=0 instead of the default values of 8 and 8</div> <div>S: same as “W” above, except that the generated code uses n32 conventions for parameter passing</div> <div>T: same as “X” above, except that the generated code uses n32 conventions for parameter passing</div> <div>U: same as “Y” above, except that the generated code uses n32 conventions for parameter passing</div> <div>V: same as “Z” above, except that the generated code uses n32 conventions for parameter passing</div>
f	<div>Floating point support—one character (sets DFP):</div> <div>H for Hardware floating point. In 64-bit mode, the compiler assumes there are 32 double-precision floating point registers.</div> <div>S for Software floating point emulation provided with the compiler—default on targets without internal floating point.</div> <div>N for No floating point support (minimizes the required runtime).</div>

Table 4-1 **-t Option Values** (cont'd)

<i>environ</i>	<p>Execution environment (sets DENVIRON). Determines paths searched for libraries (see 4.2 Selected Startup Module and Libraries, p.28). Two standard values used with the libraries delivered with the tools are:</p> <ul style="list-style-type: none"> ▪ cross to include libram.a for RAM-disk input/output ▪ simple to include libchar.a for basic character input/output <p><i>environ</i> may also be the name of a target operating system or application development environment supported by Wind River. In this case, in addition to specifying the library search path, the value will be used to include a special configuration file, <i>environ.conf</i> in the conf subdirectory, to set options required by the target operating system. For further details, see A.3.1 DENVIRON Configuration Variable, p.591, VxWorks Application Development, p.28, and the release notes and available application notes for particular target operating systems.</p> <p><i>environ</i> is optional. If not given by -t, a -WDDENVIRON option, or a DENVIRON environment variable, the value set by dctrl is used.</p>
----------------	---

Notes for the Target Processor Component of the -t Option

- In the **-ttof** option, “*t*” is the part not including the final two parts, each of which is always a single character (the *o* and *f* parts).
- Each target in the table which is not preceded by an “=” sign causes the invoked tool to operate in a manner unique to that target. The unique operating characteristics are selected via the options used to invoke the tool plus the options which the tool extracts from the built-in configuration files.

To see the options associated with a particular **-t** option, invoke a compiler driver with the **-t** option, the **-#** option (causes the driver to show the command line used to invoke each tool), and the **-Wa, -#** option (causes the assembler, when invoked by the driver, to show options which it extracts from the configuration files).
- In each row of the table, values preceded by an equal sign “=” are equivalent to the first value in the row and are treated alike by the tools in all respects (internally, the **value** without the “=” sign is substituted for the given **target value**).
- “*t*” may end with a “*” character. This matches any string of zero or more characters, and is intended to provide generic support for new processors in a family.

The order in the table is significant: the first “t” matching the value as given on the command line will be selected. When entering a target processor name on the command line with the -t option, use the actual processor name, not a “”. Then, if the tools have special support specifically for that processor, it will be selected; if not, the first matching “generic” processor will be used.*

- This table may not be up-to-date. Invoke **dctrl -t** to construct any valid **-t** option supported by the tools as installed, or look in **MIPS.conf** for a complete list of target processor codes.

VxWorks Application Development

To build VxWorks applications, specify the appropriate execution environment with the **-t** option. Usually this will be **:rtp** for user (real-time process) mode or **:vxworksx.x** for kernel mode. For example,

```
-tMIPSEN:rtp
```

selects user mode, while

```
-tMIPSEN:vxworks6.6
```

selects VxWorks 6.6 kernel mode. For more information, see the documentation that accompanied your VxWorks development tools.



NOTE: If you specify a VxWorks execution environment (**:rtp** or **:vxworksx.x**), the standard C libraries linked to your application will be different from the compiler's native C libraries documented in this manual.

Specifying a VxWorks execution environment turns on **-Xieee754-pedantic** by default.

4.2 Selected Startup Module and Libraries

The parts of **-ttof:environ** option (or its equivalents as described in [4.1 Selecting a Target](#), p.23) are used to construct a directory name and to select the desired startup module and libraries per [Table 4-1](#).

Examples:

-t Option	Startup Module, Libraries
<code>-tMIPSEn:simple</code>	MIPSE/crt0.o MIPSE/simple/libc.a with MIPSEn/libcfp.a and MIPSE/libchar.a MIPS, ELF objects, no floating point, character input/output
<code>-tMIPSEs:cross</code>	MIPSE/crt0.o MIPSE/cross/libc.a with MIPSEs/libcfp.a and MIPSE/libram.a MIPS, ELF objects, software floating point, RAM-disk input/output

The library archive files themselves, and the detailed mechanics for selection of the appropriate subdirectories and libraries, are fully described in [32.2 Library Structure](#), p.484.

Briefly, the main driver programs select the startup module and libraries by invoking the linker with the following partial command line, using UNIX path notation, written on multiple lines and spaced for readability, and where *f* is as described above:

```
dld -Y P,version_path/MIPSEf/envIRON : version_path/MIPSEf :
      version_path/MIPSE/envIRON : version_path/MIPSE ...
-l:crt0.o ... -lc
```

The **-Y P** option sets a list of directories. Then the **-l:crt0.o** option causes the linker to look in those directories for file **crt0.o**, the startup file, without modification, while the **-lc** option causes the linker to construct filename **libc.a** and look in those directories for it.

4.3 Alternatives for Selecting a Target Configuration

There are five ways to change the target configuration. *As noted at the beginning of this chapter, the first method is preferred, especially when multiple engineers work with*

multiple targets. This section is provided for backward compatibility and special cases.

Using **-t** sets four *configuration variables*: **DTARGET** for the processor, **DOBJECT** for the object module format, **DFP** for the type of floating point support, and **DENVIRON** for the target execution environment.

These configuration variables are stored in *version_path/conf/default.conf*. A configuration variable may be overridden by an environment variable of the same name, or by a **-t** or **-WD** *variable* option on the command used to invoke the compiler, assembler, or linker. The environment variable is checked first and then the command line; the last instance found is used.

Change the target for a single invocation of a tool by using the **-t** option on the command line; this applies to **dcc**, **dplus**, **das**, and **dld**. The **-t** option takes one of the *tof* or *tof:environ* codes described in [4.1 Selecting a Target](#), p.23 and displayed by the **dctrl -t** program (see below). Example:

```
dplus -ttof -c file.cpp
```

Other methods involve changing or overriding four configuration variables stored in the configuration file **default.conf**. (See [A.3 Standard Configuration Files](#), p.590.)

- The default target configuration is set and may be changed any time by using the **dctrl** program with the **-t** option:

```
dctrl -t
```

This interactive program prompts you for the desired target processor, object format, floating point support, and target execution environment. If you already know the exact target configuration you want, you can skip the interactive program by specifying the target after **-t** on the command line:

```
dctrl -ttof:environ
```

Upon success, **dctrl** displays the new default target and modifies **default.conf**.

- Manually edit the **default.conf** configuration file to change the default settings for any of the **DTARGET** (the processor), **DOBJECT** (object module format), **DFP** (floating point support), and **DENVIRON** (target execution environment) configuration variables.
- Set any of the **DTARGET**, **DFP**, **DOBJECT**, and **DENVIRON** environment variables. This overrides the values of the configuration variables having these names in **default.conf**.
- Use the command-line option **-WD** *environment_variable* (see [5.3.27 Define Configuration Variable \(-W Dname=value\)](#), p.49). This overrides both the values of the variables in **default.conf** and any environment variables. Example:

```
dpplus -WDDTARGET=newtarget -c file.cpp
```



NOTE: For additional explanation, and order of precedence when more than one of these methods is used, See [A. Configuration Files](#), and especially [A.2.1 Configuration Variables and Precedence](#), p.588.

PART II

Wind River Compiler

5	Invoking the Compiler	35
6	Additions to ANSI C and C++	131
7	Embedding Assembly Code	165
8	Internal Data Representation	177
9	Calling Conventions	189
10	Optimization	199
11	The Lint Facility	229
12	Converting Existing Code	233
13	C++ Features and Compatibility	239
14	Locating Code and Data, Addressing, Access	253
15	Use in an Embedded Environment	275

5

Invoking the Compiler

- 5.1 The Command Line 35
- 5.2 Rules for Writing Command-Line Options 36
- 5.3 Compiler Command-Line Options 39
- 5.4 Compiler -X Options 55
- 5.5 Examples of Processing Source Files 126

5.1 The Command Line

As noted in [3. Drivers and Subprogram Flow](#), the compiler is best executed via one of the driver programs as follows:

<code>dcc</code>	<code>[options] [input-files]</code>	Assumes Wind River C libraries.
<code>dplus</code>	<code>[options] [input-files]</code>	Assumes Wind River C++ libraries.

where:

`dcc`
`dplus`

Invokes the main driver program for the compiler suite. See [2.3 Accessing Current and Other Versions of the Tools](#), p.15 for details on how the driver program is found.

Both the **dcc** and **dplus** drivers are used in examples this manual. Please substitute **dcc** for **dplus** if you are using only the C compiler.

options

Command-line options which change the behavior of the tools. See the remainder of this chapter for details. Options and filenames may occur in any order.

input-files

A list of pathnames, each specifying a file, separated by whitespace. The suffix of each filename indicates to the driver which actions to take. See [Table 3-1](#) for details.

For example, process a single C++ file, stopping after compilation, with standard optimization:

```
dplus -O -c file.cpp
```

The form **-@name** can also be used for either *options* or *input-files*. The name must be that of an environment variable or file (a path is allowed), the contents of which replace **-@name**. See [A.2 How Commands, Environment Variables, and Configuration Files Relate](#), p.588 for details.

5.2 Rules for Writing Command-Line Options

Same Option More Than Once

Options can come from several sources: the command line, environment variables, configuration files, and so forth as described in [A.2 How Commands, Environment Variables, and Configuration Files Relate](#), p.588.

If an option appears more than once from whatever source, the final instance is taken unless noted otherwise in the individual option descriptions in the next sections.

Command-Line Options are Case-sensitive

Command-line options are case-sensitive. For example, `-c` and `-C` are two unrelated options. This is true even on Windows; however filenames on Windows remain case-insensitive as usual.

Spaces In Command-Line Options

For easier reading, command-line options may be shown with embedded spaces in documentation, although they are not typically written this way in use. In writing options on the command line, space is allowed only following the option letter, not elsewhere. For example:

```
-D DEBUG=2
```

is valid, and is exactly equivalent to:

```
-DDEBUG=2
```

However,

```
-D DEBUG = 2
```

is not valid because of the spaces around the “=”.

Quoting Values

When a command-line option can take a string as a value, it does *not* require quotes. For example:

```
-prof-feedback=rta-db -Xname-code=.code
```

Enclosing the value in quotes has no effect. Thus,

```
-DSTRING="test"
```

is equivalent to:

```
-DSTRING=test
```

Using “\” to escape the quotes will pass the quotes into the compiler. Given file **test.c** containing:

```
void main() {
    printf(STRING);
}
```

compiling with:

```
dcc test.c -DSTRING="test"
```

the **printf** statement becomes:

```
printf( test );
```

(and will fail because **test** is undefined). But compiled with:

```
dcc test.c -DSTRING=\"test\"
```

the **printf** statement becomes:

```
printf( "test" );
```

Unrecognized Options, Passing Options to the Assembler or Linker

Ordinary options beginning with a letter other than “X” and which are not listed in this section are automatically passed by the driver to the linker. All **-X** options are processed first by the compiler.

When invoking the **dcc** or **dplus** driver program, it is sometimes important to pass an option explicitly to the assembler or linker—for example, a **-X** option or an option identified by the same letter as a driver or compiler option. The driver options **-W a,arguments** and **-W l,arguments** pass *arguments* to the assembler and linker respectively.

Length Limit

The length of the command line is limited by the drivers’ 1000-byte internal buffer. To pass longer commands to the tools, see [5.3.40 Read Command-Line Options from File or Variable \(-@name, -@@name\)](#), p.54.

The following example is written on several lines for clarity. The individual options shown are fully documented in this chapter or in the [16.5 Assembler -X Options](#), p.307 and in [24.5 Linker -X options](#), p.399.

```
dcc -D DEBUG=2 -XO
    -Wa,-DDEBUG=3
    -Wl,-Xdont-die
    -Llibs
    -WA.asm
    f.c a.asm

-D DEBUG=2 -XO
```

The driver invokes the compiler with these options. A space is allowed after the option letter **-D**.

`-Wa, -DDEBUG=3`

The driver invokes the assembler with the option **-DDEBUG=3**, perhaps for use in the **a.asm** file. Without the **-Wa**, the driver would have passed this option to the compiler, resetting **DEBUG** to 3.

No space is allowed after the **-D** because it would have ended the **-Wa** option; **-W a, -DDEBUG=3** would also have been valid.

`-Wl, -Xdont-die`

The driver invokes the linker with the option **-Xdont-die**. Without the **-Wl**, the driver would have passed this linker option **-Xdont-die** to the compiler.

`-Llibs`

This option is not recognized by the driver as a driver or compiler option, so it is passed to the linker.

`-WA.asm`

Instructs the driver that files having the extension **.asm** are to be preprocessed and then assembled. If this extension is a project standard, it can more conveniently be set in user configuration file **user.conf** as follows (see [A.3.2 UFLAGS1, UFLAGS2, DFLAGS Configuration Variables](#), p.593):

```
UFLAGS1=-WA.asm
```

`f.c a.asm`

An input file to be compiled (**f.c**) and, because of the **-WA.asm** option, an input file to be preprocessed and assembled (**a.asm**).

The next sections document the command-line options recognized by the driver and compiler.

5.3 Compiler Command-Line Options

This section shows all general command-line options. New options added after publication may also be in the most recent release notes.

5.3.1 Show Information About Compiler Options (-?, -?..., -h, -h..., --help)

-?

-h

--help

Show synopsis of commonly used compiler options. Available for other tools (assembler, linker) as well.

-??

-h?

Show synopsis of less frequently used options.

-?W

-hW

Show synopsis of -W options (see [5.3.26 Pass Arguments to the Assembler \(-W a,arguments, -W :as;arguments\)](#), p.48).

-?X

-hX

Show synopsis of -X options (see [5.4 Compiler -X Options](#), p.55).

-?Xstring

Show synopsis of -X options whose names contain the specified string. For example, entering `dcc -?Xbss` returns information about `-Xbss-off` and `-Xbss-common-off`.

5.3.2 Ignore Predefined Macros and Assertions (-A-)

-A-

Cause the preprocessor to ignore all predefined macros and assertions.

5.3.3 Define Assertion (-A assertion)

-A *pred (ident1) (ident2)*

Cause the assertion *pred(ident)* to be defined. See [#assert and #unassert Preprocessor Directives](#), p.134.

5.3.4 Pass Along Comments (-C)

-c

Cause the C processor to pass along all comments. Useful only in conjunction with -E or -P.



NOTE: The preprocessor may be used with any language supported by Wind River.

-C is not necessary when **-Xpass-source** is used to output source as comments when generating assembly output because in that case the source code is taken before preprocessing.

5

5.3.5 Stop After Assembly, Produce Object (-c)

-c

Stop after the assembly step and produce an object file with default file extension **.o** (unless modified by **-o**, see [5.3.19 Specify Output File \(-o file\)](#), p.47).

5.3.6 Define Preprocessor Macro Name (-D name=definition)

-D name [=definition]

Define the preprocessor macro *name* as if by the **#define** directive. If no *definition* is given, the value 1 is used.

Macros may be either *function-like* macros or *object-like* macros. Function-like macros take arguments; this sample macro converts inches to centimeters:

```
dcc -DIN_TO_CM(x) = ((x) * 2.54) foo.c
```

Note that, to prevent unexpected results, both the argument and the entire macro expression should be enclosed in parentheses.

Object macros do not take arguments:

```
dcc -DYEAR_LENGTH=366 bar.c
```

See [5.2 Rules for Writing Command-Line Options](#), p.36, for rules about using spaces, quotations, and the like on the command line.

5.3.7 Stop After Preprocessor, Write Source to Standard Output (-E)

-E

Run only the preprocessor on the named files and send the output to the standard output. All preprocessor directives are removed except for line-number directives used by the compiler to generate line-number information. (To suppress line-number information, use

-Xpreprocessor-lineno-off.) The source files do not require any particular suffix.

When **-E** is invoked, the preprocessor implicitly includes the **lpragma.h** file. To suppress inclusion of **lpragma.h**, use **-Xclib-optim-off**. For more on **lpragma.h**, see [5.4.22 Disregard ANSI C Library Functions \(-Xclib-optim-off\)](#), p.71.

See also [5.3.20 Stop After Preprocessor, Produce Source \(-P\)](#), p.47.

5.3.8 Change Diagnostic Severity Level (-e)

-esn[*n*...]

For each of one or more diagnostic message numbers *n* in the comma-separated list, change the severity level of the message to *s* where *s* is one of:

- i**
Information, equivalent to ignore.
- w**
Warning.
- e**
Error (continue compilation).
- f**
Fatal error (terminate immediately).

Each diagnostic message has the form:

"file", line #: severity-level (compiler:error #): message

Example:

"err1.c", line 2: warning (dcc:1025): division by zero

To raise the severity level of this message from "warning" to "error", invoke the compiler with the option **-ee1025**. To reduce the level to "ignore", use **-ei1025**.



NOTE: Some messages have a minimum severity level. The severity level of a message may be raised above its minimum but not lowered below it. Attempting to do so will generate warning 1641.



NOTE: `-Xmismatch-warning` and `-Xmismatch-warning=2` override the `-e` option. If either form of `-Xmismatch-warning` is used, mismatched types will only produce a warning, even if `-e` is used to increase the severity level of the diagnostic. See [5.4.101 Warn On Type and Argument Mismatch \(-Xmismatch-warning\)](#), p.106.

5.3.9 Generate Symbolic Debugger Information (-g)

The several `-gn` options enable generation of varying levels of debugging information. If optimization options are also present (`-O` or `-XO`), optimization will be affected as described.

`-g`

Same as `-g2`.

`-g0`

Do not generate symbolic debugger information. This is the default. No effect on optimization.

`-g1`

Generate symbolic debugger information, but leave out line number information. No effect on optimization.

`-g2`

Generate symbolic debugger information.

Do most target-independent optimizations, but do not do the following optimizations, since most object formats have no way to describe them. Hexadecimal numbers indicate the mask for `-Xkill-opt` ([5.4.81 Disable Individual Optimizations \(-Xkill-opt=mask, -Xkill-reorder=mask\)](#), p.96).

- Function inlining ([Inlining \(0x4\)](#), p.210)
- Structure member optimization ([Structure Members to Registers \(0x10\)](#), p.212)
- Split optimization ([Variable Live Range Optimization \(0x400\)](#), p.214)
- [Complex Branch Optimization \(0x1000\)](#), p.215
- [Loop Count-Down Optimization \(0x4000\)](#), p.215
- [Minor Transformations to Simplify Code Generation \(0x80000\)](#), p.217
- Static function optimization (0x20000000) ([Static Function Optimization \(0x20000000\)](#), p.220)
- [Live-Variable Analysis \(0x40000000\)](#), p.220

Also, disable most target-dependent optimizations: option `-g2` also disables basic reordering and all peephole optimizations (see [222](#)).

See [10. Optimization](#) for details on these optimizations (the optimizations are ordered by the hex values in that chapter).

See also **-Xoptimized-debug-off** ([5.4.108 Disable Most Optimizations With -g \(-Xoptimized-debug-...\)](#), p. 109) on how to disable optimizations which interfere with debugging.

-g3

Generate symbolic debugger information and do all optimizations. Highly optimized code can be difficult to debug. For example, there is no way to break on inlined functions (except at the assembly level). Hence, when debugging is required, **-g2** is usually a better choice.



NOTE: The **-gn** options may also be specified at the beginning of a source files using:

```
#pragma option -gn
```

5.3.10 Print Pathnames of Header Files (-H)

-H

Print the pathnames of all header files to the standard error output.

5.3.11 Specify Directory for Header Files (-I dir)

-I *dir*

Add *dir* to the list of directories to be searched for header files. A full pathname is allowed. More than one **-I** option can be given.

For an **#include** "*file*" directive, search for the file in the following locations:

- First, the directory of the file containing the **#include** directive. Thus, if an **#include** directive includes a path, that path defines the current directory for **#include** directives in the included file. Example (using UNIX notation):

Assume file **f1.c** contains:

```
#include "p1/h1.h"  
#include "h3.h"
```

and file **h1.h** contains:

```
#include "h2.h"
```

The search for **h2.h** will begin in directory **p1**; the search for **h3.h** will begin in the directory containing **f1.c**.

- Second, directories given by the **-I dir** option, in the order encountered.
- Third, the directory or directories given by either:

any **-Y I** option appearing prior to the **-I** option

– or –

version_path/include (UNIX)
version_path\include (Windows)

(The **-Y I** option effectively replaces the *version_path* directory. See [5.3.36 Specify Default Header File Search Path \(-Y I,dir\)](#), p.53.)

For an **#include <file>** directive, search only the second and third locations.

5.3.12 Control Search for User-Defined Header Files (-I@)

-I@

C only. Search for user-defined header files (those enclosed in double quotes (")) in the order specified only by **-I** options (modified by **-Y I** options if any). That is, do not search the current directory by default; search the current directory only when an **-I@** option is encountered. Example:

```
dcc -Iabc -I@ -Idef file.c
```

will result in a search order of:

the directory **abc**
the current directory
the directory **def**

5.3.13 Modify Header File Processing (-i file1=file2)

-i file1=file2

Substitute *file2* for *file1* in an **#include** directive.

-i file1=

Ignore any **#include** directive for *file1*.

-i =file2

Include *file2* before processing any other source file.

The **-i** option is disabled by **-P**.

5.3.14 Specify Directory For -l Search List (-L dir)

This is a linker option. See [Specify Directory for -l search List \(-L dir\)](#), p.395.

5.3.15 Specify Library or Process File (-l name)

This is a linker option. See [Specify Library or File to Process \(-lname, -l:filename\)](#), p.395.

5.3.16 Specify Pathname of Target-Spec File (-M target-spec)

-M *target-spec*



NOTE: This option is primarily for use by Wind River.

Specify the pathname of the *target-spec* file to the compiler (see **target.cd** in [Table 2-2](#)). This file contains the target description and is read by the compiler at startup. If the **-M** option is set more than once, the final setting is used.

5.3.17 Work Around VR4133 Bug (-mfix-vr4133)

-mfix-vr4133

Use with the **-Xfix-vr4133** assembler option to implement a workaround for a problem that arises with NEC VR4133 processors when **mult/div/macc** instructions follow **mflo/mfhi** instructions.

5.3.18 Optimize Code (-O)

-O

Optimize code. Either this or **-XO** must be present to enable optimization and to invoke the **reorder** program. See the **-XO** option in [5.4.105 Enable Extra Optimizations \(-XO\)](#), p.108 for the difference between these options and [10. Optimization](#) for more information about optimizations.

This option can also be specified at the beginning of a source file using:

```
#pragma option -O
```

5.3.19 Specify Output File (-o file)

-o *file*

Output to the given file instead of the default. This option works with the **-P**, **-S** and **-c** options as well as when none of these are specified. When compiling *file.ext* the following filenames are used by default if the **-o** option is not given:

-P	<i>file.i</i>
-S	<i>file.s</i>
-c	<i>file.o</i>
not -P , -S , or -c	a.out

5.3.20 Stop After Preprocessor, Produce Source (-P)

-P

Stop after the preprocessor step and produce a source file with default file extension **.i** (unless modified by **-o**).

Unlike with the **-E** option, the output will not contain any preprocessing directives, and the output does not go to standard out (see **-o** for the output filename). The source files do not require any particular suffix.

When this option is used, the compiler driver does not invoke the assembler or linker. Thus, any switches intended for the assembler or linker must be given separately on command lines which invoke them. The **-P** option also disables **-i**.

When **-P** is invoked, the preprocessor implicitly includes the **lpragma.h** file. To suppress inclusion of **lpragma.h**, use **-Xclib-optim-off**. For more on **lpragma.h**, see [5.4.22 Disregard ANSI C Library Functions \(-Xclib-optim-off\)](#), p.71.

5.3.21 Stop After Compilation, Produce Assembly (-S)

-S

Stop after the compilation step and produce an assembly source code file with the default file extension **.s** (unless modified by **-o**). If

-Xshow-configuration=1 is enabled, the assembly file contains a list of options in effect during compilation.

5.3.22 Select the Target Processor (-t tof:environ)

-t *tof:environ*

Select the target processor with *t* (a several character code), the object format with *o* (a one letter code), the floating point support with *f* (**H** for hardware, **S** for software, and **N** for none), and libraries suitable for the target environment with *environ*.

To determine the proper *tof*, execute **dctrl -t** to interactively display all valid combinations. See also [4.2 Selected Startup Module and Libraries](#), p.28.

5.3.23 Undefine Preprocessor Macro Name (-U name)

-U *name*

Undefine the preprocessor macro *name* as if by the **#undef** directive.

5.3.24 Display Current Version Number (-V, -VV)

-V

Display the current version number of the driver.

-VV

Display the current version number of the driver and the version number of all subprograms. Do not complete the compilation.

5.3.25 Run Driver in Verbose Mode (-v)

-v

Run the main drive program in verbose mode, printing a message as each subprogram is started.

5.3.26 Pass Arguments to the Assembler (-W a,arguments, -W :as:,arguments)

-W *a, arg1[, arg2...]*

-W *:as: , arg1[, arg2...]*

Pass the arguments to the assembler. Example:

-Wa, -l or **-W:as: , -l**

Pass the option “-l” (lower case letter L) to the assembler to get an assembler listing file.

5.3.27 Define Configuration Variable (-W Dname=value)

-W Dname=value

Set a configuration variable equal to a value for use during configuration file processing.

More than one **-WD** option can be used to set several variables. The effect is as if an assignment statement for each such **-WD** variable had been added to the beginning of the main configuration file.

5.3.28 Pass Arguments to Linker (-W l,arguments, -W :ld:,arguments)

-W l, arg1[, arg2...]

-W :ld:, arg1[, arg2...]

Pass the arguments to the linker.

Any option which is not recognized by the driver or compiler is automatically passed to the linker. **-WI** may be used to pass options to third-party linkers in cases where such an option resembles a driver or compiler option. See [5.4.58 Suppress Assembler and Linker Parameters \(-Xforeign-as-ld\)](#), p.87. Example:

```
-Wl, -m or -W:ld:, -m
```

Pass the option **-m** to the linker to get a link map.

5.3.29 Specify Linker Command File (-W mfile)

-W mfile

Use the given linker command file instead of the default *version_path/conf/default.dld*.



NOTE: To suppress use of the **default.lnk** file, specify just **-Wm** with no *file* on the command line.

5.3.30 Specify Startup Module (-W sfile)

-W sfile

Use the given object file instead of the default startup file (**crt0.o**). Additional object files to be loaded along with the startup file and before any other files can be given separated by commas.



NOTE: To provide a **crt0.s** file or substitute to be assembled on the command line, or to use an existing non-default **crt0.o** file or substitute, specify just **-Ws** with no name to suppress use of the default.

5.3.31 Substitute Program or File for Default (-W xfile)



NOTE: Except for the common cases **-W m** and **-W s** documented above, this option is primarily for use by Wind River.

-W xfile

Use the given program or file instead of the default program or file for the case indicated by *x*. Some cases take the form **-W xname=value**. *x* is one of the following:

:as:, a

The assembler.

c

The configuration file to be used. The default is **dtools.conf** (**DTOOLS.CON** for Windows) in the *version_path/conf* subdirectory.

:cpp:, p

The C preprocessor. The preprocessor is incorporated in the compiler, so this becomes a synonym for 0.

:c:

The C compiler.

:c++:

The C++ compiler.

c

Pass the string following the **-Wc** exactly as is as an option to the linker. More than one option can be given following **-Wc**, separated by commas. For example, **-Wc-lc,-lproj** would cause the linker to search for missing symbols in libraries **libc.a** and **libproj.a**.

The linker **-l** option is the more usual way to specify libraries.

D

See [5.3.27 Define Configuration Variable \(-W Dname=value\)](#), p.49.

d

The C++ library. The default is **-ld**. See “**c**” for the meaning of **-ld** and additional rules.

- :ld:**, **1**
The linker.
- L**
The object converter; will execute after the linker.
- m**
See [5.3.29 Specify Linker Command File \(-W mfile\)](#), p.49.
- s**
See [5.3.30 Specify Startup Module \(-W sfile\)](#), p.49.
The compiler implied by the extension of the source file.
- 1**
The **llopt** assembly-level optimizer. Specifying **-W1** with no substitute program will disable **llopt**.
- 2 - 6**
Other filter programs. **-W2** invokes the **reorder** program. **-W1** and **-W2** execute if **-O** or **-XO** is given and process the output from the compiler. **-W3** and **-W4** also process the output from the compiler. **-W5** and **-W6** process the input to the assembler. Example:


```
-W:ld: /usr/lib/dcc/3.6e/bin/dld
```

 Use an old version of the linker.

5.3.32 Pass Arguments to Subprogram (-W x,arguments)

- W x,arg1[,arg2...]**
Pass the arguments to the subprogram designated by *x*. *x* is one of the following:
 - :cpp:**, **p**
The preprocessor. The preprocessor is incorporated in the compiler, so this becomes a synonym for **0**.
 - 0**
The compiler implied by the extension of the source file.
 - :c:**
The C compiler.
 - :c++:**
The C++ compiler.
 - a, :as:**
The assembler. See [5.3.26 Pass Arguments to the Assembler \(-W a,arguments, -W :as:arguments\)](#), p.48.

- 1, **:ld:**
The linker. See [5.3.28 Pass Arguments to Linker \(-W l,arguments, -W :ld:,arguments\)](#), p.49.
- L**
The object converter. Usually not implemented. If given, it will execute after the linker.
- 1
The **llopt** assembly-level optimizer. Specifying **-W1** with no substitute program will disable **llopt**.
- 2 - 6
Other filter programs; usually not implemented. **-W2** invokes the **reorder** program. **-W1** and **-W2** are only executed if **-O** or **-XO** is given. They process the output from the compiler. **-W3** and **-W4** are always executed if given and process the output from the compiler. **-W5** and **-W6** process the input to the assembler. Example:

`-W:as:,-l or -Wa,-l`

Pass the option **"-l"** (lower case letter L) to the assembler to get an assembler listing file.

5.3.33 Associate Source File Extension (-W x.ext)

- W x.ext**
Associate a source file extension with a tool; that is, indicate to the main driver program **dcc** or **dplus** which tool should be invoked for an input file with a particular extension. *ext* specifies the extension and *x* specifies a tool, as follows:
 - 0
The compiler implied by the extension of the source file.
 - :c:**
The C compiler.
 - :c++:**
The C++ compiler.
 - :as: a**
The assembler.
 - :pas:, A**
Preprocessor and assembler: both the preprocessor and assembler will be applied to the source. Allows use of preprocessor directives with assembly language.

Example:

```
-W:as:.asm
```

Specify that **file.asm** is an assembly source file.

5.3.34 Suppress All Compiler Warnings (-w)

-w

Suppress all compiler warnings. (Does not apply to assembler or linker.)

5.3.35 Set Detailed Compiler Control Options (-X option)

See [5.4 Compiler -X Options](#), p.55.

5.3.36 Specify Default Header File Search Path (-Y I,dir)

-Y I,dir

Use *dir* as the default directory or directories to search for header files specified with the **-I** option. A full pathname is allowed; also, a colon-separated path list may be supplied for multiple directories. Must occur prior to a **-I** option to be effective for that option. (See [5.3.11 Specify Directory for Header Files \(-I dir\)](#), p.44.)

5.3.37 Specify Search Directories for -I (-Y L, -Y P, -Y U)

These are linker options. See [Specify Search Directories for -I \(-Y L, -Y P, -Y U\)](#), p.398.

5.3.38 Specify Search Directory for crt0.o (-Y S,dir)

Use *dir* as the default directory to search for **crt0.o**. This option is provided as a convenience for older makefiles; users should use the **-W sfile** option instead, as it enables you to specify both the search directory *and* the name of the startup file. See [5.3.30 Specify Startup Module \(-W sfile\)](#), p.49.

5.3.39 Print Subprograms With Arguments (-#, -##, -###)

- #
Print subprogram command lines with arguments as executed.
- ##
Print subprogram command line with arguments without actually executing them.
- ###
Print subprogram command lines with arguments inside quotes without executing them.

5.3.40 Read Command-Line Options from File or Variable (-@name, -@@name)

- @*name*
Read command-line options from either a file or an environment variable. When -@*name* is encountered on the command line, the driver first looks for an environment variable with the given *name* and substitutes its value. If an environment variable is not found then the driver tries to open a file with given *name* and substitutes the contents of the file. If neither an environment variable or a file can be found, an error message is issued and the driver terminates.
- @@*name*
Same as -@*name*; also prints all command-line options on standard output.

5.3.41 Redirect Output (-@E=file, -@E+file, -@O=file, -@O+file)

- @**E**=*file*
Redirect any output to standard error to the given file.
- @**O**=*file*
Redirect any output to standard output to the given file.
Use of "+" instead of "=" will append the output to the file.

5.4 Compiler -X Options

Compiler command-line -X options provide fine control over many aspects of the compilation process when behavior other than the default is needed.

Most -X options can be set either by name (-Xname) or by number (-Xn). Options can be set to a value *m*, given in decimal, octal (leading 0), or hexadecimal (leading 0x), by using an equal sign: -Xname=*m* or -Xn=*m*. Some options can be set to an unquoted string, e.g. -Xfeedback=file.

Many options have multiple names corresponding to different values. For example, -Xchar-signed is equivalent to -X23=0, and -Xchar-unsigned is equivalent to -X23=1. Please note that if a value is provided, it is always dominant, regardless of which name is used. Thus, -Xchar-signed=1 is equivalent -X23=1, which is equivalent to -Xchar-unsigned. Internally, the name is translated to its number (23 in this case), and then the value is assigned regardless of which name was used.

5.4.1 Option Defaults

If an option is not provided, it defaults to a value of 0 unless otherwise stated. If an option which takes a value is provided without one, then the value 1 is used unless otherwise stated. Therefore, the following three forms are all equivalent:

```
-Xtest-at-top    -X6    -X6=1
```

However, if neither option -Xtest-at-top nor -X6 had been given, the value of option -X6 would default to 0, which is equivalent to -Xtest-at-bottom.

To turn off an option which is on by default, or which was set using an environment variable or -@ option, and for which there is no name for the “=0” case, set it to zero: -Xname=0.

To determine the default for an option, compile a test module without the option using the -S and -Xshow-configuration=1 options and examine the resulting .s assembly language file. All -X options used are given in numeric form near the beginning of the file. An option not present defaults to 0.

[G. Compiler -X Options Numeric List](#) lists all options having numeric equivalents in numeric order.

-X options can also be specified at the beginning of a source file using:

```
#pragma option -X...
```

The remainder of this section shows all general -X options in both forms (name and number).

As noted above, the -X options used for a compilation are given as comments in the assembly listing in numeric form. These include both options specified by the user and also some options generated by the compiler. Some of the latter may be undocumented and are present for use by Customer Support.

5.4.2 Compiler -X Options by Function

Below is a list of functional groups of -X options. This is followed by the -X options in each functional group.

- [C++, p.62](#)
- [Checking and Profiling, p.56](#)
- [Debugging, p.56](#)
- [Diagnostic and Lint, p.57](#)
- [Driver, p.57](#)
- [Instruction, p.58](#)
- [Memory, p.58](#)
- [Optimization, p.59](#)
- [Output, p.60](#)
- [Position-independence, p.60](#)
- [Precompiled Headers, p.60](#)
- [Sections, p.61](#)
- [Syntax, p.61](#)
- [Type, p.62](#)

Checking and Profiling

- [5.4.11 Insert Profiling Code \(-Xblock-count\), p.68](#)
- [5.4.54 Optimize Using Profile Data \(-Xfeedback=file\), p.85](#)
- [5.4.55 Set Optimization Parameters Used With Profile Data \(-Xfeedback-frequent, -Xfeedback-seldom\), p.86](#)
- [5.4.123 Generate Code for the Run-Time Error Checker \(-Xrtc=mask\), p.115](#)

Debugging

- [5.4.36 Align .debug Sections \(-Xdebug-align=n\), p.77](#)
- [5.4.37 Select DWARF Format \(-Xdebug-dwarf...\), p.78](#)

- 5.4.38 Generate Debug Information for Inlined Functions (-Xdebug-inline-on), p.78
- 5.4.39 Emit Debug Information for Unused Local Variables (-Xdebug-local-all), p.78
- 5.4.40 Generate Local CIE for Each Unit (-Xdebug-local-cie), p.78
- 5.4.41 Disable debugging information Extensions (-Xdebug-mode=mask), p.79
- 5.4.42 Disable Debug Information Optimization (-Xdebug-struct-...), p.79
- 5.4.62 Include Filename Path in Debug Information (-Xfull-pathname), p.89
- 5.4.70 Initialize Local Variables (-Xinit-locals=mask), p.92
- 5.4.73 Define Initial Value for -Xinit-locals (-Xinit-value=n), p.93
- 5.4.108 Disable Most Optimizations With -g (-Xoptimized-debug-...), p.109
- 5.4.135 Enable Stack Checking (-Xstack-probe), p.119

Diagnostic and Lint

- 5.4.46 Control Use of Type “double” (-Xdouble...), p.81
- 5.4.57 Generate Warnings on Undeclared Functions (-Xforce-declarations, -Xforce-prototypes), p.87
- 5.4.86 Perform Link-Time Lint (-Xlink-time-lint), p.98
- 5.4.87 Generate Warnings On Suspicious/Non-portable Code (-Xlint=mask), p.98
- 5.4.92 Warn On Undefined Macro In #if Statement (-Xmacro-undefined-warn), p.101
- 5.4.101 Warn On Type and Argument Mismatch (-Xmismatch-warning), p.106
- 5.4.136 Diagnose Static Initialization Using Address (-Xstatic-addr-...), p.119
- 5.4.138 Buffer stderr (-Xstderr-fully-buffered), p.120
- 5.4.139 Terminate Compilation on Warning (-Xstop-on-warning), p.120
- 5.4.143 Warn on Large Structure (-Xstruct-arg-warning=n), p.121
- 5.4.146 Suppress Warnings (-Xsuppress-warnings), p.122

Driver

- 5.4.17 Use Old C++ Compiler (-Xc++-old), p.70
- 5.4.58 Suppress Assembler and Linker Parameters (-Xforeign-as-ld), p.87
- 5.4.63 Control GNU Option Translator (-Xgcc-options-...), p.89

- [5.4.69 Ignore Missing Include Files \(-Xincfile-missing-ignore\)](#), p.91
- [5.4.79 Create and Keep Assembly or Object File \(-Xkeep-assembly-file, -Xkeep-object-file\)](#), p.95
- [5.4.93 Show Make Rules \(-Xmake-dependency\)](#), p.102
- [5.4.94 Specify Dependency Name or Output File \(-Xmake-dependency-...\)](#), p.103
- [5.4.110 Output Source as Comments \(-Xpass-source\)](#), p.110
- [5.4.115 Preprocess Assembly Files \(-Xpreprocess-assembly\)](#), p.111
- [5.4.117 Use Old Preprocessor \(-Xpreprocessor-old\)](#), p.112
- [5.4.130 Show Target \(-Xshow-target\)](#), p.118

Instruction

- [5.4.3 Prefix Function Identifiers With Underscore \(-Xadd-underscore\)](#), p.64
- [5.4.77 Enable Intrinsic Functions \(-Xintrinsic-mask\)](#), p.95
- [5.4.98 Pass Floating Point Parameters to MIPS16 Functions \(-Xmips16-hw-fp-call\)](#), p.105
- [5.4.99 Enable Specific MIPS Instructions \(-Xmips-mad, -Xmips-movc, -Xmips-mul\)](#), p.105
- [5.4.104 Save Registers for Nested Interrupts \(-Xnested-interrupts\)](#), p.108
- [5.4.134 Select Software Floating Point Emulation \(-Xsoft-float\)](#), p.119

Memory

- [5.4.5 See the discussion of *addr-mode* in 14.2 Addressing Mode - Functions, Variables, Strings, p.260 for more information. Align Functions On *n*-byte Boundaries \(-Xalign-functions=*n*\)](#), p.65
- [5.4.6 Specify Minimum Alignment for Single Memory Access to Multi-byte Values \(-Xalign-min=*n*\)](#), p.65
- [5.4.8 Specify Minimum Array Alignment \(-Xarray-align-min\)](#), p.66
- [5.4.36 Align *.debug* Sections \(-Xdebug-align=*n*\)](#), p.77
- [5.4.47 Generate Initializers for Static Variables \(-Xdynamic-init\)](#), p.81
- [5.4.64 Treat All Global Variables as Volatile \(-Xglobals-volatile\)](#), p.90
- [5.4.71 Control Generation of Initialization and Finalization Sections \(-Xinit-section\)](#), p.92

- [5.4.72 Control Default Priority for Initialization and Finalization Sections \(-Xinit-section-default-pri\)](#), p.93
- [5.4.96 Set Maximum Structure Member Alignment \(-Xmember-max-align=n\)](#), p.104
- [5.4.97 Treat All Variables As Volatile \(-Xmemory-is-volatile, -X...-volatile\)](#), p.104
- [5.4.137 Treat All Static Variables as Volatile \(-Xstatics-volatile\)](#), p.119
- [5.4.113 Treat All Pointer Accesses As Volatile \(-Xpointers-volatile\)](#), p.111
- [5.4.142 Align Strings on n-byte Boundaries \(-Xstring-align=n\)](#), p.121
- [5.4.145 Set Minimum Structure Member Alignment \(-Xstruct-min-align=n\)](#), p.122

Optimization

- [5.4.7 Assume No Aliasing of Pointer Arguments \(-Xargs-not-aliased\)](#), p.66
- [5.4.18 Optimize Global Assignments in Conditionals \(-Xcga-min-use\)](#), p.70
- [5.4.22 Disregard ANSI C Library Functions \(-Xclib-optm-off\)](#), p.71
- [5.4.23 Enable Cross-module Optimization \(-Xcmo-...\)](#), p.72
- [5.4.51 Control Inlining Expansion \(-Xexplicit-inline-factor\)](#), p.84
- [5.4.74 Inline Functions with Fewer Than n Nodes \(-Xinline=n\)](#), p.93
- [5.4.75 Allow Inlining of Recursive Function Calls \(-Xinline-explicit-force\)](#), p.94
- [5.4.76 Allow Division by Reciprocal-Multiply when Optimizing \(-Xint-reciprocal\)](#), p.94
- [5.4.81 Disable Individual Optimizations \(-Xkill-opt=mask, -Xkill-reorder=mask\)](#), p.96
- [5.4.90 Do Not Assign Locals to Registers \(-Xlocals-on-stack\)](#), p.101
- [5.4.105 Enable Extra Optimizations \(-XO\)](#), p.108
- [5.4.107 Execute the Compiler's Optimizing Stage n Times \(-Xopt-count=n\)](#), p.109
- [5.4.109 Specify Optimization Buffer Size \(-Xparse-size\)](#), p.109
- [5.4.122 Restart Optimization From Scratch \(-Xrestart\)](#), p.115
- [5.4.131 Optimize for Size Rather Than Speed \(-Xsize-opt\)](#), p.118
- [5.4.144 Control Optimization of Structure Member Assignments \(-Xstruct-assign-split-...\)](#), p.121

- [5.4.151 Specify Loop Test Location \(-Xtest-at-...\)](#), p.123
- [5.4.154 Control Loop Unrolling \(-Xunroll=n, -Xunroll-size=n\)](#), p.125

Output

- [5.4.15 Control Allocation of Uninitialized Variables in “COMMON” and bss Sections \(-Xbss-off, -Xbss-common-off\)](#), p.69
- [5.4.32 Dump Symbol Information for Macros or Assertions \(-Xcpp-dump-symbols\)](#), p.76
- [5.4.61 Generate .frame_info for C functions \(-Xframe-info\)](#), p.89
- [5.4.65 Do Not Pass #ident Strings \(-Xident-off\)](#), p.90
- [5.4.69 Ignore Missing Include Files \(-Xincfile-missing-ignore\)](#), p.91
- [5.4.93 Show Make Rules \(-Xmake-dependency\)](#), p.102
- [5.4.94 Specify Dependency Name or Output File \(-Xmake-dependency-...\)](#), p.103
- [5.4.110 Output Source as Comments \(-Xpass-source\)](#), p.110
- [5.4.116 Suppress Line Numbers in Preprocessor Output \(-Xpreprocessor-lineno-off\)](#), p.112
- [5.4.127 Disable Generation of Priority Section Names \(-Xsect-pri-...\)](#), p.117
- [5.4.126 Generate Each Function in a Separate CODE Section Class \(-Xsection-split\)](#), p.116
- [5.4.128 Control Listing of -X Options in Assembly Output \(-Xshow-configuration=n\)](#), p.117
- [5.4.153 Append Underscore to Identifier \(-Xunderscore-...\)](#), p.124

Position-independence

- [5.4.26 Generate Position-independent Code \(PIC\) \(-Xcode-relative...\)](#), p.73
- [5.4.112 Generate Position-Independent Code for Shared Libraries \(-Xpic\)](#), p.111
- [5.4.35 Generate Position-independent Data \(PID\) \(-Xdata-relative...\)](#), p.77

Precompiled Headers

- [5.4.111 Use Precompiled Headers \(-Xpch-...\)](#), p.110

Sections

- [5.4.4 Set Addressing Mode for Sections \(-Xaddr-...\), p.64](#)
- [5.4.15 Control Allocation of Uninitialized Variables in “COMMON” and bss Sections \(-Xbss-off, -Xbss-common-off\), p.69](#)
- [5.4.25 Use Absolute Addressing for Code \(-Xcode-absolute...\), p.72](#)
- [5.4.30 Locate Constants With “text” or “data” \(-Xconst-in-text, -Xconst-in-data\), p.75](#)
- [5.4.34 Use Absolute Addressing for Data \(-Xdata-absolute...\), p.76](#)
- [5.4.36 Align .debug Sections \(-Xdebug-align=n\), p.77](#)
- [5.4.88 Allocate Static and Global Variables to Local Data Area \(-Xlocal-data-area=n\), p.100](#)
- [5.4.89 Restrict Local Data Area Optimization to Static Variables \(-Xlocal-data-area-static-only\), p.101](#)
- [5.4.102 Specify Section Name \(-Xname-...\), p.106](#)
- [5.4.114 Control Interpretation of Multiple Section Pragmas \(-Xpragma-section-...\), p.111](#)
- [5.4.125 Pad Sections for Optimized Loading \(-Xsection-pad\), p.116](#)
- [5.4.132 Set Size Limit for “small const” Variables \(-Xsmall-const=n\), p.118](#)
- [5.4.133 Set Size Limit for “small data” Variables \(-Xsmall-data=n\), p.118](#)

Syntax

- [5.4.14 Parse Initial Values Bottom-up \(-Xbottom-up-init\), p.68](#)
- [5.4.33 Suppress Preprocessor Spacing \(-Xcpp-no-space\), p.76](#)
- [5.4.24 Use the ‘new’ Compiler Frontend \(-Xc-new\), p.72](#)
- [5.4.43 Specify C Dialect \(-Xdialect-...\), p.79](#)
- [5.4.44 Disable Digraphs \(-Xdigraphs-...\), p.80](#)
- [5.4.45 Allow Dollar Signs in Identifiers \(-Xdollar-in-ident\), p.81](#)
- [5.4.68 Treat #include As #import \(-Ximport\), p.91](#)
- [5.4.77 Enable Intrinsic Functions \(-Xintrinsic-mask\), p.95](#)
- [5.4.80 Enable Extended Keywords \(-Xkeywords=mask\), p.95](#)

- [5.4.91 Expand Macros in Pragmas \(-Xmacro-in-pragma\)](#), p.101
- [5.4.100 Allow MIPS64 Assembler Syntax \(-Xmode-64bit\)](#), p.106
- [5.4.117 Use Old Preprocessor \(-Xpreprocessor-old\)](#), p.112
- [5.4.140 Compile C/C++ in Pedantic Mode \(-Xstrict-ansi\)](#), p.120
- [5.4.147 Swap '\n' and '\r' in Constants \(-Xswap-cr-nl\)](#), p.122
- [5.4.152 Truncate All Identifiers After m Characters \(-Xtruncate\)](#), p.124
- [5.4.156 Void Pointer Arithmetic \(-Xvoid-ptr-arith-ok\)](#), p.126

Type

- [5.4.9 Change bit-field Type to Reduce Structure Size \(-Xbit-fields-compress-...\)](#), p.66
- [5.4.10 Specify Sign of Plain Bit-field \(-Xbit-fields-signed, -Xbit-fields-unsigned\)](#), p.67
- [5.4.20 Specify Sign of Plain Char \(-Xchar-signed, -Xchar-unsigned\)](#), p.70
- [5.4.19 Generate Code Using ASCII Character Set \(-Xcharset-ascii\)](#), p.70
- [5.4.46 Control Use of Type "double" \(-Xdouble...\)](#), p.81
- [5.4.49 Specify enum Type \(-Xenum-is-...\)](#), p.82
- [5.4.52 Force Precision of Real Arguments \(-Xextend-args\)](#), p.84
- [5.4.53 Specify Degree of Conformance to the IEEE754 Standard \(-Xfp-fast, -Xfp-normal, -Xfp-pedantic\)](#), p.85
- [5.4.106 Use Old Inline Assembly Casting\(-Xold-inline-asm-casting\)](#), p.108
- [5.4.59 Convert Double and Long Double \(-Xfp-long-double-off, -Xfp-float-only\)](#), p.88
- [5.4.60 Specify Minimum Floating Point Precision \(-Xfp-min-prec...\)](#), p.88
- [5.4.66 Enable Strict Implementation of IEEE754 Floating Point Standard \(-Xieee754-pedantic\)](#), p.90
- [5.4.141 Ignore Sign When Promoting Bit-fields \(-Xstrict-bitfield-promotions\)](#), p.120
- [5.4.157 Define Type for wchar \(-Xwchar=n\)](#), p.126
- [5.4.158 Control Use of wchar_t Keyword \(-Xwchar_t-...\)](#), p.126

C++

- [5.4.12 Set Type for Bool \(-Xbool-is-...\)](#), p.68

- [5.4.13 Control Use of Bool, True, and False Keywords \(-Xbool-...\)](#), p.68
- [5.4.16 Use Abridged C++ Libraries \(-Xc++-abr\)](#), p.69
- [5.4.17 Use Old C++ Compiler \(-Xc++-old\)](#), p.70
- [5.4.21 Use Old for Scope Rules \(-Xclass-type-name-visible\)](#), p.71
- [5.4.27 Mark Sections as COMDAT for Linker Collapse \(-Xcomdat\)](#), p.74
- [5.4.28 Maintain Project-wide COMDAT List \(-Xcomdat-info-file\)](#), p.74
- [5.4.44 Disable Digraphs \(-Xdigraphs-...\)](#), p.80
- [5.4.50 Enable Exceptions \(-Xexceptions-...\)](#), p.83
- [5.4.56 Use Old for Scope Rules \(-Xfor-init-scope-...\)](#), p.87
- [5.4.61 Generate .frame_info for C functions \(-Xframe-info\)](#), p.89
- [5.4.67 Control Template Instantiation \(-Ximplicit-templates...\)](#), p.91
- [5.4.78 Set longjmp Buffer Size \(-Xjmpbuf-size=n\)](#), p.95
- [5.4.95 Set Template Instantiation Recursion Limit \(-Xmax-inst-level=n\)](#), p.104
- [5.4.103 Disable C++ Keywords namespace and Using \(-Xnamespace-...\)](#), p.107
- [5.4.111 Use Precompiled Headers \(-Xpch-...\)](#), p.110
- [5.4.124 Enable Run-time Type Information \(-Xrtti, -Xrtti-off\)](#), p.115
- [5.4.129 Print Instantiations \(-Xshow-inst\)](#), p.117
- [5.4.140 Compile C/C++ in Pedantic Mode \(-Xstrict-ansi\)](#), p.120
- [5.4.149 Disable Certain Syntax Warnings \(-Xsyntax-warning-...\)](#), p.123
- [5.4.155 Runtime Declarations in Standard Namespace \(-Xusing-std-...\)](#), p.125
- [5.4.157 Define Type for wchar \(-Xwchar=n\)](#), p.126
- [5.4.158 Control Use of wchar_t Keyword \(-Xwchar_t-...\)](#), p.126

The sections that follow present -X options in alphabetic order.

5.4.3 Prefix Function Identifiers With Underscore (-Xadd-underscore)

-Xadd-underscore

-X34

Prefix an underscore to function names only. Concatenation of underscore is useful when compiling libraries, to avoid using the same namespace as user programs.

5.4.4 Set Addressing Mode for Sections (-Xaddr-...)

-Xaddr-code=*n*

-X105=*n*

Specify addressing for code.

-Xaddr-const=*n*

-X102=*n*

Specify addressing for constant static and global variables.

-Xaddr-data=*n*

-X100=*n*

Specify addressing for non-constant static and global variables.

-Xaddr-sconst=*n*

-X103=*n*

Specify addressing for constant static and global variables with size less than or equal to **-Xsmall-const**.

-Xaddr-sdata=*n*

-X101=*n*

Specify addressing for non-constant static and global variables with size less than or equal to **-Xsmall-data** in size.

-Xaddr-string=*n*

-X104=*n*

Specify addressing for strings.

-Xaddr-user=*n*

-X106=*n*

Specify addressing for user-defined sections.

- 5.4.5 See the discussion of *addr-mode* in [14.2 Addressing Mode - Functions, Variables, Strings](#), p. 260 for more information. **Align Functions On n-byte Boundaries (-Xalign-functions=n)**

```
-Xalign-functions=n
-X54=n
```

Align each function on an address boundary divisible by *n* (which must be greater than or equal to the default alignment for the target microprocessor). If *n* is absent, the option has no effect. This option is designed for targets having some type of burst-mode memory access, for example a target that can fetch multiple instructions if aligned on a 32-byte boundary.

- 5.4.6 **Specify Minimum Alignment for Single Memory Access to Multi-byte Values (-Xalign-min=n)**

```
-Xalign-min=n
-X93=n
```

Set the minimum alignment required by the target processor to access a multi-byte value (e.g., **short**, **long**) in memory as an atomic unit, that is, in a single memory access. This option is set automatically by the compiler based on the target processor and should seldom be set by the user.



NOTE: This option does not change how data is aligned; it changes the instructions which the compiler generates to access multi-byte unaligned objects.

Technical details: if the target processor can access objects at any alignment with a single instruction, *n* is set to 1. For a processor which requires that multi-byte objects be aligned on even-byte boundaries for direct access, *n* is set to 2. Unaligned objects on such a processor must be accessed byte-by-byte. For a processor that requires 4-byte objects be on a 4-byte boundary, *n* is set to 4 (2-byte objects aligned on 2-byte boundaries can still be accessed with a single instruction).

The default value of *n* equals the maximum alignment restriction as given in the manufacturer's documentation for the processor. Note that it may differ among processors in a family. As of this writing, the default is 8 for MIPS and 4 for MIPS16 because MIPS16 does not support hardware floating point.



NOTE: Because **-Xalign-min** is **> 1**, in a packed structure (a) bit-fields members are not allowed, (b) **volatile** members will not be accessed atomically, and (c) compound operators (for example, “+=”) cannot be used with **volatile** members. See [Restrictions and Additional Information](#), [p.144](#) for details.

Synonym: **-Xmin-align=n**.

5.4.7 Assume No Aliasing of Pointer Arguments (-Xargs-not-aliased)

-Xargs-not-aliased

-x65

Assume that pointer arguments to a function are not aliased with each other, nor with any global data. This enables greater optimization. Example:

```
int g;

func(int* a1, int* a2);

void main () {
    int i = 1;
    int j = 2;

    func(&i, &j);    /* OK      */
    func(&i, &i);    /* not OK */
    func(&i, &g);    /* not OK */
}
```

See also [no_alias Pragma](#), p.141.

5.4.8 Specify Minimum Array Alignment (-Xarray-align-min)

-Xarray-align-min=n

-x161=n

Align arrays on the larger of *n* or the default alignment for the type of the array elements. *n* should be a power of 2. When this option is used, values given for **-Xstring-align** are ignored.

5.4.9 Change bit-field Type to Reduce Structure Size (-Xbit-fields-compress-...)

-Xbit-fields-compress

-x135=1

-Xbit-fields-compress-off

-x135=0

C only. Change the type of a bit-field if possible to generate more compact storage. The default is off.

The algorithm is as follows:

Examine all structure members before assigning offsets. Record:

BitFieldMaxAlign = maximum alignment of any bit-field.

NonBitFieldMaxAlign = maximum alignment of any non bit-field.

WidthMaxBitField = number bits in largest bit-field.

IF **BitFieldMaxAlign** > **NonBitFieldMaxAlign** THEN

NewType = **unsigned** integer type having the same alignment as that of the **NonBitFieldMaxAlign**.

IF **WidthMaxBitField** <= bits in **NewType** THEN

Change the type of each **unsigned** bit-field larger than **NewType** to **NewType** and each **signed** bit-field larger than **NewType** to **signed NewType**.

This option is intended for legacy code. The same effect may be achieved in new code by using the smallest types having the required alignments.

Synonym: **-Xbitfield-compress**.

5.4.10 Specify Sign of Plain Bit-field (-Xbit-fields-signed, -Xbit-fields-unsigned)

-Xbit-fields-signed

-x12=0

C only. Handle bit-fields without the **signed** or **unsigned** keyword as signed integers.

Synonym: **-Xsigned-bitfields**.

-Xbit-fields-unsigned

-x12

C only. Treat bit-fields without the **signed** or **unsigned** keyword as unsigned integers. This is the default setting.

Synonym: **-Xunsigned-bitfields**.

See also [5.4.141 Ignore Sign When Promoting Bit-fields \(-Xstrict-bitfield-promotions\)](#), p.120.

5.4.11 Insert Profiling Code (-Xblock-count)

-Xblock-count
-X24

Insert code in the compiled program to keep track of the number of times each basic block (the code between labels and branches) is executed. See [28. D-BCNT Profiling Basic Block Counter](#) for details, and also [5.4.54 Optimize Using Profile Data \(-Xfeedback=file\)](#), p.85.

5.4.12 Set Type for Bool (-Xbool-is-...)

-Xbool-is-char
-X119=44

Implement type **bool** as a plain **char**. This is the default.

-Xbool-is-int
-X119=4

C++ only. Implement type **bool** as a **signed int**. This may produce less code on some architectures but will require more data space.

5.4.13 Control Use of Bool, True, and False Keywords (-Xbool-...)

-Xbool-on
-X213=0

Enable the **bool**, **true**, and **false** keywords. This is the default.

-Xbool-off
-X213

C++ only. Disable the **bool**, **true**, and **false** keywords.

Synonym: **-Xno-bool**.

5.4.14 Parse Initial Values Bottom-up (-Xbottom-up-init)

-Xbottom-up-init
-X21

C only. Both K&R and ANSI C specify that structure and array initializations with missing braces should be parsed top-down, however some C compilers parse these bottom-up instead. Example:

```

struct z { int a, b; };
struct x {
    struct z z1[2];
    struct z z2[2];
} x = { {1,2},{3,4} };

```

Should be parsed according to ANSI & K&R as:

```
{ { {1,2},{0,0} } , { {3,4},{0,0} } };
```

-Xbottom-up-init causes bottom-up parsing:

```
{ {1,2},{3,4} } , { {0,0},{0,0} } };
```

This option is set when **-Xdialect-pcc** is set.

5.4.15 Control Allocation of Uninitialized Variables in “COMMON” and bss Sections (**-Xbss-off**, **-Xbss-common-off**)

-Xbss-common-off

-X83=3

Disable use of the “COMMON” feature so that the compiler or assembler will allocate each uninitialized public variable in the **.bss** section for the module defining it, and the linker will require exactly one definition of each public variable. See [23.5 COMMON Sections](#), p.381.

Synonym: **-Xno-common**.

-Xbss-off

-X83=1

Put all variables in the **.data** section instead of allocating uninitialized variables in the **.bss** section.

Synonym: **-Xno-bss**.

5.4.16 Use Abridged C++ Libraries (**-Xc++-abr**)

-Xc++-abr

Link to the abridged C++ libraries. Automatically disables exception-handling (**-Xexceptions=off**). See [13.3 C++ Standard Libraries](#), p.240.

5.4.17 Use Old C++ Compiler (-Xc++-old)

-Xc++-old

Invoke the older C++ compiler that preceded version 5.0. Useful for compiling legacy code that is not ANSI-compliant. See [Older Versions of the Compiler](#), p.234.

5.4.18 Optimize Global Assignments in Conditionals (-Xcga-min-use)

-Xcga-min-use=*n*

When a global variable is accessed repeatedly within a conditional statement, the compiler can replace the global variable with a temporary local copy (which can be stored in a register), then reassign the local variable to the global variable when the conditional finishes execution.

If conditional global assignment is enabled, the compiler determines whether to copy a global variable by estimating the number of times the global variable is accessed within the conditional block at runtime. (The exact number of accesses may depend on factors, such as the value of a loop counter, that cannot be known at compile time.) If the global variable is accessed *n* or more times, the compiler performs the optimization. The default value of *n* is 20.

Conditional global assignment is enabled by default (**-Xcga-min-use=20**) whenever optimizations are enabled (**-O** or **-XO**). To disable conditional global assignment, set *n* to 0 (**-Xcga-min-use=0**). Conditional global assignment is never performed on variables declared or treated as volatile (see [5.4.97 Treat All Variables As Volatile \(-Xmemory-is-volatile, -X...-volatile\)](#), p.104) and should be used with caution in multi-threaded environments.

5.4.19 Generate Code Using ASCII Character Set (-Xcharset-ascii)

-Xcharset-ascii

-X60=1

Generate code using the ASCII character set. All strings and character constants are converted to ASCII. The default is to use the same character system as the host machine.

Synonym: **-Xascii-charset**.

5.4.20 Specify Sign of Plain Char (-Xchar-signed, -Xchar-unsigned)

-Xchar-signed**-X23=0**

Treat variables declared **char** without either of the keywords **signed** or **unsigned** as signed characters.

Synonym: **-Xsigned-char**.

-Xchar-unsigned**-X23**

Treat variables declared **char** without either of the keywords **signed** or **unsigned** as unsigned characters.

Synonym: **-Xunsigned-char**.

The default setting is **signed**. See also [Table 8-1](#) and `__SIGNED_CHARS__` in [6.1 Preprocessor Predefined Macros](#), p.131.

In C++, plain **char**, **signed char** and **unsigned char** are always treated as different types, but this option defines how arithmetic with plain **char** is done.

5.4.21 Use Old for Scope Rules (-Xclass-type-name-visible)

-Xclass-type-name-visible**-X218=1**

C only. Direct the compiler not to hide **struct** or **union** names when other identifiers with the same names are declared in the same scope. For example, consider the following statement:

```
struct S {...} S[10];
```

With or without this option, the form **struct S** may always be used later to declare additional variables of type **struct S**. However, without the option, **sizeof(S)** will refer to the size of the array, while with this option, **sizeof(S)** will refer to the size of the structure.

5.4.22 Disregard ANSI C Library Functions (-Xclib-optim-off)

-Xclib-optim-off**-X66**

Direct the compiler to disregard all knowledge of ANSI C library functions.

By default, the compiler automatically includes, before all other header files, the file **lpragma.h**, which contains **pure_function**, **no_return**, and **no_side_effects** pragmas and other statements that allow optimization of calls to C library functions. (If the default include directory `version_path/include`

exists, the compiler looks for **lpragma.h** only in this directory. If *version_path/include* does not exist, the compiler searches for **lpragma.h** in other user-specified directories.)

This option disables use of **lpragma.h**.

Synonym: **-Xno-recognize-lib**.

5.4.23 Enable Cross-module Optimization (-Xcmo-...)

-Xcmo-gen=name

Generate a database, in file *name*, for cross-module optimization.

-Xcmo-use=name

Compile with cross-module optimization using information in database *name*; update database.

-Xcmo-exclude-inline=list

Combined with **-Xcmo-use**, tells the compiler *not* to inline specified functions. *list* is a comma-delimited list of functions which should not be inlined across modules. For C++, use mangled function names.

-Xcmo-verbose

Combined with **-Xcmo-gen** or **-Xcmo-use**, lists all functions that are inlined across modules. Useful for tracking dependencies.

These options enable cross-module optimization, which allows the compiler to optimize calls between functions in different source files. See [10.3 Cross-Module Optimization](#), p.206 for details. Cross-module optimization is disabled by default.

5.4.24 Use the 'new' Compiler Frontend (-Xc-new)

-Xc-new

Compile using a compiler frontend derived from one produced by the Edison Design Group. By default, invoking **-Xc-new** also invokes **-Xdialect-c99**. Supported only with the **:rtp** execution environment.

5.4.25 Use Absolute Addressing for Code (-Xcode-absolute...)

-Xcode-absolute-far

-X58=6

Use 32-bit absolute addressing for code.

See [14.2 Addressing Mode - Functions, Variables, Strings](#), p.260.

-Xcode-absolute-near
-x58=5

Use 16-bit absolute addressing for code.

See [14.2 Addressing Mode - Functions, Variables, Strings](#), p.260.

5.4.26 Generate Position-independent Code (PIC) (-Xcode-relative...)

-Xcode-relative-far
-x58=2

Generate position-independent code (PIC).

- Branches and function calls use 32-bit offsets from the PC, relative to **\$23**.
- By default, global **const** or **static const** variables and string constants are included in the code section and are referenced relative to register **\$23** using 32-bit offsets. The default may be changed using option **-Xconst-in-text** which controls whether **const** variables and string constants are in “text” (code) or “data” sections. See [5.4.30 Locate Constants With “text” or “data” \(-Xconst-in-text, -Xconst-in-data\)](#), p.75) and [Moving initialized Data From “text” to “data”](#), p.268, for details and refinements.

References to the small **const area**, if any, still use a 16-bit offset (see [Table 14-5](#) and following).

For global or **static** pointers to be position-independent, they must be initialized dynamically and are therefore always stored in a “data” section even if declared **const**. See option [5.4.47 Generate Initializers for Static Variables \(-Xdynamic-init\)](#), p.81).

Synonym: **-Xfar-code-relative**.

-Xcode-relative-far-all
-x58=4

Equivalent to **-Xcode-relative-far** except that *all* global and **static** variables are by default placed in the code section, not just those which are **const**, and references to the small **const area**, if any, use a 32-bit offset rather than the more efficient 16-bit offset, and for this reason this option is deprecated.

Synonym: **-Xall-far-code-relative**.

-Xcode-relative-near
-x58=1

Like **-Xcode-relative-far** except that offsets are 16-bit rather than 32-bit. See it for details.



NOTE: Because offsets are 16-bit, the combined size of all sections to which this option applies is limited to 64KB (for better optimization, actually 64KB - 0x10 — see [9.6 Register Use](#), p.194 for further details).

Synonym: **-Xnear-code-relative**.

-Xcode-relative-near-all

-X58=3

Extends **-Xcode-relative-near** to *all* global and static variables, not just those declared **const**. See it for details.

Synonym: **-Xall-near-code-relative**.

5.4.27 Mark Sections as COMDAT for Linker Collapse (**-Xcomdat**)

-Xcomdat

-X120

C++ only. Mark all generated sections as COMDAT. The linker automatically collapses identical COMDAT sections to a single section in memory. This is the default.

By default, the compiler automatically generates a section for each instantiation of each member function or static class variable in a template in each module where the member function or variable is used. Given **-Xcomdat**, the compiler marks all implicit template instantiations as COMDAT and the linker collapses identical instances.

-Xcomdat-off

Generate all template instantiations and inline functions required as static entities in the resulting object file. If a template is used in more than one module, **-Xcomdat-off** results in multiple instances of static member function variables or static class variables, instead of a single instance as is likely intended; to avoid this, enable **-Ximplicit-templates-off**.

See [5.4.67 Control Template Instantiation \(-Ximplicit-templates...\)](#), p.91 and [Templates](#), p.243 for details.

If a section is present in both COMDAT and non-COMDAT forms, the linker will treat symbols in the COMDAT section as weak. See [weak Pragma](#), p.148 for details on weak symbols.

5.4.28 Maintain Project-wide COMDAT List (-Xcomdat-info-file)

-Xcomdat-info-file=filename

C++ only. When **-Xcomdat** is enabled, generate and maintain (in *filename*) a list of COMDAT entries across modules. The list is automatically updated and checked for consistency with each build. This option speeds up builds and reduces object-file size in projects that make extensive use of templates. Since COMDAT sections are ultimately collapsed by the linker, this option has no effect on the final executable file.

5.4.29 Optimize Static and Global Variable Access Conservatively (-Xconservative-static-live)

-Xconservative-static-live

-X139

Make optimizations of static and global variable accessing less aggressive; for example, do not delete assignments to such variables in infinite loops from which there is no apparent return.

5.4.30 Locate Constants With “text” or “data” (-Xconst-in-text, -Xconst-in-data)

-Xconst-in-text=mask

-X74=mask

-Xconst-in-data

-X74=0

Locate data in the **CONST** (mask bit 0x1), **SCONST** (mask bit 0x2), and **STRING** (mask bit 0x4) section classes according to the given mask bit: if 1, locate in a “text” section (the default), else if 0, locate in a “data” section.

mask may be given in hex, and mask bits may be OR-ed to select more than one, e.g., **-Xconst-in-text=0x5**. Undefined mask bits are ignored.

The default value of this option is given in [Moving initialized Data From “text” to “data”](#), p.268.

-Xconst-in-data and **-Xstrings-in-text** are historical shortcuts for locating all “constants” (**CONST**, **SCONST**, and **STRING** classes, not just “const” or string data) in “data” sections (*mask*=0) or “text” sections (*mask*=0xff) respectively.

The exact name of the “text” and “data” sections depends on the target. See the discussion in [14. Locating Code and Data, Addressing, Access](#) for exact section

names and examples, as well as [Moving initialized Data From “text” to “data”](#), p.268.

When **STRING** is in a text section, identical string constants will be stored only once. This is the default in version 3.6 and later.

5.4.31 Select n32 Calling Conventions (-Xconventions-n32)

-Xconventions-n32
-X31=2

This option is controlled by **DOBJECT=E** and should not be set explicitly by the user.

5.4.32 Dump Symbol Information for Macros or Assertions (-Xcpp-dump-symbols)

-Xcpp-dump-symbols=mask
-X158=mask

Dump symbol information for macros, assertions, or both. To show macros, set bit 0 (the LSB) of *mask* to 1. To show assertions, set bit 1 to 1. To show line numbers, set bit 2 to 0. The default *mask* is 7 (show macros and assertions, no line numbers).

5.4.33 Suppress Preprocessor Spacing (-Xcpp-no-space)

-Xcpp-no-space
-X117

C only. Do not insert spaces around macro names and arguments during preprocessing.

5.4.34 Use Absolute Addressing for Data (-Xdata-absolute...)

-Xdata-absolute-far
-X59=6

Use 32-bit absolute addressing for data.

See [14.2 Addressing Mode - Functions, Variables, Strings](#), p.260.

-Xdata-absolute-near
-X59=5

Use 16-bit absolute addressing for data.

See [14.2 Addressing Mode - Functions, Variables, Strings](#), p.260.

5.4.35 Generate Position-independent Data (PID) (-Xdata-relative...)

-Xdata-relative-far

-X59=2

Generate position-independent data (PID) references to all global or static variables (except strings and **const** variables if the **-Xconst-in-text=0xf** option is used).

Use 32-bit offsets from register **\$28** except for those global or static variables in the Small Data Area (SDA), which will be accessed through fast 16-bit offsets from **\$28**, which means the SDA is limited to 64KB (to facilitate certain optimizations, actually 64KB - 0x10—see [9.6 Register Use](#), p.194 for further details).

Synonym: **-Xfar-data-relative**.

-Xdata-relative-near

-X59=1

Generate position-independent data (PID) references to all global or static variables (except strings and **const** variables if the **-Xconst-in-text=0** option is used).

All references use a 16-bit offset from register **\$28**, which means the combined size of all sections to which this attribute applies is limited to 64KB (to facilitate certain optimizations, actually 64KB - 0x10—see [9.6 Register Use](#), p.194 for further details).

Synonym: **-Xnear-data-relative**.



NOTE: If the option **-Xconst-in-text = 0xf** (equivalent to the older option **-Xstrings-in-text**), strings and **const** variables will be placed in “text” sections and addressed as code rather than as position-independent data. See [Moving initialized Data From “text” to “data”](#), p.268 for details.

5.4.36 Align .debug Sections (-Xdebug-align=n)

-Xdebug-align[=n]

Align **.debug** sections on specified boundaries. *n* is a power of 2; e.g.,

-Xdebug-align=3 aligns **.debug** sections on 8-byte boundaries. If *n* is omitted, alignment defaults to 4-byte boundaries.

Without this option, **.debug** sections are aligned on byte boundaries.

5.4.37 Select DWARF Format (-Xdebug-dwarf...)

-Xdebug-dwarf1

-X153=1

Generate DWARF 1.1 debug information.

-Xdebug-dwarf2

-X153=2

Generate DWARF 2 debug information. This is the default.

-Xdebug-dwarf3

-X153=3

Generate DWARF 3 debug information.

-Xdebug-dwarf2-extensions-off

Suppress vendor-specific extensions in DWARF 2 and DWARF 3 debug information.

5.4.38 Generate Debug Information for Inlined Functions (-Xdebug-inline-on)

-Xdebug-inline-on

Generate debugging information for all inlined functions. Works with DWARF 2 and DWARF 3 only. Can result in very large executables. This option is disabled by default.

5.4.39 Emit Debug Information for Unused Local Variables (-Xdebug-local-all)

-Xdebug-local-all

Emit debugging information for all local variables, even variables that are never used. This option is disabled by default.

5.4.40 Generate Local CIE for Each Unit (-Xdebug-local-cie)

-Xdebug-local-cie

Generate a local Common Information Entry (CIE) for each unit. This option, which eliminates the dependency on the debug library **libg.a**, is applicable only with DWARF 2 or DWARF 3 debug information.

5.4.41 Disable debugging information Extensions (-Xdebug-mode=mask)

-Xdebug-mode=mask

-x99=mask

Disable extensions to debugging information per bits in *mask*. May be necessary for other vendors' assemblers or for debuggers which cannot process the extensions.

mask may be given in hex, and mask bits may be OR-ed to select more than one, e.g., **-Xdebug-mode=0x6**. Undefined mask bits are ignored.

0x2

Information regarding executable code in a header file (DWARF1, ELF).

0x4

Use of **.d1line** assembler directive (DWARF1, ELF).

0x10

Line number information for **asm** statements (DWARF1, DWARF2, DWARF3).

0x40

Use of **.d1_line_start** and **.d1_line_end** assembler directives (DWARF1).

0x100

Column information (DWARF 2 and DWARF 3, C++).

5.4.42 Disable Debug Information Optimization (-Xdebug-struct-...)

-Xdebug-struct-all

-x116=1

Force generation of type information for **typedef**, **struct**, and **union**, and **class** types, even when such types are not referenced in a file.

-Xdebug-struct-compact

-x116=0

Do not output types which are not used in debug information. This is the default, and it generates more compact but still complete version of debug information.

5.4.43 Specify C Dialect (-Xdialect-...)

-Xdialect-c89

-x230=0

Follow the C89 standard for C. See [Table B-1](#) for details.

-Xdialect-c99

-x230=1

Follow the C99 standard for C. See [Table B-1](#) for details.

-Xdialect-k-and-r

-x7=0

Follow the “C standard” as defined by the original K&R C reference manual, but with all the new ANSI C features added. Where K&R and ANSI differ, **-Xdialect-k-and-r** follows K&R. See [Table B-2](#) for details.

Synonyms: **-Xk-and-r**, **-Xt**.

-Xdialect-ansi

-x7=1

Follow the ANSI C standard with some additions. See [Table B-2](#) for details. This is the default.

Synonyms: **-Xansi**, **-Xa**.

-Xdialect-strict-ansi

-x7=2

Strictly follow the ANSI C *and* C++ standards. See [Table B-2](#) for details. For C++, see [5.4.140 Compile C/C++ in Pedantic Mode \(-Xstrict-ansi\)](#), p.120.

Synonym: **-Xstrict-ansi**, **-Xc**.

-Xdialect-pcc

-x7=3

Follow the C standard as defined by the UNIX System V.3 C compiler. See [Table B-1](#) for details.

Synonym: **-Xpcc**.

5.4.44 Disable Digraphs (-Xdigraphs-...)

-Xdigraphs-on

-x202=0

C++ only. Enable digraphs. If digraphs are enabled, the compiler recognizes the following keywords as digraphs: **bitand**, **and**, **bitor**, **or**, **xor**, **compl**, **and_eq**, **or_eq**, **xor_eq**, **not**, and **not_eq**. This is the default.

-Xdigraphs-off

-x202

Disable digraphs.

Synonym: **-Xno-digraphs**.

5.4.45 Allow Dollar Signs in Identifiers (-Xdollar-in-ident)

-Xdollar-in-ident

-X67

Allow dollar sign characters, "\$", in identifiers. This option is on by default if **-Xc-new** is used.

5.4.46 Control Use of Type "double" (-Xdouble...)

-Xdouble-avoid

-X96=3

C only. Force all double constants to single precision and generation of only single precision instructions.

-Xdouble-error

-X96=1

Generate an error if any double precision operation is used. It will also force all double constants to single precision and generate only single-precision instructions.

-Xdouble-warning

-X96=2

Generate a warning if any double precision operation is used. It will also force all double constants to single precision and generation of only single precision instructions.

5.4.47 Generate Initializers for Static Variables (-Xdynamic-init)

-Xdynamic-init=1

-X121=1

Cause the compiler to generate code in the initialization section to initialize addresses in **static** initializers. This option can be applied to any code, but is required for position-independent code and for C++ virtual tables. Example:

```
static int * address_p = & static_var;
```

Without this option, the above initializer would generate an error message if the code is compiled to be position-independent.

-Xdynamic-init=2

-X121=2

Extends the **-Xdynamic-init=1** option to generate code in the initialization section for all initializers, not just addresses.

5.4.48 Compile in Little-endian Mode (-Xendian-little)

-Xendian-little
-X94

Compile in little-endian mode. This option is generated automatically by the driver when “L” is used as part of the **-t** option, e.g., **-tMIPSLN**. *It should not be given by the user and doing so may lead to undefined behavior.* It is documented for information only.

5.4.49 Specify enum Type (-Xenum-is-...)

-Xenum-is-best
-X8=2

Use the smallest *signed or unsigned* integer type permitted by the range of values for an enumeration, that is, the first of **signed char**, **unsigned char**, **short**, **unsigned short**, **int**, **unsigned int**, **long**, or **unsigned long** sufficient to represent the values of the enumeration constants. (**long long** is not available for enumerated types.) Thus, an enumeration with values from 1 through 128 will have base type **unsigned char** and require one byte. (Using the **packed** keyword on an enumerated type yields the same result as **-Xenum-is-best**.)

-Xenum-is-int
-X8

This is the default. For C modules, the **enum** type is always equivalent to **int**. For C++, each **enum** type is equivalent to **int** if the range will fit, or **unsigned int** if it will not; if the range will not fit into either, a warning is issued and **unsigned int** is used.

-Xenum-is-short
-X8=3

Each **enum** type is always equivalent to **signed short** if the range will fit, or **unsigned short** if it will not. If the range will not fit into either, a warning is issued and **unsigned short** is used.

-Xenum-is-small
-X8=0

Use the smallest *signed* integer type permitted by the range of values for an enumeration, that is, the first of **signed char**, **short**, **int**, or **long** sufficient to represent the values of the enumeration constants. Thus, an enumeration with values from 1 through 128 will have base type **short** and require two bytes.

-Xenum-is-unsigned**-X8=4**

Use the smallest *unsigned* integer type permitted by the range of values for an enumeration, that is, the first of **unsigned char**, **unsigned short**, **unsigned int**, or **unsigned long** sufficient to represent the values of the enumeration constants. Thus, an enumeration with values from 1 through 128 will have base type **unsigned char** and require one byte.



NOTE: If modules compiled with different **-Xenum-is-...** options are mixed in a program, compatibility problems may result.

When an enumerated type occurs within a packed structure, the default behavior is to use the smallest possible integer type for the enumeration constants (**-Xenum-is-best**). To override this behavior, specify **-Xenum-is-short** or **-Xenum-is-unsigned**.

5.4.50 Enable Exceptions (-Xexceptions-...)

-Xexceptions-off**-X200=0**

C++ only. Disable exceptions. Compiling a program with any of the keywords **try**, **catch**, or **throw** will cause a compilation error. (But **throw()** is still allowed in function declarations to indicate that **new** or **delete** will not throw exceptions.) Compiling with this option will reduce stack space and increase execution speed when classes with destructors are used.

Synonym: **-Xno-exception**.

-Xexceptions**-X200**

C++ only. Enable exceptions. This is the default.

For mixed C/C++ programs, see also [5.4.61 Generate .frame_info for C functions \(-Xframe-info\)](#), p.89.

Synonym: **-Xexception**.

5.4.51 Control Inlining Expansion (**-Xexplicit-inline-factor**)

-Xexplicit-inline-factor
-Xexplicit-inline-factor=*n*
-X136=*n*

Limits the inlining in a function (explicit and implicit) to an expansion of *n* times (measured in nodes where, roughly, each operator or operand counts as one node).

Given a function *f*, the compiler first inlines all functions explicitly declared inline which *f* calls, as well as any other small functions which can be inlined based on the other inlining optimization controls. It then divides the new size of the function (number of nodes) by the size with no inlining. If the result is $\leq n$, it looks for new inlining opportunities in the resulting code and repeats the cycle. Once an expansion of *n* times is exceeded, inlining stops.

If **-Xexplicit-inline-factor** is specified with no value, *n* defaults to 3. If **-Xexplicit-inline-factor** is not specified, the default value is 0 (which means no limit) for C and 3 for C++.

See also [5.4.75 Allow Inlining of Recursive Function Calls \(-Xinline-explicit-force\)](#), p.94.

5.4.52 Force Precision of Real Arguments (**-Xextend-args**)

-Xextend-args
-x77

Make all floating point arguments use the precision given by whichever of **-Xfp-min-prec-double**, **-Xfp-min-prec-long-double**, or **-Xfp-min-prec-float** is in force (all are settings of **-X3**), even if prototypes are used. (If none of the **-X3** options are also given, the default is **-Xfp-min-prec-double** as that is equivalent to **-X3=0**).



NOTE: If this option is used, libraries containing functions with floating point parameters must be recompiled. For safety, recompile all libraries to avoid missing any such functions.

5.4.53 Specify Degree of Conformance to the IEEE754 Standard (-Xfp-fast, -Xfp-normal, -Xfp-pedantic)

-Xfp-fast

-x82=2

Favor floating-point performance over conformance to the IEEE754 floating-point standard.

-Xfp-normal

-x82=0

Use normal (relaxed) conformance to the IEEE754 floating-point standard. This is the default.

-Xfp-pedantic

-x82=1

Use strict conformance to the IEEE754 floating-point standard. This option is equivalent to using **-Xieee754-pedantic**. (See [5.4.66 Enable Strict Implementation of IEEE754 Floating Point Standard \(-Xieee754-pedantic\)](#), p.90.)

The **-Xfp-fast** option allows floating-point division by a constant to be optimized into a multiply by the reciprocal of the constant. This optimization is inhibited for **-Xfp-normal** and **-Xfp-pedantic** unless the constant is a power of two.

5.4.54 Optimize Using Profile Data (-Xfeedback=file)

-Xfeedback

-Xfeedback=file

(no numeric equivalent)

Use profiling information generated by the **-Xblock-count** (see [5.4.11 Insert Profiling Code \(-Xblock-count\)](#), p.68) option to optimize for faster code. *file* is the name of the profiling file. The default is **dbcnt.out**.

To use this option:

- Compile a program with **-Xblock-count**.
- Run the program, which now creates **dbcnt.out** with profiling information. (See [15.8.2 File I/O](#), p.289 for file I/O in an embedded environment.)
- Recompile, now with the **-XO** and **-Xfeedback** options to produce high-level speed optimized code. Use **-Xfeedback-frequent** and **-Xfeedback-seldom** described below to control how the feedback data affects optimization.

5.4.55 Set Optimization Parameters Used With Profile Data (-Xfeedback-frequent, -Xfeedback-seldom)

-Xfeedback-frequent
-X68=n
-Xfeedback-seldom
-X69=n

Change the parameters used to control optimization of basic blocks when using profile data, for example, the amount of inlining, loop unrolling, and reorganization to reduce branches actually taken, all to increase speed (sometimes at the expense of space).

When using **-Xprof-feedback** (5.4.120 *Optimize Using RTA Profile Data (-Xprof-feedback)*, p.113) and **-Xfeedback** (5.4.54 *Optimize Using Profile Data (-Xfeedback=file)*, p.85), the compiler divides the basic blocks into three categories: code executed “frequently”, “sometimes”, and “seldom”. More of the above optimizations are done for “frequent” code, while less or none is done for code executed “seldom”.

The higher the thresholds, the more often code must be executed to get into the “frequent” category.

The defaults are **-Xfeedback-seldom=10** and **-Xfeedback-frequent=50** and are used as follows: each execution of a basic block recorded in the profile counts as one *tick*. The low-mark and high-mark values are normalized on a basis of 1,000 ticks, which means that the options have units of a tenth of a percent. That is, the default values mean that, if exactly 1,000 ticks are recorded, blocks executed fewer than 10 times (up to 1%) are marked “seldom”, those executed from 10 to 50 times (1% to 5%) are marked “sometimes”, and those executed 50 or more times (5% of more) are marked “frequent”. Example:

```
-Xfeedback-frequent=30
```

means that blocks accounting for 3% or more of all ticks will go into the “frequent” category, and the compiler will do more inlining of functions called within these blocks, more loop unrolling, etc., to decrease their execution time.

Synonyms: **-Xhi-mark** for **-Xfeedback-frequent**, **-Xlo-mark** for **-Xfeedback-seldom**.

5.4.56 Use Old for Scope Rules (-Xfor-init-scope-...)

-Xfor-init-scope-for

-X217=0

Use “new” scope rules for variables declared in the initialization part of a **for** statement. With this option, the scope of a variable declared in the initialization part extends to the end of the **for** statement.

-Xfor-init-scope-outer

-X217

C++ only. Use “old” scoping rules for variables declared in the initialization part of a **for** statement. With this option, the scope extends to the end of the scope enclosing the **for** statement.

Synonym: **-Xold-scoping**.

5.4.57 Generate Warnings on Undeclared Functions (-Xforce-declarations, -Xforce-prototypes)

-Xforce-declarations

-X9

Generate warnings if a function is used without a previous declaration.

-Xforce-prototypes

-X9=3

Generate warnings if a function is used without a previous prototype declaration.

These options are useful to make C a more strongly typed language. This option is ignored when compiling C++ modules.

5.4.58 Suppress Assembler and Linker Parameters (-Xforeign-as-ld)

-Xforeign-as-ld

(no numeric equivalent)

Cause the driver to call an assembler and linker without any implicit parameters.

This allows third-party assemblers and linkers to be used with the Wind River compiler. The **-W xfile** option may be used to specify a foreign assembler or linker (5.3.31 *Substitute Program or File for Default (-W xfile)*, p.50), the **-W a** option to pass parameters to the assembler (5.3.26 *Pass Arguments to the Assembler (-W a,arguments, -W :as;,arguments)*, p.48), and the **-W l** option to pass

parameters to the linker (5.3.28 *Pass Arguments to Linker (-W l,arguments, -W :ld;,arguments)*, p.49).

5.4.59 Convert Double and Long Double (-Xfp-long-double-off, -Xfp-float-only)

-Xfp-float-only

-X70=2

Force **double** and **long double** to be the same as **float**.

Synonym: **-Xno-double**.

-Xfp-long-double-off

-X70

Force **long double** to be the same as **double** on machines where they differ.

Synonym: **-Xno-long-double**.



NOTE: If this option is used, libraries containing functions with floating point parameters must be recompiled. For safety, recompile all libraries to avoid missing any such functions. Also, operation of library routines designed to process a suppressed type is undefined.

5.4.60 Specify Minimum Floating Point Precision (-Xfp-min-prec...)

-Xfp-min-prec-double

-X3=0

Use **double** as the minimum precision in expressions and for floating point arguments. Lesser precisions are used in expressions if the **-Xdialect-ansi** option is used. If prototypes are used, use the declared precision for arguments, unless the **-Xextend-args** option is used.

Synonym: **-Xuse-double**.

-Xfp-min-prec-float

-X3=1

Use **float** as the minimum precision in expressions and for floating point arguments.

Synonym: **-Xuse-float**.

-Xfp-min-prec-long-double**-X3=2**

Use **long double** as the minimum precision in expressions and for floating point arguments. Lesser precisions are used in expressions if the **-Xdialect-ansi** option is used.

If prototypes are used, use the declared precision for arguments, unless the **-Xextend-args** option is also given.

Synonym: **-Xuse-long-double**.



NOTE: If this option is used, libraries containing functions with floating point parameters must be recompiled. For safety, recompile all libraries to avoid missing any such functions. Also, operation of library routines designed to process a suppressed type is undefined.

5.4.61 Generate **.frame_info** for C functions (**-Xframe-info**)

-Xframe-info

Force the compiler to generate **.frame_info** sections for C functions. Use this option when compiling mixed C/C++ programs in which C++ exceptions may propagate back through C functions. For more information, see [23.9 *.frame_info* sections](#), p.384.

5.4.62 Include Filename Path in Debug Information (**-Xfull-pathname**)

-Xfull-pathname**-X125**

Include the path prefix in filenames in debug information (specifically, in the **.file** assembler directive). Without this option, only the filename is included.

5.4.63 Control GNU Option Translator (**-Xgcc-options-...**)

-Xgcc-options-on

Enable automatic translation of GNU compiler (GCC) options. This is the default.

-Xgcc-options-off

Disable automatic translation of GCC options.

-Xgcc-options-verbose

Display all translations. Valid only if translation is enabled
(-Xgcc-options-on).

When **-Xgcc-options-on** is enabled, GCC option flags from the command line or makefile are parsed and, if possible, translated to equivalent Wind River Compiler options. Translations are determined by the tables in the file `gcc_parser.conf`.

5.4.64 Treat All Global Variables as Volatile (-Xglobals-volatile)

See [5.4.97 Treat All Variables As Volatile \(-Xmemory-is-volatile, -X...-volatile\)](#), p.104.

5.4.65 Do Not Pass #ident Strings (-Xident-off)

-Xident-on

-X63=0

Pass **#ident** strings to the assembler. This is the default.

-Xident-off

-X63

Do not pass **#ident** strings to the assembler.

Synonym: **-Xno-ident**.

5.4.66 Enable Strict Implementation of IEEE754 Floating Point Standard (-Xieee754-pedantic)

-Xieee754-pedantic

-X82=1

Enable strict implementation of the IEEE754 floating point standard at some cost in performance. Specifically,

- Do not optimize a divide by a constant to a multiply of its reciprocal.
- Do not use floating multiply-add instructions on architectures where more bits are kept in intermediate results than is defined by the standard.
- Do not optimize $x-x$ to zero so that possible NaN values are preserved.
- Do less equal and greater equal comparisons with behavior for NaN values as defined by the standard.

This option is equivalent to **-Xfp-pedantic**. (See [5.4.53 Specify Degree of Conformance to the IEEE754 Standard \(-Xfp-fast, -Xfp-normal, -Xfp-pedantic\)](#), p.85.)

5.4.67 Control Template Instantiation (-Ximplicit-templates...)

-Ximplicit-templates

-X207=0

Instantiate each template in each module where it is used or referenced. This is the default.

-Ximplicit-templates-off

-X207=1

Instantiate templates only where explicit instantiation syntax is used.

Synonym: **-Xno-implicit-template**.

For further discussion, see [5.4.27 Mark Sections as COMDAT for Linker Collapse \(-Xcomdat\)](#), p.74 and [Templates](#), p.243.

C++ only.

5.4.68 Treat #include As #import (-Ximport)

-Ximport

-X75

Treat all **#include** directives as if they are **#import** directives. This means that any include file is included only once.

5.4.69 Ignore Missing Include Files (-Xincfile-missing-ignore)

-Xincfile-missing-ignore

-X172

This option, which suppresses error reporting, is effective only when used with **-Xmake-dependency** ([5.4.93 Show Make Rules \(-Xmake-dependency\)](#), p.102). It causes preprocessing to continue even when a required header is not found. If **-Xincfile-missing-ignore** is used with **-Xmake-dependency=2** or **-Xmake-dependency=6**, the preprocessor issues a warning (but not an error) when a required system file (**#include <filename>**) is not found.

5.4.70 Initialize Local Variables (-Xinit-locals=mask)

-Xinit-locals=mask

-x87=mask

Initialize all local variables to zero or the value specified with **-Xinit-value** at every function entry. *mask* is a bit mask specifying the kind of variables to be initialized.

mask may be given in hex, e.g., **-Xinit-locals=0x9**. Mask bits may be OR-ed to select more than one. Undefined mask bits are ignored.

0x1 integers
0x2 pointers
0x4 floats
0x8 aggregates

If *n* is not given, all local variables will be initialized.

This option is useful in finding “memory dependent” bugs.

5.4.71 Control Generation of Initialization and Finalization Sections (-Xinit-section)

This option controls generation of sections for run-time initialization and finalization invocation, including constructor and destructor functions and global class objects in C++. For more information, see [15.4.8 Run-time Initialization and Termination](#), p.284.

-Xinit-section=0

-x91=0

Suppress generation of initialization and finalization sections. This option is not recommended and may result in incorrect run-time behavior.

-Xinit-section

-Xinit-section=1

-x91

-x91=1

Create **.ctors** and **.dtors** sections containing pointers to initialization and finalization functions, sorted by priority. This is the default.

Initialization and finalization functions are designated with attribute specifiers. See [constructor](#), [constructor\(*n*\) Attribute](#), p.155 and [destructor](#), [destructor\(*n*\) Attribute](#), p.156.

-Xinit-section=2**-X91=2**

Create **.init** $_{nn}$ and **.fini** $_{nn}$ code sections containing calls to initialization and finalization functions, sorted by priority. Provides compatibility with previous versions of the compiler, including recognition of old-style function prefix designations for initialization and finalization functions.

Synonym: **-Xuse-.init**.

5.4.72 Control Default Priority for Initialization and Finalization Sections (-Xinit-section-default-pri)

-Xinit-section-default-pri=//**-X175=//**

Assign the default priority for constructor and destructor functions and for C++ global class objects. The specified priority n applies to functions referenced in **.ctors**, **.dctors**, **.init**, and **.fini** sections. Functions with lower priority numbers execute first.

5.4.73 Define Initial Value for -Xinit-locals (-Xinit-value=n)

-Xinit-value=//**-X90=//**

Define the initial value used by the **-Xinit-locals** option. This option can be useful to identify uninitialized variables, since it can be used to initialize variables to some invalid or recognizable value that might produce a memory access error.

The value n is 32-bits, right-justified, zero-filled and may be specified as a decimal or hexadecimal number (0x...).

5.4.74 Inline Functions with Fewer Than n Nodes (-Xinline=n)

-Xinline=//**-X19=//**

Set the limit on the number of nodes for automatic inlining. Because the compiler collects functions until **-Xparse-size** KBytes of memory is used, the inlined function does not need to be defined before the function using it. See [__inline__ and inline Keywords](#), p.149 and [Inlining \(0x4\)](#), p.210 for a discussion of inlining.

See [5.4.154 Control Loop Unrolling \(-Xunroll=*n*, -Xunroll-size=*n*\)](#), p.125 for a definition of node count. (Assembly files saved with **-S** show the number of nodes for each function.) For purposes of automatic inlining, nodes that do not correspond to an operator or operand are not counted. Hence setting **-Xinline** to 0 inlines no functions automatically, and setting **-Xinline** to 1 inlines only “dummy” functions containing no code.

Defaults: **-Xinline** is 10 by default. **-XO** sets **-Xinline** to 40 by default.



NOTE: Inlining occurs only if optimization is selected by using the **-XO** or **-O** option.

5.4.75 Allow Inlining of Recursive Function Calls (**-Xinline-explicit-force**)

```
-Xinline-explicit-force  
-Xinline-explicit-force=n  
-X163  
-X163=n
```

Inline recursive function calls up to *n* times. The default is 50. If this option is not used, the compiler inlines a function at most once.

If this option is combined with **-Xinline=0**, the compiler inlines only functions declared within a C++ class or with **inline**, **__inline__**, or **#pragma inline**.

This option is overridden by **-Xexplicit-inline-factor**. (See [5.4.51 Control Inlining Expansion \(-Xexplicit-inline-factor\)](#), p.84.) By default,

-Xexplicit-inline-factor=3 is in effect for C++ programs; C++ programmers who want to use **-Xinline-explicit-force** should therefore specify **-Xexplicit-inline-factor=0**.

5.4.76 Allow Division by Reciprocal-Multiply when Optimizing (**-Xint-reciprocal**)

```
-Xint-reciprocal  
-X407
```

The optimization of performing integer division by a reciprocal-multiply generates more instructions than using a divide instruction, and so is disabled when **-Xsize-opt** is specified. Use **-Xint-reciprocal** to allow divide-by-reciprocal-multiply even when optimizing for size (i.e., when **-Xsize-opt** is specified). See also [5.4.131 Optimize for Size Rather Than Speed \(-Xsize-opt\)](#), p.118.

5.4.77 Enable Intrinsic Functions (-Xintrinsic-mask)

-Xintrinsic-mask=//
-X154=//

Enable specified intrinsic functions. See [6.6 Intrinsic Functions](#), p.158 for details.

5.4.78 Set longjmp Buffer Size (-Xjmpbuf-size=n)

-Xjmpbuf-size=//
-X201=//

C++ only. Set the size in bytes of the buffer allocated for **setjmp** and **longjmp** when using exceptions. The default size as determined by the compiler should usually be sufficient.

5.4.79 Create and Keep Assembly or Object File (-Xkeep-assembly-file, -Xkeep-object-file)

-Xkeep-assembly-file
 (no numeric equivalent)

Always create and keep a **.s** file without the need for a separate compilation with the **-S** option. This option can be used with the **-c** option to create both assembly and object files at once.

-Xkeep-object-file
 (no numeric equivalent)

Always create and keep a **.o** file without the need for a separate compilation with the **-c** option. This is needed only when a single file is compiled, assembled, and linked in one step, because in this case the driver deletes intermediate assembly and object files automatically.

5.4.80 Enable Extended Keywords (-Xkeywords=mask)

-Xkeywords=mask
-X78=mask

Recognize new keywords according to *mask*, a bit mask specifying which keywords to add.

mask may be given in hex, e.g., **-Xkeywords=0x9**. Mask bits may be OR-ed to select more than one. Undefined mask bits are ignored.

0x01 **extended** (C only)
0x02 **pascal** (C only)
0x04 **inline** (this keyword *always* available in C++)
0x08 **packed**
0x10 **interrupt** (C only)

See [6. Additions to ANSI C and C++](#) for more information on these keywords.

5.4.81 Disable Individual Optimizations (-Xkill-opt=mask, -Xkill-reorder=mask)



NOTE: These options are largely intended for internal WindRiver use. Their usage is strongly discouraged, and they should be used *only* on the advice of Wind River Customer Support.

-Xkill-opt=mask
-X27=mask

Disable individual target-independent optimizations.

-Xkill-reorder=mask
-X28=mask

Disable individual target-dependent optimizations in the **reorder** program.

mask is a bit mask with one bit for each optimization type. *mask* may be given in hex, e.g., **-Xkill-opt=0x12**. Multiple optimizations can be disabled by OR-ing their mask bits. Undefined mask bits are ignored.

Both target-independent and target-dependent optimizations are described in [10. Optimization](#). The name of each optimization is followed by its mask bit in parentheses, e.g. Tail recursion (0x2).

For *mask* bit values for **-Xkill-opt**, see [10.4 Target-Independent Optimizations](#), p.208, and for **-Xkill-reorder**, [10.5 Target-Dependent Optimizations](#), p.221. *mask* bit values are given in parentheses after the name of each optimization.

Either the **-O** or **-XO** option must be given to enable optimization before either of these **-Xkill-...** options can be used. To compile with almost no optimization, do not specify **-O** or **-XO**.

Two minor optimizations required by the code generation algorithms cannot be disabled: local strength reduction (e.g., multiply by power of 2 becomes shift or add) and simple branch optimization (e.g., branches to branches).

5.4.82 Use Alternative C99 Libraries (-Xlibc)

-Xlibc-new

Use alternative (Dinkumware) libraries. These libraries include C99 support and date from release 5.6 of the Wind River Compiler for MIPS.

-Xlibc-old

Use legacy (pre-release 5.6) libraries. This is the default.

With release 5.6 of the Wind River Compiler for MIPS, updated versions of **libi.a**, **libcfp.a**, and **libm.a** were made available.

Older versions of these libraries are included as **libiold.a**, **libcfpold.a**, and **libmold.a**; you can utilize these libraries by specifying them individually on the command line or together by specifying **-Xlibc-old**.

-Xlibc-new implies C99 usage and is equivalent to **-Xc-new -Xdialect-c99**.

Several combinations of dialect and library usage are thus possible:

- C89 dialect and pre-5.6 C89 libraries (the default)
- C89 dialect and post-5.6, alternative (C99) libraries (**-Xdialect-c89 -Xlibc-new**)
- C99 dialect and pre-5.6 C89 libraries (**-Xc-new**)
- C99 dialect and post-5.6, alternative (C99) libraries (**-Xlibc-new**)

5.4.83 Turn License Proxy Off (-Xlicense-proxy-use)

-Xlicense-proxy-use=1

-X191

By default, the compiler uses a proxy process (**licproxy**) to obtain a license, saving time that might otherwise be spent in contacting a license server for multiple compilations. During an initial compilation, the proxy starts up and obtains a license; subsequent licenses need only contact the proxy, not the server. The proxy stays alive for a few minutes after each compilation.

If **-Xlicense-proxy-use** is set to 0, then the license proxy is disabled.

See also [5.4.84 Change License Proxy Path \(-Xlicense-proxy-path\)](#), p.98, and [5.4.85 Wait For License \(-Xlicense-wait\)](#), p.98.

5.4.84 Change License Proxy Path (-Xlicense-proxy-path)

-Xlicense-proxy-path=path
-X49

Use **-Xlicense-proxy-path** to specify the location of the license proxy process (**licproxy**). Users will seldom need to change the value of this path. Compilation failure will result if proxy use is enabled and **-Xlicense-proxy-path** is set to an invalid location.

See also [5.4.83 Turn License Proxy Off \(-Xlicense-proxy-use\)](#), p.97, and [5.4.85 Wait For License \(-Xlicense-wait\)](#), p.98.

5.4.85 Wait For License (-Xlicense-wait)

-Xlicense-wait
-X138

If a license is not available, request that the compiler wait and retry once a minute, rather than returning with an error.

See also [5.4.83 Turn License Proxy Off \(-Xlicense-proxy-use\)](#), p.97, and [5.4.84 Change License Proxy Path \(-Xlicense-proxy-path\)](#), p.98.

5.4.86 Perform Link-Time Lint (-Xlink-time-lint)

-Xlink-time-lint
-X405

Enable the checking of object and function declarations across compilation units, as well as the consistency of compiler options used to compile source files. **-Xlink-time-lint** may be called as an option to the compiler, the linker, or the driver (**dcc**).

Information used by link-time lint is preserved during linking and is passed to the output file, so if a program is linked incrementally, **-Xlink-time-lint** can be used at any stage of a build.

5.4.87 Generate Warnings On Suspicious/Non-portable Code (-Xlint=mask)

-Xlint[=mask]
-X84[=mask]

Generate warnings when suspicious and non-portable C code is encountered. For C++ modules, see note below. The two usual cases are:

-Xlint enables all warnings (equivalent to **-Xlint=1**).

-Xlint=0xffffffff disables all present and future warnings (equivalent to **-Xlint=0** or the default of not using the option at all).

Individual warnings can be *disabled* by OR-ing the following values. In effect, **-Xlint=1** is assumed, enabling all warnings, and then individual warnings are disabled. *mask* may be given in hex, e.g., **-Xlint=0x1a**. Undefined bits are ignored.

0x02 Variable used before being set.

0x04 Label not used.

0x08 Condition always true/false, for example, **i==i**.

To suppress warnings for conditional constructs for which you don't want a warning, add an extra set of parentheses, e.g.:

```
do {}
while ((0));
```

0x10 Variable/function not used.

0x20 Missing return expression.

0x40 Variable set but not used.

0x80 Statement not reached.

0x100 Conversion problems.

0x200 In non-ANSI mode, warn when the compiler selects an unsigned integral type for an expression which would be signed under ANSI mode. For example:

```
"a.c", line 3: warning (1671):
non-portable behavior: type of
`>' operator is unsigned only
in non-ANSI mode
```

0x400 Possibly assignment (=) should be comparison (==).

0x1000

Missing function declaration (equivalent to **-Xforce-declarations**).

0x2000

Possible redundant expression. (Examples: **x=x**, **x&x**, **x | x**, **x/x**.)

[11. The Lint Facility](#) gives an example of a program which generates most of the **-Xlint** warnings.

See also the `__lint` macro in [6.1 Preprocessor Predefined Macros](#), p.131 to avoid use of non-ANSI extensions in header files.



NOTE: For C++, **-Xlint** is equivalent to **-Xsyntax-warning-on**. (See [5.4.149 Disable Certain Syntax Warnings \(-Xsyntax-warning-...\)](#), p.123.)

5.4.88 Allocate Static and Global Variables to Local Data Area (**-Xlocal-data-area=n**)

-Xlocal-data-area=n

-X115=n

Allocate the static and global variables which are defined in a module and referenced as least once in a contiguous block of memory, called the local data area (LDA), and make fast, efficient references to those variables via a temporary base register selected by the compiler.

n specifies the maximum of the LDA, and defaults to 32,767 bytes. (If *n* is greater than the default, references to variables in the LDA will be less efficient.)

The optimization does not apply to unreferenced variables or to variables smaller than **-Xsmall-data**, which go in the **.sdata** or **.sbss** sections.

-Xlocal-data-area should be used with caution in multithreaded environments. To restrict the optimization to static variables, use

-Xlocal-data-area-static-only; VxWorks developers are strongly advised to use this option.

See [14.4 Local Data Area \(-Xlocal-data-area\)](#), p.270 for additional information.

Synonym: **-Xlocal-struct**.



NOTE: If at least one variable in the LDA has an initial value, the LDA is in the `.data` section; otherwise it is in the `.bss` section. Because `-Xlocal-data-area` is nonzero by default, uninitialized static and global variables larger than `-Xsmall-data` bytes in size which are referenced at least once are not stored in a `.bss` section. To store such variables in `.bss`, use `-Xlocal-data-area=0`.

5.4.89 Restrict Local Data Area Optimization to Static Variables (-Xlocal-data-area-static-only)

`-Xlocal-data-area-static-only`
`-X166`

Apply the local data area optimization only to static variables; do not optimize global variables. See [14.4 Local Data Area \(-Xlocal-data-area\)](#), p.270 for information about this optimization.

5.4.90 Do Not Assign Locals to Registers (-Xlocals-on-stack)

`-Xlocals-on-stack`
`-x5`

By default, the compiler attempts to assign all local variables to registers. If `-Xlocals-on-stack` is given, only variables declared with the `register` keyword are assigned to registers.

5.4.91 Expand Macros in Pragmas (-Xmacro-in-pragma)

`-Xmacro-in-pragma`
`-X157`

Expand preprocessor macros in `#pragma` directives.

5.4.92 Warn On Undefined Macro In #if Statement (-Xmacro-undefined-warn)

`-Xmacro-undefined-warn`
`-X171`

Generate a warning when an undefined macro name occurs in a `#if` preprocessor directive.

5.4.93 Show Make Rules (-Xmake-dependency)

-Xmake-dependency
-Xmake-dependency=mask
-X156, -X156=mask

Generate a list of include files required to build each object file. Example:

```
main.o: main.c stdio.h
command list
```

This output means that **main.c** and **stdio.h** are required to build the target **main.o**. A list of make commands follows the dependency.

mask, which defaults to 1, is a bit mask—always interpreted as hexadecimal—of which the four least significant bits are meaningful: the fourth (least significant) bit, if set to 1, means that all required files are shown; this is the default. The third bit means that only files enclosed in double quotation marks (**#include "filename"**) are shown. (If both the third and the fourth bits are set, the fourth overrides the third.) The second bit means that compilation continues after the dependency list is generated (if this bit is 0, no output is emitted other than the list of dependencies) and that the dependency list is sent to a file (instead of the standard output). The first bit creates a “phony target” for each dependency other than the main file; this is a work around for errors caused by missing header files and is provided for GNU compatibility. The **-o** option can be used to specify the output file, the target name, or both. Hence:

-Xmake-dependency=1

Same as **-Xmake-dependency**. Show all required include files. If **-o** is used, the target is the name specified with **-o**. Results go to the standard output unless **-Xmake-dependency-savefile=filename** is specified. No further output is emitted.

-Xmake-dependency=2

Same as **-Xmake-dependency=1**, but show only files enclosed in double quotation marks (**#include "filename"**).

-Xmake-dependency=4

Same as **-Xmake-dependency=1**, but write the dependency list to a file and then continue with normal compilation. The output file can be specified with either **-o** or **-Xmake-dependency-savefile=filename** (which overrides **-o**); otherwise it is called *filename.d*, where *filename* is the name of the main source file, and is created in the directory where the compiler was invoked. If **-o** is used without **-Xmake-dependency-savefile**, the output file is the basename specified by **-o** with **.d** appended.

-Xmake-dependency=8

Same as **-Xmake-dependency=1**, but output a phony target for each dependency other than the main file.

The bits can be OR-ed to combine options. Example:

-Xmake-dependency=6

Show only files enclosed in double quotation marks (**-Xmake-dependency=2**); write output to a file, then continue with normal compilation (**-Xmake-dependency=4**).

-Xmake-dependency=a

Show only files in double quotation marks (**-Xmake-dependency=2**) and output phony targets (**-Xmake-dependency=8**).

-Xmake-dependency=c

Output phony targets (**-Xmake-dependency=8**); write output to a file, then continue with normal compilation (**-Xmake-dependency=4**).

-Xmake-dependency=e

Show only files enclosed in double quotation marks (**-Xmake-dependency=2**); output phony targets (**-Xmake-dependency=8**); write output to a file, then continue with normal compilation (**-Xmake-dependency=4**).

Ordinarily, the preprocessor returns an error and stops when a required file is not found. To continue preprocessing when files are missing, use

-Xmake-dependency with **-Xincfile-missing-ignore** ([5.4.69 Ignore Missing Include Files \(-Xincfile-missing-ignore\)](#), p.91).

5.4.94 Specify Dependency Name or Output File (**-Xmake-dependency-...**)

This option is valid only when used with **-Xmake-dependency**.

-Xmake-dependency-target=string

Change the target name in the rule emitted by **-Xmake-dependency** to *string* (instead of using the name of the object file). To specify multiple target names, repeat the **-Xmake-dependency-target** option on the command line.

-Xmake-dependency-savefile=filename

Specify the output file for **-Xmake-dependency**.

5.4.95 Set Template Instantiation Recursion Limit (-Xmax-inst-level=*n*)

-Xmax-inst-level[=*n*]

-X216[=*n*]

C++ only. Set the maximum level for recursive instantiation of templates.

Without this option, an error is emitted when a default level of 50 is reached.

With this option, but without a value *n*, the limit is 100.

5.4.96 Set Maximum Structure Member Alignment (-Xmember-max-align=*n*)

-Xmember-max-align=*n*

-X88=*n*

Set the maximum byte boundary to which structure members will be aligned.

If the natural alignment of a member is less than *n*, the natural alignment is used for it. See [pack Pragma](#), p.143 and the [__packed__ and packed Keywords](#), p.151 for details. See also [5.4.145 Set Minimum Structure Member Alignment \(-Xstruct-min-align=*n*\)](#), p.122.

The default value of *n* is dependent on the processor as described in [8. Internal Data Representation](#).

Synonym: **-Xstruct-max-align**.

5.4.97 Treat All Variables As Volatile (-Xmemory-is-volatile, -X...-volatile)

-Xmemory-is-volatile

-X4

-X4=7

Treat all variables as volatile.

-Xglobals-volatile

-X4=1

Treat all global variables as volatile.

-Xstatics-volatile

-X4=2

Treat all static variables as volatile.

-Xpointers-volatile

-X4=4

Treat all pointer accesses as volatile.

These options tell the compiler not to perform optimizations that can cause device drivers or other systems to fail. By default, the compiler keeps data in registers as long as possible whenever it is safe. Difficulties can arise if a memory location

changes because it is mapped to an external hardware device and the compiler, unaware of the change, continues to use the old value stored in a register. While these situations can now be handled with the **volatile** keyword, the **-X4** options allow compilation of older programs.

To combine these options, use the sum of their values with a single occurrence of the option flag. For example, use **-X4=3** to treat all global and static variables as volatile. **-X4=7**, equivalent to **-X4** or **-Xmemory-is-volatile**, combines all of the options.

5.4.98 Pass Floating Point Parameters to MIPS16 Functions (-Xmips16-hw-fp-call)

-Xmips16-hw-fp-call
-X40>

When compiling MIPS32 code with hardware floating point which is to call MIPS16 code, cause the MIPS32 code to pass floating point parameters and accept return results in the general register set for use by the MIPS16 code in addition to the usual floating point registers (\$f12 or \$f14).

5.4.99 Enable Specific MIPS Instructions (-Xmips-mad, -Xmips-movc, -Xmips-mul)

-Xmips-mad
-Xmips=movc
-Xmips-mul

These options enable code generation of these instructions for any MIPS processor:

When **-Xmips-mad** is specified, the compiler can generate the MIPS instructions **msub**, **msubu**, **mad** and **madu**.

When **-Xmips-movc** is specified, the MIPS conditional move instructions **movn** and **movz** can be generated.

When **-Xmips-mul** is specified, the compiler can generate the MIPS **mul** instruction.

5.4.100 Allow MIPS64 Assembler Syntax (-Xmode-64bit)

-Xmode-64bit

Allows use of MIPS64 instructions in assembler code when compiling for older MIPS targets. It is not necessary to use this option when compiling with -tMIPS64 or -tMIPS-64.

5.4.101 Warn On Type and Argument Mismatch (-Xmismatch-warning)

-Xmismatch-warning

-X2

-Xmismatch-warning=2

-X2=2

Generate a warning only (instead of a fatal error) when either pointers of different types, or pointers and integers, are mixed in expressions. Example:

```
long i1, i2 = &i1;
```

is invalid in ANSI C but is allowed in some non-ANSI dialects. This option is set implicitly by **-Xdialect-pcc (-X7=3)**.

If the option **-Xmismatch-warning=2** is given, the compiler also generates a warning instead of an error when identifiers are redeclared and when a function call has the wrong number of arguments.

This option is ignored when compiling C++ modules.



NOTE: **-Xmismatch-warning** and **-Xmismatch-warning=2** override the **-e** option. If either form of **-Xmismatch-warning** is used, mismatched types will only produce a warning, even if **-e** is used to increase the severity level of the diagnostic. See [5.3.8 Change Diagnostic Severity Level \(-e\)](#), p.42.

5.4.102 Specify Section Name (-Xname-...)

Use the following options to specify the name of a default section.

-Xname-code=name

Set the section name for code.

-Xname-const=name

Set the section name for initialized constants.

-Xname-data=name

Set the section name for initialized **data**.

- Xname-eh=*name*
C++ only.
Set the section name for all exception-handling tables.
- Xname-rtti=*name*
C++ only.
Set the section name for all RTTI tables.
- Xname-sconst=*name*
Set the section name for initialized small **const**.
- Xname-sdata=*name*
Set the section name for initialized small **data**.
- Xname-string=*name*
Set the section name for strings.
- Xname-uconst=*name*
Set the section name for uninitialized constants.
- Xname-udata=*name*
Set the section name for uninitialized **data**.
- Xname-usconst=*name*
Set the section name for uninitialized small **const**.
- Xname-usdata=*name*
Set the section name for uninitialized small **data**.
- Xname-vtbl=*name*
C++ only.
Set the section name for all virtual-function tables.

Section names can also be specified using the **section** pragma. For example, setting **-Xname-code=.code** has the same effect as:

```
#pragma section CODE ".code"
```

For more information, see [section Pragma](#), p.147.

5.4.103 Disable C++ Keywords namespace and Using (-Xnamespace-...)

- Xnamespace-on
-X219=0
Recognize the **namespace** and **using** keywords or constructs.
- Xnamespace-off
-X219
C++ only. Do not recognize the **namespace** and **using** keywords or constructs.

5.4.104 Save Registers for Nested Interrupts (-Xnested-interrupts)

-Xnested-interrupts
-X41

In order to support nested interrupts, when entering an interrupt function (a function named in a **#pragma interrupt** directive or declared with the **interrupt** or **__interrupt__** keywords), save the **C0_EPC** and **C0_SR** registers, and return from the function by restoring **C0_SR** and returning to the address saved from **C0_EPC** (which was saved only for use by the return and need not be restored).

5.4.105 Enable Extra Optimizations (-XO)

-XO
-X26

Enable all standard optimizations plus the following:

-O
([5.3.18 Optimize Code \(-O\)](#), p.46)

-Xinline=40
(10 with **-O**; [5.4.74 Inline Functions with Fewer Than n Nodes \(-Xinline=n\)](#), p.93)

-Xopt-count=2
(1 with **-O**; [5.4.107 Execute the Compiler's Optimizing Stage n Times \(-Xopt-count=n\)](#), p.109)

-Xparse-size=6000
(3000 with **-O**; [5.4.109 Specify Optimization Buffer Size \(-Xparse-size\)](#), p.109)

-Xrestart
(off with **-O**; [5.4.122 Restart Optimization From Scratch \(-Xrestart\)](#), p.115)

-Xtest-at-both
(**-Xtest-at-bottom** with **-O**; [5.4.151 Specify Loop Test Location \(-Xtest-at-...\)](#), p.123)

5.4.106 Use Old Inline Assembly Casting(-Xold-inline-asm-casting)

-Xold-inline-asm-casting
-X137

This option affects small arguments to **asm** macros (arguments with size less than **int**).

By default, the compiler does not extend such arguments to **int**. Prior to version 4.2, the compiler did extend such arguments to **int**. Use this option to force the old behavior for compatibility with existing **asm** macros which depend on it.

5.4.107 Execute the Compiler's Optimizing Stage *n* Times (-Xopt-count=*n*)

-Xopt-count=*n*
-X25=*n*

Execute the compiler's optimizing stage *n* times. The default is once. In most cases this is enough. In rare instances, one stage of the optimizer will generate an opportunity for a previous stage. Setting **-Xopt-count=2** or more will cause a somewhat longer compilation time but may produce slightly better code. This option is set to 2 by **-XO**.

5.4.108 Disable Most Optimizations With -g (-Xoptimized-debug-...)

-Xoptimized-debug-on
-X89=0

Do not disable optimizations when using **-g**. This is the default.

-Xoptimized-debug-off
-X89

When using the **-g** option to generate debug information, disable most optimizations and force line numbers in debug information to be in increasing order — assists with debuggers that cannot handle optimized code. See also [5.4.41 Disable debugging information Extensions \(-Xdebug-mode=mask\)](#), p.79, and [5.4.42 Disable Debug Information Optimization \(-Xdebug-struct-...\)](#), p.79.

Synonym: **-Xno-optimized-debug**.

5.4.109 Specify Optimization Buffer Size (-Xparse-size)

-Xparse-size=*n*
-X20=*n*

Delay code generation of functions until *n* KBytes of main memory is used for internal tables. By delaying generation, the compiler can perform interprocedural optimizations such as inlining and register tracking.

The default is 3000 KB (6000 KB if option **-XO** is used). The highest useful value for a module depends on many factors; it is not practical to calculate it (see the

discussion of “limitations related to memory size” in [C. Compiler Limits](#) for some of the factors).

For very large and complex modules, experiment with larger values, e.g. **-Xparse-size=8000**, to see if code size or execution time is reduced.



NOTE: That using a value larger than available physical memory will cause excessive swapping and slow compilation.

5.4.110 Output Source as Comments (-Xpass-source)

-Xpass-source
-x11

Output the source as comments in the generated assembly language code.

5.4.111 Use Precompiled Headers (-Xpch-...)

C++ only. These options are disabled by default. At most one of **-Xpch-automatic**, **-Xpch-create**, and **-Xpch-use** can be enabled; if more than one is specified, all but the first are ignored. For more information, see [13.8 Precompiled Headers](#), p.249.

-Xpch-automatic

Generate and use precompiled headers.

-Xpch-create=filename

Generate a precompiled header (PCH) file with specified name.

-Xpch-diagnostics

Generate an explanatory message for each PCH file that the compiler locates but is unable to use.

-Xpch-directory=directory

Look for PCH file in specified directory.

-Xpch-messages

Generate a message each time a PCH file is created or used.

-Xpch-use=filename

Use specified PCH file.

5.4.112 Generate Position-Independent Code for Shared Libraries (-Xpic)

-Xpic

-x62

For VxWorks RTP application development. Allows a single copy of a shared library, loaded in a single memory location, to be called by different programs. RTP shared-library code must be compiled with this option.

5.4.113 Treat All Pointer Accesses As Volatile (-Xpointers-volatile)

See [5.4.97 Treat All Variables As Volatile \(-Xmemory-is-volatile, -X...-volatile\)](#), p.104.

5.4.114 Control Interpretation of Multiple Section Pragas (-Xpragma-section-...)

These options control the compiler's behavior when multiple **#pragma section** directives are used with different parameters for the same section class. The default is **-Xpragma-section-first**.

For more information, see [14.1.1 section and use_section Pragas](#), p.253.

-Xpragma-section-first

If this option is in effect when a variable or function is defined, the compiler uses the *earliest* currently-valid **section** pragma that specifies a non-default location for the variable or function.

-Xpragma-section-last

If this option is in effect when a variable or function is defined, the compiler uses the *last* currently-valid **section** pragma that specifies a non-default location for the variable or function.

5.4.115 Preprocess Assembly Files (-Xpreprocess-assembly)

-Xpreprocess-assembly

Invoke C preprocessor on assembly files before running the assembler.

5.4.116 Suppress Line Numbers in Preprocessor Output (**-Xpreprocessor-lineno-off**)

-Xpreprocessor-lineno-off
-X165

Suppress line-number information in the preprocessor output. Use this with the **-E** option (send preprocessor output to standard output) when line-number information is not needed.

5.4.117 Use Old Preprocessor (**-Xpreprocessor-old**)

-Xpreprocessor-old
-X155

Use the preprocessor from release 4.3. When **-Xpreprocessor-old** is specified, **vararg** macros are not supported and the following options are not available: **-Xmake-dependency**, **-Xmake-dependency-...**, **-Xmacro-in-pragma**, and **-Xcpp-dump-symbols**.

This option is valid only when compiling C modules or when compiling C++ modules with the **-Xc++-old** option.

5.4.118 Generate Profiling Code for the RTA Run-Time Analysis Tool Suite (**-Xprof-...**)

-Xprof-all
-X123=3

Collect count and time data.

-Xprof-all-fast
-X123=6

Collect count and time data for each function, but not for pairs of functions, so no hierarchical profile will be available.

-Xprof-count
-X123=2

Collect count data only, incrementing a counter for line of code executed (actually, for each basic block).

-Xprof-coverage
-X123=8

Like **-Xprof-count**, except just set the counter to one for each basic block executed instead of counting the number of executions.

-Xprof-time**-X123=1**

Collect time data only.

-Xprof-time-fast**-X123=4**

Collect time data for each function, but not for pairs of functions, so no hierarchical profile will be available.

These options cause the compiler to generate profiling code for the RTA. To be profiled, a function must be instrumented. The compiler inserts instrumentation code based on the various **-Xprof-type** options (described below), at least one of which must also be used when compiling a module for profiling.



NOTE: In addition to an **-Xprof-type** option, you must use the **-g** option to generate debug information.

Besides interactively analyzing the profile information generated by these options using the RTA, you may feed the collected data back to the compiler to improve optimization based on the actual execution of the target program. See [5.4.120 Optimize Using RTA Profile Data \(-Xprof-feedback\)](#), p.113.

Do not use these options with the older pair of profiling options **-Xblock-count** ([5.4.11 Insert Profiling Code \(-Xblock-count\)](#), p.68) and **-Xfeedback** ([5.4.54 Optimize Using Profile Data \(-Xfeedback=file\)](#), p.85).

A function, its parent, and its children must all be compiled with the same **-Xprof-type** option or the results are undefined.

5.4.119 Select Target Executable for Use by -Xprof-feedback (-Xprof-exec)

-Xprof-exec=pathname

(no numeric equivalent)

pathname must be the full pathname of a target executable for which profile data is present in the RTA database directory specified with **-Xprof-feedback**. See [5.4.120 Optimize Using RTA Profile Data \(-Xprof-feedback\)](#), p.113 for details.

5.4.120 Optimize Using RTA Profile Data (-Xprof-feedback)

-Xprof-feedback=pathname

(no numeric equivalent)

pathname must specify an RTA database directory (not a file). Use the profiling information in that database (the latest “snapshot”) to optimize for faster code.

See the [5.4.55 Set Optimization Parameters Used With Profile Data \(-Xfeedback-frequent, -Xfeedback-seldom\)](#), p.86, to control how the profile data affects optimization.

The snapshot selected depends on **-Xprof-snapshot** ([5.4.121 Select Snapshot for Use by -Xprof-feedback \(-Xprof-snapshot\)](#), p.115) and **-Xprof-exec** ([5.4.119 Select Target Executable for Use by -Xprof-feedback \(-Xprof-exec\)](#), p.113) as follows:

-Xprof-exec	-Xprof- snapshot	Snapshot Selected
No	No	Use latest snapshot in the database.
No	Yes	Use snapshot named by -Xprof-snapshot . If a snapshot with the given name is present for more than one executable, use the latest.
Yes	No	Use latest snapshot for the executable specified by -Xprof-exec .
Yes	Yes	Use snapshot named by -Xprof-snapshot . Report an error if no snapshot with the given name is present for the executable specified by -Xprof-exec .



NOTE: This option is used in conjunction with the **-Xprof-...** options ([5.4.118 Generate Profiling Code for the RTA Run-Time Analysis Tool Suite \(-Xprof-...\)](#), [p.112](#)). Do not use this option with the older pair of profiling options **-Xblock-count** ([5.4.11 Insert Profiling Code \(-Xblock-count\)](#), p.68) and **-Xfeedback** ([5.4.54 Optimize Using Profile Data \(-Xfeedback=file\)](#), p.85).

Also, the selected snapshot must include basic block count data, that is, the executed code must have been compiled with **-Xprof-all**, **-Xprof-all**, or **-Xprof-count**. The options **-Xprof-time**, **-Xprof-time-fast**, and **-Xprof-coverage** do not produce the data required for feedback-driven optimization.

5.4.121 Select Snapshot for Use by -Xprof-feedback (-Xprof-snapshot)

-Xprof-snapshot=string

(no numeric equivalent)

string must name a snapshot in the RTA database directory specified with **-Xprof-feedback**. See **-Xprof-feedback** (5.4.120 *Optimize Using RTA Profile Data (-Xprof-feedback)*, p.113) for details.

5.4.122 Restart Optimization From Scratch (-Xrestart)

-Xrestart

-X29

Restart optimization from scratch if too many optimistic predictions were made.

Compilers may have difficulty predicting the best way to perform specific optimizations when the information needed is not available until a later compiler stage. For example, better code may be produced by moving a loop invariant expression outside the loop if the result can be placed in a register. However, the compiler does not know if any register is available until after register allocation, which is performed later in the compilation.

The compiler uses an optimistic approach which generates optimal code when registers are available but not when all registers are taken. The **-Xrestart** option will restart optimization and code generation if any optimistic prediction is false. This will typically slow the compilation of large functions by a factor of almost two while generating better code. This option is turned on by **-XO**.

5.4.123 Generate Code for the Run-Time Error Checker (-Xrtc=mask)

-Xrtc=mask

-X64=mask

With no *mask*, this option directs the compiler to insert checking code for all checks made by the Run-Time Error Checker. Use the *mask* to select specific checks rather than all.

5.4.124 Enable Run-time Type Information (-Xrtti, -Xrtti-off)

-Xrtti

-X205=1

Enable run-time type information. This is the default.

There are two approaches to generating run-time type information for a class:

- Compile all modules with **-Xrtti** and also with **-Xcomdat** (5.4.27 *Mark Sections as COMDAT for Linker Collapse (-Xcomdat)*, p.74): the run-time type information will be emitted for every module but will be marked COMDAT and collapsed to a single instance by the linker. This is the preferred method.
- For a class declaring one or more virtual functions, compile only the module defining the *key function* for the class with **-Xrtti**. Key functions are described in *Virtual Function Table Generation—Key Functions*, p.185.

-Xrtti-off
-X205=0

C++ only. Disable run-time type information. Using this option will save space because the compiler does not need to create type tables.

Synonym: **-Xno-rtti**.

5.4.125 Pad Sections for Optimized Loading (**-Xsection-pad**)

-Xsection-pad
-X152

Allow the linker to pad loadable sections for optimized loading.

5.4.126 Generate Each Function in a Separate CODE Section Class (**-Xsection-split**)

-Xsection-split
-X129
-Xsection-split-off
-X129=0

Generate a separate **CODE** section class for each function in the module. The default is **-Xsection-split-off**; a single module generates only one **CODE** section class containing the code for all functions for that module.

By default, with **-Xsection-split** enabled, the multiple **CODE** section classes will all still be named **.text** (absent the use of **.section** pragmas). While linking, a specific **.text** section for a given function may be singled out using the linker command language syntax:

object-filespec (input-section-name[symbol] , ...)

(where the “[” and “]” characters are required and do not mean “optional” in this case).

Example: if object file **test.o** contains functions **f1** and **f2**, then the **.text** section for **f1** may be specified by:

```
test.o(.text[f1])
```



NOTE: This option is especially useful in combination with **-Xremove-unused-sections** to reduce code size. See [Remove Unused Sections \(-Xremove-unused-sections\)](#), p.404.

5

5.4.127 Disable Generation of Priority Section Names (-Xsect-pri-...)

-Xsect-pri-on

-X122=0

Enable section names of the form “...\$n”. See [23.7 Sorted Sections](#), p.383 for use of this form. This is the default.

-Xsect-pri-off

-X122

Disable generation of section names of the form “...\$n” for use by third-party assemblers or linkers unable to process this form of name.

5.4.128 Control Listing of -X Options in Assembly Output (-Xshow-configuration=n)

-Xshow-configuration=0

Compiler-generated assembly listings (saved with the **-S** option) do not show **-X** options. This is the default.

-Xshow-configuration=1

Assembly listings contain **-X** options, but only user-configurable options are shown; internal compiler flags are suppressed.

5.4.129 Print Instantiations (-Xshow-inst)

-Xshow-inst

-X212

C++ only. Print to **stderr** a list of all template instantiations made during compilation. See also [5.4.67 Control Template Instantiation \(-Ximplicit-templates...\)](#), p.91 and [Templates](#), p.243.

5.4.130 Show Target (-Xshow-target)

-Xshow-target

dcc C and **dplus** C++ driver option. Display the target processor “-t option” on standard output, but do not compile any file.

5.4.131 Optimize for Size Rather Than Speed (-Xsize-opt)

-Xsize-opt

-X73

Optimize for size rather than speed when there is a choice. Optimizations affected include inlining, loop unrolling, and branch to small code. For character arrays, **-Xstring-align=value** will override **-Xsize-opt**. See the description of array alignment in [8.4 Arrays](#), p.180.

The optimization of performing integer division by a reciprocal-multiply generates more instructions than using a divide instruction, and so is disabled when **-Xsize-opt** is specified. Use **-Xint-reciprocal** to allow divide-by-reciprocal-multiply even when optimizing for size (i.e., when **-Xsize-opt** is specified). See also [5.4.76 Allow Division by Reciprocal-Multiply when Optimizing \(-Xint-reciprocal\)](#), p.94.

5.4.132 Set Size Limit for “small const” Variables (-Xsmall-const=n)

-Xsmall-const=n

-X98=n

This option applies only to chips supporting **SCONST**.

Place small **const** static and global variables with a size in bytes less than or equal to *n* in the **SCONST** section class. See the description of **#pragma section** in [14.1.1 section and use_section Pragmas](#), p.253 for more information.

5.4.133 Set Size Limit for “small data” Variables (-Xsmall-data=n)

-Xsmall-data=n

-X97=n

Place small non-constant static and global variables with a size in bytes less than or equal to *n* in the **SDATA** section class. See the description of **#pragma section** in [section Pragma](#), p.147 for more information.

5.4.134 Select Software Floating Point Emulation (-Xsoft-float)

-Xsoft-float

-X56

The implementation is a very fast call-based method. This option is controlled by DFP, which also selects which library to use, and should not usually be set explicitly by the user.

5.4.135 Enable Stack Checking (-Xstack-probe)

-Xstack-probe

-X10

Enable stack checking (probing). For users of the Run-Time Error Checker, this option is equivalent to **-Xrtc=4**.



NOTE: **-Xstack-probe** cannot be used with “interrupt” functions, that is, with a function named in an **interrupt** pragma or declared using the **interrupt** or **__interrupt__** keywords.

5.4.136 Diagnose Static Initialization Using Address (-Xstatic-addr-...)

-Xstatic-addr-error

-X81=2

Generate an error if the address of a variable, function, or string is used by a static initializer. This is useful when generating position-independent code (PIC).

-Xstatic-addr-warning

-X81=1

Generate a warning if the address of a variable, function, or string is used by a static initializer. This is useful when generating position-independent code (PIC). This option is on by default.

5.4.137 Treat All Static Variables as Volatile (-Xstatics-volatile)

See [5.4.97 Treat All Variables As Volatile \(-Xmemory-is-volatile, -X...-volatile\)](#), p.104.

5.4.138 Buffer stderr (-Xstderr-fully-buffered)

-Xstderr-fully-buffered

-X173

Buffer **stderr** using 10KB buffer. Use this option to reduce network traffic; **stderr** is unbuffered by default.

5.4.139 Terminate Compilation on Warning (-Xstop-on-warning)

-Xstop-on-warning

-X85

Terminate compilation on any warning. Without this option, only errors terminate compilation. (For both errors and warnings, compilation terminates after a small number of errors are output.)

5.4.140 Compile C/C++ in Pedantic Mode (-Xstrict-ansi)

-Xstrict-ansi

Compile in “pedantic” mode. This option is equivalent to **-Xdialect-strict-ansi**. For C, see [5.4.43 Specify C Dialect \(-Xdialect-...\)](#), p.79. For C++, **-Xstrict-ansi** generates diagnostic messages when nonstandard features are used and disables features that conflict with ANSI/ISO C++, including **-Xusing-std-on** and **-Xdollar-in-ident**.

Disabled by default.

5.4.141 Ignore Sign When Promoting Bit-fields (-Xstrict-bitfield-promotions)

-Xstrict-bitfield-promotions

Conform to the ANSI standard when promoting bit-fields. When a bit-field occurs in an expression where an **int** is expected, the compiler promotes the bit-field to a larger integral type. Unless this option is enabled, such promotions preserve sign as well as value. If **-Xstrict-bitfield-promotions** is specified, however, an object of an integral type all of whose values are representable by an **int** (that is, an object smaller than 4 bytes) is promoted to an **int**, even if the original type is unsigned.

-Xstrict-ansi or **-Xdialect-strict-ansi** implicitly enables

-Xstrict-bitfield-promotions by default, but can be overridden with

-Xstrict-bitfield-promotions=0.

See also [5.4.10 Specify Sign of Plain Bit-field \(-Xbit-fields-signed, -Xbit-fields-unsigned\)](#), p.67.

5.4.142 Align Strings on n-byte Boundaries (-Xstring-align=n)

-Xstring-align=n

-X18=n

Align each string on an address boundary divisible by *n*. The default value is 4. See also [5.4.8 Specify Minimum Array Alignment \(-Xarray-align-min\)](#), p.66.

5.4.143 Warn on Large Structure (-Xstruct-arg-warning=n)

-Xstruct-arg-warning=n

-X92=n

C only. Emit a warning if the size of a structure argument is larger than or equal to *n* bytes.

5.4.144 Control Optimization of Structure Member Assignments (-Xstruct-assign-split...)

-Xstruct-assign-split-diff=n

-X147=n

-Xstruct-assign-split-max=n

-X146=n

These options control optimization of assignments of local **struct** variables. The compiler uses a number of techniques to optimize structure members (it uses registers, etc.). A structure can be assigned as a one or more blocks (depending on a number of factors) or member-by-member. However, block structure assignment disables member optimization, so options are available to control the type of structures that will assigned as a block.

By default, the assignment is member-by-member if the structure has 6 or fewer members and if the increase in assignments (over block assignments) is 3 or fewer. Otherwise, the structure is assigned as a block.

Use **-Xstruct-assign-split-max** to set the maximum number of members in a struct that may be assigned member-by-member.

Use **-Xstruct-assign-split-diff** to set the maximum number of additional assignments allowed. If member-to-member assignment involves a higher

number of additional assignments than the number set by
-Xstruct-assign-split-diff, a block assignment is performed.

5.4.145 Set Minimum Structure Member Alignment (**-Xstruct-min-align=n**)

-Xstruct-min-align=n
-X76=n

Force structures to begin on at least an n byte boundary. If any member in a structure has a greater alignment, the structure will be aligned on a boundary divisible by the size in bytes of the largest member.

See [pack Pragma](#), p.143 and [__packed__ and packed Keywords](#), p.151 for details.
See also [5.4.96 Set Maximum Structure Member Alignment \(-Xmember-max-align=n\)](#), p.104.

The default value of n is dependent on the processor as described in [8. Internal Data Representation](#).

5.4.146 Suppress Warnings (**-Xsuppress-warnings**)

-Xsuppress-warnings
-X14

Suppress compiler warnings. Same as the **-w** option.

5.4.147 Swap '\n' and '\r' in Constants (**-Xswap-cr-nl**)

-Xswap-cr-nl
-X13

C only. Swap '\n' and '\r' in character and string constants. Used on systems where carriage return and line feed are reversed.

5.4.148 Set Threshold for a Switch Statement Table (**-Xswitch-table...**)

-Xswitch-table=n
-X143=n

Implement a **switch** statement using compares if there are fewer than n **case** labels in the **switch**, use a jump table if there are n or greater. This option is on by default with a value of 7.

-Xswitch-table-off

Do not use a jump table to implement a **switch** statement under any conditions.

5.4.149 Disable Certain Syntax Warnings (-Xsyntax-warning-...)**-Xsyntax-warning-on****-X215=0**

Enable certain syntax warnings, for example, warning on a comma after the last enumerator. This is the default.

-Xsyntax-warning-off**-X215**

C++ only. Disable these warnings.

5.4.150 Select Target Processor (-Xtarget)**-Xtarget****-X39=1**

This option is for internal use should usually not be set by the user. See [4. Selecting a Target and Its Components](#).

5.4.151 Specify Loop Test Location (-Xtest-at-...)**-Xtest-at-both****-X6=2**

Force the compiler to always test loops both before the loop is started and at the bottom of the loop. This option produces the fastest possible code but uses more space. Even if **-Xtest-at-both** is not set, other optimizations may cause the compiler to generate double tests. This option is turned on by **-XO**.

-Xtest-at-bottom**-X6=0**

Use one loop test at the bottom of a loop.

-Xtest-at-top**-X6=1**

Use one loop test at the top of a loop.

5.4.152 Truncate All Identifiers After m Characters (-Xtruncate)

-Xtruncate=m

-X22=m

Truncate all identifiers after *m* characters. If *m* is zero, no truncation is done. This is the default.

5.4.153 Append Underscore to Identifier (-Xunderscore...)

-Xunderscore-leading

-X71=1

Prefix every externally visible identifier with an underscore in the symbol table.

Synonym: **-Xleading-underscore**.

-Xunderscore-trailing

-X71=2

Suffix every externally visible identifier with an underscore in the symbol table.

Synonym: **-Xtrailing-underscore**.

-Xunderscore-surround

-X71=3

Prefix and suffix every externally visible identifier with an underscore in the symbol table.

Synonym: **-Xsurround-underscore**.



NOTE: The **-Xunderscore...** options are provided for use in linking code generated by the compiler with third-party libraries or with other tools requiring generated underscores.

The default value of this option is 0 (no extra underscore).

Because Wind River libraries are compiled with the default setting, setting this option to anything but the default will require recompiling every library used.

5.4.154 Control Loop Unrolling (-Xunroll=n, -Xunroll-size=n)

-Xunroll=n

-X15=n

Unroll small loops n times. Set to 2 by default. n must be a power of two. See [Loop Unrolling \(0x8000\)](#), p.216.



NOTE: Some sufficiently small loops may be unrolled more than n times if total code size and speed is better.

-Xunroll-size=n

-X16=n

Specify the maximum number of nodes a loop can contain to be considered for loop unrolling. Each operator and each operand counts as one node, so the expression

a = b - c;

contains 5 nodes. (There is also a small number of additional nodes for each function.) n is set to 20 by default. Assembly files saved with **-S** show the number of nodes for each function.



NOTE: Unrolling is done only if option **-O** or **-XO** is given to enable optimization

5.4.155 Runtime Declarations in Standard Namespace (-Xusing-std-...)

-Xusing-std-on

C++ only. Automatically search for runtime library declarations in the **std** namespace (as if “**using namespace std;**” had been specified in the source code), not in global scope. This is the default behavior, but it is disabled by **-Xstrict-ansi**; use **-Xusing-std-on** on the command line to override **-Xstrict-ansi**.

This option allows you to use the newer C++ libraries, which are in the **std** namespace, without adding **using namespace std;** to legacy code.

-Xusing-std-off

Search for runtime library declarations in global scope unless an explicit **using namespace std;** is given.

5.4.156 Void Pointer Arithmetic (-Xvoid-ptr-arith-ok)

-Xvoid-ptr-arith-ok
-X167

Treat void pointers as **char *** for the purpose of arithmetic. For example:

```
some_void_ptr += 1; /* adds 1 to some_void_ptr */
```

5.4.157 Define Type for wchar (-Xwchar=n)

-Xwchar=n
-X86=n

Define the type to which **wchar** will correspond. The desired *type* is given by specifying a value *n* equal to a value returned by the operator **sizeof(type, 2)**. See [sizeof Extension](#), p. 161. The default type is **long** integer (32 bits), that is, **-Xwchar=4**.

5.4.158 Control Use of wchar_t Keyword (-Xwchar_t-...)

-Xwchar_t-on
-X214=0

Enable the **wchar_t** keyword.

-Xwchar_t-off
-X214

C++ only. Disable the **wchar_t** keyword.

Synonym: **-Xno-wchar**.

5.5 Examples of Processing Source Files

The following examples show typical ways of compiling.

The two files, **file1.c** and **file2.cpp**, contain the source code:

```

/* file1.c */
void outarg(char *);
int main(int argc, char **argv)
{
    while(--argc) outarg(++argv);
    return 0;
}

/* file2.cpp */
#include <stdio.h>

extern "C" void outarg(char *arg)
{
    static int count;

    printf("arg #%d: %s\n", ++count, arg);
}

```

5.5.1 Compile and Link

When compiling small programs such as this, the driver can be invoked to execute all four stages of compilation in one command. For example:

```
dplus file1.c file2.cpp
```

The driver preprocesses, compiles, and assembles the two files (one C and one C++), and links them together with the appropriate libraries to create a single executable file, by default called **a.out**. When more than one file is compiled to completion, object files are created and kept, in this case, **file1.o** and **file2.o**. When only one file is compiled, assembled, and linked, the intermediate assembly and object files are deleted automatically (see [5.4.79 Create and Keep Assembly or Object File \(-Xkeep-assembly-file, -Xkeep-object-file\)](#), p.95 to change this).

If the target system supports command-line execution, to execute this program enter **a.out** with some arguments:

```
a.out abc def ghi
```

This will print:

```

arg #1: abc
arg #2: def
arg #3: ghi

```

(See [15. Use in an Embedded Environment](#) for comments on executing programs in embedded environments.)

To execute the program on the host system using the WindISS simulator, compile the program with **windiss** specified on the command line—for example:

```
dplus -tMIPSES:windiss file1.c file2.cpp
```

Then run the program with WindISS:

```
windiss a.out abc def ghi
```

To give the generated program a name other than **a.out**, use the **-o** option:

```
dplus file1.c file2.cpp -o prog1
```

To also enable optimization, use the **-O** option:

```
dplus -O file1.c file2.cpp -o prog1
```

To convert the linked output to **S** records:

```
ddump -Rv a.out
```

will produce file **srec.out** by default. See [29. D-DUMP File Dumper](#) for additional options and details.

5.5.2 Separate Compilation

When compiling programs consisting of many source files, it is time-consuming and impractical to recompile the whole program whenever a file is changed. Separate compilation is a time-saving solution when recompiling larger programs. The **-c** option creates an object file which corresponds to every source file, but does not call the linker. These object files can then be linked together later into the final executable program. When a change has been made, only the altered files need to be recompiled. To create object files and then stop, use the following command:

```
dplus -O -c file1.c file2.cpp
```

The files **file1.o** and **file2.o** will be created.

Create the executable program as follows. Note that the driver is used to invoke the linker; this is convenient because defaults will be supplied as required based on the current target, for example, for libraries and **crt0.o**.

```
dplus file1.o file2.o -o prog2
```

If **file2.cpp** is altered, **prog2** can be rebuilt with:

```
dplus -O -c file2.cpp  
dplus file1.o file2.o -o prog2
```

Usually, the compilation process is automated with utilities similar to **make**, which finds the minimum command sequence to create an updated executable.

5.5.3 Assembly Output

It is frequently desirable to look at the generated assembly code. Two options are available for this purpose:

- The **-S** option stops compilation after generating the assembly and automatically names the file *basename.s*, **file1.s** in this case:

```
dpplus -O -S file1.cpp
```
- When using a command which generates an object file, the **-Xkeep-assembly-file** option will preserve the assembly file in addition to the object, naming it *basename.s*.



The option **-Xpass-source** outputs the compiled source as comments in the generated file and makes it easier to see which assembly instructions correspond to each line of source:

```
dpplus -O -S -Xpass-source file2.cpp
```

5.5.4 Precompiled Headers

In C++ projects with many header files, you can often speed up compilation by using precompiled headers, enabled with the **-Xpch-...** options. See [13.8 Precompiled Headers](#), p.249.

6

Additions to ANSI C and C++

6.1 Preprocessor Predefined Macros 131

6.2 Preprocessor Directives 134

6.3 Pragmas 137

6.4 Keywords 149

6.5 Attribute Specifiers 153

6.6 Intrinsic Functions 158

6.7 Other Additions 159

6.1 Preprocessor Predefined Macros

The following preprocessor macros are predefined. The macros that do not start with two underscores (“__”) are not defined if option **-Xdialect-strict-ansi** is given.

__BIG_ENDIAN__

Big-endian implementation.

__bool

The constant 1 if type **bool** is defined when compiling C++ code, otherwise undefined. Option **-Xbool-off** disables the **bool**, **true**, and **false** keywords. C++ only.

__CHAR_UNSIGNED__

Indicates that plain **char** characters are unsigned.

__cplusplus

The constant 199711 when compiling C++ code, otherwise undefined.

__DATE__

The current date in “*mm dd yyyy*” format; it cannot be undefined.

__DCC__

The constant 1.

__DCPLUSPLUS__

The constant 1 when compiling C++ code, otherwise undefined.

__DIAB_TOOL

Indicates the Wind River Compiler is being used.

__ETOA__

Indicates that full ANSI C++ is supported. Not defined when compiling C code or when an older version of the compiler is invoked.

__ETOA_IMPLICIT_USING_STD

Defined if **-Xusing-std-on** is enabled. Indicates that runtime library declarations are automatically searched for in the **std** namespace (not in global scope), regardless of whether **using namespace std**; is specified.

__ETOA_NAMESPACES

Defined if the runtime library uses namespaces.

__EXCEPTIONS

Exceptions are enabled. C++ only.

__FILE__

The current filename; it cannot be undefined.

__FUNCTION__

__FUNCTION__ is not really a preprocessor macro, but a special predefined identifier that returns the name of the current function (that is, the function in which the identifier occurs).

__hardfp

Hardware floating point support.

__LITTLE_ENDIAN__

Little-endian implementation.

__LDBL__

The constant 1 if the type **long double** is different from **double**.

__LINE__

The current source line; it cannot be undefined.

__lint

This macro is not predefined; instead, define this when compiling to select pure-ANSI code in Wind River header files, avoiding use of any non-ANSI extensions.

__mips

Target flag used by various tools.

__mips__

Target flag used by various tools.

__mips16

Target flag used by various tools.

__mips16__

Target flag used by various tools.

__nofp

No floating point support.

__PRETTY_FUNCTION__

__PRETTY_FUNCTION__ is not really a preprocessor macro, but a special predefined identifier that returns the name of the current function (that is, the function in which the identifier occurs). In C modules, **__PRETTY_FUNCTION__** always returns the same value as **__FUNCTION__**. For C++, **__PRETTY_FUNCTION__** may return additional information, such as the class in which a method is defined.

__RTTI

C++ only. Run-time type information is enabled.

__SIGNED_CHARS__

C++ only. Defined as 1 if plain **char** is signed. See [5.4.20 Specify Sign of Plain Char \(-Xchar-signed, -Xchar-unsigned\)](#), p.70.

__softfp

Software floating point support.

__STDC__

The constant 0 if **-Xdialect-ansi** and the constant 1 if **-Xdialect-strict-ansi** is given. It cannot be undefined if **-Xdialect-strict-ansi** is set. For C++ modules it is defined as 0 in all other cases.

__STRICT_ANSI__

The constant 1 if **-Xdialect-strict-ansi** or **-Xstrict-ansi** is enabled.

__TIME__

The current time in “hh:mm:ss” format; it cannot be undefined.

`__VERSION__`

The version number of the compiler and tools, represented as a string.

`__VERSION_NUMBER__`

The version number of the compiler and tools, represented as an integer.

`__wchar_t`

The constant 1 if type `wchar_t` is defined when compiling C++ code, otherwise undefined. Option `-X-wchar-off` disables the `wchar_t` keyword.

6.2 Preprocessor Directives

The preprocessor recognizes the following additional directives.

`#assert` and `#unassert` Preprocessor Directives

The `#assert` and `#unassert` directives allow definition of preprocessor variables that do not conflict with names in the program namespace. These variables can be used to direct conditional compilation. The C and C++ preprocessors recognize slightly different syntax for `#assert` and `#unassert`.

Assertions can also be made on the command line through the `-A` option.

To display information about assertions at compile time, see [5.4.32 Dump Symbol Information for Macros or Assertions \(-Xcpp-dump-symbols\)](#), p.76.

To make an assertion with a preprocessor directive, use the syntax:

<code>#assert name (value)</code>	C or C++
<code>#assert name</code>	C++ only

In the first form, *name* is given the value *value*. In the second form, *name* is defined but not given a value. Whitespace is allowed only where shown.

Examples:

```
#assert system(unix)
#assert system
```

To make an assertion on the command line, use:

`-A name (value)`

Examples:

```

    dcc -A "system (unix)" test.c      UNIX
    dcc -A system\ (unix\) test.c      UNIX
    dcc -A system (unix) test.c        Windows

```

Assertions can be tested in an **#if** or **#elif** preprocessor directive with the syntax:

```

#if #name (value)      C or C++
#if #name               C only

```

A statement of the first form evaluates to true if an assertion of that name with that value has appeared and has not been removed. (A *name* can have more than one value at the same time.) A statement of the second form evaluates to true if an assertion of that name with *any* value has appeared.

Examples:

```

    #if #system(unix)
    #if #system

```

An assertion can be removed with the **#unassert** directive:

```

#unassert name          C++ only
#unassert name (value)  C++ only
#unassert #name (value)  C only

```

The first form removes all definitions of *name*. The other forms remove only the specified definition.

Examples:

```

    #unassert system
    #unassert system(unix)
    #unassert #system(unix)

```

#error Preprocessor Directive

The **#error** preprocessor directive displays a string on standard error and halts compilation. Its syntax is:

```

#error string

```

Example:

```
#error "Feature not yet implemented."
```

See also [#info](#), [#inform](#), and [#informing Preprocessor Directives](#), p.136 and [#warn and #warning Preprocessor Directives](#), p.137.

#ident Preprocessor Directive (C only)

The **#ident** preprocessor directive inserts a comment into the generated object file. The syntax is:

```
#ident string
```

Example:

```
#ident "version 1.2"
```

The text string is forwarded to the assembler in an **ident** pseudo-operator and the assembler outputs the text in the **.comment** section.

#import Preprocessor Directive

The **#import** preprocessor directive is equivalent to the **#include** directive, except that if a file has already been included, it is not included again. The same effect can be achieved by wrapping all header files with protective **#ifdefs**, but using **#import** is much more efficient since the compiler does not have to open the file. Using the **-Ximport** command-line option will cause all **#include** directives to behave like **#import**.

#info, #inform, and #informing Preprocessor Directives

The **#info**, **#inform**, and **#informing** preprocessor directives display a string on standard error and continue compilation. Their syntax is:

```
#info string  
#inform string  
#informing string
```

Example:

```
#info "Feature not yet implemented."
```

See also [#error Preprocessor Directive](#), p.135 and [#warn and #warning Preprocessor Directives](#), p.137.

#warn and #warning Preprocessor Directives

The **#warn** and **#warning** preprocessor directives display a string on standard error and continue compilation. Their syntax is:

```
#warn string
#warning string
```

Example:

```
#warn "Feature not yet implemented."
```

See also [#error Preprocessor Directive](#), p.135 and [#info, #inform, and #informing Preprocessor Directives](#), p.136.

6.3 Pragas

This section describes the pragmas supported by the compiler. A warning is issued for unrecognized pragmas.

Pragma directives are not preprocessed. Comments are allowed on pragmas.

In C++ modules, a pragma naming a function affects all functions with the same name, independently of the types and number of parameters—that is, independently of overloading.

align Pragma

```
#pragma align [ ( [[max_member_alignment], [min_structure_alignment] [, byte-swap]] ) ]
```

The **align** pragma, provided for portability, is a synonym for [pack Pragma](#), p.143.

contract Pragma

The **FP_CONTRACT** pragma is included as part of C99 compliance. The **FP_CONTRACT** pragma causes floating expressions to be evaluated as atomic expressions, omitting rounding errors implied by the source code and the expression evaluation method.

```
#pragma STDC FP_CONTRACT [ ON | OFF | DEFAULT ]
```

FP_CONTRACT pragmas may be placed either outside external declarations or preceding all explicit declarations and statements in a compound statement. The pragma stays in effect until another **FP_CONTRACT** pragma is reached; if no **FP_CONTRACT** pragma is encountered, the pragma stays in effect until either the end of the file (for pragmas placed outside external declarations) or the end of the compound statement (for pragmas placed inside a compound statement). See the C99 standard for specific information on placement of the **FP_CONTRACT** pragma.

By default, contraction is off.

error Pragma

#pragma error *string*

Display *string* on standard error as an error and halt compilation. See also [info Pragma](#), p.139 and [warning Pragma](#), p.148.

global_register Pragma

#pragma global_register *identifier=register* , ...

This pragma forces a global or static variable to be allocated to a specific register. This can increase execution speed considerably when a global variable is used frequently, for example, the “program counter” variable in an interpreter.

identifier gives the name of a variable. *register* gives the name of the selected register in the target processor. See [9.6 Register Use](#), p.194 for a list of valid register names.

The following rules apply:

- Only registers which are preserved across function calls may be assigned to global variables.
- When assigning several variables to registers, start by using the lowest preserved register available. Some targets cannot use lower preserved registers for automatic and register variables.
- Do not mix modules using global registers with modules not using them. Never call a function using global registers from a module compiled without them.
- **#pragma global_register** can be used to force the compiler to avoid specific registers in code generation by defining dummy variables as global registers in all modules.

The pragma must appear before the first definition or declaration of the variable being assigned to a register. Examples:

```
#pragma global_register counter=register-name
char *counter;          /* allocated to the named register */

/* Force the compiler to avoid a named register. */
#pragma global_register __dummy=register-name
```



NOTE: A convenient method of ensuring that all modules are compiled with the same global register assignments is to put all **#pragma global_register** directives in a header file, e.g. **globregs.h**, and then include that file with every compilation from the command line with the **-i** option, e.g. **-i=globregs.h**.

6

hdrstop Pragma

```
#pragma hdrstop
```

C++ only. Suppress generation of precompiled headers. Headers included after **#pragma hdrstop** are not saved in a parsed state. See [13.8 Precompiled Headers](#), p.249 for more information.

ident Pragma

```
#pragma ident string
```

Insert a comment into the generated object file. Example:

```
#pragma ident "version 1.2"
```

The text string is forwarded to the assembler in an **ident** pseudo-operator and the assembler outputs the text in the **.comment** section.

info Pragma

```
#pragma info string
```

Display *string* on standard error and continue compilation. See also [error Pragma](#), p.138 and [warning Pragma](#), p.148.

inline Pragma

```
#pragma inline func ,...
```

Inline the given function whenever possible. The pragma must appear before the definition of the function. Unless cross-module optimization is enabled (**-Xcmo-...**), a function can be inlined only in the module in which it is defined.

In C++ modules, the **inline** function specifier is normally used instead. This specifier, however, also makes the function local to the file, without external linkage. Conversely, the **#pragma inline** directive provides a hint to inline the code directly to the code optimizer, without any effect on the linkage scope. Example:

```
#pragma inline swap

void swap(int *a, int *b) {
    int tmp;
    tmp = *a; *a = *b; *b = tmp;
}
```



NOTE: The **inline** pragma has no effect unless optimization is selected (with the **-XO** or **-O** options).

interrupt Pragma

#pragma interrupt *function* ,...

Designate *function* as an interrupt function. Code is generated to save all general purpose scratch registers and to use a different return instruction.

Important interrupt Pragma Notes

- Floating point and other special registers, if present on the target, are not saved because interrupt functions usually do not modify them. If such registers must be saved in order to handle nested interrupts, use an **asm** macro to do so (see [7. Embedding Assembly Code](#)). To determine which registers are saved for a particular target, compile the program with the **-S** option and examine the resulting assembler file (it will have a **.s** extension by default).
- The compiler does not generate instructions to re-enable interrupts. If this is required to allow for nested interrupts, use an **asm** macro.
- See [5.4.135 Enable Stack Checking \(-Xstack-probe\)](#), p.119 for when this option *cannot* be used with interrupt functions.
- This pragma must appear before the definition of the function. A convenient method is to put it with a prototype declaration for the function, perhaps in a header file. Example:

```
#pragma interrupt trap

void trap () {
    /* this is an interrupt function */
}
```

- For more information about interrupts, see the **-Xnested-interrupts** compiler option.

no_alias Pragma

6

```
#pragma no_alias { var1 | *var2 } ,...
```

Ensure that the variable *var1* is not accessed in any manner (through pointers etc.) other than through the variable name; ensure that the data at **var2* is only accessed through the pointer *var2*. This allows the compiler to better optimize references to such variables.

The pragma must appear after the definition of the variable and before its first use. Example:

```
add(double *d, double *s1, double *s2, int n)

#pragma no_alias *d, *s1, *s2

{
    int i;

    for (i = 0; i < n; i++) {
        /* "s1 + s2" will move outside the loop */
        d[i] = *s1 + *s2;
    }
}
```

Without the **pragma**, either **s1** or **s2** might point into **d** and the assignment might then set **s1** or **s2**. See also [5.4.7 Assume No Aliasing of Pointer Arguments \(-Xargs-not-aliased\)](#), p.66.

no_pch Pragma

```
#pragma no_pch
```

Suppress all generation of precompiled headers from the file where **#pragma no_pch** occurs. See [13.8 Precompiled Headers](#), p.249, for more information.

no_return Pragma

```
#pragma no_return function ,...
```

Ensure that each *function* never returns. Helps the compiler generate better code.

This pragma must appear before the first *use* of the function. A convenient method is to put it with a prototype declaration for the function, perhaps in a header file. Example:

```
#pragma no_return exit, abort, longjmp
```

no_side_effects Pragma

```
#pragma no_side_effects descriptor ,...
```

Where each *descriptor* has one of the following forms and meanings:

function

Ensures that *function* does not modify any global variables (it may use global variables).

function ({ *global* | *n* } ,...)

Ensures that *function* does not modify any global variables except those named or the data addressed by its *n*th parameter. At least one global or parameter number must be given, and there may be more than one of either kind in any order.

This pragma must appear before the first *use* of the function. A convenient method is to put it with a prototype declaration for the function, for example, in a header file.

Contrast with [pure_function Pragma](#), p.147, which also ensures that a function does not use any global or static variables. Example:

```
#pragma no_side_effects strcmp(1), sin(errno), \  
    my_func(1, 2, my_global)
```

option Pragma

```
#pragma option option [option ...]
```

Where *option* is any of the **-g**, **-O**, or **-X** options (including the leading '-' character). This option makes it possible to set these options from within a source file.

These options must be at the beginning of the source file before any other source lines. The effect of other placement is undefined.

Note that some **-X** options are consumed by driver or compiler command-line processing before a source file is read. If an **-X** option does not appear to have the intended effect, try it on the command line. If effective there, that option can not be used as a pragma.

pack Pragma

```
#pragma pack [ ( [[max_member_alignment], [min_structure_alignment]] [, byte-swap] ) ]
```

The **pack** directive specifies that all subsequent structures are to use the alignments given by *max_member_alignment* and *min_structure_alignment* where:

max_member_alignment

Specifies the maximum alignment of any member in a structure. If the natural alignment of a member is less than or equal to *max_member_alignment*, the natural alignment is used. If the natural alignment of a member is greater than *max_member_alignment*, *max_member_alignment* will be used.

Thus, if *max_member_alignment* is 8, a 4-byte integer will be aligned on a 4-byte boundary.

While if *max_member_alignment* is 2, a 4-byte integer will be aligned on a 2-byte boundary.

min_structure_alignment

Specifies the minimum alignment of the entire structure itself, even if all members have an alignment that is less than *min_structure_alignment*.

byte-swap

If 0 or absent, bytes are taken as is. If 1, bytes are swapped when the data is transferred between byte-swapped members and registers or non-byte-swapped memory. This enables access to little-endian data on a big-endian machine and vice-versa.

It is not possible to take the address of a byte-swapped member.

If neither *max_member_alignment* nor *min_structure_alignment* are given, they are both set to 1. If either *max_member_alignment* or *min_structure_alignment* is zero, the corresponding default alignment is used. If *max_member_alignment* is non-zero and *min_structure_alignment* is not given it will default to 1.

The form **#pragma pack** is equivalent to **#pragma pack(1,1,0)**. The form **#pragma pack()** is equivalent to **#pragma pack(0,0,0)**.

The **align** pragma, provided for portability, is an exact synonym for **pack**.

An alternative method of specifying structure padding is by using `__packed__` and *packed Keywords*, p.151.

Default values for `max_member_alignment` and `min_structure_alignment` can be set by using the **-Xmember-max-align** and the **-Xstruct-min-align** options. The order of precedence is values **-X** options lowest, then the **packed** pragma, and `__packed__` or **packed** keyword highest.

Restrictions and Additional Information

Note that if a structure is *not packed*, the compiler will insert extra padding to assure that no alignment exception occurs when accessing multi-byte members because the processor requires that multi-byte variables be aligned on 8-byte boundaries (4 for MIPS16); see *5.4.6 Specify Minimum Alignment for Single Memory Access to Multi-byte Values (-Xalign-min=n)*, p.65.

When a structure is *packed*, because the processor requires that multi-byte values be aligned (**-Xalign-min > 1**), the following restrictions apply:

- Access to multi-byte members will require multiple instructions. (This is so even if a member is aligned as would be required within the structure because the structure may itself be placed in memory at a location such that the member would be unaligned, and this cannot be determined at compile time.)
- **volatile** members cannot be accessed atomically. The compiler will warn and generate multiple instructions to access the **volatile** member. Also, “compound” assignment operators to **volatile** members, such as `+=`, `l=`, etc., are not supported. For example, assuming `i` is a **volatile** member of packed structure **struct1**, then the statement:

```
struct1.i += 3;
```

must be recoded as:

```
struct1.i = struct1.i + 3;
```

In addition, for packed structures, an **enum** member will use the smallest type sufficient to represent the range, see *5.4.49 Specify enum Type (-Xenum-is-...)*, p.82.

Examples


Later examples depend on earlier examples in some cases.

```
#pragma pack (2,2)
struct s0 {
    char a;           1 byte at offset 0, 1 byte padding
    short b;          2 bytes at offset 2
    char c;           1 byte at offset 4
```

```
char d;  
int e;  
char f;  
};
```

1 byte at offset 5
4 bytes at offset 6
1 byte at offset 10
total size 11, alignment 2

If two such structures are in a section beginning at offset 0xF000, the layout would be:

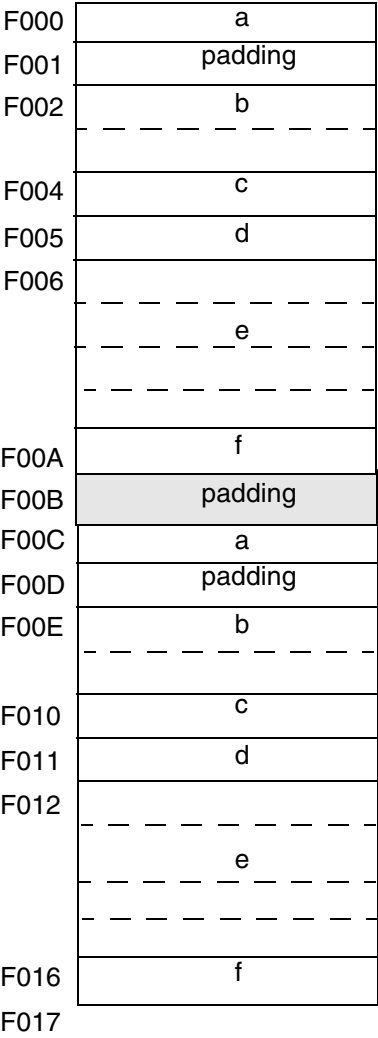

```
#pragma pack (1)
struct S1 {
    char c1;
    long i1;
    char d1;
};
```

Same as **#pragma pack(1,1)**, no padding.

1 byte at offset 0
4 bytes at offset 1
1 byte at offset 5
total size 6, alignment 1

```
#pragma pack (8)
struct S2 {
    char c2;
    long i2;
    char d2;
};
```

Use “natural” packing for largest member.

1 byte at offset 0, 3 bytes padding
4 bytes at offset 4
1 byte at offset 8, 3 bytes padding
total size 12, alignment 4

```
#pragma pack (2,2)
struct S3 {
    char c3;
    long i3;
    char d3;
};
```

Typical packing on machines which cannot
access multi-byte values on odd-bytes.

1 byte at offset 0, 1 byte padding
4 bytes at offset 2
1 byte at offset 6, byte padding
total size 8, alignment 2

```
struct S4 {
    char c4;
};
```

Using pragma from prior example.

1 byte at offset 0, 1 byte padding
total size 2, alignment 2 since
min_member_alignment is 2 above

```
#pragma pack (8)
struct S {
    char e1;
    struct S1 s1;
    struct S2 s2;
    char e2;
    struct S3 s3;
};
```

“Natural” packing since S3 is 8 bytes long.

1 byte at offset 0
6 bytes at offset 1, 1 byte padding
12 bytes at offset 8
1 byte at offset 20, 1 byte padding
8 bytes, at offset 22, 2 bytes padding
alignment 2
total size 32, alignment 4

```
#pragma pack (0)
```

Set to default packing.

pure_function Pragma

```
#pragma pure_function function ,...
```

Ensures that each function does not modify or use any global or static data. Helps the compiler generate better code, for example, in optimization of common sub-expressions containing identical function calls. Contrast with [no_side_effects Pragma](#), p.142, which only ensures that a function does not modify global variables.

This pragma must appear before the first *use* of the function. A convenient method is to put it with a prototype declaration for the function, perhaps in a header file. Example:

```
#pragma pure_function sum
int sum(int a, int b) {
    return a+b;
}
```

section Pragma

```
#pragma section class_name [istring [ustring]] [addr_mode] [acc_mode] [address=x]
```

The **#pragma section** directive defines sections into which variables and code can be placed. It also defines how objects in sections are addressed and accessed.

This pragma must appear before the declaration (for functions, before the prototype if present) of all variables and all functions to which it is to apply.

The **section** pragma is discussed in detail in [14.1.1 section and use_section Pragmas](#), p.253.

use_section Pragma

```
#pragma use_section class_name variable ,...
```

Selects the section class into which a variable or function is placed. A section class is defined by **#pragma section**.

This pragma must appear before the declaration (for functions, before the prototype if present) of all variables and all functions to which it is to apply.

The **use_section** pragma is discussed in detail in [14.1.1 section and use_section Pragmas](#), p.253.

warning Pragma

#pragma warning *string*

Display *string* on standard error as a warning and continue compilation. See also [error Pragma](#), p.138, and [info Pragma](#), p.139.

weak Pragma

#pragma weak *symbol*

Mark *symbol* as **weak**.

When a **#pragma weak** for a symbol is given in the module defining the symbol, it is a *weak definition*. When the **#pragma weak** is in a module using but not defining it, it is a *weak reference*.

Because this pragma is ultimately processed by the assembler, it may appear anywhere in the source file.

A weak symbol resembles a global symbol with two differences:

- When linking, a weak definition with the same name as a global or common symbol is not considered a duplicate definition; the weak symbol is ignored.
- If no module is present to define a symbol, unresolved weak references to the symbol have a value of zero and remain undefined in the symbol table after linking, and no error is reported.

A global definition will override a weak definition when it is encountered. (A symbol may be defined in more than one module as long as 1) no more than one of the definitions is global *and* 2) all the other definitions are weak.)

Consider the following scenario. Function **foo()** uses *x*, which is declared weak in library 1 and global in library 2. If library 1 is searched first, the weak version of *x* will be used. On the other hand, if library 2 is subsequently linked (because, for example, another function uses it), then the global version of *x* will replace the weak version.

#pragma weak is incompatible with local data area (LDA) allocation; using **#pragma weak** with **-Xlocal-data-area** or **-Xlocal-data-area-static-only** enabled will produce a warning and temporarily disable LDA. See [5.4.88 Allocate Static and Global Variables to Local Data Area \(-Xlocal-data-area=n\)](#), p.100, and [14.4 Local Data Area \(-Xlocal-data-area\)](#), p.270.

6.4 Keywords

The following additional keywords are recognized by the compiler.

`__asm` and `asm` Keywords

Used to embed assembly language (see [7. Embedding Assembly Code](#)) and use the information found in [Assigning Global Variables to Registers](#), p.160.

`__attribute__` Keyword

See [6.5 Attribute Specifiers](#), p.153.

`extended` Keyword (C only)

If the option `-Xkeywords=x` is used with the least significant bit set in x (e.g., `-Xkeywords=0x1`), the compiler recognizes the keyword **extended** as a synonym for **long double**. Example:

```
extended e;           /* the same as long double e; */
```

`__inline__` and `inline` Keywords

The `__inline__` and **inline** keywords provide a way to replace a function call with an inlined copy of the function body. The `__inline__` keyword is intended for use in C modules but is disabled in strict-ANSI mode. The **inline** keyword is normally used in C++ modules but can also be used in C if the option `-Xkeywords=0x4` is given ([5.4.80 Enable Extended Keywords \(-Xkeywords=mask\)](#), p.95).

`__inline__` and **inline** make the function local (**static**) to the file by default. Conversely, the **#pragma inline** directive provides a hint to inline the code directly to the code optimizer, without any effect on the linkage scope. Use **extern** to make an **inline** function public.



NOTE: Functions are not inlined, even with an explicit **#pragma inline**, or **__inline__** or **inline** keyword unless optimization is selected with the **-XO** or **-O** options.

Note that using **-O** will automatically inline functions of up to 10 nodes (including “empty” functions), and **-XO** will automatically inline functions of up to 40 nodes. See how these values are controlled in [5.4.74 Inline Functions with Fewer Than n Nodes \(-Xinline=n\)](#), p.93. An explicit pragma or keyword can be used to force inlining of a function larger than the value set with implicitly or explicitly with **-Xinline**.

See [Inlining \(0x4\)](#), p.210, for a complete discussion of all inlining methods.

Example:

```
__inline__ void inc(int *p) {  
    *p = *p+1;  
}  
  
inc(&x);
```

The function call will be replaced with

```
x = x+1;
```

__interrupt__ and interrupt Keywords (C only)

The **__interrupt__** keyword provides a way to define a function as an interrupt function. The difference between an interrupt function and a normal function is that all registers are saved, not just the those which are volatile, and a special return instruction is used. **__interrupt__** works like the [interrupt Pragma](#), p.140. The keyword **interrupt** can also be used; see [5.4.80 Enable Extended Keywords \(-Xkeywords=mask\)](#), p.95.



NOTE: See why this cannot be used with interrupt functions, [5.4.135 Enable Stack Checking \(-Xstack-probe\)](#), p.119).

Example:

```
__interrupt__ void trap() {  
    /* this is an interrupt function */  
}
```

For more information about interrupts, see the **-Xnested-interrupts** compiler option.

long long Keyword

The compiler supports 64-bit integers for all MIPS microprocessors. A variable declared **long long** or **unsigned long long** is an 8 byte integer. To specify a **long long** constant, use the **LL** or **ULL** suffix. A suffix is required because constants are of type **int** by default. Example:

```
long long mask_nibbles (long long x)
{
    return (x & 0xf0f0f0f0f0f0f0LL);
}
```

__packed__ and packed Keywords

`__packed__` (`[[max_member_alignment], [min_structure_alignment] [, byte-swap]]`)

The **__packed__** keyword defines how a structure should be padded between members and at the end. The keyword **packed** can also be used if the option **-Xkeywords=0x8** is given. See [pack Pragma](#), p.143 for treatment of 0 values, defaults, and restrictions.

The *max_member_alignment* value specifies the maximum alignment of any member in the structure. If the natural alignment of a member is less than *max_member_alignment*, the natural alignment is used. See [8. Internal Data Representation](#) for more information about alignments and padding.

The *min_structure_alignment* value specifies the minimum alignment of the structure. If any member has a greater alignment, the highest value is used.

Default values for *max_member_alignment* and *min_structure_alignment* can be set by using the **-Xmember-max-align** and the **-Xstruct-min-align** options. The order of precedence is values **-X** options lowest, then the **packed** pragma, and **__packed__** or **packed** keyword highest.

The *byte-swapped* option enables swapping of bytes in structure members as they are accessed. If 0 or absent, bytes are taken as is; if 1, bytes are swapped as they are transferred between byte-swapped structure members and registers or non-byte-swapped memory.

See [pack Pragma](#), p.143 for defaults for missing parameters and for additional examples.

Examples

```
__packed__ struct s1 {          no padding between members
    char c;
```

<pre>int i };</pre>	starts at offset 1 total size 5 bytes
<pre>__packed__ (2,2) struct s2 { char c; int i; };</pre>	maximum alignment 2 starts at offset 2 total size 6 bytes
<pre>__packed__ (4) struct s3 { char c; int i; };</pre>	maximum alignment 4 starts at offset 4 total size 8 bytes
<pre>__packed__ (4,2) struct s4 { char c; };</pre>	minimum alignment 2 total size 2 bytes

For the C compiler only, constant expressions (in addition to simple constants) can be specified as arguments to the `__packed__` or `packed` keyword.

pascal Keyword (C only)

If the option `-Xkeywords=x` is used with bit 1 set in *x* (e.g., `-Xkeywords=0x2`), the compiler recognizes the keyword **pascal**. This keyword is a type modifier that affects functions in the following way:

- The argument list is reversed and the first argument is pushed first.
- On CISC processors (for example, MC68000), the called function clears the argument stack space instead of the caller.

__typeof__ Keyword (C only)

`__typeof__(arg)`, where *arg* is either an expression or a type, behaves like a defined type. Examples:

```
__typeof__(int *) x;
__typeof__(x) y;
```

The first statement declares a variable *x* whose type is the type of pointers to integers, while the second declares a variable *y* of the same type as *x*. Note that **typeof** (without underscores) is not supported.

6.5 Attribute Specifiers

Attribute specifiers, formed with the `__attribute__` keyword, assign extra-language properties to variables, functions, and types. They can specify packing, alignment, memory placement, and execution options. When you have a choice between an attribute specifier and an equivalent pragma, it is preferable to use the attribute specifier.

Attribute specifiers have the form `__attribute__((attribute-list))`, where *attribute-list* is a comma-delimited list of *attributes*. Supported attributes, some of which include parameters in parentheses, are described in the sections that follow.

An attribute specifier can appear in a variable or function declaration, function definition, or type definition; or following any variable within a list of variable declarations. Multiple attribute specifiers should be separated by whitespace.

When an attribute specifier modifies a function, it can appear before or after the return type. Examples:

```
__attribute__((pure)) int foo(int a, b);
int __attribute__((no_side_effects)) bar(int x);
```

When an attribute specifier modifies a **struct**, **union**, or **enum**, it can appear immediately before or after the keyword, or after the closing brace. Example:

```
struct b {
    char b;
    int a;
} __attribute__((aligned(2))) str1;
```

For non-structure fields, the specifier can be placed anywhere before or immediately following the identifier name:

```
__attribute__((aligned(2))) int foo;
int __attribute__((aligned(4))) bar;
int foobar __attribute__((aligned(8)));
```

Placement of a specifier determines how the attribute is applied. Example:

```
// align a and b on 4-byte boundaries
__attribute__((aligned(4))) char a='a', b='b';

// force alignment only for c
char __attribute__((aligned(4))) c='c', d='d';

// force alignment only for f
char e='e', f __attribute__((aligned(4))) ='f';
```

If an attribute specifier modifies a **typedef**, it applies to all variables declared using the new type:

```
typedef __attribute__(( aligned(4) )) char AlignedChar;

// a and b are aligned on 4-byte boundaries
AlignedChar a='a', b='b';
```

To eliminate naming conflicts between attributes and preprocessor macros, any attribute name can be surrounded by double underscores. For example, **aligned** and **__aligned__** are synonyms; **__attribute__((aligned(2)))** is equivalent to **__attribute__((__aligned__(2)))**.



NOTE: The placement of attribute specifiers can be misleading. For example:

```
int last_func() {
    ...
} __attribute__((noreturn))           // modifies foo, not last_func

int foo() {
    ...
}
```

This example is confusing because *in type definitions*, the attribute specifier can follow the closing brace. But in function definitions, the attribute specifier must appear directly before or after the return type.

When an attribute takes a numeric parameter, the parameter can be a simple constant or a constant expression. Example:

```
__attribute__(( aligned(sizeof(double)) )) int x[32];
```

In this example, the constant expression **sizeof(double)** is used as a parameter to the **aligned** attribute.

absolute Attribute (C only)

__attribute__((absolute)) indicates that a **const** integer variable is an absolute symbol. Example:

```
const int foo __attribute__((absolute)) = 7;
```

This declaration means that **foo** appears in the symbol table and always represents the value 7; no memory is allocated to store **foo**.

aligned(n) Attribute

To specify byte alignment for a variable or data structure, use:

```
__attribute__ (( aligned(n) ))
```

where *n* is a power of two. Example:

```
// align structure on 8-byte boundary
__attribute__(( aligned(8) )) struct a {
    char b;
    int a;
} str1;
```

This is often combined with the *packed Attribute*, p.157. Example:

```
struct b {
    char b;
    int a;
} __attribute__(( aligned(2), packed )) str2;
```

You can force alignment for a specific element within a structure:

```
struct c {
    int k;
    __attribute__(( aligned(8) )) char m; // align m on 8 bytes
} str3;
```

But special alignment for members of a *packed* structure is ignored:

```
struct c {
    int k;
    __attribute__(( aligned (8) )) char m; // alignment ignored
} __attribute__((packed)) str4;
```

Nested alignment attributes are preserved within a **struct** or **union**.

constructor, constructor(n) Attribute

A *constructor*, or *initialization*, function is executed before the entry point of your application—that is, before **main()**. To designate a function as a constructor with default priority, use:

```
__attribute__ ((constructor))
```

To designate a function as a constructor with a specified priority, use:

```
__attribute__ (( constructor(n) ))
```

where *n* is a number between 0 and 65535. Specifying a priority level allows you to control the order in which initialization functions execute; the lower the value

of n , the earlier the function executes. For more information, see [15.4.8 Run-time Initialization and Termination](#), p.284.

deprecated, deprecated(string) Attribute (C only)

Causes the compiler to issue a warning when the marked function, variable, or type is referenced.

```
__attribute__ ((deprecated))
__attribute__ ((deprecated(string) ))
```

The optional *string* is included with the warning message.

destructor, destructor(n) Attribute

A *destructor*, or *finalization*, function is executed after the entry point of your application or after **exit()**. To designate a function as a destructor with default priority, use:

```
__attribute__ ((destructor))
```

To designate a function as a destructor with a specified priority, use:

```
__attribute__ (( destructor( $n$ ) ))
```

where n is a number between 0 and 65535. Specifying a priority level allows you to control the order in which finalization functions execute; the lower the value of n , the earlier the function executes. For more information, see [15.4.8 Run-time Initialization and Termination](#), p.284.

noreturn, no_return Attribute

To indicate that a function will never return to the caller, use:

```
__attribute__ ((noreturn))
```

This allows the compiler to remove unnecessary code intended for returning execution to the caller on exit. The **no_return** attribute is equivalent to **no return**.

no_side_effects Attribute

This attribute is a less restrictive version of **pure** (see [pure, pure_function Attribute](#), p.157). **__attribute__((no_side_effects))** indicates that a function does not modify any global data.

packed Attribute

This attribute specifies alignment for types and data structures.

__attribute__((packed)) tells the compiler to use the smallest space possible for the data to which it is applied. Example:

```
struct b {
    char b;
    int a ;
} __attribute__((packed)) str1;
```

When used with **aligned**, the **packed** attribute takes precedence as discussed in [aligned\(n\) Attribute](#), p.155.

pure, pure_function Attribute

This attribute indicates that a function does not modify or use any global or static data and that it accesses only data passed to it as parameters. Using **__attribute__((pure))** allows the compiler to perform optimizations such as global common subexpression elimination. The **pure_function** attribute is equivalent to **pure**. If this attribute is applied to a function that has side effects, run-time behavior may be indeterminate.

See also [no_side_effects Attribute](#), p.157.

section(name) Attribute

To specify a linker section in which to place a function or variable, use:

```
__attribute__(( section("name") ))
```

This creates a section called *name* and places the designated code in it. Example:

```
// place func1 in a section called foo
void func1(void) __attribute__(( section("foo") ));
```

For variables, the section is created as a read-write data segment. For functions, the section is created as a read-execute code segment. There are no options to change

the properties of the section. For greater control over sections, use **#pragma section** (see [14. Locating Code and Data, Addressing, Access](#)).

An attempt to mix types of information in a single section (for example, constant data in a section reserved for code or variables) produces an error (dcc1793). In this example, the compiler assumes from the first statement that the section **.mydata** is intended to be of the **DATA** section class, whereas the second statement assumes that **.mydata** will be a **CONST** section class:

```
__attribute__((section(".mydata"))) int var = 1;
__attribute__((section(".mydata"))) const int const_var = 2;
```



NOTE: In some cases, the compiler may not honor an attempt to use the **section** attribute to place initialized data into a section intended for uninitialized data, and vice-versa. For example, in the following code:

```
__attribute__((section(".bss"))) int x = 3;
```

x will be assigned to the **.data** section, not **.bss**.

See [Table 14-1](#) on page [258](#) for a list of sections and section classes.

There is no cross-module verification that section names are used consistently. Incorrect usage, including typographical errors, cannot be detected until link time.

6.6 Intrinsic Functions

The compiler implements the following intrinsic functions to give access to specific MIPS instructions. See the processor manufacturer's documentation for details on machine instructions.

Intrinsic functions can be selectively disabled with the **-Xintrinsic-mask=*n*** (**-X154=*n***) option, where *n* is a bit mask that can be given in hex. *n* defaults to 0xf.

Function	Mask	Description
alloca (<i>integral</i>)	0x800000	Allocate temporary local stack space for an object of size <i>integral</i> . Return a pointer to the start of the object. The allocated memory is released at return from the current function.
__alloca (<i>integral</i>)		Same as alloca (), but cannot be disabled.
__builtin_expect (<i>long exp</i> , <i>long c</i>)	0x400000	Provide the compiler with branch prediction information. <i>exp</i> is an integral expression (and the return value).

6.7 Other Additions

Support for 64-bit Bit-fields

The Wind River compiler supports 64-bit bit-fields (e.g., they may be used in variables of type **long long**).

C++ Comments Permitted

C++ style comments beginning with `“//”` are allowed by default. To disable this feature, use **-Xdialect-strict-ansi**. Example:

```
int number1bits (int i)    // Count the number of 1 bits
{                          // in "i".
    int n = 0;

    while (i != 0) {
        i &= (i - 1);
        n ++;
    }
    return n;
}
```

Dynamic Memory Allocation with `alloca`

The `alloca(size)` and `__alloca(size)` functions are provided to dynamically allocate temporary stack space inside a function. Example:

```
char *alloca();  
char *p;  
  
p = alloca(1000);
```

The pointer `p` points to an allocated area of 1000 bytes on the stack. This area is valid only until the current function returns. The use of `alloca()` typically increases the entry/exit code needed in the function and turns off some optimizations such as tail recursion.

See [6.6 Intrinsic Functions](#), p.158 for additional details.

Binary Representation of Data

The compiler recognizes variables and constants that are given in binary format. For example, it will accept the following:

```
unsigned int x = 0b00001010;
```

Note that the compiler does not recognize the following format:

```
unsigned int x = 00001010b;
```

Use of binary representation in C may make your code non-portable.

Assigning Global Variables to Registers

You can assign a global variable to a preserved register by placing `asm("register-name")` or `__asm("register-name")` immediately after the variable name in the declaration. Example:

```
int some_global_var asm("$s0");
```

This assigns the variable `some_global_var` to `$s0`. Local variables cannot be assigned in this way.

`__ERROR__` Function

The `__ERROR__()` function produces a compile-time error or warning if it is seen by the code generator. This is useful for making compile-time checks beyond those

possible with the preprocessor, e.g. ensuring that the sizes of two structures are the same, as shown in the example below. If the `__ERROR__()` function is placed after an `if` statement that is not executed unless the assertion fails, the optimizer removes the `__ERROR__()` function and no error is generated. (The optimizer must be enabled (at any level) for this technique to work.)

The syntax of the `__ERROR__()` function:

```
__ERROR__(error-string [ , value ] )
```

where *error-string* is the error message to be generated and the optional *value* defines whether the error should be:

- 0 warning - compilation will continue
- 1 error - compilation will continue but will stop after the entire file has been processed
- 2 fatal error - compilation is aborted

If no value is given, the default value of 1 is used. Example:

```
extern void __ERROR__(char *, ...);

#define CASSERT(test) \
    if (!(test)) __ERROR__("C assertion failed: " #test)
.
.
.
CASSERT(sizeof(struct a) == sizeof(struct b));
```

When `__ERROR__()` is used in C++ code, it must be declared like this:

```
extern "C" void __ERROR__(char *, ...);
```

sizeof Extension

The **sizeof** operator has been extended to incorporate the following syntax:

```
sizeof(type, int-const)
```

Note that unlike the standard, one-argument version of **sizeof**, only types (not variables) are allowed as the first argument. See the `__typeof__` extension if variables are needed (page 152).

where *int-const* is an integer constant between 0 and 2 with the following semantics:

- 0 standard **sizeof**, returns size of *type*

- 1 returns alignment of *type*
- 2 returns an **int** constant depending on *type* as follows:

signed char	0
unsigned char	1
char	C: 0 (char is signed by default) C++: 44
signed short	2
unsigned short	3
signed int	4
unsigned int	5
signed long	6
unsigned long	7
long long	8
unsigned long long	9
float	14
double	15
long double	16
void	18
pointer to any type	19
array of any type	22
struct, union	C: 23 C++: same as class , 32
function	25
class	C++: 32
reference	C++: 33
enum	C++: 34

Examples:

```
i = sizeof(long ,2)      /* type of long: i = 6 */
j = sizeof(short,1)      /* alignment of short: j = 2 */
```

vararg Macros

The preprocessor supports several styles of **variadic** macro, including ANSI C draft, C99, and GNU. Use of **vararg** macros is illustrated below:

```
va_arg.c:
// C draft
#define debug(...)    fprintf(stderr, __VA_ARGS__)
#define showlist(...) puts(#__VA_ARGS__)
#define report(test, ...) ((test)?puts(#test):\
```



```

                                printf(__VA_ARGS__)
// C99
#define foo(string1, ...) printf(string1, ## __VA_ARGS__, ":end")
// GNU
#define bar(string2, args...) printf(string2, ## args, ":end")

debug("Flag");
debug("X = %d\n", x);
showlist(The first, second, and third items.);
report(x>y, "x is %d but y is %d", x, y);
foo("start");
bar("begin");

> gcc -E va_arg.c
# 1 "va_arg.c" 0

fprintf(stderr, "Flag") ;
fprintf(stderr, "X = %d\n", x) ;
puts("The first, second, and third items.") ;
((x>y)?puts("x>y"):      printf( "x is %d but y is %d", x, y)) ;
printf("start", ":end") ;
printf("begin", ":end") ;
>

```


7

Embedding Assembly Code

- 7.1 Introduction 165
- 7.2 `asm` Macros 167
- 7.3 `asm` String Statements 172
- 7.4 Reordering in `asm` Code 174
- 7.5 Direct Functions 175

7.1 Introduction

There are three approaches to embedding assembly code in source files: flexible **`asm`** macros, simple but less flexible **`asm`** strings, and *direct functions* for embedding machine code.



WARNING: When embedding assembly code with any method, you must use only scratch registers. See [9.6 Register Use](#), p.194 to determine the scratch registers.

If optimization is enabled, even hand-inserted assembly language may be optimized. See [7.4 Reordering in `asm` Code](#), p.174



NOTE: The compiler recognizes extended GNU inline syntax (e.g. register usage specification) but does not translate it. When extended syntax is encountered, the compiler issues an error message.

The **asm** and **__asm** keywords provide a way to embed assembly code within a compiled program. Either keyword may be used to introduce an assembly string or assembly macro as defined below, but **asm** is not defined in C modules if the **-Xdialect-strict-ansi** option is used. In the text below, whenever **asm** is used, **__asm** can be used instead.

There are two ways of using the **asm** keyword. The first is a simple way to pass a string to the assembler, an **asm** string. The second is to define an **asm** macro that inlines different assembly code sections, depending on the types of arguments given. The following two sections discuss both methods. [7.5 Direct Functions](#), p. 175 provide a third way to embed code by using integer values. The following table contrasts the three methods.

Table 7-1 **Methods for Embedding Assembly Code**

Method	Implementation	Calling Conventions, Parameters
asm string	Expanded inline where encountered. Functions containing asm strings with labels may not be inlined more than once per function.	None - difficult to access source variables.
asm macro	Expanded inline where called. Functions containing asm macros may be inlined without restriction.	Parameters matched by type per storage mode lines. May return a value.
Direct function	Always inlined where called.	All normal calling conventions are followed. May return a value.

To confirm that embedded assembly code has been included as desired, compile with the **-S** option and examine the resulting **.s** file.

The examples in this chapter apply to both C and C++.

7.2 asm Macros

While **asm** strings (described in [7.3 asm String Statements](#), p.172) can be useful for embedding simple assembly fragments, they are difficult to use with variables inside the assembly code. **asm** macros provide a more flexible way to embed assembly code in compiled programs.

asm Macro Syntax

An **asm** macro definition looks much like a function definition, including a return type and parameter list, and function body.

The syntax is:

```
asm [volatile] [return-type] macro-name ( [ parameter-list ] )
{
    % storage-mode-list                (must start in column 1)
    ! register-list                    ("!" must be first non-whitespace)
      asm-code
}                                     (must start in column 1)
```

where:

- **volatile** prevents instructions from being interspersed or moved before or after the ones in the macro.
- *return-type* is as in a standard C function. *For a macro to return a value of the given type, the assembly code must put the return value in an appropriate register as determined by the calling conventions.* See [9.5 Returning Results](#), p.193 for details.
- *macro-name* is a standard C identifier.
- *parameter-list* is as in a standard C function, using either old style C with just names followed by separate type declarations, or prototype-style with both a type and a name for each parameter. Parameters should not be modified because the compiler has no way to detect this and some optimizations will fail if a parameter is modified.
- *storage mode line* begins with a "%" which must start in column 1. The *storage-mode-list* is used mainly to describe parameters and is described below. A macro with no parameters and no labels does not require a storage mode line.
- *register-list* is an optional list of scratch registers, each specified as a double-quoted string, or the string "call" if the macro makes a call, separated

by commas. Specifying this list enables the compiler to generate more efficient code by invalidating only the named registers. Without a *register-list*, the compiler assumes that all scratch registers are used by the **asm** macro. See [Register-List Line](#), p.170 for details.

- *asm-code* is the code to be generated by the macro.
- final right “}” closes the body; it must start in column 1.

The compiler treats an **asm** macro much like an ordinary function with unknown properties:

- Any global or static variable can be modified.
- **#pragma** directives can be used to tell the compiler if the function has any side effects, etc.

However, because the **asm** macro is by definition inlined, it is not possible to take the address of an **asm** macro.

The compiler discards any invocation of an empty **asm** macro (one with no storage mode line and no assembler code). This may be useful for macros used for debugging purposes.



NOTE: An **asm** macro must be defined in the module where it is to be used before its use. Otherwise the compiler will treat it as an external function and, assuming no such function is defined elsewhere, the linker will issue an unresolved external error.

In C++, forward declarations of **asm** macros are not permitted. Hence, while static member functions can be **asm** macros, the **asm** keyword must occur in the function definition, not in the class declaration.

Storage Mode Line—Describing Parameters and Labels

The storage mode line is not required if a macro has no parameters and no labels.

For a macro with parameters, a storage mode line is required to describe the methods used to pass the parameters to the macro. Currently, for MIPS targets, all parameters are passed in registers for convenience. A storage mode line is also required if the macro generates a label.

Every parameter name in the *parameter-list* must occur exactly once in a single storage mode line. The form of the *storage-mode-line* is:

```
%[reg | con | lab] name, ...; [reg | con | lab] name, ... ; ...
```

where:

reg

Introduces a list of one or more parameters. Every parameter name in the *parameter-list* must occur exactly once in the single storage mode line.

Arguments to a macro are assigned to registers following the usual calling conventions. For example, four **int** arguments will use registers **\$4**, **\$5**, **\$6**, and **\$7**. Other scratch registers may be used freely in the macro. This limits the maximum number of parameters to the number allowed by the registers used for parameters (see [9.3 Argument Passing](#), p.191 and [9.6 Register Use](#), p.194).



NOTE: If the compiler has already moved an argument to a preserved register, the compiler will use it from there in the macro rather than moving it to the usual parameter register. Therefore, *always* use a *parameter* name rather than a *register* name when coding a macro.



NOTE: Because arguments may be in preserved registers as just noted, macros should avoid use of preserved registers, even if saved and restored.

con

The parameter is a constant.

lab

A new label is generated. **lab** is not actually a storage mode—the *name* following **lab** is not a parameter (a **lab** identifier is not allowed as a parameter). It is a label used in the assembly code body.

For each use of the macro, the compiler will generate a unique label to substitute for the uses of the *name* in the macro.

Names of **long long** parameters must be appended with **!H** or **!L**—e.g. **someParameter!H**. This replaces the parameter with a register holding the most (**!H**) or least (**!L**) significant 32 bits. The register is chosen based on the compilation's endian mode.

“No Matching asm Pattern Exists”

The compiler error message “no matching asm pattern exists” indicates that no suitable storage mode was found for some parameter, or that a label was used in the macro but no **lab** storage mode parameter was present. For example, it would be an error to pass a variable to a macro containing only a **con** storage mode parameter.

Register-List Line

An **asm** macro body may optionally contain a *register-list line*, consisting of the character “!” in column 1 and an optional *register-list*. The *register-list* if present, is a list of scratch registers, each specified as a double-quoted string, or the string “**call**”, separated by commas. Specifying this list enables the compiler to generate more efficient code by invalidating only the named registers. Without a *register-list*, the compiler assumes that all scratch registers are used by the **asm** macro. Also, if a *register-list* is specified and the assembly macro makes a call, the “**call**” string must also be specified to cause the link register to be saved and restored.

The *register-list* line must begin with a “!” character, which must be the first non-whitespace character on a line. The specification can occur anywhere in the macro body, and any number of times, however it is recommended that a single line be used at the beginning of the macro for clarity.

Supported scratch registers are \$1–\$15, \$24, and \$25 for MIPS, and \$2–\$7 for MIPS16. Also, if a *register-list* line is specified and the assembly macro makes a call, then “**call**” must also be specified to cause the link register to be saved and restore around the macro. See [9.6 Register Use](#), p.194 for more information about registers.

If the “!” is present without any list, the compiler assumes that no scratch or link registers are used by the macro.



NOTE: If supplied, the *register-list* must be complete, that is, must name all scratch registers used by the macro and must include “**call**” if the macro makes a call. Otherwise, the compiler will assume that registers which may in fact be used by the macro contain the same value as before the macro.

Also, as noted below, any comment on the *register-list* line must be a C-style comment (“/* ... */”) because this line is processed by the compiler, not the assembler.

Comments in asm Macros

Any comment on the non-assembly language lines—that is, the **asm** macro function-style header, the “{” or “}” lines, or a *storage-mode* or *register-list* line—must be a C-style comment (“/* ... */”) because this line is processed by the compiler, not the assembler.

Comments on the assembly language line may be either C style or assembler style. If C style, they are discarded by the compiler and are not preserved in the

generated **.s** assembly-language file. If assembler style, they are visible in the **.s** file on every instance of the expanded macro.

Assembler-style comments in **asm** macros are read by the preprocessor when the source file is processed. For this reason, apostrophes and quotation marks in assembler-style comments may generate warning messages.

Examples of asm Macros

In this example, a macro loops until the value at the address given by its parameter is non-zero and then returns the value at that address (**int** values are returned in register **\$2**).

```
asm int get_data (volatile unsigned int *address_p)
{
% reg address_p; lab loop;
! "$2", "$5" /* scratch registers used */
loop:
    lw      $5,0(address_p)
    bne     $5,$0,loop
    move    $2,$5
}

#pragma section IOREG far-absolute RW address=0xf0000
#pragma use_section IOREG device_in
    volatile unsigned int device_in; /* input port */

int test (volatile unsigned int *device_in_p)
{
    int data;

    data = get_data (device_in_p);
    return get_data (& device_in);
}
```

The above code was compiled with:

```
dcc -tR4000EN -S -XO -Xpass-source asm_macro.c
```

Extracts from the generated assembly code for the two macro calls follow.

```
#    data = get_data (device_in_p);
.L4:
    lw      $5,0($4)
    bne1    $5,$0,.L4+4
    lw      $5,0($4)

#    return get_data (& device_in);
```

```
        lui      $30,%hi(device_in)
        addiu    $30,$30,%lo(device_in)
.L5:
        lw       $5,0($30)
        bne1     $5,$0,.L5+4
        lw       $5,0($30)
        move     $2,$5
```



NOTE:

- The uniquely generated loop labels.
 - The macro argument is always forced to a register. Before the first expansion, **device_in_p** was passed in **\$4** to **test**. For illustration in the second expansion, **#pragma section** and **#pragma use_section** were used to locate **device_in** at absolute address 0xf0000; otherwise the compiler would have placed it in the small data area by default.
 - For the **bne** instruction, the compiler first generated a nop following the instruction to fill the delay slot, and then the optimizer changed the **bne** – nop sequence to a **bne1** – **lw** to avoid this.
 - The optimizer removed a **move** instruction assigning the value to **data** at the end of the first expansion because it was not used after that. It did not suppress the whole expansion because the parameter was declared to be volatile.
-

7.3 asm String Statements



NOTE: **asm** string statements are primarily useful for manipulating data in static variables and special registers, changing processor status, etc., and are subject to several restrictions: no assumption can be made about register usage, non-scratch registers must be preserved, values may not be returned, some optimizations are disabled, and more. **asm** macro functions described above are recommended instead. See [Notes and Restrictions](#), p.173 below.

An **asm** string statement provides a simple way to embed instructions in the assembly code generated by the compiler. Its syntax is:

```
asm[volatile] ( "string" [ ! register-list ] );
```

where *string* is an ordinary string constant following the usual rules (adjacent strings are pasted together, a “\” at the end of the line is removed, and the next line is concatenated) and *register-list* is a list of scratch registers (see [Register-List Line](#), p.170). The optional **volatile** keyword prevents instructions from being moved before or after the string statement.

An **asm** string statement can be used wherever a statement or an external declaration is allowed. *string* will be output as a line in the assembly code at the point in a function at which the statement is encountered, and so must be a valid assembly language statement.

If several assembly language statements are to be generated, they may either be written as successive **asm** string statements, or by using “\n” within the string to end each embedded assembly language statement. The compiler will not insert any code between successive **asm** string statements.

If an **asm** string statement contains a label, and the function containing the **asm** string is inlined more than once in some other function, a duplicate label error will occur. Use an **asm** macro with a storage mode line containing a **lab** clause for this case. See [7.2 asm Macros](#), p.167.

Notes and Restrictions

asm string statements are primarily useful for tasks like changing processor status (as in the example above) and manipulating data in static variables and special registers. When using **asm** string statements, consider the following notes and restrictions:

- No assumptions may be made regarding register values before and after an **asm** string statement. For example, do not assume that parameters passed in registers will still be there for an **asm** string statement.
- The compiler does not expect an **asm** string statement to “return” a value. Thus, using an **asm** string statement as the last line of a function to place a value in a return register does not ensure that the function will return that value.
- The compiler assumes that non-scratch registers are preserved by **asm** string statements. If used, these registers must be saved and restored by the **asm** string statements.
- The compiler assumes that scratch registers are changed by **asm** string statements and so need not be preserved.
- Some optimizations are turned off when an **asm** string statement is encountered.

- A function containing an **asm** string statement may or may not be inlined, depending on what type of optimization, if any, is used.
- Because the string contained in quotation marks is passed to the assembler exactly as is (after any pasting of continued lines), it must be in the format required for an assembly language line. Specifically, an instruction line must begin with a space, a tab, or a label. Assembler directives may start in column one but only if the assembler **-Xlabel-colon** option is enabled (see [Set Label Definition Syntax \(-Xlabel-colon...\)](#), p.310).
- When an **asm** string statement appears in global scope, the compiler adds it to the output assembly module *after* all of the function definitions. For this reason, global **asm** string statements should not use assembler directives—such as **.set symbol**—on which other **asm** statements (appearing in functions) depend.

Example 7-1 **Disable Interrupts**

The following sequence of **asm** string statements disables hardware interrupts. Note that a scratch register is used in the example.

```
asm(" mfc0 $8,$12    # get the status register");  
asm(" nop           # delay for move to complete (required)");  
asm(" xor  $8,$8,1    # clear bit 0 (interrupt enable)");  
asm(" mtc0 $8,$12    # set the status register");
```

7.4 Reordering in asm Code

If optimization is requested (options **-O** or **-XO**), after generating an assembly file, the driver will run the **reorder** optimization program. **reorder** runs peephole optimizations and schedules the assembly file before the assembler assembles it, and does not distinguish assembly code generated by the compiler from assembly code inserted by **asm** macros or **asm** strings. Thus, explicit assembly instructions written in a particular order by the user may still be reordered by **reorder**.

In general this may improve even hand-coded assembly language. If it is necessary to prevent this, write a **.set noreorder** directive in the **asm** string or **asm** macro at the point at which such re-ordering should be disabled, and a **.set reorder** directive where re-ordering can be re-enabled. Alternatively, define the string or macro as **volatile**.

MIPS processors require that *delay slots* be filled following certain instructions. The compiler (**ctoa**, **etoa**, etc.) does not do this, leaving it to either **reorder** or the assembler. If optimization is not requested, the assembler generates nop instructions to fill the delay slots. If optimization is requested, then 1) the **reorder** program fills the delay slots as necessary, and 2) indicates to the assembler that it should not generate these nops (by changing the default **.set reorder** directive to **.set noreorder**).

7.5 Direct Functions

Direct functions, available in C modules only, provide a way to inline machine code in a function. In a direct function definition, the body of the function is a list of integer constant expressions which represent the machine code. The form is:

```
[return_type] function_name ( [ parameter_type parameter_name , ... ] ) =
{
    integer-constant-expression , ... ,
    integer-constant-expression , ... ,
    ...
};
```

/* ';' required */

Rules:

- A direct function is signaled by the presence of an “=” character between the parameter list and the body of the function.
- The expressions in the body are separated by commas and may be written one or more per line (with a comma after the final expression on a line if additional expression lines follow).
- The final “}” closing the function body must be followed by a “;”.

A direct function is always inlined when called. When called, what would be the branch to the function is replaced by a **.word** assembler directive having as operands the value of each expression as a hex constant. Otherwise, normal calling conventions are followed (e.g., any parameters are set up in the usual manner).

Direct functions are supported primarily for compatibility reasons. **asm macros** provide a more flexible method to do nearly the same thing. See [Table 7-1](#) which contrasts the differences.

8

Internal Data Representation

- 8.1 Introduction 177
- 8.2 Basic Data Types 178
- 8.3 Byte Ordering 180
- 8.4 Arrays 180
- 8.5 Bit-fields 180
- 8.6 Classes, Structures, and Unions 181
- 8.7 C++ Classes 182
- 8.8 Linkage and Storage Allocation 186

8.1 Introduction

This chapter describes the alignments, sizes, and ranges of the C and C++ data types for MIPS microprocessors.

8.2 Basic Data Types

By default, the type plain **char**—that is, **char** without the keyword **signed** or **unsigned**—is treated as signed.

The following table describes the basic C and C++ data types available in the compiler. All sizes and alignments are given in bytes. An alignment of 2, for example, means that data of this type must be allocated on an address divisible by 2.

Table 8-1 C/C++ Data Types, Sizes, and Alignments

Data Type	Bytes	Align	Notes
char	1	1	range (-128, 127), or (0, 255) with -Xchar-unsigned (Note 1)
signed char	1	1	range (-128, 127)
unsigned char	1	1	range (0, 255)
short	2	2	range (-32768, 32767)
unsigned short	2	2	range (0, 65535)
int	4	4	range (-2147483648, 2147483647)
unsigned int	4	4	range (0, 4294967295)
long	4	4	range (-2147483648, 2147483647)
unsigned long	4	4	range (0, 4294967295)
long long	8	8	range (-2^{63} , $2^{63}-1$)
unsigned long long	8	8	range (0, $2^{64}-1$)
enum (Note 2)	4	4	same as int
	1	1	with -Xenum-is-small and fits in signed char or -Xenum-is-best and fits in unsigned char
	2	2	with -Xenum-is-small and fits in short or -Xenum-is-best and fits in unsigned short
pointers	4	4	all pointer types; the NULL pointer has the value zero

Table 8-1 C/C++ Data Types, Sizes, and Alignments (cont'd)

Data Type	Bytes	Align	Notes
float	4	4	IEEE 754-1985 single precision
double	8	8	IEEE 754-1985 double precision
long double	8	8	IEEE 754-1985 double precision
reference	4	4	C++: same as pointer (Note 3)
ptr-to-member	8	4	C++: pointer to member
ptr-to-member-fn	12	4	C++: pointer to member function

Notes:

1. If the option **-Xchar-unsigned** is given, the plain char type is **unsigned**. If the option **-Xchar-signed** is given, the plain char type is **signed**.
2. If the option **-Xenum-is-int** is given, enumerations take four bytes. This is the default for C.

If the option **-Xenum-is-small** is given, the smallest **signed** integer type permitted by the range of values for the enumeration is used, that is, the first of **signed char**, **short**, **int**, or **long** sufficient to represent the values of the enumeration constants. Thus, an enumeration with values from 1 through 128 will have base type **short** and require two bytes.

If the option **-Xenum-is-best** is given, the smallest **signed** or **unsigned** integer type permitted by the range of values for an enumeration is used, that is, the first of **signed char**, **unsigned char**, **short**, **unsigned short**, **int**, **unsigned int**, **long**, or **unsigned long** sufficient to represent the values of the enumeration constants. Thus, an enumeration with values from 1 through 128 will have base type **unsigned char** and require one byte. This is the default for C++.

3. A reference is implemented as a pointer to the variable to which it is initialized.

8.3 Byte Ordering

Unless the “L” object format is used, all data is stored in big-endian order. That is, with the most significant byte of any multi-byte type at the lowest address. To access data in little-endian order, see the *byte-swapped* parameter for the **#pragma pack** in *pack Pragma*, p.143 and *__packed__ and packed Keywords*, p.151.

If the “L” object for format is selected, for example, **-tMIPSLS**, then all data is stored in little-endian order, and reversed to big-endian with the *byte-swapped* parameter.

8.4 Arrays

Arrays, excluding character arrays, have the same alignment as their element type. The size of an array is equal to the size of the data type multiplied by the number of elements. Character arrays have a default alignment of 4. **-Xsize-opt** sets the alignment of character arrays to 1, and **-Xstring-align** overrides **-Xsize-opt**. **-Xarray-align-min**, which overrides **-Xstring-align**, specifies a minimum alignment for all arrays.

8.5 Bit-fields

Bit-fields can be of type **char**, **short**, **int**, **long**, or **enum**. Plain bit-fields are unsigned by default. By using the **-Xbit-fields-signed** option (C only) or by using the **signed** keyword, bit-fields become signed. The following rules apply to bit-fields:

- Allocation is from most significant bit to least.
- A bit-field never crosses its type boundary. Thus a **char** bit-field is never allocated across a byte boundary and can never be wider than 8 bits.
- Bit-fields are allocated as closely as possible to the previous **struct** member without crossing a type boundary.

- A zero-length bit-field pads the structure to the next boundary specified by its type.
- The compiler accesses a bit-field by loads and stores appropriate to the bit-field's type. For example, an **int** bit-field is accessed using a **word** load or store (or an equivalent set of smaller load/stores in the unaligned case), even if the bit-field spans only one byte. To ensure that a bit-field is accessed using byte (or half-word) load/stores, make the bit-field **char** or **short**, or use the **-Xbit-field-compress** option (see [5.4.9 Change bit-field Type to Reduce Structure Size \(-Xbit-fields-compress-...\)](#), p.66).
- When a bit-field is promoted to a larger integral type, the compiler preserves sign as well as value unless **-Xstrict-bitfield-promotions**, **-Xdialect-strict-ansi**, or **-Xstrict-ansi** is enabled.

8.6 Classes, Structures, and Unions

The alignment of **class**, **struct**, and **union** aggregates is the same as that of the member with the largest alignment.

The size of a structure is the sum of the size of all its members plus any necessary padding. Padding is added so that all members are aligned to a boundary given by their alignment and to make sure that the total size of the structure is divisible by its alignment.

The size of a union is the size of its largest member plus any padding necessary to make the total size divisible by the alignment.

To minimize the necessary padding, structure members can be declared in descending order by alignment.

See [pack Pragma](#), p.143 and [__packed__ and packed Keywords](#), p.151 for more information.

8.7 C++ Classes

C++ objects of type **class**, **struct**, or **union** can be divided into two groups, aggregates and non-aggregates. An aggregate is a **class**, **struct**, or **union** with no constructors, no private or protected members, no base classes, and no virtual functions. All other classes are non-aggregates.

The internal data representation for aggregates is exactly the same as it is for C structures and unions.

Static member functions and static class members, as well as non-virtual member functions do not affect the representation of classes. Their relation to the classes are only encoded in their names (name mangling). Pointers to static member functions and static class members are ordinary pointers. Pointers to member functions are of the type *pointer-to-member-function* as described later.

The internal data representation for non-aggregates has the following properties:

- The rules for alignment are equal to the rules of aggregates.
- The order that members appear in the object is the same as the order in the declaration.
- Non-virtual base classes are inserted before any members, in the order that they are declared.
- A pointer to the virtual function table is added after the bases and members.
- For virtual base classes, a pointer to the base class is added after non-virtual bases, members, or the virtual function table. The virtual base class pointers are added in the order that they are declared.
- The storage for the virtual bases are placed last in the object, in the order they are declared, that is, depth first, left to right.
- Virtual base classes that declare virtual functions are preceded by a “magic” integer used during construction and destruction of objects of the class.

Example:

```
struct V1 {};  
struct V2 {};  
struct V3 : virtual V2 {};  
struct B1 : virtual V1 {};  
struct B2 : virtual V3 {};  
struct D : B1, private virtual V2, protected B2 {  
    int d1;  
private:
```

```

    int d2;
public:
    virtual ~D() {};
    int d3;
};

```

The class hierarchy for this example is:

D is derived from B1, B1 is derived from V1

D is derived from B2, B2 is derived from V3, V3 is derived from V2

D is derived from V2 (which is virtual, thus there is only one copy of V2)

The internal data representation for D is as follows:

B1
B2
Body of D: d1 d2 d3
Virtual function table pointer
Pointer to virtual base class V1
Pointer to virtual base class V2
Pointer to virtual base class V3
V1
V2
<i>magic</i> for V3
V3

Note:

- When the class D is used as a base class to another class, for example:

```
class E : D {};
```

only the base part of D will be inserted before the body of class E. The virtual bases V1, V2, and V3 will be placed last in class E, in the fashion described above. Class E would be laid out as follows:

Base part of D
Body of E: ...
V1
V2
<i>magic</i> for V3
V3

- The virtual function table pointer is only added to the first base class that declares virtual functions. A derived class will use the virtual function table pointer of its base classes when possible. A virtual function table will be added to a derived class when new virtual functions are declared, and none of its non-virtual base classes has a virtual function table.
- The virtual function table is an array of pointers to functions. The virtual function table has one entry per virtual function, plus one entry for the *null* pointer.
- Virtual base class pointers are added to a derived class when none of its non-virtual base classes have a virtual base class pointer for the corresponding virtual base class.
- Each virtual base class with virtual functions are preceded by an integer called *magic*. This integer is used when virtual functions are called during construction and destruction of objects of the class.

Pointers to Members

The pointer-to-member type (non-static) is represented by two objects. One for pointers to member functions, and one for all other pointers to member types. The offsets below are relative to the class instance origin.

An object for a pointer to non-virtual or virtual member functions has three parts:

<i>voffset</i>
<i>index</i>
<i>vtbl-offset</i> or Function Pointer

The *voffset* field is an integer that is used when the virtual function table is located in a virtual base class. In this case it contains the offset to the virtual base class pointer + 1. Otherwise it has a value of 0.

The *index* field is an integer with two meanings.

1. *index* ≤ 0
The *index* field is a negative offset to the base class in which the non-virtual function is declared. The third field is used as a function pointer
2. *index* > 0
The *index* field is an index in the virtual function table. The third field, *vtbl-offset*, is used as an offset to the virtual function table pointer of type integer

A *null* pointer-to-member function has zero for the second and third fields.

An object for a pointer-to-member of a non-function type has two parts:

<i>voffset</i>
<i>moffset</i>

The *voffset* field is used in the same way as for pointer-to-member functions. The *moffset* field is an integer that is the offset to the actual member + 1. A *null* pointer to member has zero for the *moffset* field.

Virtual Function Table Generation—Key Functions

The virtual function table for a class will be generated only in the module which *defines* (not declares) its *key* virtual function (and does not inline it). The *key* virtual function is the virtual function declared lexically first in the class (or the only virtual function in the class if there is only one).

Consider, for example:

```
class C {
    public:
        virtual void f1(...);
        virtual void f2(...);
}
```

Because **f1** is the first virtual function declared in the class, it is the key virtual function.

Then, the virtual function table will be emitted for the module which provides the non-inlined definition of **f1**.

8.8 Linkage and Storage Allocation

Depending on whether a definition or declaration is performed inside or outside the scope of a function, different storage classes are allowed and have slightly different meanings. Notes are at the end of the section.

Outside Any Function and Outside Any Class

Specifier	Linkage	Allocation
none	external linkage, program	Static allocation (Note 1).
static	file linkage	Static allocation (Note 1).
extern	external linkage, program	None, if the object is not initialized in the current file, otherwise same as “none” above.

Inside a function, but outside any class

Specifier	Linkage	Allocation
none	current block	In a register or on the stack (Note 2).
register	current block	In a register or on the stack (Note 2).
auto	current block	In a register or on the stack (Note 2).

Specifier	Linkage	Allocation
static	current block	Static allocation (Note 1).
extern	current block	None, this is not a definition (Note 3).

Outside any function, but inside a C++ class definition

Outside the class, a class member name must be qualified with the `::` operator, the `.` operator or the `->` operator to be accessed. The **private**, **protected**, and **public** keywords, class inheritance and friend declaration will affect the access rights.

Specifier	Linkage	Allocation
none (data)	external linkage, program	None, this is only a declaration of the member. Allocation depends on how the object is defined.
static (data)	external linkage, program	None, this is not a definition. A static member must be defined outside the class definition.
none (function)	external linkage, program	(uses a this pointer)
static (function)	external linkage, program	(no this pointer)

Within a Local C++ Class, Inside a Function

A local class cannot have static data members. The class is local to the current block as described above and access to its members is through the class. All member functions will have internal linkage.

Notes

1. Allocation of static variables is as per [Table 14-1](#).
2. The compiler attempts to assign as many variables as possible to registers, with variables declared with the **register** keyword having priority. Variables which have their address taken are allocated on the stack. If the **-Xlocals-on-stack** option is given, only **register** variables are allocated to registers.
3. Although an **extern** variable has a local scope, an error will be given if it is redefined with a different storage class in a different scope.

9

Calling Conventions

- 9.1 Introduction 189
- 9.2 Stack Layout 190
- 9.3 Argument Passing 191
- 9.4 C++ Argument Passing 192
- 9.5 Returning Results 193
- 9.6 Register Use 194
- 9.7 Mixing MIPS16 and MIPS 197

9.1 Introduction


This chapter describes the interface between a function caller and the called function. Stack layout, argument passing, returning results, and register use are all described in detail.

9.2 Stack Layout

Stack layout varies from processor to processor. This section describes the stack layout for the MIPS processor.

The following figure shows the stack frame after completion of the prolog in the then “current” function (**\$sp** = stack pointer, **\$29**).

The compiler uses the following stack layout (**\$sp** = stack pointer, **\$29**):

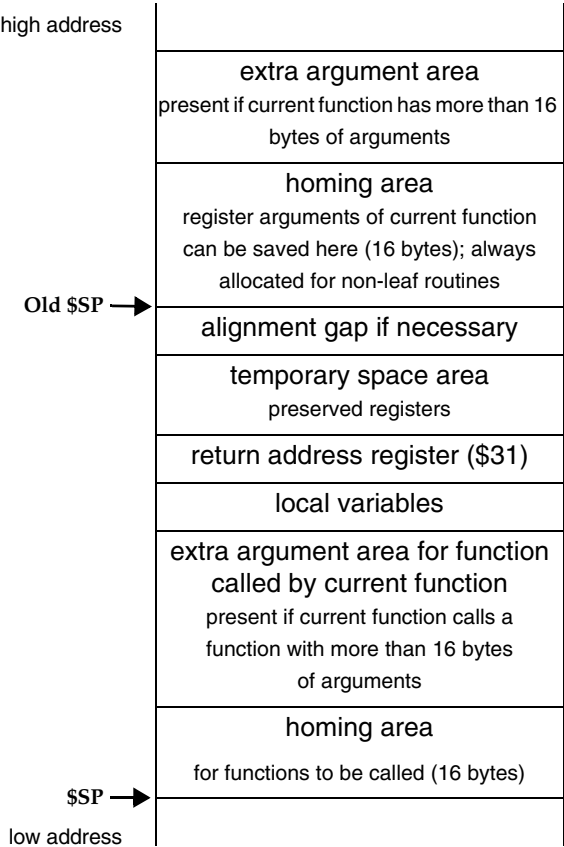

Notes:

- The homing area is used to save the argument registers if the function is a variable argument (**stdarg**/**varargs**) function or takes the address of a parameter.
- To facilitate certain optimizations, the stack pointer is aligned on an 8-byte boundary by inserting a 4-byte alignment gap if necessary.
- Leaf routines that do not use any stack space do not create a stack area at all.

9.3 Argument Passing

Values of size one and two bytes are extended to four bytes. Following the expansion, the first sixteen bytes of arguments are passed in registers **\$4**, **\$5**, **\$6**, and **\$7** (with any eight-byte values in either **\$4-\$5** or **\$6-\$7**). Additional arguments are passed on the stack. Arguments with an alignment of 8 are aligned on 8, all other arguments are aligned on 4. For a function with a variable argument list, sixteen bytes are reserved on the stack for a copy of the arguments passed in the registers. The stack is always aligned on 8.

The exception to the above rule is leading floating point arguments when hardware floating point is used. Up to two leading floating point arguments are passed in registers **\$f12** and **\$f14** (**\$f12** and **\$f13** for MIPS64). When this happens, the corresponding general registers are skipped and subsequent arguments are placed in higher registers.

The stack layout is shown above. Examples of argument passing are shown below.

Table 9-1 Examples of MIPS Argument Passing

Example Function Call	\$4	\$5	\$6	\$7	Stack
f(char a, char b, char c, char d, char e)	a	b	c	d	e
f(char a, int b, double c, double d)	a	b	— c —		d
f(char a, double b, char c)	a	-	— b —		c
	a\$f12 a\$f13				
f(double a, char c);	— a —		c		

9.4 C++ Argument Passing

In C++, the same lower-level conventions are used as in C, with the following additions:

- References are passed as pointers.
- Function names are encoded (mangled) with the types of all arguments. A member function has also the class name encoded in its name. See [13.6 C++ Name Mangling](#), p.246.
- An argument of **class**, **struct**, or **union** type may, depending on the target architecture and the size of the actual parameter, be passed as a pointer to the object. (But this does not happen if the function is declared with **extern "c"**.) For this reason, when a C++ function with **class**, **struct**, or **union** parameters is called from a C module, it should always be assumed that the C++ compiler expects a pointer argument. For example, suppose the following function is defined in a C++ module:

```
int ff(struct S s);
```

To call this function from a C module, use code like this:

```
struct S xyz;  
int i = ffmangledname(&xyz);
```

where *ffmangledname* is the mangled form of *ff*. To find the mangled name of a C++ function, see [13.6 C++ Name Mangling](#), p.246 and [29. D-DUMP File Dumper](#).

Pointer to Member as Arguments and Return Types

Pointers to members are internally converted to structures. Therefore argument passing and returning of pointer to members will follow the rules of **class**, **struct**, and **union**.

Member Function

Non-static member functions have an extra argument for the **this** pointer. This argument is passed as a pointer to the class in which the function is declared. The argument is passed as the first argument, unless the function returns an object that needs the hidden return argument pointer, in which case the return argument pointer is the first argument and the **this** pointer is the second argument.

Constructors and Destructors

Constructors and destructors are treated like any other member function, with some minor exceptions as follows.

Constructors for objects with one or more virtual base classes have one extra argument added for each virtual base class. These arguments are added just after the **this** pointer argument. The extra arguments are pointers to their respective base classes.

Calling a constructor with the virtual base class pointers equal to the *null* pointer indicates that the virtual base classes are not yet constructed. Calling a constructor with the virtual base class pointers pointing to their respective virtual bases indicates that they are already constructed.

All destructors have one extra integer argument added, after the **this** pointer. This integer is used as a bit mask to control the behavior of the destructor. The definition of each bit is as follows (bit 0 is the least significant bit of the extra integer argument):

Bit 0

When this bit is set, the destructor will call the destructor of all sub-objects except for virtual base classes. Otherwise, the destructor will call the destructor for all sub-objects.

Bit 1

When this bit is set, the destructor will call the operator **delete** for the object.

All other bits are reserved and should be cleared.

9.5 Returning Results

Characters and shorts are extended to 32-bits and returned in register **\$2**. Integers and pointers are returned in register **\$2**. Floating point values are returned in register **\$f0** with hardware floating point. With software floating point, **float** values are returned in **\$2**, **double** values in **\$2/\$3**, and **long long** values in **\$2/\$3**. All other types are returned in the memory area pointed to by a hidden address argument passed in register **\$4**.

Class, Struct, and Union Return Types

A function with a return type of **class**, **struct**, or **union** is called with a hidden argument of type *pointer to function return type*. The called function copies the return argument to the object pointed at by the hidden argument; the ordinary arguments are “bumped” one place to the right.

9.6 Register Use

The following table describes how registers are used by the compiler. Floating point registers (**\$f0-\$f31**) are used only when hardware floating point is used. Floating point registers are used in pairs designated by the even number member of the pair. Unless otherwise noted, the table refers to MIPS 32-bit mode, not MIPS16.

Table 9-2 **Register Use**

Register Name	Software Name	Description
\$0	\$zero	Always zero.
\$1	\$at	Scratch register, but also used by the assembler for MIPS macro instructions (special instructions which expand to several machine instructions), so can be used only if a macro instruction will not also use it. See the <i>MIPS RISC Architecture</i> manual for details.
\$2 - \$3	\$v0 - \$v1	Scratch registers. Not preserved by functions. Hold variables whenever possible. Also used to return results. MIPS and MIPS16 mode.
\$4 - \$7	\$a0 - \$a3	Scratch registers. Not preserved by functions. Hold variables whenever possible. Also used to pass the first 4 words of parameters. MIPS and MIPS16 mode.
\$8 - \$15	\$t0 - \$t7	Scratch registers. Not preserved by functions. Hold variables whenever possible.

Table 9-2 **Register Use** (cont'd)

Register Name	Software Name	Description
\$16 - \$22	\$s0 - \$s6	Preserved registers. Saved when used by functions. Hold variables which cannot be put in the scratch registers. (MIPS16 has \$16 and \$17.)
r23	\$s7	<p>Pointer to code section. Used for position-independent code (PIC).</p> <p>\$23 is also used if <code>_SDA2_BASE_</code> is defined for access to the Small Data Area. See 23.3 Symbols Created By the Linker, p.378 re <code>_SDA2_BASE_</code>.</p> <p>Wind River libraries are compiled with the default options (<code>-Xsmall-data=8</code> and <code>-Xsmall-const=8</code>) and so use the Small Data Area. Thus this register must be preserved by user assembly code linked with Wind River libraries even if user modules are compiled without using position-independent code.</p>
\$24 - \$25	\$t8 - \$t9	Scratch registers. Not preserved by functions. Hold variables whenever possible.
\$26 - \$27	\$k0 - \$k1	Reserved by the operating system.

Table 9-2 **Register Use** (cont'd)

Register Name	Software Name	Description
\$28	\$gp	<p>Global pointer to the Small Data Area (SDA) and also used for Position-Independent Data (PID).</p> <p>As shown in Table 14-1, small variables, that is, those with size less than or equal to -Xsmall-data are put by default into .sdata (for initialized variables) and .sbss (uninitialized variables), collectively, the SDA.</p> <p>The default.dld linker command file causes the linker to load .sdata and .sbss contiguously. The linker then defines the symbol _SDA_BASE_ as the address of .sdata plus 0x7ff0, and the startup code in crt0.s loads register \$28 with this value. This permits any variable in either section to accessed with a single instruction using a 16-bit offset from the \$28 register. Note that this limits the combined size of the two sections to 64KB - 0x10 (the 0x10 facilitates certain optimizations).</p> <p>Wind River libraries are compiled with the default options (-Xsmall-data=8 and -Xsmall-const=8) and so use the Small Data Area. Thus this register must be preserved by user assembly code linked with Wind River libraries even if user modules are compiled without using position-independent data.</p>
\$29	\$sp	<p>Stack pointer. Saved when used by function. See 9.2 Stack Layout, p.190 for details about this register.</p>
\$30	\$s8	<p>Preserved register. Saved when used by functions. Hold variables which cannot be put in the scratch registers. Used as a frame pointer for functions using the alloca() function.</p>
\$31	\$ra	<p>Return address; saved if used by function.</p>
<p>NOTE: The following floating point registers are used in pairs, each pair of 32-bit floating point registers holding a single 64-bit value; thus, \$f0 - \$f3 holds two values, one in \$f0-\$f1, and one in \$f2-\$f3.</p>		

Table 9-2 Register Use (cont'd)

Register Name	Software Name	Description
\$f0 - \$f3		Scratch registers; not preserved by functions. Hold variables whenever possible. Also used for result passing.
\$f4 - \$f11		Scratch registers; not preserved by functions. Hold variables whenever possible.
\$f12 - \$f15		Scratch registers; not preserved by functions. Hold variables whenever possible. Also used to pass the first 2 words of floating point arguments.
\$f16 - \$f19		Scratch registers; not preserved by functions. Hold variables whenever possible.
\$f20 - \$f31		Preserved floating point registers; saved when used by functions. Hold variables which cannot be put in \$f0-\$f18.

9

9.7 Mixing MIPS16 and MIPS

MIPS16 is a 16-bit mode that can be used with several processors, while “MIPS” by itself refers to 32-bit mode unless otherwise stated. See the MIPS manufacturer’s documentation for additional information. MIPS16 objects link interchangeably with MIPS (32) objects; the compiler and linker generate the required instructions to transfer control between the 16- and 32-bit modes. See also [5.4.98 Pass Floating Point Parameters to MIPS16 Functions \(-Xmips16-hw-fp-call\)](#), p. 105, to pass floating point parameters from MIPS (32) modules to MIPS16 modules.

10

Optimization

10.1	Introduction	199
10.2	Optimization Hints	200
10.3	Cross-Module Optimization	206
10.4	Target-Independent Optimizations	208
10.5	Target-Dependent Optimizations	221
10.6	Example of Optimizations	223

10.1 Introduction

Optimizations have two purposes: to improve execution speed and to reduce the size of the compiled program.

Most optimizations are activated by the **-O** option ([5.3.18 Optimize Code \(-O\)](#), p.46). A few are activated by the **-XO** option ([5.4.105 Enable Extra Optimizations \(-XO\)](#), p.108). See also the discussion of optimization and debugging under the **-g** option ([5.3.9 Generate Symbolic Debugger Information \(-g\)](#), p.43).

10.2 Optimization Hints

The compilers attempt to produce code as compact and efficient as possible. However, some information about characteristics of the program only the user has. This section describes various ways the user can enable the compiler to generate the most optimal code.

What to Do From the Command Line

The usual purpose of optimizations is to make a program run as fast as possible. Most optimizations also make the program smaller; however the following optimizations will increase program size, exchanging space for speed:

- *Inlining*: replaces a function call with its actual code.
- *Loop unrolling*: expands a loop with several copies of the loop body.

When a program expands it may have a negative effect on speed due to increased cache-miss rate and extra paging in systems with virtual memory.

Because the compiler does not have enough information to balance these concerns, several options are provided to let the user control the above mentioned optimizations:

-Xinline=*n*

Controls the maximum size of functions to be considered for inlining. *n* is the number of internal nodes. See [5.4.74 Inline Functions with Fewer Than *n* Nodes \(-Xinline=*n*\)](#), p.93, for more details and [5.4.154 Control Loop Unrolling \(-Xunroll=*n*, -Xunroll-size=*n*\)](#), p.125, for a definition of internal nodes. Other options that control inlining include **-Xexplicit-inline-factor** ([5.4.51 Control Inlining Expansion \(-Xexplicit-inline-factor\)](#), p.84) and **-Xinline-explicit-force** ([5.4.75 Allow Inlining of Recursive Function Calls \(-Xinline-explicit-force\)](#), p.94).

-Xunroll-size=*n*

Controls the maximum size of a loop body to be unrolled. See also [5.4.154 Control Loop Unrolling \(-Xunroll=*n*, -Xunroll-size=*n*\)](#), p.125, for more details.

There is also a trade-off between optimization and compilation speed. More optimization requires more compile-time. The amount of main memory is also a factor. In order to execute interprocedural optimizations (optimizations across functions) the compiler keeps internal structures of every function in main memory. This can slow compilation if not enough physical memory is available and the process has to swap pages to disk. The **-Xparse-size=*m*** option, where *m* is

memory space in KByte, is set to suggest to the compiler how much memory it should use for this optimization. (See [5.4.109 Specify Optimization Buffer Size \(-Xparse-size\)](#), p.109.)

With all the different optimization options, it is sometimes difficult to decide which options will produce the best result. The **-Xblock-count** and **-Xfeedback** options ([5.4.11 Insert Profiling Code \(-Xblock-count\)](#), p.68, [5.4.54 Optimize Using Profile Data \(-Xfeedback=file\)](#), p.85), which produce and use profiling information, provide powerful mechanisms to help with this. With profiling information available, the compiler can make most optimization decisions by itself.

The following guidelines summarize which optimizations to use in varying situations. The options used are found in [5. Invoking the Compiler](#).

- If execution speed is not important, but compilation speed is crucial (for example while developing the program), do not use any optimizations at all:

```
dplus file.cpp -o file
```

- The **-O** option is a good compromise between compilation time and execution speed:

```
dplus -O file.cpp -o file
```

- To produce highly optimized code, without using the profiling feature, use the **-XO** option:

```
dplus -XO file.cpp -o file
```

- To obtain the fastest code possible, use the profiling features referred to above.

- To produce the most compact code, use the **-Xsize-opt** option:

```
dplus -XO -Xsize-opt file.cpp -o file
```

- If the compiler complains about “end of memory” (usually only on systems without virtual memory), try to recompile without using **-O**.
- When compiling large files on a host system with large memory, increase the amount of memory the compiler can use to retain functions. This allows the compiler to perform more interprocedural optimizations. Use the following option to increase the available memory to 8,000 KByte:

```
-Xparse-size=8000
```

- If speed is very important and the resulting code is small compared to the cache size of the target system, increase the values controlling inlining and loop-unrolling:

```
-XO -Xinline=80 -Xunroll-size=80
```

- When it is difficult to change scripts and makefiles to add an option, set the environment variable **DFLAGS**. Examples:

```
DFLAGS="-XO -Xparse-size=8000 -Xinline=50"          (UNIX)
export DFLAGS
set DFLAGS=-XO -Xparse-size=8000 -Xinline=50         (Windows)
```

- If possible, disable exceptions and run-time type information (**-Xexceptions-off**, **-Xrtti-off**). This can reduce code size significantly.

What to Do With Programs

The following list describes coding techniques which will help the compiler produce optimized code.

- Use local variables. The compiler can keep these variables in registers for longer periods than global and static variables, since it can trace all possible uses of local variables.
- Use plain **int** variables when size does not matter. Local variables of shorter types must often be sign-extended on specific architectures before compares, etc.
- Use the **unsigned** keyword for variables known to be positive.
- In a structure, put larger members first. This minimizes padding between members, saving space, and ensures optimal alignment, saving both space and time. For example, change:

```
struct _pack {
    char    flag;
    int     number;
    char    version;
    int     op;
}
```

to

```
struct good_pack {
    int     number;
    int     op;
    char    flag;
    char    version;
}
```


- For target architectures which include a cache, declare variables which are frequently used together, near each other to reduce cache misses. For example, change:

```
struct bad {
    int          type;
    ...
    struct bad   *next;
};
```

to

```
struct good {
    int          type;
    struct good  *next;
    ...
};
```

Then both **type** and **next** will likely be in the cache together in constructs such as:

```
while (p->type != 0) {
    p = p->next;
}
```

- Allocate variables to the small data and small **const** areas. See the descriptions of the **-Xsmall-data** and **-Xsmall-const** options and the description of **#pragma section**, all in [14. Locating Code and Data, Addressing, Access](#).
- Use the **const** keyword to help the optimizer find common sub-expressions. For example, ***p** can be kept in a register in the following:

```
void func(const int *p) {
    f1(*p);
    f2(*p);
}
```

- Use the **static** keyword on functions and module-level variables that are not used by any other file. Optimization can be much more effective if it is known that no other module is using a function or variable. Example:

```
static int si;

void func(int *p) {
    int i;
    int j;

    i = si;
    *p = 0;
    j = si;
    ...
}
```

The compiler knows that ***p = 0** does not modify variable **si** and so can order the assignments optimally.

- Use the **volatile** keyword only when necessary because it disables many optimizations.
- Avoid taking the address of variables. When the address of a variable is taken, the compiler usually assumes that the variable is modified whenever a function is called or a value is stored through a pointer. Also, such variables cannot be assigned to registers. Use function return values instead of passing addresses.

Example: change

```
int func (int var) {  
    far_away1(&var);  
    far_away2(var);  
    return var;  
}
```

to

```
int func (int var) {  
    var = new_far_away1(var);  
    far_away2(var);  
    return var;  
}
```

- Use the **#pragma inline** directive and the **inline** keyword for small, frequently used functions. **inline** eliminates call overhead for small functions and increases scheduling opportunities.
- Use the **#pragma no_alias** directive to inform the compiler about aliases in time critical loops. Example:

```
void add(double d[100][100], double s1[100], double s2[100])  
#pragma no_alias *d, *s1, *s2  
{  
    int i;  
    int j;  
  
    for (i = 0; i < 100; i++) {  
        for (j = 0; j < 100; j++) {  
            d[i][j] += s1[i] * s2[i];  
        }  
    }  
}
```

Because it is known that there is no overlap between **d** and each of **s1** and **s2**, the expression **s1[i]*s2[i]** can be moved outside of the innermost loop.

- Use **#pragma no_side_effects** and **#pragma no_return** on appropriate functions. Example:

```
comm.h:
#pragma no_side_effects busy_wait(1)
#pragma no_return comm_err

file.c:
#include "comm.h"
    a = *p;
    busy_wait(&sem);
    if (error) {
        ...
        comm_err("fatal error");
    }
    b = *p;
```

Because **busy_wait** is known to have no side effects and **comm_err** is known not to return, the compiler can assign ***p** to a register.

- Use **asm** macros rather than separate assembly functions because it eliminates call overhead. See [7. Embedding Assembly Code](#).
- Avoid **setjmp()** and **longjmp()**. When the compiler finds **setjmp()** in a function, a number of optimizations are turned off. For example, when the **-Xdialect-pcc** option is specified, no variables declared without the **register** keyword will be allocated to registers. This is done to be compatible with older compilers that always allocate variables not declared **register** on the stack, which means that if they are changed between the call to **setjmp()** and the call to **longjmp()**, they will keep the changed value after the **longjmp()**. If the variables were allocated to registers, they would have the values valid at the time of the **setjmp()**.

The following example demonstrates this difference:

```
#include <setjmp.h>
static jmp_buf label;

f1() {
    int i = 0;

    if (setjmp(label) != 0) {
        /* returned from a longjmp() */
        if (i == 0) {
            printf("i has first value: allocated to "
                  "register.\n");
        } else {
            printf("i has new value: allocated on stack\n");
        }
    }
    return;
}
```

```
        /* setjmp() returned 0: does not come from a longjmp*/  
        i = 1;  
        f2();  
    }  
  
    f2() {  
        /* jump to the setjmp call, returning 1 */  
        longjmp(label, 1);  
    }
```

Note that both ways are valid according to ANSI.

- If possible, eliminate C++ exception-handling code (**try**, **catch**, or **throw**). This allows you to compile with exceptions disabled (**-Xexceptions-off**), which reduces stack space and increases execution speed.

10.3 Cross-Module Optimization

Cross-module optimization, controlled with the **-Xcmo-...** options (see [5.4.23 Enable Cross-module Optimization \(-Xcmo-...\)](#), p.72), allows the compiler to optimize calls between functions in different source files. This feature can improve execution efficiency but requires the developer to track intermodule dependencies with care.

Currently, function inlining is the only implemented cross-module optimization.

The compiler implements cross-module optimization by constructing a database of information about functions and variables. To use cross-module optimization, compile your project twice—first with **-Xcmo-gen** to create a database, then with **-Xcmo-use** to optimize using information from the database. You must specify a name and location for the database file. Examples:

```
dcc -Xcmo-gen=C:\projects\MyProject\MyProject.db main.c      (Windows)  
dcc -Xcmo-use=C:\projects\MyProject\MyProject.db main.c
```

```
dcc -Xcmo-gen=/projects/MyProject/MyProject.db main.c      (UNIX)  
dcc -Xcmo-use=/projects/MyProject/MyProject.db main.c
```

The **-Xcmo-gen** compiler pass is used only for building the database. All object files created by this pass should be regenerated during the next build.



NOTE: Do not use the **-Xcmo-...** options to compile a project that contains two or more source files (in different directories) with the same base name.

If there are functions that you do *not* want to have inlined across modules, you can specify them by adding **-Xcmo-exclude-inline** to the command line with **-Xcmo-use**. For example:

```
dcc -Xcmo-use=...\MyProject.db -Xcmo-exclude-inline=f1,f2 main.c
```

tells the compiler not to inline **f1** or **f2** across modules. Names of C++ functions must be given in mangled form (see [13.6 C++ Name Mangling](#), p.246); to find the mangled form of a function name, use the **ddump** utility (see [29. D-DUMP File Dumper](#)).

-Xcmo-verbose, combined with **-Xcmo-use** or **-Xcmo-gen**, outputs a list of inlined (or inlinable) functions.

Before using cross-module optimization, please read the following additional notes.

10

Database Location and Use

The database name should be specified with a full directory path. Otherwise, the compiler uses the current working directory, which could result in fragmented databases residing in multiple locations.

It is preferable to use a non-network directory for the database. Never share a database among compiler installations, even when building from the same source files.

Use With Other Optimizations and Build Options

The **-Xcmo-...** switches are affected by other build options. In general, you should turn compiler optimizations *off* when building with **-Xcmo-gen** and *on* when building with **-Xcmo-use**. More specifically:

- To save time, disable optimizations and skip the linking step when building with **-Xcmo-gen**. (Executable output from the **-Xcmo-gen** compilation is ultimately discarded.)
- **-Xcmo-use** is ignored unless other optimizations are enabled (**-O** or **-XO**).
- Optimization-related compiler switches, including **-Xinline**, apply to cross-module optimization as well. If **-Xinline** is set to a very low value, cross-module optimization is unlikely to be useful. (**-Xinline** has no effect on the construction of the database itself.)

- If **-Xinline** is set to a high value, cross-module optimization can result in large executables and long compilation time. You may want to compile specific source files with cross-module optimization disabled.

Database Maintenance

Every time you compile with **-Xcmo-use**, the compiler updates the existing database by adding to the list of functions that are candidates for inlining—but *it does not perform dependency analysis*. Hence the database can easily become unsynchronized after repeated incremental builds. (This occurs, for example, when a source file containing a called function has changed, but the source file containing the calling function is unchanged.) It is important to track dependencies and recompile periodically with **-Xcmo-gen**. When in doubt, *manually delete* the database file before recompiling.

After moving or copying files, always delete the database file and regenerate it with **-Xcmo-gen**.

Special Name Mangling

To enable cross-module optimization, the compiler assigns a unique mangled name to each function and static variable. Mangled function names begin with **__STF** followed by a line number, function name, mangled filename, and other information. Mangled variable names begin with **__STV** followed by a line number, variable name, mangled filename, and other information. The demangling utility does not demangle these names.

10.4 Target-Independent Optimizations

The following optimizations are performed by the compiler on all targets.

The numbers in parentheses after the name of each optimization are mask bits for the **-Xkill-opt** option. Optimizations can be selectively disabled by specifying **-Xkill-opt=mask**, where *mask* can be given in hex (e.g. **-Xkill-opt=0x12**). Multiple optimizations can be disabled by OR-ing their bits; undefined mask bits are ignored. **-Xkill-opt=0xffffffff** has a similar (but not exactly the same) effect as not using the **-O** option at all.



NOTE: Regardless of which options are specified, there is no way (short of disabling optimizations completely) to guarantee that the compiler will or will not perform a specific optimization on a given piece of code.

-Xkill-opt is largely intended for internal WindRiver use. Its usage is strongly discouraged, and it should be used *only* on the advice of Wind River Customer Support.

Various Optimizations (0x1)

Disables various optimizations. These include:

- several registerization optimizations designed to reduce read and write operations, including: registerization of memory references across loops; registerization of function memory references; and registerization of loop-invariant loads
- loop unswitching (loop splitting)
- tail merging (merges common code out of **if/then/else** and **switch** statements)
- optimization for the **__builtin_expect** intrinsic function (See [6.6 Intrinsic Functions](#), p.158)

Tail Recursion (0x2)

This optimization replaces calls to the current function, if located at the end of the function, with a branch. Example:

```
NODEP find(NODEP ptr, int value)
{
    if (ptr == NULL) return NULL;
    if (value < ptr->val) {
        ptr = find(ptr->left,value);
    } else if (value > ptr->val) {
        ptr = find(ptr->right,value);
    }
    return ptr;
}
```

will be approximately translated to:

```
NODEP find(NODEP ptr, int value)
{
  top:
    if (ptr == NULL) return NULL;
    if (value < ptr->val) {
      ptr = ptr->left;
      goto top;
    } else if (value > ptr->val) {
      ptr = ptr->right;
      goto top;
    }
    return ptr;
}
```

Inlining (0x4)

Inlining optimization replaces calls to functions with fewer than the number of nodes set by **-Xinline** with the actual code from the same functions to avoid call-overhead and generate more opportunities for further optimizations. See [5.4.154 Control Loop Unrolling \(-Xunroll=n, -Xunroll-size=n\)](#), p.125, for the definition of *node*; assembly files saved with **-S** show the number of nodes for each function.

To be inlined, the called function must be in the same file as the calling function.

Inlining can be triggered in three ways:

1. In C++ use the **inline** keyword when defining the function, and in C use the **__inline__** keyword or the **inline** keyword if enabled by **-Xkeywords=4**. Functions inlined by the use of keywords are local (**static**) by default, but can be made public with **extern**. See [__inline__ and inline Keywords](#), p.149.
2. Use the **#pragma inline function-name** directive. The **#pragma** directive can be used in C++ code to avoid the local **static** linkage forced by the **__inline__** or **inline** keywords. See [inline Pragma](#), p.139.
3. Use option **-XO** to automatically inline functions of up to the number of nodes set by **-Xinline** (see [5.4.74 Inline Functions with Fewer Than n Nodes \(-Xinline=n\)](#), p.93). Option **-XO** sets this value to 40 nodes by default.

In addition to **-Xinline**, the options **-Xexplicit-inline-factor**, **-Xinline-explicit-force**, and **-Xcmo-...** also control inlining of functions.



NOTE: Code must be optimized by use of the **-XO** or **-O** option for inlining to occur.

Example:


```
#pragma inline swap
swap(int *p1, int *p2)
{
    int tmp;
    tmp = *p1;
    *p1 = *p2;
    *p2 = tmp;
}

func( {
    ...
    swap(&i, &j);
    ...
}
```

will be translated to:

```
func() {
    ...
    {
        tmp = i;
        i = j;
        j = tmp;
    }
    ...
}
```

10

Argument Address Optimization (0x8)

If the address of a local variable is used only when passing it to a function which does not store that address, the variable can be allocated to a register and only temporarily placed on the stack during the call to the function. Example:

```
extern int x;

int check(int *x)
{
    if ( *x > 569) {
        return(999);
    } else {
        return(100);
    }
}

int foo(int y)
{
    int i, j;           // can be placed in registers
```

```
    i = x * y;
    j = check(&i);
    if (j > i) {
        i = check(&j);
    } else {
        i = 365;
    }
    return j*i;
}
```

Structure Members to Registers (0x10)

This optimization places members of local structures and unions in registers whenever it is possible. It also optimizes assignments to structure and union members. Example:

```
int fpp(int);
int bar(int, int);
struct x{
    int a;
    int b;
};
void goo();

foo()
{
    struct x X;

    X.a = fpp(3);
    X.b = fpp(5);

    if (bar(X.a, X.b)) {
        goo();
    }
}
```

If the optimization is enabled, the compiler attempts place **X.a** and **X.b** in registers rather than allocating memory for **X**.

Assignment Optimization (0x80)

Multiple increments of the same variable are merged:

<pre>p++; p[0] = 0; p++; p[1] = 1;</pre>	<pre>-> p[1] = 0; p[2] = 1; p += 2;</pre>
--	--

Pre- and post-increment/decrement addressing modes are used *when available on the target processor*:

```

p++;                ->      *++p = 0;
p[0] = 0;
p++;
p[1] = 1;           *++p = 1;

```

Increments are moved from the end of a loop to the beginning in order to use incrementing addressing modes *when available on the target processor*:

```

while(*s++) ;       ->      s--; while(*++s) ;

```

Tail Call Optimization (0x100)

In the following case, the call to **printf** is converted to a branch to **printf** and the stack frame is undone before the branch.

```

int _myfunc(char *fmt, int val)
{
    return printf(fmt, val);
}

```

This optimization is performed even if no **-O** or **-XO** switch is used.



NOTE: In earlier releases (prior to version 4.3), the 0x100 mask was used to disable simple branch optimization.

Common Tail Optimization (0x200)

Different paths with equal tails are rewritten. This optimization is most effective when many **case** statements end the same way:

```

void bar(), foo(), gfoo(), hfoo();

lucky()
{
    switch (a) {
    case 1:
        foo(); bar();
        break;
    case 2:
        gfoo(); bar();
        break;
    case 3:
        hfoo(); bar();
        break;
    case 4:

```

```
        foo(); bar();  
        break;  
    default:  
        bar();  
        break;  
    }  
}
```

The call to **bar()** is removed from the individual **case** statements and executed separately at the end of the **switch** statement.

This optimization cannot be disabled unless **reorder** is disabled. To disable **reorder**, use **-W1** with no argument (see [5.3.31 Substitute Program or File for Default \(-W xfile\)](#), p.50).

Variable Live Range Optimization (0x400)

Variables with more than one live range are rewritten to make it possible to allocate them to different registers/stack locations:

```
m(int i, int j) {          ->  m(int i$1, int j) {  
    int k = f(i,j);          int k = f(i$1,j);  
    i = f(k,j);              i$2 = f(k,j);  
    return i+k;              return i$2+k;  
}                             }
```

In the above example, only two registers are needed to hold the three variables after split optimization, since **i\$1** and **k** can share one register and **i\$2** and **j** can share the other one.

Constant and Variable Propagation (0x800)

Constants and variables assigned to a variable are propagated to later references of that variable. Lifetime analysis might later remove the variable:

```
a = 1; b = 2;              ->  a = 1; b = 2;  
...; k(a+b);               ...; k(1+2);
```

Complex Branch Optimization (0x1000)

Branches and code that falls through to conditional branches where the outcome can be computed are rewritten. This typically occurs after a loop with multiple exits.

```
extern int x;
extern int bar(int x);

int foo(int a, int b)
{
    int i, y, z = 0;

    x = bar(a);
    if (x > 44)
    {
        y = a + b;
        if (x < 22) { // always false when evaluated
            z = a * 365; // never executed
        }
    }
    return (x + y + z);
}
```

10

Loop strength reduction (0x2000)

Multiplications with constants in loops are rewritten to use additions. Instead of multiplying *i* with the size every time, the size is added to a pointer (*arp++* in the example below). The array reference

```
ar[i]
```

is actually treated as

```
*(ar_type *) ((char *)ar + i*sizeof(ar[0]))
```

Example:

```
for (i=0; i<10; i++){ -> arp = ar;
    sum +=var[i];        for (i=0; i<10; i++){
                        sum += *arp; arp++;
    }                  }
}
```

Loop Count-Down Optimization (0x4000)

Loop variable increments are reversed to decrement towards zero:

```
for (i=0; i<10; i++){ -> for (i=10; i>0; i--){
    sum += *arp; arp++;    sum += *arp; arp++;
}                          }
```

Also, empty loops are removed.

Loop Unrolling (0x8000)

Small loops are unrolled to reduce the loop overhead and increase opportunities for rescheduling. **-Xunroll** option sets the number of times the loop should be unrolled and defines the maximum size of loops allowed to be unrolled (see [5.4.154 Control Loop Unrolling \(-Xunroll=n, -Xunroll-size=n\)](#), p.125 for both options).

Note that some sufficiently small loops may be unrolled more than *n* times if total code size and speed is better. Example:

```
for (i=10; i>0; i--){ -> for (i=10; i>0; i-=2){
    sum += *arp;          sum += *arp;
    arp++;                sum += *(arp+1);
                          arp += 2;
}                          }
```

Global Common Subexpression Elimination (0x10000)

Subexpressions, once computed, are held in registers and not re-computed the next time the subexpressions occur. Memory references are also held in registers.

```
if (p->op == A)          -> tmp = p->op;
    ...                  if (tmp == A)
else if (p->op == B)      ...
                          else if (tmp == B)
```

Undefined variable propagation (0x20000)

Expressions containing undefined variables are removed.

```
int bar(int);

int foo()
{
    int x, a, b, y;

    x = 365 * (a + b);
    y = bar(x);
    return y;
}
```

No memory is allocated for **a** or **b**. The operation **a + b** is not performed.

Unused assignment deletion (0x40000)

Assignments to variables that are not used are removed.

```
int foo(int x, int y)
{
    int a, b;

    a = x + 365;    // removed
    b = x - y;
    return b;
}
```

This optimization cannot be disabled unless **reorder** is disabled. To disable **reorder**, use **-W1** with no argument (see [5.3.31 Substitute Program or File for Default \(-W xfile\)](#), p.50).

Minor Transformations to Simplify Code Generation (0x80000)

Some minor transformations are performed to ease recognition in the code generator:

```
if (a) return 1;    ->    return a ? 1 : 0;
return 0;
```

Register Coloring (0x200000)

This optimization locates variables that can share a register.

```
extern int a[100], b[100];

foo()
{
    int i, a, j, b;

    for (i = 0; i < 10; i++) {
        a += bar(i) + i;
    }

    for (j = 0; j < 80; j-=6) {
        b += bar(i) - i;
    }
}
```

a and **j** use the same register.

Interprocedural Optimizations (0x400000)

Registers are allocated across functions. Inlining and argument address optimizations are performed.

```
static int foo(int a, int b)
{
    return ((a > b)? a: b);
}

bar(int i, int j)
{
    printf("larger value = %d\n", foo(i,j));
}
```

The **foo** function is inlined into **bar**.

Remove Entry and Exit Code (0x800000)

The prolog and epilog code at the beginning and end of a function which sets up the stack-frame is not generated whenever possible.

Use Scratch Registers for Variables (0x1000000)

When allocating registers, the compiler attempts to put as many variables as possible in scratch registers (registers not preserved by the function).



NOTE: When this optimization is disabled, the compiler may still use registers to store variables. To control register use, use **#pragma global_register** ([*global_register Pragma*](#), p.138).

Extend Optimization (0x2000000)

Sometimes the compiler must generate many **extend** instructions to extend smaller integers to a larger one. The compiler attempts to avoid this by changing the type of the variable. For example:

```
int c;
char *s;
c = *s;
if (c == 2) c = 0;
```


On some targets, the `c = *s` statement has an **extend** instruction. By changing **int** `c` to **char** `c` this instruction is avoided.

Loop Statics Optimization (0x4000000)

Memory references that are updated inside loops are allocated to registers.

Example:

```
int ar[100], sum;

sum_ar() {
    int i;

    sum = 0;
    for (i = 0; i < 100; i++) {
        sum += ar[i];
    }
}
```

will be translated to:

```
sum_ar() {
    int i;
    register int tmp_sum

    tmp_sum = 0;
    for (i = 0; i < 100; i++) {
        tmp_sum += ar[i];
    }
    sum = tmp_sum;
}
```

Loop Invariant Code Motion (0x8000000)

Expressions within loops that are not changed between iterations are moved outside the loop.

```
int sum;
int c[10];
int bar(int);
foo(int a, int b)
{
    int i;

    for(i = 0; i < 10; i++) {
        sum += a * b;
        c[i] = bar(i);
    }
}
```

The operation **a*b** is performed outside of the loop statement.

Static Function Optimization (0x20000000)

A static function that does not have its address taken can be optimized in various ways; for example, if the function is not used, it can be removed.

Live-Variable Analysis (0x40000000)

Live variable analysis is done for global and static variables. This means that global and static variables can be allocated into registers and any stores into them can be postponed until the last store in a live range.

Local Data Area Optimization (0x80000000)

This optimization creates a Local Data Area (LDA) into which variables may be placed for fast, efficient base-offset addressing. See [14.4 Local Data Area \(-Xlocal-data-area\)](#), p.270 for details.

This optimization can be disabled by setting **-Xlocal-data-area=0** or restricted to static variables by setting **-Xlocal-data-area-static-only**.

Feedback Optimization

By utilizing profiling information from an actual execution of the target program, the optimizer can make more intelligent decisions in various cases, including the following:

- Register allocation can be based on the real number of times a variable is used.
- **if-else** clauses are swapped if first part is executed more often.
- Inlining and loop unrolling is not done on code seldom executed.
- More inlining and loop unrolling is done on code often executed.
- Partial inlining is done on functions beginning with **if (expr) return;**
- Branch prediction is performed.

The **-Xblock-count** and **-Xfeedback** options are available to collect and use profiling data. See [15.12 Profiling in an Embedded Environment](#), p.296.

10.5 Target-Dependent Optimizations

The following target-dependent optimizations are specific to the MIPS family and are done by the **reorder** program.

The numbers in parentheses after the name of each optimization are mask bits for the **-Xkill-reorder** option. Optimizations can be selectively disabled by specifying **-Xkill-reorder=mask**, where *mask* can be given in hex (e.g. **-Xkill-reorder=0x9**). Multiple optimizations can be disabled by OR-ing their bits; undefined mask bits are ignored.



NOTE: Regardless of which options are specified, there is no way (short of disabling optimizations completely) to guarantee that the compiler will or will not perform a specific optimization on a given piece of code.

-Xkill-reorder is largely intended for internal WindRiver use. Its usage is strongly discouraged, and it should be used *only* on the advice of Wind River Customer Support.



NOTE: The **reorder** program, which does target-dependent optimization, parses the assembler output of the compiler. Because this output is assumed to be correct, **reorder** may abort on assembly code errors, including errors in hand-written **asm** macros and strings. If an error in **reorder** appears to be persistent, confirm that any handwritten assembly code is correct, perhaps by removing it temporarily, before reporting the difficulty to Customer Support.

Basic Reordering (0x1)

Instructions are reorganized to avoid stalls in the processor pipeline. For example, when loading a value from memory, the processor has to wait for one cycle before the next instruction uses the destination register. The compiler rearranges the code so the processor can execute at full speed.

General Peephole Optimization (0x8)

Peephole optimization makes final improvements within basic blocks, especially to remove inefficiencies caused by interactions among other optimizations which would be uneconomical to detect otherwise. Examples:

- A branch to a single instruction followed by another branch is rewritten by inlining the instruction at the current address.
- Certain instructions which do not change any register are removed.
- Elimination of redundant load and stores.
- Register coalescing to eliminate moves.



NOTE: Disabling general peephole optimization implicitly disables finer-grained peephole optimizations listed below, including peephole reaching analysis and additional loop optimizations.

Peephole Reaching Analysis (0x20)

Extends peephole optimization across basic blocks. See [General Peephole Optimization \(0x8\)](#), p.222 for details of peephole optimization.

Additional Loop Optimizations (0x400)

Hoist loop invariant instructions. Eliminate redundant loads at the top of a loop that are also done at the bottom of a loop.

Delay Slot Optimization (0x1000)

Look for opportunities to use delay slot instructions. If this optimization is disabled, the assembler fills delay slots with nop instructions. The optimization changes the **.set reorder** directive to **.set noreorder** because the compiler is responsible for filling delay slots. See [.set option](#), p.357 for additional details. It also performs a simple scheduling optimization that attempts to optimize load instructions.

10.6 Example of Optimizations

The following C program demonstrates several of the optimizations available in the compiler and how they interact with each other.

The numbers in parentheses are used to identify the optimizations in the generated code for the example, shown following the table.

The target processor is MIPS. The optimizations shown are:

- (1) remove entry and exit code
- (2) use scratch registers for variables
- (3) unused assignment deletion
- (4) complex branch optimization
- (5) peephole optimization
- (6) loop strength reduction
- (7) loop count-down optimization
- (8) global common subexpression elimination
- (9) inlining of functions
- (10) constant and variable propagation
- (11) basic reordering optimization

bubble.c implements sorting of an array in ascending order.

```
swap2(int *ip) /* swap two ints */
{
    int tmp = ip[0];
    ip[0] = ip[1];
    ip[1] = tmp;
}

/* "bubble" sorts the array pointed to by "base", containing
   "count" elements, and returns the number of tests done */

int bubble(int *base, int count)
{
    int change = 1;
    int i;
    int test_count = 0;
```

```
while (change) {
    change = 0;
    count--;
    for (i = 0; i < count; i++) {
        test_count++;
        if (base[i] > base[i+1]) {
            swap2(&base[i]);
            change = 1;
        }
    }
}
return test_count;
}
```

When **bubble.c** is compiled with the following line,

```
dcc -tMIPSEN -S -Xpass-source -XO bubble.c
```

the file **bubble.s** is generated as shown below (option **-Xpass-source** conveniently causes the source to be included intermixed as comments with the generated assembly code in **bubble.s**).

Only the **bubble()** function is shown; code will also be present for the **swap()** function in **bubble.s** because it is not **static** and may therefore be called from another module. Comments have been added below to explain the optimizations performed.

Table 10-1 Illustration of Optimizations for MIPS

C Code	Generated Assembly Code	Explanation
	bubble:	Start of function bubble . No entry code is necessary (1) since all variables are put in scratch registers (2) and the return address \$31 is not used. The stack pointer is not used and does not need to be adjusted. The assignment change = 1 is eliminated (3) since it is used only in the first while test, which is known to be true and removed (4)
{ int change = 1; int i;		
 int test_count = 0;	move \$2,\$0	test_count = 0;
	.L4:	Top of while (change) loop.
while (change) { change = 0;	move \$3,\$0	change = 0;
count--;	addiu \$5,\$5,-1	count--;

Table 10-1 Illustration of Optimizations for MIPS (cont'd)

C Code	Generated Assembly Code		Explanation
for (i = 0; i < count ; i ++) {	blez	\$5, .L16 nop	Top test of for loop. Loop strength reduction (6) has replaced all references to base[i] with a created pointer, \$\$2 , placed in register \$9 . Since no more references are made to i , loop count-down optimization (7) decrements i from count to 0.
	move	\$9, \$4	Temporary pointer \$\$2 is set to base .
	move	\$8, \$5	i is set to count .
	.L8:		Top label of for loop.
	lw	\$6, 0(\$9)	\$\$2[0] is loaded to \$6 . Since this value is used later on, it is remembered in \$\$4 (8).
	lw	\$7, 4(\$9)	\$\$2[1] is remembered in \$\$3 (8).
test_count ++;	addiu	\$2, \$2, 1	test_count++ is moved here where the compiler would otherwise place a nop since the next instruction is using \$7 (11).
if (base[i] > base[i+1]) {	slt	\$1, \$7, \$6	if . See if a swap must take place.
swap2 ...	beq nop	\$1, \$0, .L7	If not branch to .L7 . The function swap2 is inlined (9). Variable propagation (10) removes the use of variables tmp and ip .
	sw	\$7, 0(\$9)	ip[0] = ip[1] (= \$3);
	sw	\$6, 4(\$9)	ip[1] = tmp (= \$4);
change = 1;	addiu	\$3, \$0, 1	change = 1;
}	.L7:		
	addiu	\$9, \$9, 4	\$\$2++ (6)

Table 10-1 Illustration of Optimizations for MIPS (cont'd)

C Code	Generated Assembly Code		Explanation
	addiu	\$8,\$8,-1	i is decremented (7).
}	bne nop	\$8,\$0,.L8	i tested with 0 (5). Bottom of for .
}	bne nop	\$3,\$0,.L4	Bottom test of while (change) .
return test_count;	.L16:		Now return without the need for any exit code (1).
	addi	r3,r6,0	Put the return value in r3 .
}	jr nop	\$31	Return value already in \$2 (2).
	# Allocations for bubble		Variable allocations are always given in comments to ease debugging.
	.data		
	#	\$4 base	Function parameters are kept in their original registers (2).
	#	\$5 count	
	#	\$3 change	Other variables are put in scratch registers to minimize entry/exit code
	#	\$2 test_count	
	#	\$8 i	
	#	\$9 \$\$2	Loop strength reduction (6) variable.
	#	\$7 \$\$3	Global common subexpression elimination (8) for variable base[i+1] .
	#	\$6 \$\$4	Global common subexpression elimination (8) for variable base[i] .
	#	not allocated tmp	Variables deleted by variable propagation (10).
	#	not allocated ip	

11

The Lint Facility

11.1 Introduction 229

11.2 Examples 230

11.1 Introduction

The lint facility is a powerful tool to find common C programming mistakes at compile time. (For C++, see **-Xsyntax-warning-on** on [5.4.149 Disable Certain Syntax Warnings \(-Xsyntax-warning-...\)](#), p.123.) Lint has the following features:

- It is activated through command-line option **-Xlint**.
- **-Xlint** does all checking while compiling. Since it does not interfere with optimizations, it can always be enabled.
- **-Xlint** gives warnings when a suspicious construct is encountered. To stop the compilation after a small number of warnings, use the **-Xstop-on-warning** option to treat all warnings like errors.
- Each individual check that **-Xlint** performs can be turned off by using a bit mask. See the **-Xlint** option on [5.4.87 Generate Warnings On Suspicious/Non-portable Code \(-Xlint=mask\)](#), p.98 for details.
- **-Xlint** can be used with the **-Xforce-prototypes** option to warn of a function used before its prototype.

The comments in the following C program demonstrate probable defects that will be detected by using **-Xlint** and **-Xforce-prototypes**. There are three types of errors marked by different comment forms:

- Comments containing the form “(0xXX)” are on lines with suspicious constructs detected by **-Xlint**; the hex value is the **-Xlint** bit mask which disables the test.
- Comments of the form */* warning: ... */* and */* error: ... */* are used on lines for which the compiler reports a warning or error with or without **-Xlint**.
- Two lines are a result of option **-Xforce-prototypes** as noted.

Actual warnings from the compiler follow the code. Note that warnings are not necessarily in line number order because the compiler detects the errors during different internal passes.

11.2 Examples

Example 11-1 Program for -Xlint Demonstration

```
1: void f1(int);
2: void f2();
3:                                     /* (-Xlint mask bit disables) */
4: static int f4(int i)                /* function never used      (0x10) */
5: {
6:     if (i == 0)
7:         return;                    /* missing return expression (0x20) */
8:     return i+4;
9: }
10:
11: static int f5(int i);               /* error: function not found */
12:
13: static int i1;                      /* variable never used      (0x10) */
14:
15: int m(char j, int z1)               /* parameter never used     (0x10) */
16: {
17:     int i, int4;
18:     char c1;
19:     unsigned u = 1;                 /* variable set but not used (0x40) */
20:     int z2;                         /* variable never used      (0x10) */
21:
22:     c1 = int4;                      /* narrowing type conversion (0x100) */
23:
24:     if (j) {
25:         u = 4294967295;
```

```

26:         i = 0;
27:     } else {
28:         u = 4294967296;      /* warning: constant out of range      */
29:     }
30:     f1(i);                  /* variable might be used
31:                             before being set                      (0x02) */
32:     switch(i) {
33:         j = 2;              /* statement not reached      (0x80) */
34:         break;
35:
36:     case 0:                 /* -X force prototype, not lint, warns: */
37:         f2(i);              /*      function has no prototype      */
38:         f3(i);              /*      function not declared          */
39:         f5(i);
40:         break;

```

Example 11-2 -Xlint example output

```

"lint.c", line 7: warning (dcc:1521): missing return expression
"lint.c", line 22: warning (dcc:1643): narrowing or signed-to-unsigned type
      conversion found: int to unsigned char
"lint.c", line 28: warning (dcc:1243): constant out of range
"lint.c", line 37: warning (dcc:1500): function f2 has no prototype
"lint.c", line 38: warning (dcc:1500): function f3 has no prototype
"lint.c", line 42: warning (dcc:1583): overflow in constant expression
"lint.c", line 48: warning (dcc:1643): narrowing or signed-to-unsigned type
      conversion found: short to unsigned char
"lint.c", line 48: warning (dcc:1244): constant out of range (=)
"lint.c", line 47: warning (dcc:1251): label default not used
"lint.c", line 15: warning (dcc:1516): parameter z1 is never used
"lint.c", line 20: warning (dcc:1518): variable z2 is never used
"lint.c", line 33: warning (dcc:1522): statement not reached
"lint.c", line 50: warning (dcc:1522): statement not reached
"lint.c", line 62: warning (dcc:1521): missing return expression
"lint.c", line 19: warning (dcc:1604): Useless assignment to variable u.
      Assigned value not used.
"lint.c", line 22: warning (dcc:1604): Useless assignment to variable c1.
      Assigned value not used.
"lint.c", line 43: warning (dcc:1604): Useless assignment to variable j.
      Assigned value not used.

-----

"lint.c", line 22: warning (dcc:1608): variable int4 might be used before set
"lint.c", line 30: warning (dcc:1608): variable i might be used before set
"lint.c", line 54: warning (dcc:1606): condition is always true/false
"lint.c", line 58: warning (dcc:1606): condition is always true/false
"lint.c", line 4: warning (dcc:1517): function f4 is never used
"lint.c", line 11: error (dcc:1378): function f5 is not found
"lint.c", line 13: warning (dcc:1518): variable i1 is never used

```


12

Converting Existing Code

- 12.1 Introduction 233
- 12.2 Compilation Issues 233
- 12.3 Execution Issues 236
- 12.4 GNU Command-Line Options 238

12.1 Introduction

Compiling code originally developed for a different system or toolkit is usually straightforward, especially given the extensive compatibility options supported by the tools. This chapter gives pointers on working around the most common differences among systems and compilers.

12.2 Compilation Issues

The following list includes hints on what to do when a program fails to compile and you want to avoid changing the source code.

Look for Missing Standard Header Files

Different systems have different standard header files and the declarations within the header files may be different. Use the `-i file1=file2` option to change the name of a missing header file (see [5.3.13 Modify Header File Processing \(-i file1=file2\)](#), p.45 for details).

Older C Code

Look for Code Using Loose Typing Control

Some older C code is written for compilers that do not check the types of identifiers thoroughly. Use the `-Xmismatch-warning=2` option if you get error messages like “illegal types: ...”.

Look for Code Written for PCC

C code written for older UNIX compilers, such as PCC (Portable C Compiler), may not be compatible with the C standard. Use the `-Xdialect-pcc` option to enable some older language constructs. See [B. Compatibility Modes: ANSI, PCC, and K&R C](#) for more information.

Older Versions of the Compiler

C++ Coding Conventions

When exceptions and run-time type information are enabled (`-Xrtti` and `-Xexceptions`), the current compiler supports the C++ standard. Source code written for earlier versions of the Wind River (Diab) C++ compiler may require modification before it can be compiled with version 5.0 or later. We strongly recommend bringing all source code into compliance with the ANSI standard, but if time does not permit this, you can use the `-Xc++-old` option to invoke the older compiler.

C++ Libraries

Older (pre-5.0) versions of the compiler require different C++ libraries:

Default library	Old library
libd.a	libdold.a
libstl.a	libios.a, libcomplex.a
libstlstd.a	libios.a, libcomplex.a
libstlabr.a	(none)

See [32.2.1 Libraries Supplied](#), p.484 for more information.

When **-Xc++-old** is specified, the **dplus** driver automatically selects the appropriate standard C++ library—that is, it invokes **-ldold** instead of **-ld** to link **libdold.a** instead of **libd.a**. However, to link the older **iostream** and complex libraries, you must use the **-l** option (see [Specify Library or File to Process \(-lname, -l:filename\)](#), p.395) explicitly. If you use the **dcc** driver or invoke **dld** directly, all the old libraries must be specified explicitly. Examples:

```
dplus -Xc++-old hello.cpp
dplus -Xc++-old -lios -lcomplex hello.cpp
dcc -Xc++-old -ldold -lios -lcomplex hello.cpp
dld -YP,search-path -l:windiss/crt0.o hello.o
    -o hello -ldold -lios -lc version-path/conf/default.dld
```

In the first two examples, **-ldold** is invoked automatically because of **-Xc++-old**. In the second two examples, all the older C++ libraries must be specified explicitly.



NOTE: The **-Xc++-old** option cannot be used selectively within a project. If this option is used, all files must be compiled and linked with **-Xc++-old** to make the output binary-compatible. Selective use of **-Xc++-old** should produce linking errors; if it does not, the resulting executable is still likely to be unstable.

VxWorks developers should not use **-Xc++-old**.

To select the old compiler and libraries by default (eliminating the need for **-Xc++-old**), create a **user.conf** file in which **DCXXOLD** is set to **YES** and **ULFLAGS2** invokes the old libraries. For example:

```
# Select old compiler
DCXXOLD=YES
# Add these as default C++ libraries
ULFLAGS2="-ldold -liosold"
```

For more information, see [A. Configuration Files](#) and [2.4 Environment Variables](#), p.15.

Startup and Termination Code

If you are compiling legacy projects that used old-style `.init$nn` and `.fini$nn` code sections to invoke initialization and finalization functions, or if your code designates initialization and finalization functions with old-style `_STI_nn_` and `_STD_nn_` prefixes, you may get compiler or linker errors. The **-Xinit-section=2** option (see [5.4.71 Control Generation of Initialization and Finalization Sections \(-Xinit-section\)](#), p.92) allows you to continue using old-style startup and termination. The recommended practice, however, is to adopt the new method of creating startup and termination code—that is, using attributes to designate initialization and finalization functions, and `.ctors` and `.dtors` sections to invoke them at run-time. See [15.4.8 Run-time Initialization and Termination](#), p.284 for more information.

12.3 Execution Issues

The following list includes hints on what to do when a program fails to execute properly:

Compile With -Xlint

The **-Xlint** option enables compile-time checking that will detect many non-portable and suspicious programming constructs. See [11. The Lint Facility](#).

Recompile Without -O

If a program executes correctly when compiling without optimizations it does not necessarily mean something is wrong with the optimizer. Possible causes include:

- Use of memory references mapped to external hardware. Add the **volatile** keyword or compile using the **-Xmemory-is-volatile** option. Note: option **-Xmemory-is-volatile** disables some optimizations which may produce slower code.
- Use of uninitialized variables exposed by the optimizer.
- Use of expressions with undefined order of evaluation.

Uninitialized local variables will behave differently on dissimilar systems, depending how memory is initialized by the system. The compiler generates a

warning in many instances, but in certain cases it is impossible to detect these discrepancies at compile time.

Look for Code Allocating Dynamic Memory in Invalid Ways

The following invalid uses of **operator new()** or **malloc()** may go undetected on some systems:

- Assuming the allocated area is initialized with zeroes.
- Writing past the end of the allocated area.
- Freeing the same allocated area more than once.

Look for Expressions with Undefined Order of Execution

The evaluation order in expressions like `x + inc(&x)` is not well defined. Compilers may choose to call `inc(&x)` before or after evaluating the first `x`.

Look for NULL Pointer Dereferences

On some machines the expression `if (*p)` will work even if `p` is the zero pointer. Replace these expressions with a statement like `if (p != NULL && *p)`.

Look for Code Which Makes Assumptions About Implementation Specific Issues

Some programs make assumptions about the following implementation specific details:

- Alignment. Look for code like:


```
char *cp; double d; *(double *)cp = d;
```
- Size of data types.
- Byte ordering. See *__packed__ and packed Keywords*, p.151 on methods for accessing byte-swapped data.
- Floating point format.
- Sign of plain **chars** (those declared without either the **signed** or **unsigned** keyword). By default plain **char** is **signed**. To force a convention opposite to the default, see *5.4.20 Specify Sign of Plain Char (-Xchar-signed, -Xchar-unsigned)*, p.70.
- Sign of plain **int** bit-fields. bit-fields of type **int** are unsigned by default. Use the option **-Xbit-fields-signed** (C only) to be compatible with systems that treat plain **int** bit-fields as signed.

12.4 GNU Command-Line Options

By default, GCC option flags from the command line or makefile are parsed and, if possible, translated to equivalent Wind River options. Translations are determined by the tables in the file `gcc_parser.conf`. Use **-Xgcc-options-off** to disable this feature. **-Xgcc-options-verbose** outputs a list of translated options.

13

C++ Features and Compatibility

- 13.1 Introduction 239
- 13.2 Header Files 240
- 13.3 C++ Standard Libraries 240
- 13.4 Migration From C to C++ 241
- 13.5 Implementation-Specific C++ Features 243
- 13.6 C++ Name Mangling 246
- 13.7 Avoid `setjmp` and `longjmp` 249
- 13.8 Precompiled Headers 249

13.1 Introduction

This chapter describes compiler's implementation of the ANSI C++ standard. For more information, see the references cited in [Additional Documentation](#), p.8.

13.2 Header Files

The C++ compiler supports all ANSI-specified header files. Generally C++ uses the same header files as C (see [33. Header Files](#)), but the C++ standard imposes additional requirements on standard C header files and the declarations need to be adjusted to work in both environments. See [13.4 Migration From C to C++](#), p.241 below.

13.3 C++ Standard Libraries

The Wind River Compiler includes two versions of the standard C++ library. The complete version provides full support for exceptions. The abridged version does not provide exception-handling functions, the **type_info** class for RTTI support, or complete STL functionality.

The abridged version produces smaller, faster executables than the complete version, but the difference in size and speed varies from project to project. In general, the more an application uses the Standard Template Library, the greater the benefit from switching to the abridged version.

To use the standard library, include one of the following linker options in your project makefile:

Option	Library
-lstdl	Link to the complete standard library.
-lstdlstd	Same as -lstdl .
-lstdlabr	Link to the abridged standard library.

Projects that use any part of the standard library (including **iostreams**) must specify one of these linker options. For more information about library modules, see [32. Library Structure, Rebuilding](#).



NOTE: VxWorks developers should not specify any of the **-lstdl...** options listed above. To select a C++ library for VxWorks projects, see the documentation that accompanied your VxWorks development tools.

To use the abridged library, you must also specify the **-Xc++-abr** compiler option. For example:

```
dplus -Xc++-abr file1.cpp
```

-Xc++-abr automatically disables exception-handling (**-Xexceptions=off**).

For projects that use the *complete* C++ library, exception-handling must be enabled (**-Xexceptions**, the default). For projects that use the abridged version, exception-handling may be enabled as long as no exception propagates through the library.

While the compiler supports the **wchar_t** type, in most environments the libraries do not support locales, wide- or multibyte-character functions, or the **long double** type. (Some VxWorks files may include stubs for unsupported wide-character functions.) For user-mode (RTP) VxWorks projects, the libraries support wide-character functions.

Nonstandard Functions

The C++ libraries include definitions for certain traditional but nonstandard Standard Template Library and **iostream** functions. You can omit these definitions by editing the file *version_path/include/cpp/yvals.h*.

To omit the Standard Template Library extensions, change the definition of **_HAS_TRADITIONAL_STL** to:

```
#define _HAS_TRADITIONAL_STL 0
```

To omit the **iostream** extensions, change the definition of **_HAS_TRADITIONAL_IOSTREAMS** to:

```
#define _HAS_TRADITIONAL_IOSTREAMS 0
```

To see which functions are nonstandard, look for the **_HAS_TRADITIONAL_STL** and **_HAS_TRADITIONAL_IOSTREAMS** macros in the library header files.

13.4 Migration From C to C++

When C functions are converted to C++ or called from a C++ program, minor differences between the languages must be observed and the header files must be

written in C++ style. The standard predefined macro `__cplusplus` can be used with `#ifdef` directives in the program and header files for code that will be used in both C and C++ modules.

To call a C function from a C++ program, declare the prototype with **extern "C"** (to avoid name mangling) and declare the arguments in C++-compatible format. The **extern "C"** specification may apply to the single declaration that follows or to all declarations in a block. For example:

```
extern "C" int f (char c);

extern "C"
{
#include "my_c_lib.h"
}
```

For information about calling C++ functions from C modules, see [9.4 C++ Argument Passing](#), p.192.

A few general differences between C and C++ are listed below. For more information, see [Additional Documentation](#), p.8.

- A function declared **func()** has no argument in C++, but has any number of arguments in C. Use the **void** keyword for compatibility, e.g. **func(void)**, to indicate a function with no arguments.
- A character constant in C++ has the size of a **char**, but in C has the size of an **int**.
- An **enum** always has the size of an **int** in C, but can have another size in C++.
- The name scope of a **struct** or **typedef** differs slightly between C and C++.
- There are additional keywords in C++ (such as **catch**, **class**, **delete**, **friend**, **inline**, **new**, **operator**, **private**, **protected**, **public**, **template**, **throw**, **try**, **this**, and **virtual**) that could make it necessary to modify C programs in which these keywords occur as declared identifiers.
- In C, a global **const** has external linkage by default. In C++, **static** or **extern** must be used explicitly.

13.5 Implementation-Specific C++ Features

This subsection describes features of C++ that may behave differently in other implementations of the language.

Construction and Destruction of C++ Static Objects

Before the first statement of the **main()** function in a C++ program can be executed, all global and static variables must be constructed. Also, before the program terminates, all global and static objects must be destructed.

These special constructor and destructor operations are carried out by code in the initialization and finalization sections as described under [15.4 Startup and Termination Code](#), p.278.

Templates

Function and class templates are implemented according to the standard.

13

Template Instantiation

There are two ways to control instantiation of templates. By default, templates are instantiated *implicitly*—that is, they are instantiated by the compiler whenever a template is used. For greater control of template instantiation, the **-Ximplicit-templates-off** option tells the compiler to instantiate templates only where explicitly called for in source code—for example:

```
template class A<int>;           // Instantiate A<int> and all
                                //      member functions.
template int f1(int);           // Instantiate function int f1(int).
```

The compiler options summarized below control multiple instantiation of templates.

Options Related to Template Instantiation in C++

-Ximplicit-templates ([5.4.67 Control Template Instantiation \(-Ximplicit-templates...\)](#), p.91)

Instantiate each template wherever used. This is the default.

-Ximplicit-templates-off ([5.4.67 Control Template Instantiation \(-Ximplicit-templates...\)](#), p.91)

Instantiate templates only when explicitly instantiated in code.

- Xcomdat** (5.4.27 *Mark Sections as COMDAT for Linker Collapse (-Xcomdat)*, p.74)
When templates are instantiated implicitly, mark each generated code or data section as “comdat”. The linker collapses identical instances so marked into a single instance in memory. This is the default.
- Xcomdat-off** (5.4.27 *Mark Sections as COMDAT for Linker Collapse (-Xcomdat)*, p.74)
Generate template instantiations and inline functions as static entities in the resulting object file. Can result in multiple instances of static member-function or class variables. This requires that **-Ximplicit-templates-off** be enabled.
- Xcomdat-info-file** (5.4.28 *Maintain Project-wide COMDAT List (-Xcomdat-info-file)*, p.74)
Maintain a list of COMDAT entries across modules. Speeds up builds and reduces object-file size, but has no effect on final executables.
- Xexpl-instantiations** (*Write Explicit Instantiations File (-Xexpl-instantiations)*, p.402)
This *linker* option writes a file of all instantiations to **stdout**. Can be used with **-Xcomdat-off** to generate a complete list of template instantiations; source code can then be edited to explicitly instantiate templates where needed and then recompiled with **-Ximplicit-templates-off**.

This option is deprecated.

Using Export With Templates

There are two constraints on the use of the **export** keyword:

- An exported template must be declared exported in any translation unit in which it is instantiated (not just in the translation unit in which it is defined). In practice, this means that an exported template should be declared with **export** in a header file.
- A translation unit containing the definition of an exported template must be compiled before any translation unit which instantiates that template.

Exceptions

Exception handling provides a mechanism for responding to software-generated errors and other exceptional events. It is implemented according to the standard.



NOTE: See [15. Use in an Embedded Environment](#) for a notes on implementing exceptions in a multitasking environment.

The generation of exception-handling code can be disabled using the **-Xexceptions=0** compiler option. When this option is enabled, the compiler also flags the keywords **try**, **catch**, and **throw** as errors.

Array New and Delete

The two memory allocation/deallocation operators **operator new[]()** and **operator delete[]()** are implemented as defined in the standard.

Type Identification

The **typeid** expression returns an expression of type **typeinfo&**. The **type_info** class definition can be found in the header file **typeinfo.h**.

Dynamic Casts in C++

Dynamic casts are made with **dynamic_cast(expression)** as described in the standard.

13

Namespaces

Namespaces are implemented according to the standard. The compiler option **-Xnamespaces-off** disables namespaces; **-Xnamespaces-on** (the default) enables them.

Undefined Virtual Functions

The C++ standard requires that each virtual function, unless it is declared with the pure-specifier (**=0**), be defined somewhere in the program; this rule applies even if the function is never called. However, no diagnostic is required for programs that violate the rule. Programs with undefined non-pure virtual functions compile and run correctly in some cases, but in others generate “undefined symbol” linker errors.

13.6 C++ Name Mangling



NOTE: To interpret a mangled name, see [Demangling utility](#), p.249.

The compiler encodes every function name in a C++ program with information about the types of its arguments and (if appropriate) its class or namespace. This process, called *name mangling*, resolves scope conflicts, enables overloading, standardizes non-alphanumeric operator names, and helps the linker detect errors. Some variable names are also mangled.

When C code is linked with C++ code, the C functions must be declared with the **extern "C"** linkage specification, which tells the C++ compiler not to mangle their names. (The **main** function, however, is never mangled.) See [13.4 Migration From C to C++](#), p.241 for examples.

The scheme used for mangling follows the suggestions in *The Annotated C++ Reference Manual* (by Ellis and Stroustrup), which should be consulted for details. In a mangled name, two underscore characters separate the original name from the other encoded information. For this reason, the user should avoid double underscores in class or function names.

A function name is encoded with the types of its arguments. A member function also has the class name or namespace encoded with it. The names of classes and other user-defined types are encoded as the length of the name in decimal followed by the name itself; nested class names contain the names of all classes in the hierarchy using the **Q** modifier (see the table below), and template class names include the arguments of the template. When necessary, local class names and other identifiers are encoded as the name itself followed by **__L** followed by an arbitrary number. Simple type indicators are single characters.

A global function has a double underscore appended to its name, followed by the indicator **F** and the types of its arguments. For example, **void myFunc(int, float)** would be mangled as **myFunc__Fif**.

A member function has the encoded class name or namespace inserted before the **F** indicator—for example, **myFunc__7MyClassFif**. An **S** preceding the **F** indicates a static member function.

Static data members and variables that are members of namespaces are also mangled. Their mangled form consists of a double underscore appended to the variable name, followed by the encoded class name or namespace—for example, **myNumber__7MyClass**.

Functions that instantiate or specialize templates have a template signature. Template parameters are encoded as **Z n Z**, where n is the parameter's position (starting with 1); if a parameter's depth is greater than 1, it is encoded as **Z n _mZ**, where m is parameter depth. The return type is also included in the mangled name. An **__S** after a template name indicates that the template is specialized; an **__S** after the argument list indicates that the instance is specialized. The **__S** indicator is similarly placed in the encoded names of parent classes of functions and static data members generated from templates.

For constructors, destructors, operator class members, and certain other constructs, a special string beginning with two underscores is prefixed to the class name. For example, **__ct** indicates a constructor and **__pl** indicates the + operator. See *The Annotated C++ Reference Manual* for details.

Argument types are encoded as follows:

Type Encodings for Name Mangling in C++

A n _ Array (followed by the simple type name), where n is the array size.

b
bool

d
double

c
char

e
Ellipses parameter (...)

F $type$ -list
Function with parameters of types specified by the *type-list*.

f
float

i
int

L
long long

l
long

M $Type1Type2$
Pointer to member in *Type1* of *Type2*. *Type1* is always of the form *n name*.

M mm

Repeat m arguments with the same type as argument number n . m is limited to a single digit.

$nName$

User-defined type, with n giving the length of $Name$ and $Name$ giving the type name.

$Ptype$

Pointer to $type$.

$Qm_n1name1$

$n2name2...$

Nested class name or namespace: m user-defined type names after Qm .

$Rtype$

Reference to $type$.

r

long double

s

short

T n

Same type as argument number n .

v

void

w

wchar_t

The following modifiers are inserted before the type indicator. If more than one modifier is used, they appear in alphabetical order.

Modifiers for Type Encodings

c

const type

s

signed type

u

unsigned type

v

volatile type

Demangling utility

To interpret a mangled name, enter

```
ddump -F
```

and then interactively enter mangled names one per line. **ddump** displays the demangled meaning of the name after each entry. If the entry is not a valid mangled name, there will be no output.

Table 13-1 Examples of **ddump -F**

Entry to ddump	Interpreted result
<code>myfunc__Fv</code>	<code>myfunc(void)</code>
<code>mymain__FiPPc</code>	<code>mymain (int , char **)</code>

13.7 Avoid `setjmp` and `longjmp`

It is difficult to safely use **`setjmp()`** and **`longjmp()`** in C++ code because jumps out of a block may miss calls to destructors and jumps into a block may miss calls to constructors.

Note that in addition to visible user-defined objects, the compiler may have created temporary objects not visible in the source for use in optimized code.

Consider instead C++ exception handling in situations which might have used **`setjmp`** and **`longjmp`**. It will still be necessary to account for allocations and deallocations not performed through constructors and destructors of automatic objects.

13.8 Precompiled Headers

In projects with many header files, a large part of the compilation time is spent opening and parsing included headers. (To see how many header files are opened

during compilation, use the **-H** option.) You can speed up compilation by using precompiled headers, enabled with the **-Xpch-...** options. The easiest option to use is **-Xpch-automatic**. For example:

```
dplus -Xpch-automatic file1.cpp
```

compiles **file1.cpp** using precompiled headers. This means that a set of header files is saved in a prepared state and reused each time **file1.cpp** is compiled. The first time you compile a project with **-Xpch-automatic** you will probably not notice an improvement in speed, but subsequent compilations should be faster.

Within a header file, use **#pragma no_pch** to suppress all generation of precompiled headers from that file. To selectively suppress generation of precompiled headers, use **#pragma hdrstop**; headers included after **#pragma hdrstop** are not saved in a parsed state.

Precompiled headers are supported by the C++ compiler only.

PCH Files

Parsed headers are saved in PCH (precompiled header) files. The compiler processes PCH files only if one of the following options is enabled: **-Xpch-automatic**, **-Xpch-create=filename**, or **-Xpch-use=filename**. If more than one of these options is given, only the first is considered.

When **-Xpch-automatic** is enabled, the compiler looks for a PCH file in the current working directory (unless you use **-Xpch-directory=directory** to specify a different location) and, if possible, uses the prepared headers in that file. Otherwise a PCH file is generated with the default name **sourcefile.pch**, where **sourcefile** is the name of the primary source-code file. When the source file is recompiled, or when another file is compiled in the same directory, **sourcefile.pch** is checked for suitability and used if possible.

Before using a PCH file, the compiler always verifies that it was created in the correct directory using the same compiler version, command-line options, and header-file versions as the current compilation; this information is stored in each PCH file. If more than one PCH file is applicable to a compilation, the compiler uses the largest file available.

If you want to specify a name for the generated PCH file, use **-Xpch-create=filename** instead of **-Xpch-automatic**:

```
dplus -Xpch-create=myPCH file1.cpp
```

Later, you can reuse **myPCH**—when compiling the same file or a different file—by specifying **-Xpch-use=filename**:


```
dpplus -Xpch-use=myPCH file2.cpp
```

The *filename* specified with **-Xpch-create** or **-Xpch-use** can include a full directory path, or the option can be combined with **-Xpch-directory**:

```
dpplus -Xpch-use=myPCH -Xpch-directory=/source/headers somefile.cpp
```

Limitations and Trade-offs

A generated PCH file includes a snapshot of all the code preceding the *header stop point*—that is, **#pragma hdrstop** or the first token in the primary source file that does not belong to a preprocessor directive. If the header stop point appears within an **#if** block, the PCH file stops at the outermost enclosing **#if**.

A PCH file is *not* generated if the header stop point appears within:

- An **#if** block or **#define** started within a header file.
- A declaration started within a header file.
- A linkage specification's declaration list.
- An unclosed scope, such as a class declaration, established by a header file. (In other words, the header stop point must appear at file scope.)

Further, a PCH file is *not* generated if the header stop point is preceded by:

- A reference to the predefined macro **__DATE__** or **__TIME__**.
- The **#line** preprocessing directive.

A PCH file is generated only if the code preceding the header stop point has produced no errors and has introduced a sufficient number of declarations to justify the overhead associated with precompiled headers. Finally, a PCH file is generated only if sufficient memory is available.

Efficient use of precompiled headers requires experimentation and, in most cases, minor changes to source code. PCH files can become bulky; included files must be organized so that headers are prepared to as few shared PCH files as possible.

Diagnostics

The **-Xpch-messages** option generates a message each time a PCH file is created or used. The **-Xpch-diagnostics** option generates an explanatory message for each PCH file that the compiler locates but is unable to use.

14

Locating Code and Data, Addressing, Access

[14.1 Controlling Access to Code and Data 253](#)

[14.2 Addressing Mode - Functions, Variables, Strings 260](#)

[14.3 Access Mode — Read, Write, Execute 263](#)

[14.4 Local Data Area \(-Xlocal-data-area\) 270](#)

[14.5 Position-Independent Code and Data \(PIC and PID\) 271](#)

14.1 Controlling Access to Code and Data

By default, the compiler generates architecture-specific code for locating and accessing code and data in memory which will be suitable for many cases. In addition, a number of options are available for exercising fine control over the process, for locating code and data at specific locations in memory, and for generating position-independent code. All are described in detail in this chapter.

14.1.1 section and use_section Pragmas

Code and data are generated in *sections* in an object file, combined by the linker into an executable file, and ultimately located in target memory at specific locations. Default sections are predefined and have certain attributes. To change the name of a default section, use the **-Xname-...** option (see [5.4.102 Specify Section](#)

[Name \(-Xname-...\)](#), p.106). The **section** and **use_section** pragmas may be used to change the default attributes, to define new sections, and to control the assignment of code and variables to particular sections and, along with the linker command file, their locations.

```
#pragma section class_name [istring] [ustring] [addr-mode] [acc-mode] [address=x]  
#pragma use_section class_name [variable | function] , ...
```

class_name

Required. Symbolic name for a predefined or user-defined section class to hold objects of a particular *class*, e.g., code, initialized variables, or uninitialized variables.

istring

Name of the actual section to contain initialized data. *For variables, this means those declared with an initializer (e.g., **int x=1**;) Use empty quotes if this section is not needed but the *ustring* is.*

ustring

Name of actual section to contain uninitialized data. For variables, this means those declared with no initializer (e.g., **int x**;) This name may be omitted if not needed (the default value is used).

addr-mode

Form of addressing mode for access to variables or functions in the section. See [14.2 Addressing Mode - Functions, Variables, Strings](#), p.260 for details.

acc-mode

Accessibility to the section. See [14.3 Access Mode — Read, Write, Execute](#), p.263 for details.

#pragma section defines a *section class* and, optionally, one or two sections in the class. A section class controls the addressing and accessibility of variables and code placed in an instance of the class.

For C++, **#pragma section** declarations apply to all global and namespace scope variables, class static member variables, global and namespace scope functions, and class member functions that follow the pragma.

#pragma use_section selects a section class for specific variables or functions after the section class has been defined by **#pragma section**.

Notes for `#pragma section` and `#pragma use_section`

The C++ compiler has the following limitations for `#pragma section` and `#pragma use_section`:

- Templates are not affected by `#pragma section` or `#pragma use_section`. However, you can alter the placement of all the data or code in a file (including templates) by using the command-line options `-Xname-data` (and related options, such as `-Xname-sdata` or `-Xname-const`) or `-Xname-code`. See [5.4.102 Specify Section Name \(-Xname-...\)](#), p.106 for more information on these options.
- `#pragma section STRING` cannot be used to alter the placement of strings. Instead, use the command-line option `-Xname-string`.
- `#pragma use_section` must be followed by at least one declaration or definition of an entity for it to apply to that entity, as in:

```
#pragma section MYCODE ".mycode"
void my_func()
{
}
```

- A section *class_name* (e.g., `DATA`) is the symbolic name of a section class and it is used only in writing `#pragma section` and `#pragma use_section` directives.

At any given point in the source, there may be up to two physical sections associated with a section class—an initialized section and an uninitialized section as named by the *istring* and *ustring* attributes to `#pragma section` respectively (e.g., `".data"`). It is these physical sections which will appear in the object file and which may be manipulated during linking.

- *istring* is an optional quoted string giving a name for a particular section of the given class which is to contain initialized data. The name is used in the assembler `.section` directive to switch to the desired section for initialized data. An empty string or no string at all indicates that the default value should be used. Note that a section to contain code is “initialized” with the code. Examples:

```
".text", ".data", ".init"
```

- *ustring* is an optional quoted string giving a name for a particular section of the given class which is to contain **uninitialized** data. The name is used in the assembly `.section` directive to switch to the desired section for uninitialized data. An empty string, or no string at all, indicates that the default value should be used. The string `"COMM"` indicates that the `.comm/.lcomm` assembler directives should be used. See [23.5 COMMON Sections](#), p.381

regarding allocation of common variables for full details; generally however, **COMM** sections are gathered together by the linker and placed at the end of the **.bss** output section. Examples:

```
".bss", ".data", "COMM"
```

- *Predefined section classes:* Except when a user-defined section class has been specified, all variables and functions are categorized by default into one of several predefined section classes depending on how they are defined and how large they are. Each predefined section class is defined by default values for all of its attributes. [Table 14-1](#) gives the names and attributes of all predefined section classes.
- By using the **#pragma use_section** directive, any variable and function can be individually assigned to any of the predefined section classes, or to a user-defined section class.
- If a **section** pragma for some class is given with no values for one or more of the attributes, those attributes are always restored to their default values as given in [Table 14-1](#). This is true even for a user-defined *class_name* (the table shows the default attributes in this case as well).
- Pragmas are not seen across modules unless a common header file is included.
- Multiple **#pragma section** directives with different attributes can be given for the same *class_name*. A **#pragma section** directive for *class_name* applies to all subsequent declarations and definitions until the next **#pragma section** for the same *class_name*.

If an entity (function or variable) has multiple declarations within a single translation unit—in this context, a definition counts as a declaration—the section attributes for that entity are updated as each declaration is processed, depending on the flags **-Xpragma-section-first** and **-Xpragma-section-last** (see [5.4.114 Control Interpretation of Multiple Section Pragmas \(-Xpragma-section-...\)](#), p.111):

- With **-Xpragma-section-first** (the default), once an entity gets bound to an explicit **#pragma section** directive it is never rebound ("earliest pragma wins").
- With **-Xpragma-section-last**, an entity is (potentially) rebound on each declaration ("last pragma wins").

For example:

```
void my_func();      /* binds to "text" */

#pragma section CODE ".mycode"

void my_func()      /* does not override previous binding unless
```

```
-Xpragma_section-last has been used */
```

In this example, to force **my_func** to go into **.mycode**, you need to do one of the following:

- Move the **#pragma section** before the initial declaration of **my_func**.
- Specify **-Xpragma-section-last** on the command line.
- Use **#pragma use_section**:

```
void my_func();

#pragma section CODE ".mycode"
#pragma use_section CODE my_func

void my_func()
{
}
```

For a program to be well-formed, an entity must have a consistent section assignment across all the points at which it is used. (In this content, a definition counts as a use, but other declarations do not.) What happens if this “well-formedness” criterion is not met is not specified; the compiler will not generate an error if this rule is violated.

- Code and data should not be placed in the same sections for architectures that have literal pools.

14.1.2 Section Classes and Their Default Attributes

[Table 14-1](#) below gives the predefined section classes and their default attributes, and also the defaults for a user-defined section class.

Table 14-1 Section Classes and Their Default Attributes

section <i>class_name</i>	Description and Example	Default			
		<i>istring</i>	<i>ustring</i>	<i>addr-mode</i>	<i>acc-mode</i>
CODE	code generated in functions and global asm statements: <pre>int cube(int n) { return n*n*n; }</pre>	.text	n/a	standard	RX
DATA	static and global variables , size in bytes > -Xsmall-data : <pre>static int a[10];</pre>	.data	COMM	far-absolute	RW
SDATA	Variables, size in bytes <= -Xsmall-data : <pre>static int i;</pre>	.sdata	.sbss	near-data (\$28-relative)	RW
CONST	const variables, size in bytes > -Xsmall-const : <pre>const int a[10] = {1, ...};</pre>	.rdata	.rdata	far-absolute	R
SCONST	const variables, size in bytes <= -Xsmall-const : <pre>const int ic = 53;</pre>	.sdata	.sbss	near-code (\$23-relative)	R
STRING	string constants: <pre>"hello\n"</pre>	.rdata	n/a	far-absolute	R
<i>user-defined</i>	<code>#pragma section USER ...</code>	.data	COMM	far-absolute	RW

Notes for [Table 14-1](#):

- **Small data and const:** Small **data** and **const**: Traditionally, the MIPS ABIs do not support a small **const** area. However, for MIPS (but not MIPS16), “small **const**” is useful. Thus for MIPS, by default, the **-Xsmall-data** and the **-Xsmall-const** options are set to 8, so both small non-**const** and small **const** variables will be recognized, but the **-Xconst-in-text** option is set to 5, so small **const** variables will be in a “data” section rather than a “text” section (see [Moving initialized Data From “text” to “data”](#), p.268). For MIPS16, **-Xsmall-data** is set to 8, while **-Xsmall-const** is 0 (use of **SCONST** for MIPS16 produces

slower code), so small non-**const** variables will be recognized and allocated as shown in the table below, but small **const** variables will not be recognized.

- Local data area optimization: if **-Xsmall-data** or **-Xsmall-const** is zero, global and static scalar variables may be placed in a *local data area* if **-Xlocal-data-area**, which has a default value of 32,767 bytes, is non-zero and optimization is in effect (either **-O** or **-XO** is present). The local data area will be placed in the **.data** section for the module if any such variable in it has an initial value, or in the **.bss** section for the module if none do. When uninitialized variables are placed in the **.data** section in this way, it overrides the default **COMM** (common) section name as given above. See [14.4 Local Data Area \(-Xlocal-data-area\)](#), p.270 for further details and restrictions.
- The section names shown in the table assume the default value for option **-Xconst-in-text**. See [Moving initialized Data From “text” to “data”](#), p.268 if **-Xconst-in-text** is set to a non-default value.
- Dynamically initialized C++ **const** variables are treated like uninitialized non-**const** variables. For example:

```
int f();
const int x = f();
```

By default, **x** is placed in the **.bss** section.

14

Small Data Area (SDA) Sections: Including and Excluding Data

On occasion, you may discover that data that you intend to go into Small Data Area sections does not wind up there as expected, even if you have used, for example, a section pragma (see [section Pragma](#), p.147 and [14.1.1 section and use_section Pragmas](#), p.253), or **__attribute__((section))** (see [section\(name\) Attribute](#), p.157) to explicitly place data in an SDA section.

One of the ways this can happen is if you declare a variable before defining its type. For example, in this case the variable *bar* will be inserted into an SDA section, as expected:

```
struct foo;
struct foo /* type defined before variable declared */
{
    short x;
}

extern struct foo bar; /* bar declared */
```

Whereas in this example, *bar* will *not* be placed in an SDA section:

```
struct foo;
extern struct foo bar;      /* variable declared before type defined */

struct foo                  /* type declared */
{
    short x;
}
```

In this second example, because *bar* is declared at a place where its type is still incomplete, the compiler cannot make any assumptions about its size, and so it must conservatively assign it a section that requires far addressing.

On the other hand, it is possible to *intentionally* force linker command file symbols into non-SDA sections by declaring them as array types of unspecified size in the source code, e.g.:

```
extern char __BSS_START[], __BSS_END[];
```

([Example 25-9](#) on page [442](#) also shows a sample code fragment in which linker command symbols are defined as arrays of unknown size.) Since the array size is unknown, the compiler treats such symbols, which are defined in the linker command file, as non-SDA.

For more information on linker command symbols, see [25.6 Symbols](#), p.414.

14.2 Addressing Mode - Functions, Variables, Strings

The *addr-mode* for a section is the addressing mode to be used when referencing a variable, function, or string in the section. It is one of the hex numbers given in the “Code” column of the following table. For the relative addressing modes constructed from a base register and offset, the table also shows the base register and the number of bits in the offset. Notes follow the table. See [Implementation](#), p.267 for examples of code generated for each addressing mode.

Table 14-2 *addr-mode* Definitions

addr-mode				
Name	Code	Description	Bits	Base Register
standard	0x01	See Notes below.		
near-absolute	0x10	absolute	16	\$0 (always 0)

Table 14-2 **addr-mode Definitions** (cont'd)

addr-mode				
Name	Code	Description	Bits	Base Register
far-absolute	0x11	absolute	32	\$0 (always 0)
near-data	0x20	data relative	16	\$28
far-data	0x21	data relative	32	\$28
near-code	0x40	code relative	16	\$23 for data references, PC for branches
far-code	0x41	code relative	32	\$23 for data references, PC for branches

Notes:

- The “code” hexadecimal number is used for command-line options described below.
- The *addr-mode* **standard** for the **CODE** section class means that a processor-specific method is being used, usually defined to minimize access time.
- Branches can be either PC-relative or absolute depending on processor and branch distance. Function pointers are always absolute.
The *addr-mode* **standard** for data sections is equivalent to **far-absolute**.
- Position-independent Code (PIC) can be achieved by using the code relative addressing modes.
- Position-independent Data (PID) can be achieved by using the data relative addressing modes.

See [Generating Initializers for Static Variables With Position-Independent Code](#), p.273 for further discussion of PIC and PID code, especially regarding constraints and limitations.

Default *addr-mode* values for the predefined section classes are shown in [Table 14-1](#).

The following options change the default *addr-mode*:

-Xaddr-data=mode

- Xaddr-string=*mode*
- Xaddr-sdata=*mode*
- Xaddr-code=*mode*
- Xaddr-const=*mode*
- Xaddr-user=*mode*
- Xaddr-sconst=*mode*

These options direct that the named section class, **DATA**, **CONST**, etc., be addressed with the given addressing mode. *mode* is a hexadecimal number as given in the “code” column in [Table 14-2](#).

Example: address all variables in the **DATA** section class with **far-data** addressing:

```
-Xaddr-data=0x21
```


The following table describes other command-line options that will affect the default *addr-mode*:

Table 14-3 -X Option Settings Implied by Other -X Options

Option	Sets All of	
-Xcode-absolute-near	-Xaddr-const=0x10 -Xaddr-string=0x10	-Xaddr-sconst=0x10 -Xaddr-code=0x10
-Xcode-absolute-far	-Xaddr-const=0x11 -Xaddr-string=0x11	-Xaddr-sconst=0x10 -Xaddr-code=0x11
-Xcode-relative-near	-Xaddr-const=0x40 -Xaddr-string=0x40	-Xaddr-sconst=0x40 -Xaddr-code=0x40
-Xcode-relative-near-all	-Xaddr-const=0x40 -Xaddr-string=0x40 -Xaddr-data=0x40 -Xaddr-user=0x40	-Xaddr-sconst=0x40 -Xaddr-code=0x40 -Xaddr-sdata=0x40
-Xcode-relative-far	-Xaddr-const=0x41 -Xaddr-string=0x41	-Xaddr-sconst=0x40 -Xaddr-code=0x41
-Xcode-relative-far-all	-Xaddr-const=0x41 -Xaddr-string=0x41 -Xaddr-data=0x41 -Xaddr-user=0x41	-Xaddr-sconst=0x40 -Xaddr-code=0x41 -Xaddr-sdata=0x41

Table 14-3 -X Option Settings Implied by Other -X Options (cont'd)

Option	Sets All of	
-Xdata-absolute-near	-Xaddr-data=0x10 -Xaddr-user=0x10	-Xaddr-sdata=0x10
-Xdata-absolute-far	-Xaddr-data=0x11 -Xaddr-user=0x11	-Xaddr-sdata=0x10
-Xdata-relative-near	-Xaddr-data=0x20 -Xaddr-user=0x20	-Xaddr-sdata=0x20
-Xdata-relative-far	-Xaddr-data=0x21 -Xaddr-user=0x21	-Xaddr-sdata=0x20

 **NOTE:** The **-Xcode-relative-far** and **-Xdata-relative-far** options still use 16-bit offsets for data in the small **const** area and small data area (SDA) respectively.

14.3 Access Mode — Read, Write, Execute

acc-mode defines how the section can be accessed and is any combination of:

- R** Read permission.
- W** Write permission.
- x** Execute permission.
- O** COMDAT — when the linker encounters multiple *identical* sections marked as “comdat”, it collapses the sections into a single section to which all references are made and deletes the remaining instances of the section.

This is used, for example, with templates in C++. If COMDAT sections are disabled (**-Xcomdat-off**), the compiler generates a template instance for each module that uses a template, which can result in duplicate template

instantiations. With the **-Xcomdat** option, the compiler uses “O” to mark sections generated for templates as COMDAT; the linker then collapses identical instantiations into a single instance. See [5.4.27 Mark Sections as COMDAT for Linker Collapse \(-Xcomdat\)](#), p.74.

N

“not allocatable”—the section is not to occupy space in target memory. This is used, for example, with debug information sections such as **.debug** in ELF. **N** must be used by itself; it is ignored when it is combined with other flags.

acc-mode is used by the assembler and loader. It does not affect type-checking during compilation.

Default *acc-mode* values for the predefined section classes are shown in [Table 14-1](#).

If **-Xconst-in-text=0** then the **CONST**, **SCONST**, and **STRING** section classes will have access mode **RW** (read/write) rather than the default **R** (read only). See [Moving initialized Data From “text” to “data”](#), p.268 for further details.

Multiple instances of a constant allocated to a section with no write access (**W**) may be collapsed by the compiler to a single instance.

Using **#pragma section** and **#pragma use_section** to Locate Variables and Functions at Absolute Addresses

There are two ways to put a variable or function in a specific section.

- A variable or function can be placed in a specific section by redefining the default section into which the variable or function would normally be placed. Examples:

- Using the defaults, **ar1** is placed in the **DATA** section class (**.data**) and referenced using far-absolute addressing:

```
int ar1[100] = { 0 };
```

- **ar2** is placed in section **.absdata** and referenced using **near**-absolute addressing:

```
#pragma section DATA ".absdata" near-absolute
int ar2[100] = { 0 };
```

- **ar3** is again placed in the default **DATA** section class (**.data**) — because no *istring*, *ustring*, *addr-mode*, or *acc-mode* is given, the default values for these attributes as given in [Table 14-1](#) are used.

```
#pragma section DATA
int ar3[100] = { 0 };
```

- A variable or function can be placed by specifying a specific section in a **#pragma use_section**. Example:
 - **ar4** is placed in section **.absdata** and referenced using **near**-absolute addressing (see the next heading regarding the empty quotes in this example):

```
#pragma section VECTOR "" ".absdata" near-absolute RW
#pragma use_section VECTOR ar4
int ar4[100];
```

Placing Initialized vs. Uninitialized Variables

When defining a data section class to hold variables, the **section** pragma can name two sections: one for initialized variables and one for uninitialized variables, or either section by itself. Repeating from the definition above ([14.1.1 section and use_section Pragas](#), p.253):

#pragma section *class_name* [*istring*] [*ustring*]

class_name

Required. Predefined or user-defined name to hold objects of a particular *class*, e.g., code, initialized variables, or uninitialized variables.

istring

Name of actual section to contain initialized data. *For variables, this means those declared with an initializer* (e.g., **int x=1;**). Use empty quotes if this section is not needed but the *ustring* is.

ustring

Name of actual section to contain uninitialized data. *For variables, this means those declared with no initializer* (e.g., **int x;**). This section may be omitted if not needed (which will assign the default value).

Consider these examples:

```
#pragma section DATA ".inits" ".uninits"
int init=1;
int uninit;
```

Assuming no earlier pragmas for class **DATA**, the pragma changes the section for initialized variables from **.data** to **.inits**, and changes the section for uninitialized variables from **COMMON** (which the linker adds to **.bss**) to **.uninits**. As a result, variable **init** will be placed in the **.inits** section (because **init** has an initial value), while variable **uninit** will be placed in the **.uninits** section because it has no initial value.

The following shows a common error:

```
#pragma section DATA ".special"    /* probably error */  
int special;
```

The user presumably intends for variable **special** to be placed in section **.special**. But the pragma defines **.special** as the section for initialized variables. Because variable **special** is uninitialized, it will be placed in the default **COMMON** section. Changing the above to

```
#pragma section DATA "" ".special"  
int special;
```

achieves the intended result because **.special** is now the section for uninitialized variables.

Using the Address Clause to Locate Variables and Functions at Absolute Addresses

The **address=*n*** clause provides a way to place variables and functions at a specific absolute address in memory. With this form, the linker will put the designated code or data in an absolute section named **".abs.nnnnnnnnnn"** where *nnnnnnnnnn* is the value in hexadecimal, zero-filled to eight digits, of the address given in the **address=*n*** clause.



NOTE: When using the **address=*n*** clause, any section name given by *istring* or *ustring* will be ignored.

Advantages of using absolute sections (see [15.9.3 Accessing Variables and Functions at Specific Addresses](#), p.291):

- I/O registers, global system variables, and interrupt handlers, etc., can be placed at the correct address from the compiled program without the need to write a complex linker command file.

That is, if you know the address of an object at compile-time, the **address** clause of the **#pragma section** directive can be used in your source. If the location of the object is best left to link-time, use a **#pragma section** directive with a named section which can then be located via a linker command file.

- A symbolic debugger will have all information necessary for full access to absolute variables, including types. Variables defined in a linker command file cannot be debugged at a high level. Examples:

```
// define IOSECT:  
// a user defined section containing I/O registers
```



```
#pragma section IOSECT near-absolute RW address=0xffffffff00
#pragma use_section IOSECT ioreg1, ioreg2

// place ioreg1 at 0xffffffff00 and ioreg2 at 0xffffffff04
int ioreg1, ioreg2;

// Put an interrupt function at address 0x700
#pragma interrupt ProgramException
#pragma section ProgSect RX address=0x700
#pragma use_section ProgSect ProgramException

void ProgramException() {
// ...
}
```

Prototypes and the Placement of Sections

If function prototypes are present, the compiler and linker select sections and their attributes for functions and, in C++, **static** class variables, based on where the prototypes of the functions appear in the source, rather than where the function definitions appear.

The following example shows the wrong way to request the compiler and linker to place the function **fun()** in the **.myTEXT** section.

```
int fun();                                // Prototype determines "fun" section
...
#pragma section CODE ".myTEXT" // #pragma before definition has no
int fun() {                          // effect on placement of "fun"
...
}
```

In this example, the initial declaration of **fun()** determines where it will appear in the executable; the subsequent **#pragma** is ignored. This is consistent with the behavior of the C++ compiler.

Implementation

The compiler will generate the assembly code for the different *addr-mode* settings as shown in [Table 14-4](#). The corresponding code is as follows (the **#pragma use_section** is present to ensure that the variable **var** is placed in **DATA** rather than **SDATA** for simplicity).

```
#pragma use_section DATA var
int var=1;          /* var in DATA or SDATA (not in .bss or .sbss) */

reg = var;
func();             /* func in CODE */
```

Notes:

Table 14-4 Code Generated for Different Addressing Modes

Mode	Reference to DATA: reg = var;		Reference to CODE: func ()	
standard	lui	\$4,%hi (var)	jal	func
	lw	\$4,%lo (var) (\$4)		
near-absolute	lw	\$4,var (\$4)	jal	func
far-absolute	lui	\$4,%hi (var)	lui	\$24,%hi (func)
	lw	\$4,%lo (var) (\$4)	addiu	\$24,\$24,%lo (func)
			jalr	\$24
near-data	lw	\$4,%sdaoff (var) (\$28)	addiu	\$24,\$28,%sdaoff (func)
			jalr	\$24
far-data	lui	\$4,%pidhi (var)	lui	\$24,%pidhi (func)
	addu	\$4,\$4,\$28	addu	\$24,\$24,\$28
	lw	\$4,%pidlo (var) (\$4)	addiu	\$24,\$24,%pidlo (func)
			jalr	\$24
near-code	lw	\$4,%picoff (var) (\$23)	bal	func
far-code	lui	\$4,%pichi (var)	jbal	func
	addu	\$4,\$4,\$23		
	lw	\$4,%piclo (var) (\$4)		

- The compiler may select a different register for the **reg** variable than is shown in the table.
- To reproduce the code as shown, place the above code in a file, e.g. **test.c**, and use **-Xaddr-code** and **-Xaddr-data** to set the addressing modes, and **-g** to turn on debugging (this disables some minor optimizations which might otherwise be present). For example, for **standard** addressing mode:

```
dcc -g -S -Xaddr-code=0x01 -Xaddr-data=0x01 -Xpass-source test.c
```

- The **bal func** instruction is the same as **bgezal \$0,func**. The **jbal** instruction is translated to a **bal** instruction by the assembler if the destination is in the same file and within reach of the branch. Otherwise the assembler will generate a code sequence similar to the far-code-relative addressing of a variable.
- The assembler uses some special MIPS relocation types for the operators used in the table above. See [F.4.6 ELF Relocation Information](#), p.630 for the complete list of relocation types. See also **include/elf_mips.h**.

Moving initialized Data From “text” to “data”

Sections that hold settable variables are generically referred to as “data” sections (and should be in RAM), while sections that hold code, constants like strings, and

unchangeable **const** variables are generically referred to as “text” sections (and can be in ROM).

The **-Xconst-in-text** option provides a shortcut for controlling the default section for initialized data (*istring*) for the **CONST**, **SCONST**, and **STRING** constant section classes. Its form is:

```
-Xconst-in-text=mask
```

where *mask* bit 0x1 controls **const** variables in the **CONST** section class, 0x2 controls small **const** variables in the **SCONST** section class, and 0x4 controls string data in the **STRING** section class.

If a *mask* bit is set to 1, variables or strings belonging to the corresponding section classes are placed in ROMable “text” sections; if set to 0, they are placed in “data” sections.

By default, **-Xconst-in-text=0x5** (0 for MIPS16). This gives the behavior shown in the following table. (Note: the table shows section names for initialized sections. *See notes following the table for uninitialized sections.*)

Table 14-5 **-Xconst-in-text** mask bits

Section Class	Mask Bit	“text” Section With Mask Bit Set to 1	“data” Section With Mask Bit Set to 0
CONST	0x1	.rdata (MIPS default)	.data (MIPS16 default)
SCONST	0x2	.sdata2	.sdata (default for both)
STRING	0x4	.rdata (MIPS default)	.data (MIPS16 default)



NOTE: Note that when a section is in “data” it will have access mode **RW** (read/write), while in “text”, the access mode will be **R** (read only). See [14.3 Access Mode — Read, Write, Execute](#), p.263. If a section is moved from its default by **-Xconst-in-text**, this will be a change from its usual default access mode.



NOTE: The **.sdata2** section is placed with the **.text** section by the default linker command file (perhaps to be located in ROM), and so is considered to be a “text” section.

For example for MIPS, **-Xconst-in-text=1** means that initialized **const** variables and small **const** variables should be placed in their usual default “text” and “data” sections, **.rdata** and **.sdata**, respectively, while strings should be placed in the **.data**

section rather than their usual **.rdata** section. (For MIPS16, **-Xconst-in-text=0** by default; setting it to 1 would move initialized **const** variables from the default **.data** section to **.rdata**.)

While the option **-Xconst-in-text** is preferred, the older option **-Xconst-in-data** is equivalent to **-Xconst-in-text=0**, and thus requests that data for all constant sections, **CONST**, **SCONST**, and **STRING** be placed in their corresponding “data” sections as given by the last column of the table above, and the older option **-Xstrings-in-text** is equivalent to **-Xconst-in-text=0xf**, and thus requests that data for all constant sections be placed in their default “text” sections.

The table above gives section names for *initialized* sections. There are no uninitialized **STRING** sections. Uninitialized **CONST** sections, if moved from “text” to “data”, go in the **COMM** (common) section (which the linker puts at the end of the **.bss** section by default). Uninitialized **SCONST** sections, if moved from “data” to “text”, go in the **.sdata2** section.

14.4 Local Data Area (-Xlocal-data-area)

The compiler supports a local data area (LDA) optimization. This optimization works as follows:

- The LDA optimization applies only to static and global variables of scalar types—not arrays, structures, unions, or classes (for C++).
- Like all optimizations, LDA optimization is enabled only if option **-O** or **-XO** is present. It can be disabled by setting **-Xlocal-data-area=0**.
- The LDA optimization applies only to scalar variables not assigned to the small data or small **const** areas. Because **-Xsmall-data=8** and **-Xsmall-const=8** by default for MIPS processors, the LDA optimization is not used by default (because all scalars have size 8 or fewer bytes). However, if **-Xsmall-data** or **-Xsmall-const** is set to a smaller value or 0, then the LDA optimization will be used.
- An LDA is allocated for each module, and static and global scalar variables *which are referenced at least once* are allocated to it except as noted above. To restrict the optimization to static variables, use **-Xlocal-data-area-static-only**. VxWorks developers are strongly advised to use **-Xlocal-data-area-static-only**.

so that asynchronous changes to global variables remain visible to the generated code.

- The variables in the LDA are addressed using efficient base register-offset addressing. The base register is chosen for the module by the compiler as part of its normal register assignment algorithms and optimizations.
- If at least one variable in the LDA is initialized, the LDA will be in the **.data** section for the module. If all are uninitialized, the LDA will be in the **.bss** section for the module.



NOTE: Note that this can change the usual behavior for uninitialized variables — without LDA optimization, uninitialized variables go into the **.bss** section (or **.sbss** section for small uninitialized variables if **-Xsmall-data** is > 0). But with LDA optimization, variables to be put into the LDA are put there whether initialized or not; and if any LDA variables are uninitialized, the LDA is placed in the **.data** section for the module, and in that case, any uninitialized variables in the LDA will also be in the **.data** section.

- By default, the size of the LDA is 32,767 bytes. It may be set to a different size with option **-Xlocal-data-area=*n***. However, a value larger than the default will be less efficient because the default was chosen based on the size of the most efficient offset. If there are too many scalar variables to fit in the LDA, the overflow will be allocated as usual.

14.5 Position-Independent Code and Data (PIC and PID)

By using the linker command language, it is easy to have complete control over where different sections of the program should be allocated in memory. However, in some cases there is no way of knowing where a program will reside in memory until load time. For example:

- In a multi-process environment without virtual memory, new programs are loaded wherever there is unallocated space.
- When more than one process executes the same code section, but uses different data sections. In this case only the data has to be position-independent.

In general there are two ways to provide load-time allocation:

- By patching the code with the correct address while loading. The **-r** and **-rn** options to the linker keep the relocation data in the file and can be used by the loader to change all memory references. See [F.4.6 ELF Relocation Information](#), p.630 for details about the **-r** options and relocation.
- By generating position-independent code (PIC) which can be executed from any address. The compiler will only use addressing modes that are relative to either the current address or a reserved register.

There are two types of position-independence: data position-independence (PID), which allows data to be located anywhere in memory, and code position-independence (PIC), which allows code to be executed from anywhere. The compiler can generate both types, either separately or together.

Individual code or data sections may be made position-independent with the *addr-mode* clause of the **#pragma section** directive (see [pragma 14.1.1 section and use_section Pragma](#), p.253), or for all code or data sections in a compilation with command-line options.

For the MIPS family, the following options provide position-independence:

- The **-Xcode-relative-near** and **-Xcode-relative-far** options implement code position-independence by only using PC-relative branches and by using **\$23**-relative addressing modes when accessing addresses in the code section, such as references to strings and **const** data. The **-Xcode-relative-near** option can be used safely only if the code section is less than 64KB.
- The **-Xdata-relative-near** and **-Xdata-relative-far** options implement data position-independence by using register **\$28** as a pointer to the data section and making all references to it as offset from that register. The **-Xdata-relative-near** option can be used only if the data section is less than 64KB.
- The **-Xcode-relative-near-all** and **-Xcode-relative-far-all** options implement code and data position-independence by only using PC-relative branches and by using **\$23**-relative addressing modes when accessing all data. The **-Xcode-relative-near-all** option can be used safely only if the size of the code and data sections together is less than or equal to 64KB total.

Example:

The following command generates totally position-independent code.

```
dcc -Xcode-relative-near -Xdata-relative-near -O c.c
```



NOTE: The **-Xcode-relative-far** and **-Xdata-relative-far** options still use 16-bit offsets for data in the small **const** area (called SDA2 in EABI) and small data area (SDA) respectively. However, with **-Xcode-relative-far-all**, references to the small **const** area, if any, use a 32-bit offset rather than the more efficient 16-bit offset, and for this reason this latter option is deprecated.



NOTE: The libraries are compiled with default options and therefore do not use position-independent code and data.. However, they do use “small areas” by default (see **-Xsmall-const** and **-Xsmall-data** on [118](#)).

Generating Initializers for Static Variables With Position-Independent Code

Position-independent addresses are not known at compile-time, so it is necessary to dynamically set pointers having constant initial values whose position will not be known until run-time, e.g., pointers to global variables, static local variables, static class variables, functions or methods, whenever these are in position-independent sections.

See [5.4.47 Generate Initializers for Static Variables \(-Xdynamic-init\)](#), p.81 for instructions on storing data in the initialization section when generating position-independent code or data. Examples:

```
/* Always OK. */
int i = 1;

/* Following two statements, if compiled with -Xdata-relative-...,
 * would also require -Xdynamic-init because variable i and the
 * string "abc" would be position-independent data and have unknown
 * addresses at compile-time
 */
int *p = &i;
char *s = "abc";

/* Following two statements, if compiled with -Xcode-relative-...,
 * would also require -Xdynamic-init because the address of
 * function f would be unknown at compile-time.
 */
int f (int a);
int (*f_p)(int) = f;
```

Relationship Between Position-Independence and “Small” Areas

The compiler supports both “position-independence” and “small” data and constant areas. See the following:

- [5.4.26 Generate Position-independent Code \(PIC\) \(-Xcode-relative...\)](#), p.73
- [5.4.35 Generate Position-independent Data \(PID\) \(-Xdata-relative...\)](#), p.77
- [5.4.132 Set Size Limit for “small const” Variables \(-Xsmall-const=n\)](#), p.118
- [5.4.133 Set Size Limit for “small data” Variables \(-Xsmall-data=n\)](#), p.118

The implementations of both position-independence and “small” areas use base-offset addressing. Further, position-independent code and the small “const” area use the same base register (\$23), and position-independent data and the small data areas (initialized and uninitialized) use the same base register (\$28).

The compilers support both approaches for the following reasons:

- The “small” areas are limited in size to 64KB. But position-independence for both code and data may be required for larger blocks of code or data.
- The compiler supports a range of microprocessors, and “small” areas have been traditionally present for some of these even when position-independence has not. Support for both approaches allows conversion, using familiar terms, of legacy code developed with other tool sets.

15

Use in an Embedded Environment

- 15.1 Introduction 276
- 15.2 Compiler Options for Embedded Development 276
- 15.3 User Modifications 278
- 15.4 Startup and Termination Code 278
- 15.5 Hardware Exception Handling 285
- 15.6 Library Exception Handling 285
- 15.7 Linker Command File 286
- 15.8 Operating System Calls 287
- 15.9 Communicating with the Hardware 291
- 15.10 Reentrant and “Thread-Safe” Library Functions 293
- 15.11 Target Program Arguments, Environment Variables, and Predefined Files 294
- 15.12 Profiling in an Embedded Environment 296

15.1 Introduction

Device software development differs significantly from development for native environments, in part because there is often no operating-system support for:

- initialization of data
- initialization of **argc**, **argv**, and environment variables
- hardware exception handling (illegal memory access, divide by zero, etc.)
- file and device I/O
- memory allocation
- signal handling
- execution of instructions to enable caches
- virtual memory

Other features often needed in an embedded environment include:

- control over addressing to minimize code size and maximize execution speed
- complete control over allocation of code and data to specific addresses
- placement of initialized data in ROM and its movement on startup to RAM
- packed structures to map external hardware or data from other processors
- mixing of big- and little-endian data structures

15.2 Compiler Options for Embedded Development

The following compile-time options and pragmas control code generation in various ways. All are documented in [5. Invoking the Compiler](#).

-Xaddr-x

Control addressing modes for data and code. See [14.2 Addressing Mode - Functions, Variables, Strings](#), p.260.

-Xdollar-in-ident

Allow variable names containing "\$"-signs.

-Xmemory-is-volatile

Treat all memory references as volatile, to avoid optimizing away accesses to hardware ports. This option is not needed if the **volatile** keyword is used for variables making accesses to volatile data. See [5.4.97 Treat All Variables As Volatile \(-Xmemory-is-volatile, -X...-volatile\)](#), p.104.

-Xsize-opt

Minimize the size of the executable code.

-Xsmall-data**-Xsmall-const**

Specify by size what data is to go into the small data area (SDA) and the small **const** area. See [5.4.132 Set Size Limit for “small const” Variables \(-Xsmall-const=n\)](#), p.118.

-Xconst-in-text=0xf

Put strings and **const** data in the **.text** section together with code. See [Moving initialized Data From “text” to “data”](#), p.268.

-Xmember-max-align**-Xstruct-min-align**

Options to pack structures in different ways. See [5.4.96 Set Maximum Structure Member Alignment \(-Xmember-max-align=n\)](#), p.104 and [5.4.145 Set Minimum Structure Member Alignment \(-Xstruct-min-align=n\)](#), p.122.

-Xcode-relative...**-Xdata-relative...**

Generate position-independent code and data (PIC and PID). See [5.4.26 Generate Position-independent Code \(PIC\) \(-Xcode-relative...\)](#), p.73 and [5.4.35 Generate Position-independent Data \(PID\) \(-Xdata-relative...\)](#), p.77, for various forms of these options.

#pragma interrupt *func*

Specify that a function *func* is an exception handler. See [interrupt Pragma](#), p.140.

#pragma pack

Control packing of structures and the byte order of members. See the [pack Pragma](#), p.143.

#pragma section ...

Control placement and addressing of variables and functions. See [14.1.1 section and use_section Pragmas](#), p.253.

15.3 User Modifications

Since most embedded environments are unique, some things must be modified by the user:

- Startup code must initialize the processor and run-time.
- Hardware exceptions must be handled.
- A linker command file must specify where to allocate code and data.
- It may be necessary to modify library functions to make user-supplied operating system calls.

15.4 Startup and Termination Code


This section describes startup and termination for self-contained applications built with the compiler. Applications that run under an operating system (such as VxWorks or Linux) work differently.

As shipped, startup is carried out by four modules: **crt0.s**, **crtlibso.c**, **ctordtor.c**, and **init.c**. Termination is carried out by five modules: **exit.c**, **crt0.s**, **crtlibso.c**, **ctordtor.c**, and **_exit.c**. Read this section and examine these modules to determine whether any modifications are required for your target environment.

An overall schematic for startup and termination is shown in [Figure 15-1](#). This figure applies to all supported targets and does not show some details. See the referenced modules for complete details. Notes, including source locations and modification hints, are in the sub-sections immediately following the figure.

Figure 15-1 Startup and Termination Program Flow

crt0.s

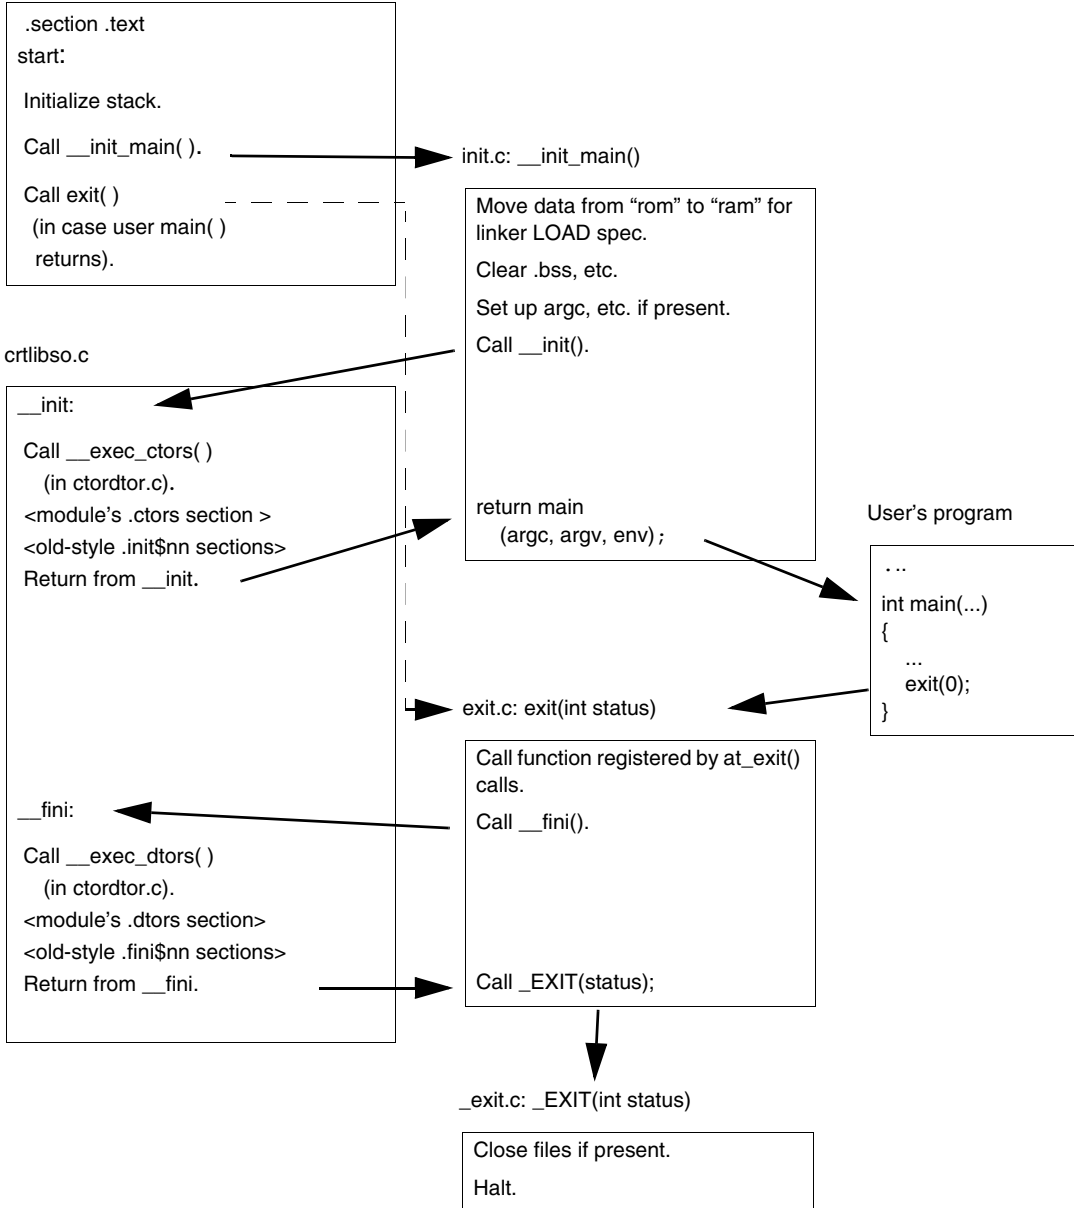

15.4.1 Location of Startup and Termination Sources and Objects

The source of **crt0.s** is located in the **src/crtmips** directory. Objects are in the library directories shown in [Table 2-2](#).

init.c, **crtlibso.c**, **exit.c**, and **_exit.c** are in the **src** directory. Objects are in **libc.a**.

15.4.2 Notes for crt0.s

crt0.s begins at label **start**. This is the entry point for the target application.

crt0.s is brief, with most initialization done in **init.c**. Its first action is to initialize the stack to symbol **__SP_INIT**. This symbol is typically defined a *linker command file*. See [Figure 25-1](#) for an example.

Insert assembly code as required to initialize the processor before **crt0.s** calls **__init_main()** described in [15. Use in an Embedded Environment](#). Refer to manufacturer's manuals for the target processor for information on initializing the processor.

To replace **crt0.o**:

- Copy and modify it as required.
 - Assemble it with:
- ```
das crt0.s
```
- Link it either by including it on a **dld** command line when invoking the linker, or by using the **-Ws** option if using the compiler driver, e.g.,

```
dcc -Wsnew_crt0.o ... other parameters ...
```

The **-Ws** option can be added to the **user.conf** configuration file to make it permanent.

### 15.4.3 Notes for crtlibso.c and ctordtor.c

By default, compiled modules generate special **.ctors** and **.dtors** sections for startup and termination code, including constructor functions, destructor functions, and global constructors in C++. The **.ctors** and **.dtors** sections contain pointers to initialization and finalization functions, sorted by priority. This code is invoked during initialization and finalization through calls to **\_\_exec\_ctors()** and **\_\_exec\_dtors()** from the **\_\_init()** and **\_\_fini()** functions in **crtlibso.c**. The source

code for `__exec_ctors()` and `__exec_dtors()`, along with symbols marking the top and bottom of `.ctors` and `.dtors`, is in `ctordtor.c`. (See [Figure 15-1](#).)

`crplibso.c` includes “wrapper” sections `.init$00`, `.init$99`, `.fini$00`, and `.fini$99`. These sections, which previous versions of the compiler used for startup and termination code, exist for backward compatibility.

For more information, see [15.4.8 Run-time Initialization and Termination](#), p.284.



**NOTE:** The `malloc()` function supplied with the compiler must be initialized. This is done automatically by code generated in the `.ctors` section. If you do not use the standard `crplibso.c`, then include comparable code in your own startup file. Other library functions may also require initialization, so `__init()` should be called in all cases.

See also [5.4.47 Generate Initializers for Static Variables \(-Xdynamic-init\)](#), p.81.

#### 15.4.4 Notes for `init.c`

Initialization code that can be written in C or C++ should be inserted in or called from `__init_main()`, typically just before calling `main()`, so that all other initialization done by `__init_main()`—copying initial values from “rom” to “ram”, clearing `.bss`, and so forth—can be done first.

##### Copying Initial Values From “ROM” to “RAM”, Initializing `.bss`

In a typical embedded system, the initial values for non-`const` variables must be stored in some form of read-only memory, “ROM” for simplicity, while the code must refer to the variables themselves in writable memory, “RAM”. At startup, the initial values must be copied from ROM to RAM. In addition, C and C++ require that uninitialized static global memory be initialized to zero.

`init.c` requires five symbols to “copy constants from ROM to RAM” (the traditional phrase) and to clear `.bss`. These five symbols, all typically defined in a *linker command file*, are:

###### `__DATA_ROM`

Start of the *physical* image of the data section for variables with initial values, including all initial values—the location in “ROM” as defined using the `LOAD` specification in the linker command file.

**\_\_DATA\_ROM**

Start of the *logical* image of the data section—the location in “RAM” where the variables reside during execution as defined by an area specification (“>area-name”) in the linker command file.

**\_\_DATA\_END**

End of the logical image of the data section. **\_\_DATA\_END - \_\_DATA\_ROM** gives the size in bytes of the memory to be copied.

**\_\_BSS\_START**

Start of the **.bss** section to be cleared to zero.

**\_\_BSS\_END**

End of the **.bss** section.

The code in **init.c** compares **\_\_DATA\_ROM** to **\_\_DATA\_RAM**; if they are different, it copies the data section image from **\_\_DATA\_ROM** to **\_\_DATA\_RAM**. It then compares **\_\_BSS\_START** with **\_\_BSS\_END** and if they are different sets the memory so defined to zero.

As noted, these symbols are typically defined in a linker command file. See [25.8 Command File Structure](#), p.416 for an example.

### Providing arguments to main and data for memory resident files

Examine the code in **init.c** to see how C-style **main( )** function arguments and environment variables can be set up. The variables used in this code, such as **\_\_argv[ ]** and **\_\_env[ ]**, are defined in **src/memfile.c** and **src/memfile.h**. These variables, as well as data for memory resident files, can be created using the **setup** program. See [15.11 Target Program Arguments, Environment Variables, and Predefined Files](#), p.294 for details.

### Replacing init.c

To replace **init.c**:

- Copy and modify it as required.
- Include it as a normal C module in your build.

## 15.4.5 Notes for Exit Functions

Because embedded systems are often designed to run continuously, **exit( )** may not be needed and will not be included in the target executable if not called.



To replace `exit.c` or `_exit.c`:

- Copy and modify as required.
- Include with normal C modules in your build.

## 15.4.6 Stack Initialization and Checking

### Stack Initialization

The initial stack is initialized by `crt0.s` to symbol `__SP_INIT`, typically defined in the linker command file. See [15.4.2 Notes for crt0.s](#), p.280 and for an example see [25.8 Command File Structure](#), p.416.

### Stack Checking

Stack checking is not implemented for MIPS microprocessors.

## 15.4.7 Dynamic Memory Allocation - the heap, `malloc()`, `sbrk()`

`malloc()` allocates memory from a heap managed by function `sbrk()` in `src/sbrk.c`. There are two ways to create the heap:

- Define `__HEAP_START` and `__HEAP_END`, typically in a linker command file. See the files `conf/default.dld`, `conf/sample.dld`, and [25.8 Command File Structure](#), p.416 for examples.
- Recompile `sbrk.c` as follows:

```
gcc -ttarget -c -D SBRK_SIZE=n sbrk.c
```

where *n* is the size of the desired heap in bytes.

The `malloc()` function implements special features for initializing allocated memory to a given value and for checking the free list on every call to `malloc()` and `free()`. See [malloc\(\)](#), p.544.



**NOTE:** To avoid excess execution overhead, `malloc()` acquires heap space in 8KB master blocks and sub-allocates within each block as required, re-using space within each 8KB block when individual allocations are freed. The default 8KB master block size may be too large on systems with small RAM. To change this, call

```
size_t __malloc_set_block_size(size_t blocksz)
```

where *blocksz* is a power of two.



---

**NOTE:** `malloc()` and related functions must be initialized by function `__init()` in `crtlibso.c`. See the note at the end of the section [15.4.3 Notes for `crtlibso.c` and `ctordtor.c`](#), p.280 for details.

---

## 15.4.8 Run-time Initialization and Termination

The compiler automatically generates calls to initialization and finalization functions, including C++ global constructors, through pointers in each module's `.ctors` and `.dtors` sections. Initialization and finalization functions can appear in any program module and are identified by the **constructor** and **destructor** attributes, respectively. Functions identified with the **constructor** and **destructor** attributes are executed when `__init()` and `__fini()` are called, as shown in [Figure 15-1](#) and described in [15.4.3 Notes for `crtlibso.c` and `ctordtor.c`](#), p.280.



---

**NOTE:** An archived object file containing constructors or destructors will not be pulled from its `.a` file and linked into the final executable unless it also contains at least one function that is explicitly called by the application. To ensure execution of startup and termination code, never create modules that contain only constructor and destructor functions.

---

The priority of initialization and finalization functions can be set through arguments to the **constructor** and **destructor** attributes; functions with *lower* priority numbers execute first. For each priority level assigned, the compiler creates a subsection called `.ctors.nnnnn` or `.dtors.nnnnn`, where `nnnnn` is a five-digit numeral between 00000 and 65535; the *higher* the value of `nnnnn`, the earlier the functions in that section are called. For example, a function declared with `__attribute__((constructor(12)))` will be referenced in `.ctors.65523` (because  $65523 = 65535 - 12$ ). All of the `.ctors.nnnnn` sections are grouped at link time into a single section called `.ctors`, and all of the `.dtors.nnnnn` sections are grouped at link time into a single section called `.dtors`. For an example linker map, see `ctordtor.c`.

By default, user-defined initialization and finalization functions (as well as global class constructors) have the last priority, to ensure that compiler-defined initialization and finalization occurs first.

For more information on **constructor** and **destructor** attributes, see [constructor](#), [constructor\(n\) Attribute](#), p.155 and [destructor](#), [destructor\(n\) Attribute](#), p.156. To change the default priority for initialization and finalization functions, see [5.4.72 Control Default Priority for Initialization and Finalization Sections \(-Xinit-section-default-pri\)](#), p.93.

### Old-style Initialization and Termination

For backward compatibility, the compiler supports an older style of run-time initialization and termination that uses `.init$nn` and `.fini$nn` sections (instead of `.ctors` and `.dtors`). To use old-style initialization and finalization, enable `-Xinit-section=2` (see [5.4.71 Control Generation of Initialization and Finalization Sections \(-Xinit-section\)](#), p.92). In this mode, the compiler also supports the use of special `_STI__nn_` and `_STD__nn_` prefixes (as well as **constructor** and **destructor** attributes) to identify initialization and finalization functions and set their priority. In cases where both `.init$nn` and `.ctors` sections are present, the default `__init( )` function executes the code in `.ctors` first; similarly, in cases where both `.fini$nn` and `.dtors` sections are present, the default `__fini( )` function executes the code in `.dtors` first.

## 15.5 Hardware Exception Handling

Please refer to the *MIPS RISC Architecture manual* for a description of the exception (interrupt) handling by the hardware.

The compiler provides the following support for interrupt routines:

- A **#pragma interrupt** which specifies that a function is an exception handler.
- The library function **raise( )**, which can be called with an appropriate signal from the interrupt routine to raise a signal.
- A **#pragma section** directive that can place exception vectors at an absolute address.

## 15.6 Library Exception Handling

On error, many standard library functions set **errno** and return a null or undefined value as described for each function in [34. C Library Functions](#). This is typical of, for example, file system functions.

Many math functions, **malloc()**, and some other library functions call a central error reporting function (in addition to setting **errno**):

```
__diab_lib_error(int fildes, char *buf, unsigned nbyte);
```

where:

*fildes*

File descriptor index: 1 for **stdout**, 2 for **stderr** (the usual value for error reports).

*buf*

Buffer containing an ASCII string describing the error, e.g., "**stack overflow**".

*nbyte*

Number of characters in *buf* (excluding any terminating null byte).

**\_\_diab\_lib\_error()** is defined in **src/lib\_err.c** and may be modified as required. (The prototype for **\_\_diab\_lib\_error()** is not included in any user accessible header file; the prototype given above may be added to a user header file if it is desirable to call **\_\_diab\_lib\_error()** from user application code.) Unless the message is intercepted by another program, **\_\_diab\_lib\_error()** writes the message to the file given by *fildes* and returns the number of bytes written. After calling **\_\_diab\_lib\_error()**, most functions continue execution (after setting **errno** if required).

## 15.7 Linker Command File

A linker command file:

- Can specify input files and options, although usually these are on the command line.
- Specifies how memory is configured.
- Specifies how to combine the input sections into output sections.
- Assigns addresses to symbols.

See [25. Linker Command Language](#) for more information about the command language, and [25.8 Command File Structure](#), p.416 for an example.

When invoking a compiler driver such as **dcc**, specify a non-default linker command file using the **-Wm** option:

**-Wm***pathname*

where *pathname* is the full name of the file. To use the same linker command file for all compilations, specify this option in the **user.conf** configuration file.

If no **-Wm** option is used, the linker will use file *version\_path/conf/default.dld*. Documentary comments are included in this file; please see it for details. See [5.3.29 Specify Linker Command File \(-W mfile\)](#), p.49 for additional details on the **-Wm** option.

Other linker command files written for some specific targets are also provided in the **conf** directory. These and **default.dld** may serve as examples for creating your own linker command file.

## 15.8 Operating System Calls

The source files available in the **src** directory implement or provide stubs for a number of POSIX/UNIX functions for an embedded environment. A partial set is documented in the subsections of this section. Examine the **.c** files to see the complete set.

The modules in the **src** directory are typically stubs which must be modified for a particular embedded environment. These modules have been compiled and the objects collected into two libraries:

**libchar.a** — basic operating systems functions using simple character input/output

**libram.a** — basic operating system functions using RAM-disk file input/output.

Variants of these libraries for different object module formats are found in the directories documented in [Table 2-2](#).

To use these functions:

- Modify the above files or those such as **chario.c** discussed below. That is, replace the stub code with code which implements each required function using the facilities available in the embedded environment.

- Compile the files; the script **compile** can be used as is or modified to do this.
- Use **dar** to modify either the original or a copy of **libchar.a** or **libram.a** as appropriate, or simply include the modified object files in your link before the libraries. See [27. D-AR Archiver](#) for instructions.
- If a copy of **libchar.a** or **libram.a** was modified, see [32.2 Library Structure](#), p.484 for a detailed description of how the libraries are structured and searched.

### 15.8.1 Character I/O

The predefined files **stdin**, **stdout**, and **stderr** use the **\_\_inchar()**/**\_\_outchar()** functions in *version\_path/src/chario.c*. These functions can be modified in order to read/write to a serial interface on the user's target. The files **/dev/tty** and **/dev/lp** are also predefined and mapped to these character I/O functions.

**chario.c** can be compiled for supported boards and simulators by defining one of several preprocessor macros when compiling **chario.c**. These macros are:

|                             |            |
|-----------------------------|------------|
| SingleStep debugger         | SINGLESTEP |
| I.D.P. M68EC0x0 board       | IDP        |
| SB306 board                 | SBC306     |
| EST Virtual Emulator        | EST        |
| MBUG monitor for 68k boards | MBUG       |

For example, all versions of **chario.o** in the supplied libraries are compiled for SingleStep as follows:

```
dcc -c -DSINGLESTEP chario.c
```

These preprocessor macros typically cause the inclusion of code which reads from or writes to devices on the board, or make system calls for doing so, or in the case of SingleStep, supports input/output to the SingleStep command window.

**chario.c** has three higher level functions:

- **inedit()** corresponds to **stdin**; it reads a character by calling **\_\_inchar()** and calls **outedit()** to echo the character.
- **outedit(...)** corresponds to **stdout**; it writes a character by calling **\_\_outchar()**.
- **outerror(...)** corresponds to **stderr**; it writes a character by calling **\_\_outerrorchar()**. This function is currently used only by SingleStep

(when compiling **chario.c** with **-DSINGLESTEP**); other implementations write **stderr** output to **stdout**.

The lower level functions, **\_\_inchar()**, **\_\_outchar()**, and **\_\_outerrorchar()** implement the actual details of input/output for each of the boards for emulators listed above. Examine the code for details.

See the makefiles in the example directories (*version\_path/example/...*) for suggestions on recompiling **chario.c** for the selected target board.

## 15.8.2 File I/O

A number of standard file I/O functions are implemented as a “RAM-disk”. These functions are part of the standard **libc.a** library when **cross** is used as part of a **-ttof:cross** option when linking (see [Table 4-1](#)).

For a convenient way to create RAM-disk files for use with these functions, see [15.11 Target Program Arguments, Environment Variables, and Predefined Files](#), p.294.

Space required by the file I/O functions is allocated by calls to **malloc()**.

The following functions are supported. For details on any of these functions, including header files containing their prototypes, lookup the function in [34. C Library Functions](#).

### **access()**

In **access.c**, checks if a file is accessible.

### **close()**

In **close.c**, closes a file.

### **creat()**

In **creat.c**, opens a new file by calling **open()**.

### **fcntl()**

In **fcntl.c**, checks the type of a file.

### **fstat()**

In **stat.c**, gets some information about a file.

### **isatty()**

In **isatty.c**, checks whether a file is connected to an interactive terminal. It is used by the **stdio** functions to decide how a file should be buffered. If it is a terminal, the stream will be flushed at every end-of-line, otherwise the stream will be buffered and written in large blocks.

**link()**

In **link.c**, causes two filenames to point to the same file.

**lseek()**

In **lseek.c**, positions the file pointer in a file.

**open()**

In **open.c**, opens a new or existing file.

**read()**

In **read.c**, reads a buffer from a file.

**unlink()**

In **unlink.c**, removes a file from the file system.

**write()**

In **write.c**, writes a buffer to a file.

### 15.8.3 Miscellaneous Functions

The following functions provide miscellaneous services.

**clock()**

In **clock.c**, is an ANSI C function returning the number of clock ticks elapsed since program startup. It is not used by any other library function.

**\_\_diab\_lib\_err()**

In **lib\_err.c**, reports errors caught by library functions. See [15.6 Library Exception Handling](#), p.285.

**\_exit()**

In **\_exit.c**, closes all open files and halts. See [15.4.5 Notes for Exit Functions](#), p.282.

**getpid()**

In **getpid.c**, returns a process number. Modify this if you have a multiprocessing system.

**\_\_init\_main()**

In **init.c**, is called from the startup code and performs some initializations. See [15.4.4 Notes for init.c](#), p.281.

**kill()**

In **kill.c**, sends a signal to a process. Only signals to the current process are supported.



**signal()**

In **signal.c**, changes the way a signal is handled.

**time()**

In **time.c**, returns the system time. Other functions in the library expect this to be the number of seconds elapsed since 00:00 January 1st 1970.

## 15.9 Communicating with the Hardware

The following features facilitate access to the hardware in an embedded environment.

### 15.9.1 Mixing C and Assembler Functions

The calling conventions of the compiler are well defined, and it is straightforward to call C functions from assembler and vice versa. See [9. Calling Conventions](#) for details.

Note that the compiler sometimes prepends and/or appends an underscore character to all identifiers. Use the **-S** option to examine how this works.

In C++, the **extern "C"** declaration can be used to avoid name mangled function names for functions to be called from assembler.

### 15.9.2 Embedding Assembler Code

Use the **asm** keyword or direct functions to intermix assembler instructions in the compiler function. See [7. Embedding Assembly Code](#) for details.

### 15.9.3 Accessing Variables and Functions at Specific Addresses

There are four ways to place a variable or function at a specific absolute address:

1. At compile-time by using the **#pragma section** directive to specify that a variable should be placed at an absolute address. See [Using the Address Clause to Locate Variables and Functions at Absolute Addresses](#), p.266.

Advantages of using absolute sections:

- I/O registers, global system variables, and interrupt vectors and functions can be placed at the correct address from the program without the need to write a complex linker command file.
- Absolute variables will have all symbolic information needed by symbolic debuggers. Variables defined using the linker command language cannot be debugged at a high level.

Examples using absolute addressing at compile-time:

```
// define IOSECT:
// a user defined section containing I/O registers
#pragma section IOSECT near-absolute RW address=0xffffffff00
#pragma use_section IOSECT ioreg1, ioreg2

// place ioreg1 at 0xffffffff00 and ioreg2 at 0xffffffff04
int ioreg1, ioreg2;

// Put an interrupt function at address 0x700
#pragma interrupt programException
#pragma section ProgSect RX address=0x700
#pragma use_section ProgSect programException

void programException() {
 // ...
}
```

2. At compile-time by using a macro. For example:

```
/* variable at address 0x100 */
#define mem_port (*(volatile int *)0x100)

/* function at address 0x200 */
#define mem_func (*(int (*)())0x200)

mem_port = mem_port + mem_func();
```

3. At link time by defining the address of an identifier. For example:

In the C file:

```
extern volatile int mem_port; /* variable */
extern int mem_func(); /* function */

mem_port = mem_port + mem_func();
```

In the linker command file add:

```
_mem_port = 0x100; /* Both with and without '_' */
mem_port = 0x100;
```

```
_mem_func = 0x200;
mem_func = 0x200;
```

Note the use of the **volatile** keyword to specify that all accesses to this memory must be executed in the order as given in the source program, without the optimizer eliminating any of the accesses.

4. By placing the variables or functions in a special named section during compilation and then locating the section via a linker command file.

See [25. Linker Command Language](#) for additional details.

## 15.10 Reentrant and “Thread-Safe” Library Functions

Most library functions are reentrant, although in some cases this is impossible because the functions are by definition not reentrant. In [34. C Library Functions](#), the “Reference” portion of each function description includes “REENT” for completely reentrant functions and “REERR” for functions which are reentrant except that **errno** may be set. Functions not so marked are not reentrant. In some cases, standard functions are supplied in special reentrant versions, and functions that modify only **errno** can be made completely reentrant by modifying the `__errno_fn()` function. See [34. C Library Functions](#), for more information.

The reentrant functions are “thread-safe”—that is, they work in a multi-threaded or multitasking environment. Notable exceptions include `malloc()` and `free()`. Typically, real-time operating systems include thread-safe versions of these functions. You can also create thread-safe versions of `malloc()` and `free()` by implementing the functions `__diab_alloc_mutex()`, `__diab_lock_mutex()`, and `__diab_unlock_mutex()`; these three functions are called by `malloc()` (see `malloc.c` for their usage) but, as shipped, do nothing.

## 15.11 Target Program Arguments, Environment Variables, and Predefined Files

In a host-based execution environment, a program can be started with command-line arguments and can access environment variables and a file system.

The **setup** feature brings the same capabilities to programs running in an embedded environment without the need for an operating system or file devices.

Being able to pre-define arguments, environment variables, and files means:

- When porting an existing host-based program (e.g., a test program or benchmark), it may be possible to compile and run the program with little or no modification.
- A program can read large amounts of test or constant data from a “RAM-disk” file using the input/output functions described in [15.8.2 File I/O](#), p.289.

The **setup** program provides initial values for arguments, environment variables, and RAM-disk files as follows:

- You run **setup** on your host system, giving it options which provide values for target-based “command-line options” and “environment variables” and which name host files.
- **setup** writes a file on your host system called **memfile.c**. The data for the arguments and environment variables and from the host files is included in **memfile.c**.
- You then treat **memfile.c** as part of your application: include it as a normal **.c** file in your makefile in order to compile and link it with your application.
- When you run your application on your target, the code in **memfile.c** and associated library functions will provide the data for the **argc** and **argv** arguments to **main**, for environment variables accessible through **getenv** calls, and for RAM-disk files. (See [15.4 Startup and Termination Code](#), p.278 for related details.)

**setup** is run as follows:

```
setup [-a arg] [-e evar[=value]] [-b file] [-t file] ...
```

where the options are:

- **-a arg**  
Increments **argc** by one and adds *arg* to the strings accessible through **argv** passed to **main** in the usual way. The program name pointed to by **argv[0]** will always be “**a.out**”.

**-e** *envar*[=*value*]

Creates an environment variable accessible through **getenv()** in the usual way: **getenv("name")** will return a null-pointer if *name* does not match any *envar* defined by **-e**, will return an empty string if there is a match but no *value* was provided, or will return "*value*" as a string.

**-b** *filename*

The contents of the given host file will be a binary file accessible as a RAM-disk file with the given name. (Any path prefix will be included in the *filename* exactly as given.)

**-t** *filename*

The contents of the host file will be a text file accessible as a RAM-disk file with the given name. (Any path prefix will be included in the *filename* exactly as given.)

Any combination and number of the different options are allowed. Invoking **setup** with no arguments will display a usage message.

### Example

If you run **setup** as follows:

```
setup -a -f -a db.dat -e DEBUG=2 -b db.dat -t f1.asc
```

it will write **memfile.c** in the current directory.

When **memfile.c** is compiled and included in your application:

- The application's **main** function will act as if the application had been started with the command line:

```
a.out -f db.dat
```

- The environment variable **DEBUG** will be set to "2" so that **getenv("DEBUG")** will return "2".
- Binary file **db.dat** will be predefined and can be opened with **fopen()** or **open()** library calls.
- ASCII text file **f1.asc** will be predefined and can be opened as above.

**setup** is an ANSI standard C program supplied in source form as **setup.c** in the **src** directory. To use it, first compile and link it with any native ANSI C tools on your host system. Typically, it will be sufficient to change to the tools' **src** directory, enter the following command (assuming **cc** invokes an ANSI C compiler):

```
cc -o setup setup.c
```

and then move the executable file **setup** to your tools' **bin** directory or some other directory in your path.

## 15.12 Profiling in an Embedded Environment

*Profiling* collects information while your program executes. That information is then fed back to the compiler for more optimal code generation based on what your program actually does when it executes.

The compiler implements profiling through the **-Xblock-count** and **-Xfeedback** options. There are three main steps:

- Compile your code with **-Xblock-count** to insert counting code.
- Run your program; count data will be written as your program runs. Transfer the count data from the target to your host.
- Re-compile your code with **-Xfeedback** — the compiler will optimize based on the count data.

In more detail:

- Compile all modules to be profiled with the **-Xblock-count** option, e.g.:

```
dcc -c -Xblock-count file1.c file2.c
```

This causes the compiler to insert minimal *profiling code* to track the number of times each basic block is executed (a *basic block* is the code between labels and branches).

This *profile data* is written by the profiling code to a target file named **dbcnt.out**. Thus, you must either have an environment in which target files may be connected to files on your host, or you may use the RAM-disk service (see [15.8.2 File I/O](#), p.289).

- Copy library module `version_path/src/_exit.c` and modify it to write the profiling data back to your host system. For example, if you used the RAM-disk feature, copy the data in target file **dbcnt.out** to **stdout** and collect the data into an ASCII file. The distributed `_exit.c` includes code to do this conditioned by two macros: **PROFILING** and **RAMDISK**. To use this code without further modification to `_exit.c`, recompile with:

```
dcc -c -DPROFILING -DRAMDISK version_path/src/_exit.c
```

See `_exit.c` for additional details.

- Compile the rest of your program and link as usual.
- Execute your program on the target system. When it terminates, it will write the profiling information back to the host system per your modification to `_exit.c`.
- If the profiling information was transferred back to the host in ASCII format, use the **ddump** command to convert it to a binary file (the **dbcnt.out** output filename is chosen because it is the default for the step after this).

```
ddump -B -o dbcnt.out your-file-of-collected-profile-data
```

- Recompile the modules profiled with the **-Xfeedback** option:

```
dcc -c -Xfeedback -XO file1.c file2.c
```

(use **-Xfeedback=profile-file**, where *profile-file* is the name of file of collected profile data in binary form if that file is not named **dbcnt.out**).

The compiler will optimize based on the profile data collected from the target. Make sure to use the **-XO** option as well to get the best code (either **-XO** or **-O** must be included or the profile data will be ignored).





---

PART III

# Wind River Assembler

|    |                                      |     |
|----|--------------------------------------|-----|
| 16 | The Wind River Assembler .....       | 301 |
| 17 | Syntax Rules .....                   | 317 |
| 18 | Sections and Location Counters ..... | 327 |
| 19 | Assembler Expressions .....          | 331 |
| 20 | Assembler Directives .....           | 339 |
| 21 | Assembler Macros .....               | 363 |
| 22 | Example Assembler Listing .....      | 369 |



# 16

## *The Wind River Assembler*

- 16.1 Introduction 301
- 16.2 Selecting the Target 302
- 16.3 The `das` Command 302
- 16.4 Assembler Command-Line Options 303
- 16.5 Assembler `-X` Options 307

### 16.1 Introduction

This chapter describes the Wind River assembler (**das**) for MIPS microprocessors. For in-depth information on the MIPS architecture and instructions, please refer to the manufacturer's documentation.

## 16.2 Selecting the Target

The target for the assembler is selected by the same methods as for the compiler. See [4.1 Selecting a Target](#), p.23 for details. When using the compiler drivers **dcc**, **dplus**, etc., the target for the assembler is selected automatically by the driver.

## 16.3 The das Command

The command to execute the assembler is as follows:

```
das [options] [input-files]
```

where:

**das**  
Invokes the assembler.

*options*  
Command-line options; see the following subsection for details. Options must precede the input files.

*input-files*  
A list of filenames, paths permitted, separated by whitespace, naming the file(s) to be assembled; the default suffix is **.s**.

The assembler assembles the input file and generates an object file as determined by the selected target configuration. By default, the output file has the name of the input file with an extension suffix of **.o**. The **-o** option can be used to change the output filename.

The form **-@name** can also be used for either *options* or *input-file*. If found, the name must be either that of an environment variable or file (a path is allowed), the contents of which replace **-@name**.

Example: assemble **test.s** with a symbol named **DEBUG** equal to 2 for use in conditional assembly statements:

```
das -D DEBUG=2 test.s
```

## 16.4 Assembler Command-Line Options

The following command-line options are available. Also see the next section, [16.5 Assembler -X Options](#), p.307.



**NOTE:** Command-line options are case-sensitive. For example, **-c** and **-C** are two unrelated options. For easier reading, command-line options may be shown with embedded spaces in the table. In writing options on the command line, space is allowed only following the option letter, not elsewhere. For example, “**-D DEBUG=2**” is valid; “**-D DEBUG = 2**” is not.

If the same option is given more than once, the last instance is used.

### Show Option Summary (-?)

**-?, -h,**  
**--help**

Show synopsis of command-line options.

### Define Symbol Name (-Dname=value)

**-D** *name* [=*value*]

Define symbol *name* to have the given *value*. If *value* is not given, 1 is used. The **-D** option can be used to set symbols used with conditional assembly. See the [.if expression](#), p.348 for more information.

Note that assigning a string constant to a variable has no effect (see also [String Constants](#), p.325).

### Generate Debugging Information (-g)

**-g**

Generate debug line and file information. (ELF/DWARF format only).  
Equivalent to **-Xasm-debug-on**.

### Include Header in Listing (-H)

- H**  
Print a header on the first line of each page of the assembly listing. See [Include Header in Listing \(-Xheader...\)](#), p.309 for additional details and [22. Example Assembler Listing](#) for an example of an assembly listing.

### Set Header Files Directory (-I path)

- I** *path*  
Specify a directory where the assembler will look for header files. May be given more than once. See the [.include "file"](#), p.350 for more information.

### Generate Listing File (-l, -L)

- l**  
Generate the listing file to *input-file.lst*. (To change the default extension of the output file, use **-Xlist-file-extension="string"**; for example, **-Xlist-file-extension=".L"**.)
- L**  
Generate the listing file to standard output. See [22. Example Assembler Listing](#) for an example of an assembly listing.

### Set output File (-o file)

- o** *file*  
Write the object file to *file* instead of the default (*input-file.s*). Applies only to the first file if a list of files is presented; remaining files in the list use the default.

### Remove the Input File on Termination (-R)

- R**  
May be used by tools to remove temporary files.

**Specify Assembler Description (.ad) File (-T ad-file)****-T** *ad-file*

Specify which assembler description (.ad) file to use. This is normally set automatically by using the **-t** option, defining the **DTARGET** and the **DOBJECT** environment variables, or using the **-WDDTARGET** and the **-WDDOBJECT** command-line options. It is primarily for internal use by Wind River.

**Select Target (-ttof:environ)****-ttof:environ**

Specifies with one command the **DTARGET** (*t*), the **DOBJECT** (*o*), the **DFP** (*f*), and the **DENVIRON** (*environ*) configuration variables. See [4. Selecting a Target and Its Components](#) for details.

**Print Version Number (-V)****-v**

Display the version number of the assembler on standard output.

**Define Configuration Variable (-W Dname=value)****-W Dname=value**

Set a configuration variable for use in the configuration files with the given *name* to the given *value*. Overrides an environment variable of the same name.

**Select Object Format and Mnemonic Type (-W DDOBJECT=object-format)****-W DDOBJECT=object**

Specify the object format and mnemonic type. Overrides the environment variable **DOBJECT** if it is also set.

**Select Target Processor (-W DDTARGET=target)****-W DDTARGET=target**

Specify the target processor. Overrides the environment variable **DTARGET** if it is also set.

### Discard All Local Symbols (-x)

**-x**  
Discard symbols not declared **.extern** or **.comm**.

### Discard All Symbols Starting With .L (-X)

**-X**  
Discard all symbols starting with **.L**; supports compilers using this form for automatically generated symbols, including the Wind River compiler.

### Print Command-Line Options on Standard Output (-#)

**-#**  
The output of this option can be directed to a file. This can be convenient when contacting Technical Services. The **-#** should immediately follow the **das** command (after a space).

### Read Command-Line Options from File or Variable (-@name, -@@name)

**-@name**  
Read command-line options from either a file or an environment variable. When **-@name** is encountered on the command line, the assembler first looks for an environment variable with the given name and substitutes its value. If an environment variable is not found then it tries to open a file with given name and substitutes the contents of the file. If neither an environment variable or a file can be found, an error message is issued and the assembler terminates.

**-@@name**  
Same as **-@name**; also prints all command-line options on standard output.

### Redirect Output (-@E=file, -@E+file, -@O=file, -@O+file)

**-@E=file**  
**-@E+file**  
Redirect any output to standard error to the given file.



**-@O=file**

**-@O+file**

Redirect any output to standard output to the given file.

In both cases, use of + instead of = appends the output to the file.

## 16.5 Assembler -X Options

The following options provide more detailed control of the assembler. The **-X** options are for use on the command line; **-X** options can also be set using the **.xopt** assembler directive. See [.xopt](#), p.362.

### Specify Value to Fill Gaps Left by .align or .alignn Directive (-Xalign-fill-text)

**-Xalign-fill-text=n**

Fill gaps left by the **.align** or **.alignn** directive with the value *n*, overriding the processor-specific default.

### Interpret .align Directive (-Xalign-value, -Xalign-power2)

**-Xalign-value**

Interpret the value in an **.align** directive as the value to which the location counter is to be aligned, which must be a power of 2. Example:

**-Xalign-value=8** means **.align** is to align on an 8-byte boundary.

**-Xalign-power2**

Interpret the value in an **.align** directive as the power of 2 to which the location counter is to be aligned. Example: **-Xalign-power2=3** means **.align** is to align on an 8-byte boundary. This is the default.

### Enable Digital Signal Processing (-Xase-dsp)

**-Xase-dsp**

Enable Digital Signal Processing (DSP) assembler instructions.

### Enable Multi-Threading Instruction Support (-Xase-mt)

**-Xase-mt**  
Enable assembler multithreading instructions.

### Generate Debugging Information (-Xasm-debug-... )

**-Xasm-debug-off**  
Do not generate debug line and file information. This is the default.

**-Xasm-debug-on**  
Generate debug line and file information. (ELF/DWARF format only).

### Align Program Data Automatically Based on Size (-Xauto-align)

**-Xauto-align-off**  
The assembler performs no data alignment. This is the default.

**-Xauto-align**  
Align program data automatically based on size.

### Set Instruction Type (-Xcpu-...)

**-Xcpu-target**  
Accept instructions only for the target processor designated by *target*. This option is primarily for internal use and is set automatically by the driver in response to the user-level *-ttof:environ* option. See [Table 4-1](#) for details.

**-Xcpu-TX49xx** enables support for TX49 processors.

### Enable MIPS32 Version 2 Instructions (-Xcpu-mips32v2)

**-Xcpu-mips32v2**  
Enable MIPS32 Version 2 assembler instructions.

### Set Default Value for Section Alignment (-Xdefault-align)

**-Xdefault-align=value**  
Set the value use when calculating the default alignment for **.comm**, **.lcomm**, and **.sbss** directives, and the alignment used by the **.even** directive.

The default value of **-Xdefault-align** is 8 if no value is given.

Absent this directive, the default alignment for ELF sections is the maximum alignment of all objects in the section.

Note that for ELF modules, **-Xdefault-align** does not set the alignment of sections — it sets the default for used by the **.comm**, **.lcomm**, **.sbss**, and **.even** directives. Only if one of these directives is in fact used in a section will the alignment be as set by **-Xdefault-align** rather than the maximum alignment of all objects in the section.

### Work Around VR4133 Bug (-Xfix-vr4133)

#### **-Xfix-vr4133**

Use with the **-mfix-vr4133** driver option (see [5.3.17 Work Around VR4133 Bug \(-mfix-vr4133\)](#), p.46) to implement a workaround for a problem that arises with NEC VR4133 processors when **mult/div/macc** instructions follow **mflo/mfhi** instructions.

### Enable Local GNU Labels (-Xgnu-locals-...)

#### **-Xgnu-locals-off**

Disable local GNU labels. See [GNU-Style Locals](#), p.323 for more information. The default setting is **-Xgnu-locals-on**.

#### **-Xgnu-locals-on**

Enable local GNU labels. See [GNU-Style Locals](#), p.323 for more information. This is the default.

### Include Header in Listing (-Xheader...)

#### **-Xheader**

Include a header in the listing. See the **-l** and the **-L** options. This option is turned off as a default. This option has the same effect as the **-H** option. See also **-Xheader-format** below 31.

#### **-Xheader-off**

Do not include a header in the listing file. This is the default.

See [22. Example Assembler Listing](#) for an example of an assembly listing.

## Set Header Format (-Xheader-format="string")

**-Xheader-format="string"**

Define the format of the header in the assembly listing. (The header is enabled by options **-H** or **-Xheader** above). The header *string* can contain format specifications in any order introduced by a "%". Characters not preceded by "%" are printed as is, including spaces and escapes such as "\t" for tab.

Valid format specifications are:

**%nE**

Use *n* columns to display the error count.

**%nF**

Use *n* columns to display the filename.

**%N**

Start a new line.

**%nP**

Use *n* columns to display the page number.

**%nS**

Use *n* columns to display the subtitle given with the **-Xsubtitle** option.

**%nT**

Use *n* columns to display the title given with the **-Xtitle** option.

**%nW**

Use *n* columns to display the warning count.

The default header *string* is:

```
"%30T File: %10F Errors %4E"
```

See [22. Example Assembler Listing](#) for an example of an assembly file listing.

## Set Label Definition Syntax (-Xlabel-colon...)

**-Xlabel-colon**

Require that all label definitions have a colon ":" appended. When this option is selected, some directives are allowed to start the line. This is the default.

Note that this applies to all directives, including **.equ** and **.set**. Thus, with this option:

```
TRUE: .set 1 valid
TRUE .set 1 invalid
```

**-Xlabel-colon-off**

Do not require label definitions to end with a colon ":". When this option is selected, directives are not allowed to start in column 1.

**Set Format of Assembly Line in Listing (-Xline-format="string")****-Xline-format="string"**

Define the format of each assembly line in a listing. The *string* can contain the following format specifications, in any order, starting with a "%". Characters not preceded by "%" are printed as is, including spaces and escapes such as "\t" for tab.

Valid format specifications are:

**%nA**

Use *n* columns to display current address.

**%n.mC**

Use *n* columns to display the generated code. A space is inserted at every *nth* column.

**%nD**

Display a maximum of *n* generated bytes for each source line. *n* may have a value from 1 through 32. More than one listing line might be used to display lines that produce many bytes.

**%nL**

Use *n* columns to display the current source line number.

**%nP**

Use *n* columns to display the current Program Location Counter (PLC) which corresponds to a section number.

The assembly source statement follows the above items on the listing line. The default line format string is:

"%8A %2P %32D%15.2C%5L\t"

See [22. Example Assembler Listing](#) for an example of an assembly listing.

**Generate a Listing File (-Xlist-...)****-Xlist-file**

Generate a listing file to file *input-file.lst*. Same as the **-l** option.

**-Xlist-off**

Generate no listing file. This is the default.

**-Xlist-tty**

Generate a listing file to standard output. Same as the **-L** option.

See [22. Example Assembler Listing](#) for an example of an assembly listing.

**Specify File Extension for Assembly Listing (-Xlist-file-extension="string")**

**-Xlist-file-extension=***string*

Use this option to override the default extension (**.lst**) of the listing file generated by **-l** or **-Xlist-file**. For example, **-Xlist-file-extension=".L"** specifies the file extension **.L**.

**Set Delay of Literal Generation (-Xlit-marg-...)**

**-Xlit-marg-hard=***value*

The assembler attempts to delay the generation of literals for as long as possible. This option, along with **-Xlit-marg-soft** and **-Xlit-marg-thresh**, controls that delay. The branch over the literals is only meant to be generated under unusual conditions. Use caution in invoking these options, as unpredictable results may result if the parameters are set to values beyond the capabilities of the target hardware.

Each literal has two addresses:

- *faddr*—the first address where the literal can be generated
- *laddr*—the last address where the literal can be generated

Forced generation of literals occurs when

```
curPC >= faddr && {curPC + hard} > laddr
```

(**curPC** is the current PC.) Use **-Xlit-marg-hard** to define the forced threshold value *hard*. The default value is 16.

**-Xlit-marg-soft=***value*

Define a soft (normal) threshold value. This threshold is used when the code contains an unconditional branch or return. The default value is 128.

Normal literal generation occurs when

```
curPC >= faddr && (curPC + soft) > laddr
```

**-Xlit-marg-thresh=***value*

Define a threshold value, that is, how long the thread should continue once literal generation has commenced. The default is 256.

Literal generation continues as long as

```
curPC >= faddr && (curPC + thresh) > laddr
```

### Set Line Length of Listing File (-Xllen=*n*)

**-Xllen=*n***

Define the number of printable character positions per line of the listing file. The default is 132 characters. A value of 0 means unlimited line length. This value may also be set or changed by the **.llen** (*llen expression*, p.352) and **.psize** (*.psize page-length [line-length]*, p.354) directives.

See [22. Example Assembler Listing](#) for an example of an assembly listing.

### Enable Blanks in Macro Arguments (-Xmacro-arg-space-...)

**-Xmacro-arg-space-off**

Do not permit blanks in macro arguments. This is the default.

**-Xmacro-arg-space-on**

Permit blanks in macro arguments.

### Set Page Break Margin (-Xpage-skip=*n*)

**-Xpage-skip=*n***

If *n* is zero (the default), page breaks in the listing file will be created using formfeed (ASCII 12). Otherwise each page will be padded with *n* blank lines, and these *n* blank lines included in the count set by **-Xplen** option. See [22. Example Assembler Listing](#) for an example of an assembly listing.

### Set Lines Per Page (-Xplen=*n*)

**-Xplen=*n***

Define the number of printable lines per page in the listing file. The default value of *n* is 60. See also **-Xpage-skip** above. This value may also be set or changed by the **.lcnt** (see *.lcnt expression*, p.351) and **.psize** (see *.psize page-length [line-length]*, p.354) directives. See [22. Example Assembler Listing](#) for an example of an assembly listing.

### Limit Length of Conditional Branch (-Xprepare-compress=*n*)

#### **-Xprepare-compress=*n***

Change the maximum length of a conditional branch from the default, which is 32,766 bytes; if *n* is not specified, the length is set to 1024. If a conditional branch exceeds this limit, the assembler inserts a reverse conditional around an unconditional branch to the label.

### Fill Delay Slots with NOPs (-Xset-reorder, -Xset-noreorder)

#### **-Xset-reorder**

The assembler automatically inserts a NOP instruction to fill any delay slot. This is the default.

#### **-Xset-noreorder**

NOP instructions are not inserted in delay slots. Equivalent to **.set noreorder**.

If **.set reorder** or **.set noreorder** appears in the assembly source, the **.set** directive takes precedence over the **-Xset-...** option. See [.set option](#), p.357.

These options do not affect compiler-generated code or embedded assembly code that is processed by the compiler.

### Enable Spaces Between Operands (-Xspace-...)

#### **-Xspace-off**

Do not allow spaces between operands in an assembly instruction.

#### **-Xspace-on**

Allow spaces between operands in an assembly instruction. This is the default.

### Delete Local Symbols (-Xstrip-locals..., -Xstrip-temps...)

#### **-Xstrip-locals**

Do not include local symbols in the symbol table. This is the same as the **-x** option. Local symbols are those not defined by **.extern** or **.comm**.

#### **-Xstrip-locals-off**

Include local symbols in the symbol table. This is the default.



**-Xstrip-temps=***string*

Do not include local labels starting with *string* in the symbol table. If no *string* is specified, **.L** will be used. This is the same as the **-X** option. This option can be used to suppress the temporary symbols generated by the compiler.

**-Xstrip-temps-off**

Include local symbols starting with **.L** in the symbol table. This is the default.

### Set Subtitle (-Xsubtitle="string")

**-Xsubtitle=***string*

Define a subtitle that will be printed in the %S field of the header. See [Set Header Format \(-Xheader-format="string"\)](#), p.310, for more information.

### Set Tab Size (-Xtab-size=n)

**-Xtab-size=n**

Define the number of spaces between tab stops. The default is 8.

### Set Title (-Xtitle="string")

**-Xtitle=***string*

Define a title that will be printed in the %T field of the header. See [Set Header Format \(-Xheader-format="string"\)](#), p.310, for more information.

### Warn When Specified Registers are Accessed (-Xwarn-use-greg)

**-Xwarn-use-greg=***mask*

Causes the assembler to issue a warning when a register indicated by a bit in *mask* is used. (Bit 0 corresponds to **r0** or **\$0**, bit 1 to **r1** or **\$1**, and so on.) This is helpful for detecting accesses to registers that must be preserved, such as **r2** and **r13**, in hand-written assembly code.



# 17

## *Syntax Rules*

17.1 Format of an Assembly Language Line 317

17.2 Symbols 320

17.3 Direct Assignment Statements 320

17.4 External Symbols 321

17.5 Local Symbols 322

17.6 Constants 323

### 17.1 Format of an Assembly Language Line

An assembly language file consists of a series of statements, one per line. The maximum number of characters in an assembly line is 1024.

The format of an assembly language statement is:

[*label* :]    [*opcode*]    [*operand field*]    [*# comment*]

Spaces and tabs may be used freely between fields and between operands (except that **-Xspace-off** option prohibits spaces between operands. See [Enable Spaces Between Operands \(-Xspace-...\)](#), p.314).

A comment starts with “#” as shown above. See [Comment](#), p.319 for additional comment details.

All fields are optional depending on the circumstances. In particular:

- Blank lines are permitted.
- A statement may contain only a *label*.
- The *opcode* must be preceded by a label or whitespace (one or more blanks or tabs). A statement may contain only an *opcode*. (Assembler directives may start in column one but only if the **-Xlabel-colon** option is given.)
- A line may consist of only a *comment* beginning in any column.

An example of assembly language code follows:

```
mv_word(dest,src,cnt)
move cnt ($6) 4-byte words from src ($5) to dest ($4)
 .globl mv_word
 .text
mv_word:
 blez $6, .L2
 nop
.L3:
 lw $25,0($5)
 addiu $5,$5,4
 sw $25,0($4)
 addiu $6,$6,-1
 bne $6,$0, .L3
 addiu $4,$4,4
.L2:
 jr $31
 nop
```

## Labels

A *label* is a user-defined symbol which is assigned the value of the current location counter; both of which are entered into the assembler's symbol table. The value of the label is relocatable.

A label is a symbolic means of referring to a specific location within a program. The following govern labels:

- A label is a symbol; see [17.2 Symbols](#), p.320 for the rules on forming symbols.
- A label always occurs first in a statement; there may be multiple labels on one line.
- A label may be optionally terminated with a colon, unless the **-Xlabel-colon** option is used in which case the colon is required. Examples:

```

start:
genesis: restart: # Multiple labels
7$: # A local label
4: # A local label

```

(See [17.5 Local Symbols](#), p.322 for details on local labels.)

## Opcode

The opcode of an assembly language statement identifies the statement as either a machine instruction or an assembler directive.

The opcode must be preceded by a label or whitespace (one or more blanks or tabs). One or more blanks (or tabs) must separate the opcode from the operand field in a statement. No blanks are necessary between a label ending with a colon and an opcode. However, at least one blank is recommended to improve readability.

A machine instruction is indicated by an instruction mnemonic.

An assembler directive (or just “directive”), performs some function during the assembly process. It does not produce any executable code, although it may assign space in a program for data. Assembler directives may start in column one but only if the **-Xlabel-colon** option is given.

The assembler is case-insensitive regarding opcodes.

## Operand Field

In general, an operand field consists of 0-3 operands separated by commas.

The format of the operand field for machine instruction statements is the same for all instructions. The format of the operand field for assembler directives depends on the directive itself.

## Comment

The comment delimiter is pound sign “#”.

An asterisk “\*” in column 1 is also treated as a comment delimiter.

The comment field consists of all characters in a source line including and following the comment character through the end of the line (the next <Newline> character). These characters are ignored by the assembler.

## 17.2 Symbols

A symbol consists of a number of characters, with the following restrictions:

- Valid characters include A-Z, a-z, 0-9, period “.”, dollar sign “\$”, and underscore “\_”.
- The first character must not be a “\$” dollar sign.
- The first character must not be numeric except for local symbols ([17.5 Local Symbols](#), p.322).

The only limit to the length of symbols is the amount of memory available to the assembler. Upper and lower cases are distinct: “Alpha” and “alpha” are separate symbols.

A symbol is said to be *declared* when the assembler recognizes it as a symbol of the program. A symbol is said to be *defined* when a value is associated with it. A symbol may not be redefined, unless it was initially defined with the directive *symbol .set expression* (see [symbol\[:\].set expression](#), p.358).

There are several ways to define a symbol:

- As the label of a statement.
- In a direct assignment statement.
- With the **.equ/.set** directives.
- As a local common symbol via the **.lcomm** directive.

The **.comm** directive will declare a symbol as a common symbol. If a common symbol is not defined in any module, it will be allocated by the linker to the end of the **.bss** section. See [23.5 COMMON Sections](#), p.381 for additional details.

## 17.3 Direct Assignment Statements

A direct assignment statement assigns the value of an arbitrary expression to a specified symbol. The format of a direct assignment statement is one of the following:

*symbol[:]* = *expression*

*symbol[:]* =: *expression*

The `::` syntax has the side effect that symbol will be visible outside of the current file. Examples of valid direct assignments are:

```
vect_size = 4
vectora = 0xfffe
vectorb = vectora-vect_size
CRLF: =: 0x0D0A
```

## 17.4 External Symbols

A program may be assembled in separate modules, and linked together to form a single program. By using external symbols, it is possible to define a label in one file and use it in another. The linker will relocate the reference so that the same address is used. There are two forms of external symbols:

- Ordinary external symbols declared with the **.globl**, **.global**, **.xdef**, or **.export** directives.
- Common symbols declared with the **.comm** directive.

For example, the following statements define the array **table** and the routine **two** to be external symbols:

```
 .globl table, two
 .data
table:
 .space 20 # twenty bytes long
 .text
two:
 addiu $2,$0,2 # return 2
 jr $31
 nop
```

External symbols are only declared to the assembler by the **.globl**, **.global**, **.xdef**, or **.export** directives. They must be defined (i.e., given a value) in another statement by one of the methods mentioned above. They need not be defined in the current file; in that case they are flagged as “undefined” in the symbol table. If they are undefined, they are considered to have a value of zero in expressions.

The following statements, which may be located in a different file, use the above defined labels:

```
jal two
nop
lui $5,%hi(table)
sw $4,%lo(table)($5)
```

Note that whenever a symbol is used that is not defined in the same file, it is considered to be a global undefined symbol by the assembler.

An external symbol is also declared by the **.comm** directive in one or more modules (see [.comm symbol, size \[alignment\]](#), p.343). For the rest of the assembly such a symbol, called a common symbol, will be treated as though it is an undefined global symbol. The assembler does not allocate storage for common symbols; this task is left to the linker. The linker computes the maximum size of each common symbol with the same name, allocates storage for it at the end of the final **.bss** section, and resolves linkages to it (unless the **-Xbss-common-off** is used; see [5.4.15 Control Allocation of Uninitialized Variables in "COMMON" and bss Sections \(-Xbss-off, -Xbss-common-off\)](#), p.69).

## 17.5 Local Symbols

Local symbols provide a convenient way of generating labels for branch instructions. Use of local symbols reduces the possibility of attempting to define a symbol more than once in a program, and separates entry point symbols from local references, such as the top of a loop. Local symbols cannot be referenced by other object modules. The assembler implements two styles of local symbols.

### Generic Style Locals

The generic style local symbols are of the form *n*\$ where *n* is any integer.

Examples of valid local symbols:

```
1$
27$
394$
```

Leading zeroes are significant, e.g., **2\$** and **02\$** are different symbols. A local symbol is defined and referenced only within a single local symbol block. There is



no conflict between local symbols with the same name which appear in different local symbol blocks. A new local symbol block is started when either:

- A non-local label is defined.
- A new program section is entered.

### GNU-Style Locals

A GNU-style local symbol consists of one to five digits when defined. A GNU-style local symbol is referenced by the digits followed by the character **f** or **b**. When the digits are suffixed by an **f**, the nearest definition going forward (toward the end of the source) is referenced. When suffixed with the character **b**, the nearest definition going backward (toward the beginning of the file) is referenced. Example:

```
15:
 .long 15f # Reference definition below.
 .long 15b # Reference definition above.
15:
```

By default the GNU style local symbols are recognized by the assembler. This can be disabled with the option **-Xgnu-locals-off** (see [Enable Local GNU Labels \(-Xgnu-locals-...\)](#), p.309).

## 17.6 Constants

The assembler supports integral, floating point, and string constants. Integral constants may be entered in decimal, octal, binary or hexadecimal form, or they may be entered as character constants. Floating point constants can only be used with the **.float** and **.double** directives.

### Integral Constants

Internally, the assembler treats all integer constants as signed 32-bit binary two's complement quantities. Valid constant forms are listed below. The order of the list is significant in that it is scanned from top to bottom, and the first matching form is used.

- 'c'  
character constant
- 0x*hex-digits*  
hexadecimal constant
- 0*octal-digits*  
octal constant
- lhex-digits*  
hexadecimal constant
- @*octal-digits*  
octal constant
- %*binary-digits*  
binary constant
- decimal-digits*  
decimal constant
- octal-digits***o**  
octal constant
- octal-digits***q**  
octal constant
- binary-digits***b**  
binary constant

Examples:

```
abc = 12 12 decimal
bcd = 012 12 octal (10 decimal)
cde = 0x12 12 hex (18 decimal)
```

To represent special character constants, use the following escape sequences:

| Constant | Value | Meaning             |
|----------|-------|---------------------|
| '\b'     | 8     | backspace           |
| '\t'     | 9     | horizontal tab      |
| '\n'     | 10    | line feed (newline) |
| '\v'     | 11    | vertical tab        |
| '\f'     | 12    | form feed           |
| '\r'     | 13    | return              |

| Constant | Value | Meaning      |
|----------|-------|--------------|
| '        | 39    | single quote |
| '\'      | 92    | backslash    |

By using a “\nnn” construct, where *nnn* is an octal value, any character can be specified:

```
'\101' same as 'A' (65 decimal)
'\60' same as '`' (48 decimal)
```

Floating Point Constants

Floating point constants have the following format:

[+|-].*i*{**e** | **E**}[+|-]*i*

where *i* is an integer. All parts are optional as long as the constant starts with a sign or a digit and contains either a decimal point or an exponent (**e** or **E** and a following digit). Also, +NAN and [+/-]INF are supported. Examples:

```
float 1.2, -3.14, 0.27172e1
double -123e-45, .56, 1e23
```

String Constants

The form of a string is:

"*characters*"

where *characters* is one or more printable characters or escape codes.

Characters represented in the source text with internal values less than 128 are stored with the high bit set to zero. Characters with source text values from 128 through 255, and characters represented by the “\nnn” construct are stored as is.

A *Newline* character must not appear within the character string. It can be represented by the escape sequence \n as described below. The (") is a delimiter character and must not appear in the string unless preceded by a backslash “\”.

Assigning a string constant to a variable has no effect. (See also [Define Symbol Name \(-Dname=value\)](#), p.303):

```
$ cat d.s
 .text
 .ifeq D=="b"
 nop
 .endif

$ das -L -tPPCES -DD="b" d.s
"d.s", line 2: error: syntax error
"d.s", line 4: error: endif statement without leading if
" 1 .text
00000000 00 6000 0000 2 .ifeq D=="b"
 3 nop
 4 .endif
```

The following escape sequences are also valid as single characters:

| Constant | Value       | Meaning              |
|----------|-------------|----------------------|
| \b       | 8           | Backspace            |
| \t       | 9           | Horizontal tab       |
| \n       | 10          | Line Feed (New Line) |
| \v       | 11          | Vertical tab         |
| \f       | 12          | Form feed            |
| \r       | 13          | Enter                |
| \"       | 34          | Double quote ""      |
| \\       | 92          | Backslash "\"        |
| \nnn     | nnn (octal) | Octal value of nnn   |

Some examples follow. The final two are equivalent.

| Statement                   | Hex Code Generated               |
|-----------------------------|----------------------------------|
| .ascii "hello there"        | 68 65 6C 6C 6F 20 74 68 65 72 65 |
| .ascii "Warning-\007\007\n" | 77 61 72 6E 69 6E 67 2D 07 07 0A |
| .ascii "Warning-",7,7,"\\n" | Same as previous line.           |

# 18

## *Sections and Location Counters*

[18.1 Program Sections 327](#)

[18.2 Location Counters 328](#)

### 18.1 Program Sections

Assembly language programs are usually divided into sections to separate executable code from data, constant data from variable data, initialized data from uninitialized data, etc. Some important predefined sections are described below, with a reference to the assembler directive that switches output to each section.

[.text](#), p.359

Instruction space.

[.data](#), p.344

Initialized data.

[.bss](#), p.342

Uninitialized data.

[.sbss \[symbol, size \[,alignment\]\]](#), p.354

Short uninitialized data.

[.rdata](#), p.354

Read-only data.

[.sdata](#), p.355

Short initialized data.

[.sdata2](#), p.355

Constant short initialized data.

By invoking these directives, it is possible to switch among the sections of the assembly language program. New sections can also be defined with the **.section** directive (see [.section name, \[alignment\], \[type\]](#), p.355).

The assembler maintains a separate location counter for each section. Thus for assembly code such as:

```
.text
instruction-block-1
.data
data-block-1
.text
instruction-block-2
.data
data-block-2
```

In the object file, *instruction-block-2* will immediately follow *instruction-block-1*, and *data-block-2* will immediately follow *data-block-1*.

ELF sections are aligned based on their contents or on a specified alignment in a **.section** directive. ELF sections are not extended to any boundary whether aligned or not.

Padding introduced into a code section (but not other types of sections) by means of an **.align** or **.alignn** directive is zero-filled (the nop instruction).



---

**NOTE:** See the **-f** linker option, [24. The dld Command](#), for filling of gaps between input sections in an output section.

---

## 18.2 Location Counters

The assembly current location counter is represented by the character “.” or the character “\$”. In the operand field of any statement or assembly directive it represents the address of the first byte of the statement.



**NOTE:** A current location counter appearing as an operand in a **.byte** directive (see *.byte expression* ..., p.342) always has the value of the address at which the first byte was loaded; it is not updated while evaluating the directive.

The assembler initializes the location counter to zero. Normally, consecutive memory locations are assigned to each byte of the generated code. However, the location where the code is stored may be changed by a direct assignment altering the location counter:

```
. = expression
```

*expression* must not contain any forward references, must not change from one pass to another, and must not have the effect of reducing the value of `."`. Note that the assembler supports absolute sections when using ELF, so setting `."` to an absolute position is equivalent to using the **.org** directive and will produce a section named **.abs.xxxxxxxx**, where *xxxxxxx* is the hexadecimal address of the section, with leading zeros to fill to eight digits. The linker will then place this section at the specified address. For example:

```
. = 0xff0000
```

will create a section named **.abs.00ff0000** located at that address.

Storage area may also be reserved by advancing the `."`. For example, if the current value of `."` is 0x1000:

```
. = . + 0x100
```

would reserve 100 (hex) bytes of storage. The next instruction would be stored at address 0x1100. Note that

```
.skip 0x100
```

is a more readable way of doing the same thing.





# 19

## *Assembler Expressions*

19.1 Introduction 331

19.2 Evaluation of Terms and Expressions 331

19.3 Unary Operators 333

19.4 Binary Operators 335

### 19.1 Introduction

This chapter discusses the evaluation of assembler expressions and lists the various binary and unary expressions recognized by the assembler.

### 19.2 Evaluation of Terms and Expressions

*Expressions* are combinations of terms joined together by unary or binary operators. An expression is always evaluated to a 32-bit value. If the instruction calls for only 8 or 16 bits, the least significant 8 or 16 bits are used.

A *term* is a component of an expression. A *term* may be one of the following:

- A constant
- A symbol
- An expression or *term* enclosed in parentheses (). Any quantity enclosed in parentheses is evaluated before the rest of the expression. This can be utilized to alter the normal precedence of operators, e.g., differentiating between  $a*b+c$  and  $a*(b+c)$ , or to apply a unary operator to an entire expression, e.g.,  $-(a*b+c)$ .

Any expression, when evaluated, is either *absolute* or *relocatable*:

1. An expression is *absolute* if its value is fixed. An expression whose terms are constants, or symbols whose values are constants via a direct assignment directive, is absolute. A relocatable expression minus a relocatable expression, where both items belong to the same program section is also absolute.
2. An expression is *relocatable* if it contains a label whose value will not be defined until link time. In this case the assembler will generate an entry in the relocation table in the object file. This entry will point to the instruction or data reference so that the linker can patch the correct value after memory allocation. The allowed relocatable expressions are defined in . together with the relocation type used. The following demonstrates the use of relocatable expressions, where "alpha" and "beta" are symbols:

alpha  
    relocatable

alpha+5  
    relocatable

alpha-0xa  
    relocatable

alpha\*2  
    not relocatable (error)

2-alpha  
    not relocatable, since the expression cannot be linked by adding alpha's offset to it

alpha-beta  
    absolute, since the distance between alpha and beta is constant, as long as they are defined in the same section

%lo(alpha)  
    relocatable (the low 16 bits of alpha)



**NOTE:** In the following tables, the phrase “**expr** evaluates to ... offset from the ... base register” (or similar) means that the assembler generates a constant which is adjusted as necessary by the linker so that the final value in memory is an offset from the designated base register. These constructs are used for position-independent code or data, or for small data or constant areas (both “position-independence” and “small” are implemented using the same mechanisms and registers). To execute correctly, the designated base register must be loaded with the base of the code or data area as appropriate. See the discussions of these topics in [14. Locating Code and Data, Addressing, Access](#).

## 19.3 Unary Operators

The *unary* operators recognized by the assembler are:

**%endof**(*section-name*)

Address of the end of the given section. Evaluates to **.endof.section\_name**, a symbol created by the linker. (See [23.3 Symbols Created By the Linker](#), p.378.)

*expr*@**h**

The most significant 16 bits of *expr* are extracted.

**%hiadj**(*expr*)

**%hi**(*expr*)

*expr*@**ha**

High adjust: The most significant 16 bits of *expr* are extracted and adjusted for the sign of the least significant 16 bits of *expr*. See [19.3.1 High Adjust Operator](#), p.335 below.

For user's of other architectures: usually, the **%hi** operator is a synonym for **@h**. For MIPS, per the manufacturer's manual, **%hi** “adjusts” as described below; the compiler also provides **@h** for the unadjusted value.

**%lo**(*expr*)

*expr*@**l**

The least significant 16 bits of *expr* are extracted.

**%piclo(*expr*)**

The least significant 16 bits of the 32 bit *expr* are extracted and adjusted for the sign of the least significant 16 bits.

Then *expr* is evaluated relative to the “small constant area” base register \$23.

**%scaoff(*expr*)**

**%picoff(*expr*)**

The least significant 16 bits of the 32 bit *expr* are extracted.

Then *expr* is evaluated relative to the “small constant area” base register \$23.

**%pichi(*expr*)**

The most significant 16 bits of the 32 bit *expr* are extracted and adjusted for the sign of the least significant 16 bits.

Then *expr* is evaluated relative to the “small constant area” base register \$23.

**%pidhi(*expr*)**

The most significant 16 bits of the 32 bit *expr* are extracted, and if the least significant 16 bits are negative, one is added to the upper 16 bits.

Then *expr* is evaluated relative to the “small data area” base register \$28.

**%pidlo(*expr*)**

The least significant 16 bits of the 32 bit *expr* are extracted.

Then *expr* is evaluated relative to the “small data area” base register \$28.

**%sdaoff(*expr*)**

**%pidoff(*expr*)**

The least significant 16 bits of the 32 bit *expr* are extracted.

Then 16 bit *expr* is evaluated relative to the “small data area” base register \$28.

**%sizeof(*section-name*)**

Size of the given section. Evaluates to **.sizeof.*section\_name***, a symbol created by the linker (see [23.3 Symbols Created By the Linker](#), p.378).

**%startof(*section-name*)**

Address of the start of the given section. Evaluates to **.startof.*section\_name***, a symbol created by the linker (see [23.3 Symbols Created By the Linker](#), p.378).

|   |            |
|---|------------|
| + | unary add  |
| - | negate     |
| ~ | complement |

### 19.3.1 High Adjust Operator

Sometimes the compiler (or a hand-coded assembly language program, if not the compiler) uses two instructions to copy an address to or from a location in memory. Each instruction can include 16 bits of the address as an immediate value, and the two 16-bit parts of the address are added to form the full address.

For the purposes of this discussion:

- The first instruction has the higher 16 bits of the address.
- The second instruction has the lower 16 bits of the address.

In some cases, the second instruction sign extends the low 16 bits (for example, 0x8000 is sign-extended to 0xffff8000). If so, the first instruction must compensate so that the correct address is calculated when the two parts of the address are added.

How the first instruction compensates depends on the most significant bit of the lower 16 bits of the address:

- If it is zero, no adjustment is made.
- If it is 1, the first instruction adds 1 to the higher 16 bits of the address. The second instruction adds 0xffff, which is equivalent to -1. Thus, the two additions negate each other.

## 19.4 Binary Operators

The *binary* operators recognized by the assembler are:

| Binary Operator | Description              |
|-----------------|--------------------------|
| +               | add                      |
| -               | subtract                 |
| *               | multiply                 |
| /               | divide                   |
|                 | bitwise or               |
| %               | modulo                   |
| &               | bitwise and              |
| ^               | bitwise exclusive or     |
| <<              | shift left               |
| >>              | shift right              |
| ==              | equal to                 |
| !=              | not equal to             |
| <=              | less than or equal to    |
| <               | less than                |
| >=              | greater than or equal to |
| >               | greater than             |

19.4.1 Operator Precedence

Expressions are evaluated with the following precedence in order from highest to lowest. All operators in each row have the same precedence.

Table 19-1 Assembler Operator Precedence and Associativity

| Operator    | Associativity |
|-------------|---------------|
| unary + - ~ | right to left |

Table 19-1 **Assembler Operator Precedence and Associativity** (cont'd)

| Operator                                                                                                                    | Associativity |
|-----------------------------------------------------------------------------------------------------------------------------|---------------|
| @h @ha %hi %hiadj<br>@l %lo<br>%pichi %piclo %picoff<br>%pidhi %pidlo %pidoff<br>%scaoff %sdaoff<br>%startof %endof %sizeof | left to right |
| * / % (modulo)                                                                                                              | left to right |
| binary + -                                                                                                                  | left to right |
| << >>                                                                                                                       | left to right |
| < <= > >=                                                                                                                   | left to right |
| == !=                                                                                                                       | left to right |
| &                                                                                                                           | left to right |
| ^                                                                                                                           | left to right |
|                                                                                                                             | left to right |





# 20

## *Assembler Directives*

20.1 Introduction 339

20.2 List of Directives 340

### 20.1 Introduction

All the assembler directives (or just “directives”) described here that are prefixed with a period “.” are also available without the period. Most are shown with a “.” except for those traditionally written without it.

If the **-Xlabel-colon** option is given (see *Set Label Definition Syntax (-Xlabel-colon...)*, p.310), then directives which cannot take a label may start in column 1. A directive which can take a label—that is, can produce data in the current section—may not start in column 1. If **-Xlabel-colon-off** is in force (the default), then no directive may start in column 1.

Spaces are optional between the operands of directives unless the **-Xspace-off** option is in force (see *Enable Spaces Between Operands (-Xspace-...)*, p.314).

In addition to the directives documented in this chapter, the assembler recognizes the following directives generated by some compilers for symbolic debugging:

**.d1\_line\_start, .d1\_line\_end, .d1file, .d1line, .def, .endef, .ln, .dim, .line, .scl, .size, .tag, .type, .val, .d2line, .d2file, .d2\_line\_start, .d2\_line\_end, .d2string,**

`.d2_cfa_offset`, `.d2_cfa_register`, `.d2_cfa_offset_list`,  
`.d2_cfa_same_value_list`, `.d2_cfa_same_value`, `.uleb128`, `.sleb128`

The remainder of this chapter describes individual assembler directives.

## 20.2 List of Directives

**symbol[:] = expression**

See *symbol[:].equ expression*, p.346. See **-Xlabel-colon-...** in *Set Label Definition Syntax (-Xlabel-colon...)*, p.310 regarding the initial colon.

**symbol[:] =: expression**

Equivalent to *symbol = expression* except that *symbol* will be made a global symbol. See **-Xlabel-colon-...** in *Set Label Definition Syntax (-Xlabel-colon...)*, p.310 regarding the initial colon.

**.2byte**

This is a synonym for **.short** (*.short expression ,...*, p.358) except that there are no alignment restrictions and an unaligned relocation type will be generated if required by the target.

**.4byte**

This is a synonym for **.long** (*.long expression ,...*, p.352) except that there are no alignment restrictions and an unaligned relocation type will be generated if required by the target.

**.align expression**

Aligns the current location counter to the value given by *expression* (which must be absolute). When the option **-Xalign-value** is set, *expression* is used as the alignment value, and must be a power of 2. When the option **-Xalign-power2** is set, the alignment value is 2 to the power of *expression*. The default is **-Xalign-power2**.

There is no effect if the current location is already aligned as required.

In a section of type **TEXT**, if a “hole” is created, it will be zero-filled (the nop instruction) unless a different value is specified with **-Xalign-fill-text**.

Example:

```
.align 4
```

With **-Xalign-value**, aligns on a 4-byte boundary; with **-Xalign-power2**, aligns on a  $2^4 = 16$ -byte boundary.

**.alignn expression**

Aligns the current location counter to the value given by *expression* (which must be absolute).

There is no effect if the current location is already aligned as required.

In a section of type **TEXT**, if a “hole” is created, it will be zero-filled (the nop instruction) unless a different value is specified with **-Xalign-fill-text**.

Example:

```
.alignn 4
```

Will align on 4 byte boundary.

**.ascii "string"**

The **.ascii** directive stores the internal representation of each character in the string starting at the current location. See [String Constants](#), p.325 for rules for writing the “string”.

The **.ascii** directive is actually a synonym of the **.byte** directive — its operands may be a list of expressions including non-strings. See **.byte** for details ([.byte expression](#) ..., p.342).

**.asciz "string"**

The **.asciz** directive is equivalent to the **.ascii** directive with a zero (null) byte automatically appended as the final character of the string. In the C language, strings are null terminated. See [String Constants](#), p.325 for rules for writing the "string".

**.balign expression**

See [.alignn expression](#), p.341.

**.blkb expression**

See [.skip size](#), p.358.

**.bss**

Switches output to the **.bss** section. Note that **.bss** contains uninitialized data only, which means that the **.skip**, **.space**, and **ds.b** directives are the only useful directives inside the **.bss** section.

**.bsect**

See [.bss](#), p.342 above.

**.byte expression ,...**

Reserves one byte for each expression in the operand field and initializes the value of the byte to be the low-order byte of the corresponding expression. Multiple expressions are separated by commas.

Any expression may be a string containing one or more characters. Each character in the string will be allocated one byte. See [String Constants](#), p.325 for the rules for writing a string.

Example:

```
.byte 17,65,0101,0x41 # sets 4 bytes
.byte 0 # sets a single byte to 0
.byte 7,7,"Warning",7,7,0 # sets 12 bytes
```

### **.comm symbol, size [,alignment]**

Define *symbol* as the address of a common block with length given by expression *size* bytes and make it global. Contrast with **.lcomm**, ([.lcomm symbol, size \[,alignment\]](#), p.351) which does not make the symbol externally visible.

The *size* and *alignment* expressions must be absolute.

All common blocks with the same name in different files will refer to the same block. The linker will collect and allocate space for all common blocks, and, by default, place this space at the end of the **.bss** section; see [23.5 COMMON Sections](#), p.381 for details.

### **Optional alignment**

The optional *alignment* expression specifies the alignment of the common block. It must be absolute. If not specified, the default value equals the greatest power of 2 which is less than or equal to the minimum of *size* and the value specified by **-Xdefault-align** ([Set Default Value for Section Alignment \(-Xdefault-align\)](#), p.308), which defaults to 8.

See [Interpret .align Directive \(-Xalign-value, -Xalign-power2\)](#), p.307 for options for giving the alignment by power of 2 or the value specified. The default is to treat the *alignment* value as a power of 2.

Examples (assume **-Xdefault-align=8**):

```
.comm a1,100 # 100 bytes aligned on an 8-byte boundary.
.comm a2,7,2 # 7 bytes aligned on a 4-byte boundary.
```

### **dc.b expression**

See [.byte expression ,...,](#) p.342 above.

### **dc.l expression**

See [.long expression ,...,](#) p.352.

### **dc.w expression**

See [.word expression, ...](#), p.361.

### **ds.b size**

See [.skip size](#), p.358.

### **.data**

Switches output to the **.data** (initialized data) section.

### **.double float-constant ,...**

Reserves space and initializes double 64-bit IEEE floating point values.

Example:

```
double 1.0, -123.45e-56
```

### **.dsect**

See [.data](#), p.344 above.

### **.eject**

Forces a page break if a listing is produced by the **-L** or **-l** options. See [22. Example Assembler Listing](#) for an example of an assembly listing.

### **.else**

The **.else** directive is used with the **.ifx** directives to reverse the state of the conditional assembly, i.e., if statements were skipped prior to the **.else** directive, statements following the **.else** directive will be processed, and vice versa. See [.if expression](#), p.348 for an example.

**.elseif expression**

The **.elseif** directive must follow a **.ifx** or another **.elseif** directive in a conditional assembly block. If all prior conditions (at the same nesting level) have been false, then the *expression* will be tested and if non-zero, the statements following it assembled, else statements will be skipped until the next **.elseif**, **.else**, or **.endif** directive. The *expression* must be absolute. See [.if expression](#), p.348 for an example.

**.elsec**

See [.else](#), p.344 above.

**.end**

This directive indicates the end of the source program. All characters after the end directive are ignored.

**.endc**

See [.endif](#), p.345 below.

**.endif**

This directive indicates the end of a condition block; each **.endif** directive must be paired with a **.ifx** directive. See [.if expression](#), p.348 for an example.

**.endm**

This directive indicates the end of a macro body definition. Each **.endm** directive must be paired with a **.macro** directive. See [21. Assembler Macros](#) for a detailed description.

**.entry symbol ,...**

See [.global symbol ,...](#), p.347.

### **symbol[:] .equ expression**

The statement must be labeled with a symbol and sets the symbol to be equal to *expression*. See **-Xlabel-colon-...** in *Set Label Definition Syntax (-Xlabel-colon...)*, p.310, regarding the initial colon. Example:

```
nine: .equ 9
```



---

**NOTE:** Symbols defined with **.equ** may not be redefined. Use the second form of the **.set** directive in *.set symbol, expression*, p.358, instead of **.equ** if redefinition is required.

---

### **.error "string"**

Generate an error message showing the given string. See *String Constants*, p.325 for rules for writing the "string".

### **.even**

Aligns the location counter on the default alignment value, specified by the **-Xdefault-align** option (*Set Default Value for Section Alignment (-Xdefault-align)*, p.308).

### **.exitm**

Exit the current macro invocation.

### **.extern symbol ,...**

Declare that each symbol in the symbol list is defined in a separate module. The linker supplies the value from the defining module during linking. Multiple **.extern** directives for the same symbol are permitted. Example:

```
.extern add,sub,mul,div
```



**.export symbol ,...**

See *.global symbol ,...*, p.347 below.

**.file "file"**

Specifies the name of the source file for inclusion in the symbol table of the object file. The default is the name of the file. This directive is used by compilers to pass the name of the original source file to the symbol table. Example:

```
.file "test.c"
```

**.fill count,[size[,value]]**

Reserves a block of data that is *count*\**size* bytes big and initialized to *count* copies of *value*. The size must be a value between 1 and 4. The default *size* is 1 and the default *value* is 0.

**.float float-constant ,...**

Reserves space and initializes single 32-bit IEEE floating point values. Example:

```
.float 3.14159265, .089e4
```

**.global symbol ,...**

Declares each symbol in the symbol list to be visible outside the current module. This makes each symbol available to the linker for use in resolving **.extern** references to the symbol. Example:

```
.global add,sub,mul,div
```

**.globl symbol ,...**

See *.global symbol ,...*, p.347 above.

## **.ident "string"**

Appends the character string to a special section called **.comment** in the object file. See [String Constants](#), p.325 for rules for writing the "string". Example:

```
.ident "version 1.1"
```

## **.if expression**

The **.if** construct provides for conditional assembly. The *expression* must be absolute. If the *expression* evaluates to non-zero, all subsequent statements until the next **.elseif**, **.else**, or **.endif** directive at the same nesting level are assembled. If the terminating statement was **.elseif** or **.else**, then all statements following it up to the next **.endif** at the same level are skipped.

If the *expression* is zero, all statements up to the next **.elseif**, **.else**, or **.endif** at the same nesting level are skipped. An **.elseif** directive is evaluated and statements following it are skipped or not in the same manner as for the initial **.if** directive. If an **.else** directive is encountered, the statements following it up to the matching **.endif** are assembled.

**.if** constructs may be nested. Example:

```
 .if long_file_names
maxname: .equ 1024
 .elseif medium_file_names
maxname: .equ 128
 .else
maxname: .equ 14
 .endif
```

The following directives are equivalent: **.else** and **.elsec**, and **.endif** and **.endc**.

## **.ifendian**

### **.ifendian big**

Assemble the following block of code if the mode is big-endian.

### **.ifendian little**

Assemble the following block of code if the mode is little-endian.

Note that the "endian" mode is set automatically from the target options and may not be directly changed by the user.

**.ifeq expression**

**.ifeq** is an alias for **.if expression == 0**. See “**.if expression**” above for more details.

**.ifc "string1", "string2"**

**.ifc** is effectively an alias for **.if "string1"="string2"** (**.if** does not allow string expressions). See [.if expression](#), p.348 for more details. See [String Constants](#), p.325 for rules for writing each “string”.

For compatibility with other assemblers, either string may be enclosed in single quotes rather than double quotes. Within such a single-quoted string, two single quotes will be replaced by one single quote.

**.ifdef symbol**

Assemble the following code if the *symbol* is defined. See also [.ifndef symbol](#), p.350 below. See [.if expression](#), p.348 for more details on **.if** constructs.

**.ifge expression**

The **.ifge** is an alias for **.if expression >= 0**. See [.if expression](#), p.348 for more details.

**.ifgt expression**

The **.ifgt** is an alias for **.if expression > 0**. See [.if expression](#), p.348 for more details.

**.ifle expression**

The **.ifle** is an alias for **.if expression <= 0**. See [.if expression](#), p.348 for more details.

**.iflt expression**

The **.iflt** is an alias for **.if expression < 0**. See [.if expression](#), p.348 for more details.

### **.ifnc "string1", "string2"**

**.ifnc** is effectively an alias for **.if "string1"!="string2"** (**.if** does not allow string expressions). See [.if expression](#), p.348 for more details. See [String Constants](#), p.325 for rules for writing each "string".

For compatibility with other assemblers, either string may be enclosed in single quotes rather than double quotes. Within such a single-quoted string, two single quotes will be replaced by one single quote.

### **.ifndef symbol**

Assemble the following code if the *symbol* is not defined. See [.ifdef symbol](#), p.349 above. See also [.if expression](#), p.348 for more details on **.if** constructs.

### **.ifne expression**

**.ifne** is an alias for **.if expression != 0**. See [.if expression](#), p.348 for more details.

### **.import symbol ,...**

See [.extern symbol ,...](#), p.346.

### **.incbin "file"[,offset[,size]]**

Insert the content of a specified file into the assembly output. The assembler searches for the file in the current directory and all paths added using the **-I** option. If *offset* is specified, *offset* bytes are skipped at the beginning of the file. If *size* is specified, only *size* bytes are inserted into the assembly output.

### **.include "file"**

Inserts the contents of the named file after the **.include** directive. May be nested to any level. Example:

```
.include "globals.h"
```

**.lcnt expression**

Set or change the number of lines on each page of the listing file. The default value is 60. This count may be set initially by option **-Xplen** (*Set Lines Per Page (-Xplen=n)*, p.313), and it includes any margin set by option **-Xpage-skip** (*Set Page Break Margin (-Xpage-skip=n)*, p.313). See [22. Example Assembler Listing](#) for an example of an assembly listing. Example:

```
.lcnt 72
```

**.lcomm symbol, size [,alignment]**

Define a symbol as the address of a local common block of length *size* expression bytes in the **.bss** section.

Note that the symbol is not made visible outside the current module. Contrast with **.comm**.

The *size* and *alignment* expressions must be absolute. See [Optional alignment](#), p.343 for a description of the *alignment* parameter and its default value. Example:

```
.lcomm local_array,200 # 200 bytes aligned on 8 bytes by default
```

**.list**

Turns on listing of lines following the **.list** directive if the option **-L** or **-l** is specified. Listing can be turned off with the **.nolist** directive. See [22. Example Assembler Listing](#) for an example of an assembly listing.

**.literals**

MIPS16 only: Flushes the assembler's accumulated literal pool for the current section. This is used to emit the literal table at the exact point desired.

Whenever the distance to the most remote instruction referencing a literal gets close to the maximum, the assembler automatically emits part of table. It tries to generate the table after a branch if possible; otherwise it will insert a branch around the table.

### **.llen expression**

Set the number of printable character positions per line of the listing file. The default value is 132. A value of 0 means unlimited line length. This count may be set initially by option **-Xllen** (*Set Line Length of Listing File (-Xllen=n)*, p.313). See [22. Example Assembler Listing](#) for an example of an assembly listing. Example:

```
.llen 132
```

### **.llong expression ,...**

Reserves 8 bytes (64 bits) for each expression in the operand field and initializes the value of the word to the corresponding expression. Example:

```
.llong 0xfedcba9876543210,0123456,-75 # 24 bytes
```

### **.long expression ,...**

Reserves one long word (32 bits) for each expression in the operand field and initializes the value of the word to the corresponding expression. Example:

```
.long 0xfedcba98,0123456,-75 # 12 bytes
```

### **name.macro [parameter ,...]**

Start definition of macro *name*. All lines following the **.macro** directive until the corresponding **.endm** directive are part of the macro body. See [21. Assembler Macros](#) for a detailed description.

Note the form:

```
.macro name parameter ,...
```

is also permitted for compatibility with other tools but is not recommended.

### **.mexit**

Exit the current macro invocation. Synonymous with [.exitm](#), p.346.

**.name "file"**

See [.file "file"](#), p.347.

**.nolist**

Turns off listing of lines following the **.nolist** directive if the option **-L** or **-l** is specified. Listing can be turned on with the **.list** directive. See [22. Example Assembler Listing](#) for an example of an assembly listing.

**.org expression**

Sets the current location counter to the value of *expression*. The value must either be an absolute value or be relocatable and greater than or equal to the current location. Using the **.org** directive with an absolute value in ELF mode will produce a section named **.abs.xxxxxxxx**, where *xxxxxxx* is the hexadecimal address of the section (with leading zeros as required to fill to eight digits). The linker will then place this section at the specified address. Example:

```
.org 0xff0000
```

will produce a section named **.abs.00ff0000** located at that address.

**.p2align expression**

Aligns the current location counter to 2 to the power of *expression*. The **.p2align** directive is equivalent to **.align** when the **-Xalign-power2** option is enabled.

**.page**

See [.eject](#), p.344.

**.pagelen expression**

See [.lcnt expression](#), p.351.

**.plen expression**

See [.lcnt expression](#), p.351.

**.previous**

Assembly output is directed to the program section selected prior to the last **.section**, **.text**, **.data**, etc. directive.

**.psect**

See [.text](#), p.359.

**.psize page-length [,line-length]**

Set the number of lines per page and number of character positions per line of the listing file. This directive is exactly equivalent to setting *page-length* with the [.lcnt expression](#), p.351 and setting *line-length* with the [.llen expression](#), p.352; see them for additional details. See [22. Example Assembler Listing](#) for an example of an assembly listing. Example:

```
.psize 72,132
```

**.rdata**

Switches output to the **.rodata** (read-only data) section.

**.rodata**

Switches output to the **.rodata** (read-only data) section.

**.sbss [symbol, size [,alignment]]**

With no arguments, switch output to the **.sbss** section (short uninitialized data space).



With arguments, define a symbol as the address of a block of length *size* expression bytes in the **.sbss** section and make it global.

The *size* and *alignment* expressions must be absolute. See [Optional alignment](#), p.343 for a description of the *alignment* parameter and its default value. Examples:

```
.sbss # switch to .sbss section
.sbss local_array,200 # reserve space in .sbss section
```

**.sbttl "string"**

See [.subtitle "string"](#), p.359.

**.sdata**

Switches output to the **.sdata** (short data space) section.

**.sdata2**

Switches output to the **.sdata2** (constant short data space) section.

**.section name, [alignment], [type]**

The assembly output is directed into the program section with the given name. The section name may be quoted with the (") character or not quoted. The section is created if it does not exist, with the attributes specified by *type*. *type* is one or more of the following characters, written as either a quoted "string" or without quotes. If *type* is not specified, the default is **d** (data).

Table 20-1 Section Type

| Type Character | Linker Command File Section Type <sup>a</sup> | Description of Section Contents |
|----------------|-----------------------------------------------|---------------------------------|
| <b>b</b>       | BSS                                           | zero-initialized data           |
| <b>c</b>       | TEXT                                          | executable code                 |
| <b>d</b>       | DATA                                          | data                            |
| <b>m</b>       | TEXT DATA                                     | mixed code and data             |

Table 20-1    **Section Type** (cont'd)

| Type Character | Linker Command File Section Type <sup>a</sup> | Description of Section Contents                                                                                                                 |
|----------------|-----------------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------|
| n              | COMMENT                                       | not allocatable — the section is not to occupy space in target memory; for example, debugging information sections such as <b>.debug</b> in ELF |
| o              | not applicable <sup>b</sup>                   | COMDAT section (see <a href="#">23.6 COMDAT Sections</a> , p.382)                                                                               |
| r              | CONST                                         | readable data                                                                                                                                   |
| w              | DATA                                          | writable data                                                                                                                                   |
| x              | TEXT                                          | executable code                                                                                                                                 |

- a. See *Type Specification: ([=]BSS), ([=]COMMENT), ([=]CONST), ([=]DATA), ([=]TEXT), ([=]BTEXT); OVERLAY, NOLOAD, OPTIONAL*, p.422.
- b. 'o', for **COMDAT**, is an additional attribute of a section and is usually used with another type specification character. If "o" is used with another section type character, the linker command file section type will be that of the other section type character; if used by itself, the default will be **COMMENT**.

The *alignment* expression must evaluate to an integer and specifies the minimum alignment that must be used for the section.

The compiler uses the **b** type with the **#pragma section** directive to specify an uninitialized section. Example: direct assembly output to a section named **".rom"**, with four-byte alignment, containing read-only data and executable code:

```
.section ".rom",4,rx
```

**.section n**

The assembly output is directed into the program section named **"\_Sn"**. Example: direct assembly output to a section named **"\_S1"**:

```
.section 1
```

**.sectionlink section-name**

This directive will cause the current section to be linked as if it had the name *section-name*. This directive is available only for ELF object output.

**.set option**

The following **.set option** directives are available:

**reorder****noreorder**

When processed by the **reorder** program before assembly, enable/disable reorder optimizations (thus, the **.set reorder** and **.set noreorder** directives are actually “reorder” directives rather than assembler directives). Code generated for modules compiled with optimization includes a **.set reorder** directive. Use **.set noreorder** in **asm** strings and **asm** macros in such code to disable reordering changes to these hand-coded assembly inserts. Follow with **.set reorder** to re-enable reordering optimization. See [7.4 Reordering in asm Code](#), p.174.

When processed by the MIPS assembler, **.set reorder** instructs the assembler to add a NOP instruction after a branch to fill its delay slot. **.set noreorder** disables NOP insertion. The default is **.set reorder**.

**mips32****mips16**

Change to mips32 mode. Currently only relocations for function calls are supported. Only supported with **-tMIPS16**.

Switch back to mips16 mode after **.set mips32**.

**macro****nomacro**

Allow/disallow special MIPS macro instructions. The default is **.set macro**.

**at****noat**

Allow/disallow use of **\$at** by MIPS macro instructions. The default is **.set at**.

### **.set symbol, expression**

Defines *symbol* to be equal to the value of *expression*. This is an alternative to the **.equ** directive. Example:

```
.set nine,9
```



---

**NOTE:** Using this form of **.set**, the symbol may not be redefined later. Use the next form of **.set** with the symbol first on the line if redefinition is required

---

### **symbol[:] .set expression**

Defines *symbol* to be equal to the value of *expression*. This form of the **.set** is different from the **.equ** directive or the form of the **.set** directive immediately above in that it is possible to redefine the value of *symbol* later in the same module. See **-Xlabel-colon-...** in [Set Label Definition Syntax \(-Xlabel-colon...\)](#), p.310, regarding the initial colon.

*expression* may not refer to an external or undefined symbol. Example:

```
number: .set 9
...
number: .set number+1
```

### **.short expression ,...**

Reserves one 16 bit word for each expression in the operand field and initializes the value of the word to the corresponding expression. Example:

```
.short 0xba98, 012345, -75, 17 # reserves 8 bytes.
```

### **.size symbol, expression**

Sets the size information for *symbol* to *expression*. Note that only the ELF object file format uses the size information.

### **.skip size**

The **.skip** directive reserves a block of data initialized to zero. *size* is an expression giving the length of the block in bytes. Example:

```
name: .skip 8
```

is the same as:

```
name: .byte 0,0,0,0,0,0,0,0
```

**.space expression**

See [.skip size](#), p.358 above.

**.string "string"**

See [.ascii "string"](#), p.341.

**.strz "string"**

See [.asciz "string"](#), p.342.

**.subtitle "string"**

Sets the subtitle to the character string. This string replaces the `%nS` format specification in the format the string defined by the **-Xheader-format** option (see [309](#)). The subtitle may be set any number of times. The default subtitle is blank. See [String Constants](#), p.325 for rules for writing the "string".

```
.subtitle "string search function"
```

**.text**

Switches output to the **.text** (instruction space) section.

**.title "string"**

Sets the title to character string. The title may be set any number of times. The default title is blank. See [String Constants](#), p.325 for rules for writing the "string". Example:

```
.title "program.s"
```

## **.ttl "string"**

See *.title "string"*, p.359 above.

## **.type symbol, type**

Mark *symbol* as *type*. The *type* can be one of the following:

**#object**

**@object**

**object**

*symbol* names an object

**#function**

**@function**

**function**

*symbol* names a function

Note that only the ELF object file format uses type information.

## **.uhalf**

This is a synonym for **.short** (*.short expression* ..., p.358) except that there are no alignment restrictions and an unaligned relocation type will be generated if required by the target.

## **.ulong**

This is a synonym for **.long** (*.long expression* ..., p.352) except that there are no alignment restrictions and an unaligned relocation type will be generated if required by the target.

## **.ushort**

This is a synonym for **.short** (*.short expression* ..., p.358) except that there are no alignment restrictions and an unaligned relocation type will be generated if required by the target.

**.uword**

See [.ulong](#), p.360 above.

**warning "string"**

Generate a warning message showing the given string. See [String Constants](#), p.325 for rules for writing the "string".

**.weak symbol ,...**

Declares each *symbol* as a weak external symbol that is visible outside the current file. Global references are resolved by the linker. Note that only the ELF object file format supports weak external symbols. Example:

```
.weak add,sub,mul,div
```

For a further description of weak symbols see [weak Pragma](#), p.148.

**.width expression**

See [.llen expression](#), p.352.

**.word expression, ...**

Reserves one word (32 bits) for each expression in the operand field and initializes the value of the word to the corresponding expression. Example:

```
.word 0xfedcba98,0123456,-75 # reserves 12 bytes.
```

**.xdef symbol ,...**

See [.global symbol ,...,](#) p.347.

**.xref symbol ,...**

See [.extern symbol ,...,](#) p.346.

## **.xopt**

Pass **-X** options to the assembler using the format:

```
.xopt option name [=value]
```

Example:

```
.xopt align-value
```

has the same effect as using **-Xalign-value** on the command line. In case of a conflict, **.xopt** overrides the command-line option. Also, some **-X** options are only tested before the assembly starts; in that case, the **.xopt** directive will have no effect. This option is primarily for internal use; the command-line options are preferred.



# 21

## *Assembler Macros*

21.1 Introduction 363

21.2 Macro Definition 364

21.3 Invoking a Macro 367

21.4 Macros to “Define” Structures 367

### 21.1 Introduction

Assembler macros enable the programmer to encapsulate a sequence of assembly code in a *macro definition*, and then inline that code with a simple parameterized *macro invocation*.

Example:

```
ld32: .macro reg,ident # macro definition
 lui reg,%hi(ident)
 lw reg,%lo(ident)(reg)
 .endm

 ld32 $4,yvar # macro invocation #1
 ld32 $5,xvar # macro invocation #2
```

This will produce the following code:

```
lui $4,%hi(yvar) # macro expansion #1
lw $4,%lo(yvar) ($4)
lui $5,%hi(xvar) # macro expansion #2
lw $5,%lo(xvar) ($5)
```

## 21.2 Macro Definition

A macro definition has the form:

```
label: .macro [parameter ,...]
 macro body
 .endm
```

where *label* is the name of the macro, without containing any period. In addition, the following syntax is valid but is not recommended:

```
.macro name [parameter ,...]
 macro body
 .endm
```

The optional parameters can be referenced in the macro body in two different ways. The following two examples show a macro which calculates

```
par1 = par2 + par3
```

(where the parameters are assumed to be in registers).

1. By using the parameter name:

```
add3: .macro par1,par2,par3 # definition

 add par1,par2,par3
 .endm

 add3 $7,$8,$9 # invocation

produces

 add $7,$8,$9
```

2. By using `\n` syntax where `\1`, `\2`, ... `\9`, `\A`, ... `\Z` are the first, second, etc., actual parameters passed to the macro. When the `\n` syntax is used, formal parameters are optional in the macro definition. If present, both the named and numbered form may be freely mixed in the same macro body.

```
add3: .macro # definition
 add \1,\2,\3
 .endm

 add3 $7,$8,$9 # invocation
```

produces

```
 add $7,$8,$9
```

The special parameter `\0` denotes the actual parameter attached to the macro name with a “.” character in an invocation. Usually this is an instruction size.

```
move: .macro dregp,sregp # definition
 l\0 $1,0(sregp)
 s\0 $1,0(dregp)
 .endm

 move.h $10,$11 # invocation
```

produces

```
 lh $1,0($11)
 sh $1,0($10)
```

### Separating Parameter Names From Text

In the macro body, the characters “&&” can optionally precede or follow a parameter name to concatenate it with other text. This is useful when a parameter is to be part of an identifier:

```
xadd: .macro par1,par2,hcnst # definition
 addi par1,par2,0x&&hcnst
 .endm

 xadd $4,$5,ff00 # invocation
```

produces

```
 addi $4,$5,0xff00
```

### Generating Unique Labels

The special parameter `\@` is replaced with a unique string to make it possible to create labels that are different for each macro invocation.

The following macro defines a string of up to four bytes in the **.data** section at a uniquely generated label (however the length of the string is not checked), and then generates code to load the contents at that label (the string itself) into a register.

```
lstr: .macro reg,string # definition
 .data
 .Lm\@:
 .byte string,0
 .previous
 lui reg,%hi(.Lm\@)
 lw reg,%lo(.Lm\@)(reg)
 .endm

lstr $2,"abc" # invocation
```

produces

```
 .data
.Lm.0001:
 .byte "abc",0
 .previous
 lui $2,%hi(r0,.Lm.0001)
 lw $2,%lo(.Lm.0001)($2)
```

## NARG Symbol

The special symbol NARG represents the actual number of non-blank parameters passed to the macro (not including any **\0** parameter):

```
init: .macro value # definition
 .if NARG == 0
 .byte 0
 .else
 .byte value
 .endc
 .endm

init # invocation #1
init 10 # invocation #2
```

produces

```
 .byte 0 # expansion #1
 .byte 10 # expansion #2
```

## 21.3 Invoking a Macro

A macro is invoked by using the macro name anywhere an instruction can be used. The macro body will be inserted at the place of invocation, and the formal parameters in the macro definition will be replaced with the actual parameters, or operands, given after the macro name.

Actual parameters are separated by commas. To pass an actual parameter that includes special characters, such as blanks, commas and comment symbols, angle brackets "<>" may be used. Everything in between the brackets is regarded as one parameter.

If the option **-Xmacro-arg-space-on** is given, blanks may be included in an actual parameter without using brackets. Example:

```
init: .macro command,list
 .data
 command list
 .previous
 .endm

init byte,<0,1,2,3>
```

produces

```
.data
.byte 0,1,2,3
.previous
```

## 21.4 Macros to “Define” Structures

Although **struct** is not part of the assembly language, the macros shown below allow you to assign offsets to symbols so they can refer to structure members. These macros do not allocate memory; they merely assign values to symbols. The value of a structure “member” is its offset from the beginning of the structure.

The macros use **CURRENT\_OFFSET\_VALUE** to set the offsets of structure members: the **STRUCT** macro sets **CURRENT\_OFFSET\_VALUE** to 0; the **MEMBER** macro defines a symbol named for the member and having as its value **CURRENT\_OFFSET\_VALUE**, then increments **CURRENT\_OFFSET\_VALUE** by the size of the member.

```
STRUCT .macro
CURRENT_OFFSET_VALUE .set 0
 .endm

MEMBER .macro name, size
name = CURRENT_OFFSET_VALUE
CURRENT_OFFSET_VALUE .set CURRENT_OFFSET_VALUE + size
 .endm
```

**CURRENT\_OFFSET\_VALUE** must be incremented with this form of the **.set** directive because it allows the symbol so set to be set again later in the module. See [symbol\[:\].set expression](#), p.358 for details.

Also, note that:

- The **MEMBER** macro cannot be labeled.
- These macros cannot be used to define nested structures because there is only one **CURRENT\_OFFSET\_VALUE** used for all instances.
- A final **MEMBER** can be used to define the size of the structure.

### Example

The macros define the symbols **first\_name**, **middle\_initial**, and **last\_name** with values 0, 20, and 21 respectively, and define **name\_size** as the total size of the “structure” with a value of 46.

```
STRUCT
MEMBER first_name,20
MEMBER middle_initial,1
MEMBER last_name,25
MEMBER name_size,0
```

One might use this, for example, as follows:

```
.data
rec1:
.skip 20 # reserve space for a first name
.skip 1 # ... middle initial
.skip 25 # ... and last name
```

Then an expression such as **rec1+last\_name** in an instruction would access the **last\_name** “member” of the **rec1** “structure”.

# 22

## *Example Assembler Listing*

If the **-I** or **-L** option is specified, a listing is produced. The **-I** option produces a listing file with the default extension **.lst** (or the extension specified with **-Xlist-file-extension="string"**). The **-L** option sends the listing to standard output.

The listing contains the following:

### Location

Hexadecimal value giving the relative address of the generated code within the current section.

### PI

“PI” stands for “Program Location counter number”. Maps one-to-one to the section number in the object file (but not necessarily in the same order). When the same section is used at several discontinuous places in the source, the same section number will be used for all instances.

### Code

Generated code in hexadecimal.

### Line

Source line number.

### Source Statement

Source code lines.

To change the format of the assembly line, see [Set Format of Assembly Line in Listing \(-Xline-format="string"\)](#), p.311.

If the **-H** option is used, a header containing the source filename and the cumulative number of errors is displayed at the top of each page. To change the format of the header, see [Set Header Format \(-Xheader-format="string"\)](#), p.310.

Errors are not included in the listing but are always written to **stderr**.  
The following shows a listing produced by assembling an extract from file **swap.s** with the command:

```
das -tMIPSEN -l -H swap.s.
```

**swap.s** is used with the bubble sort example in the *Getting Started* manual.

Figure 22-1 Assembly Listing File Swap.lst

| Location Pl Code |    |          | File: swap.s | Errors   | 0           |
|------------------|----|----------|--------------|----------|-------------|
|                  |    |          | Line         | Source   | Statement   |
|                  |    |          | 1            | .file    | "swap.s"    |
|                  |    |          | 2            | .section | .text2,,c   |
|                  |    |          | 3            | .align   | 4           |
|                  |    |          | 4            | .xdef    | swap        |
|                  |    |          | 5            |          |             |
|                  |    |          | 6            | swap:    |             |
| 00000000         | 01 | 8c820000 | 7            | lw       | \$2,0(\$4)  |
| 00000004         | 01 | 8c980004 | 8            | lw       | \$24,4(\$4) |
| 00000008         | 01 | ac980000 | 9            | sw       | \$24,0(\$4) |
| 0000000c         | 01 | 03e00008 | 10           | jr       | \$31        |
| 00000010         | 01 | ac820004 | 11           | sw       | \$2,4(\$4)  |



---

PART IV

# Wind River Linker

|    |                               |     |
|----|-------------------------------|-----|
| 23 | The Wind River Linker .....   | 373 |
| 24 | The dld Command .....         | 387 |
| 25 | Linker Command Language ..... | 409 |



# 23

## *The Wind River Linker*

|      |                               |     |
|------|-------------------------------|-----|
| 23.1 | Introduction                  | 373 |
| 23.2 | The Linking Process           | 374 |
| 23.3 | Symbols Created By the Linker | 378 |
| 23.4 | .abs Sections                 | 381 |
| 23.5 | COMMON Sections               | 381 |
| 23.6 | COMDAT Sections               | 382 |
| 23.7 | Sorted Sections               | 383 |
| 23.8 | Warning Sections              | 384 |
| 23.9 | .frame_info sections          | 384 |

### 23.1 Introduction

The following chapters describe the linker for MIPS microprocessors and are organized as follows:

- This chapter is a brief introduction to the linking process, including an example, description of special symbols created by the linker, and treatment of special sections.

- [24. The \*dld\* Command](#), describes the command to invoke the linker and its options.
- [25. Linker Command Language](#), describes the language used in *linker command files*.

In addition, [.](#), describes the format of object files processed by the linker and special relocation types for those requiring such detailed information.

## 23.2 The Linking Process

This section provides an introduction to the linking process. Readers familiar with linker operation may proceed to [23.3 Symbols Created By the Linker](#), p.378.

The linker is a program that combines one or more *binary object modules* produced by compilers and assemblers into one *binary executable file*. It may also write a text *map* file showing the results of its operation.

Each object module/file is the result of one compilation or assembly. Object files are either stand-alone, typically with the extension *.o*, or are collected in *archive libraries*, also called *libraries*. Library files typically have the extension *".a"*.

An object module contains *sections* of code (also called "text"), and "data", with names such as *.text*, *.data* (variables having initial values), *.bss* (blank sections — uninitialized variables), and various housekeeping sections such as a symbol table or debug information.

The linker reads the sections from the object modules input to it, and based on command-line options and a *linker command file*, combines these *input sections* into *output sections*, and writes an *executable file* (usually; it is also possible to output a file which can be linked again with other files in a process called incremental linking).

A section may contain a reference to a symbol not defined in it — an *undefined external*. Such an external must be defined as *global* in some other object file. A global definition in one object file may be used to *satisfy* the undefined external in another.

As compiled or assembled into an input object file, the first byte of each input section is at address 0 (typically). But when finally located in memory as part of some output section, the input section will not be at address 0 (except for the first

input section in an output section that is actually located at 0). Any absolute references to bytes in the section from within the section will therefore be “wrong” and will require *relocation*. The input object file contains sections of *relocation information* which the linker will use to adjust such absolute references. Relocation information is used to make other similar adjustments as well.

Given the definitions above, in the abstract, the linking process consists of six steps:

1. Read the command line and linker command file for directions.
2. Read the input object files and combine the input sections into output sections per the directions in the linker command file. Globals in one object file may satisfy undefined externals in another.
3. Search all supplied archive libraries for modules which satisfy any remaining undefined externals.
4. Locate the output sections at specific places in memory per the directions in the linker command file.
5. Use the relocation information in the object files to adjust references now that the absolute addresses for sections are known.
6. If requested, write a *link map* showing the location of all input and output sections and symbols.

### Linking Example

This section provides an example of the above linking process. Consider the following two C files:

File **f1.c**:

```
int a = 1;
int b;

main()
{
 b = 2;
 f2(3);
}
```

File **f2.c**:

```
extern int a, b;

f2(int c)
{
 printf("a:%d, b:%d, c:%d\n", a, b, c);
}
```

The compilation command

```
dcc -O -c f1.c f2.c
```

generates the object files **f1.o** and **f2.o**.

The contents of the two object files are shown in [Table 23-1](#).

Table 23-1 **Linking Example Files**

| Section    | Type of Data         | Contents                                                                                                                                                                                                                                             |
|------------|----------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| f1.o:      |                      |                                                                                                                                                                                                                                                      |
| .text      | Code                 | Instructions of function <b>main( )</b> .                                                                                                                                                                                                            |
| .data      | Variables            | Initialized variable <b>a</b> .                                                                                                                                                                                                                      |
| .rela.text | Relocation entries   | Reference to the variable <b>b</b> inside <b>main( )</b> .<br>Reference to the function <b>f2</b> inside <b>main( )</b> .                                                                                                                            |
| .symtab    | Symbol table entries | Symbol <b>main</b> , defined in <b>.text</b> section.<br>Symbol <b>a</b> , defined in the <b>.data</b> section.<br>Symbol <b>b</b> , <b>COMMON</b> block of size 4.<br>Symbol <b>f2</b> , undefined external symbol.                                 |
| f2.o:      |                      |                                                                                                                                                                                                                                                      |
| .text      | Code                 | Instructions of function <b>f2( )</b> and the string used in <b>printf( )</b> .                                                                                                                                                                      |
| .rela.text | Relocation entries   | Reference to the variable <b>a</b> inside <b>f2( )</b> .<br>Reference to the variable <b>b</b> inside <b>f2( )</b> .<br>Reference to the function <b>printf</b> inside <b>f2( )</b> .<br>Reference to the <b>printf</b> string inside <b>f2( )</b> . |

Table 23-1 **Linking Example Files** (cont'd)

| Section              | Type of Data         | Contents                                                                                                                                                                                                                                                                                                                                      |
|----------------------|----------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <code>.symtab</code> | Symbol table entries | Symbol <code>_f2</code> , defined in the <code>.text</code> section.<br>Symbol <code>_a</code> , undefined external symbol.<br>Symbol <code>_b</code> , undefined external symbol.<br>Symbol <code>_printf</code> , undefined external symbol.<br>Local symbol for the <code>printf</code> string, defined in the <code>.text</code> section. |

Invoking the linker explicitly using the `dld` command is fully described in [24. The dld Command](#). However, the easiest way to invoke the linker is to use one of the compiler drivers, for example, `dcc`, as follows:

```
dcc f1.o f2.o -o prog
```

The driver notes that the input files are objects (`f1.o` and `f2.o`) and invokes the linker immediately, supplying default values for the library, library search paths, linker command file, etc. To see how the linker is invoked, add the option `-#` to the above command; this option directs the driver to display the commands it uses to invoke the subprograms.

Schematically, the result will be as follows:

```
dcc f1.o f2.o -o prog -#
dld -YP,search-paths -l:crt0.o f1.o f2.o -o prog -lc
version_path/conf/default.dld
```

The `-YP` option specifies directories which the linker will search for libraries specified with “`-l`” options and files specified with “`-l:filename`” options. `crt0.o` is the C start-up module. The `-lc` option directs the linker to search for a library named `libc.a` in the paths specified by `-YP`.

With this command, the linker will proceed as follows:

1. The text file is assumed to be a linker command file (`default.dld` here), input object files are scanned in order (`crt0.o`, `f1.o`, and `f2.o`), and archive libraries are searched as necessary for undefined externals (the library filename `libc.a` is constructed from the option `-lc`).

In this link, the file `printf.o` is loaded from `libc.a` because `printf` is not defined in the `f1.o` or `f2.o` objects. `printf.o`, in turn, needs some other files from `libc.a`, such as `fwrite.o`, `strlen.o`, and `write.o`.

2. Per the directions in the `default.dld` linker command file, input sections with the same name are combined into one output section. In this instance all `.text` sections from `crt0.o`, `f1.o`, `f2.o`, `printf.o`, `fwrite.o`, etc. are concatenated into a

single output **.text** section. This also done for the other input sections. The linker command language can be used to specify how sections should be grouped together and where they should be placed in memory.

3. All “common blocks” not defined in **.text** or **.data** are placed last in the **.bss** section. See [23.5 COMMON Sections](#), p.381 for details. In this case four bytes for the variable **b** are allocated in **.bss** section.
4. Once the location of all output sections is known, the linker assigns addresses to all symbols. By default, the linker puts the **.text** section in one area of memory, and concatenates the **.data** and the **.bss** sections and locates the result in another area in higher memory. However these defaults are seldom adequate in an embedded system, and memory layout is usually controlled by a linker command file (*version\_path/conf/default.dld* in this example).
5. All input sections are copied to the output file. While copying the raw data, the linker adjusts all address references indicated by the relocation entries. Note that there is no space in the input object file or output executable for **.bss** sections and **.sbss** sections (if present) because they will be initialized by the system at execution time.
6. An updated symbol table is written (unless suppressed by the **-s**, strip option).



---

**NOTE:** While **.bss** and **.sbss** sections do not occupy space in the linker output file, if converted to Motorola S-Records, S-Records will be generated to set the space to zeros. To suppress this, use the **-v** option to the **-R** command for **ddump** in [29. D-DUMP File Dumper](#).

---

The order of files on a command line (for either **dld** or **dcc**) will affect the placement order of global symbols in ELF output files; however, the resulting executable program will not be affected.

## 23.3 Symbols Created By the Linker

If necessary, the linker creates the following symbols at the end of the link process. (The linker does not recreate symbols that the user has already defined or create symbols that are never referred to in any module.) These can be used in C or assembly programs, for example, in startup code to initialize **.bss** sections to zero,



or to “copy ROM to RAM” (see [Example 25-8 Copying Code from “ROM” to “RAM”](#), p.438, for an example of the latter).

That is, a module may declare these symbols as external and use them without ever defining them in any module. The linker will then create the symbols as described during the linking process, and satisfy the external by referring to the created symbol.

**.endof**.*section-name*

Address of the last byte of the named section. (Note 1)

**.sizeof**.*section-name*

Size in bytes of the named section. (Note 1)

**.startof**.*section-name*

Address of the first byte of the named section. (Note 1)

**etext, \_etext**

First address after final input section of type **TEXT**. (Note 2)

**edata, \_edata**

First address after final input section of type **DATA**. (Note 2)

**end, \_end**

First address after highest allocated memory area.

**sdata, \_sdata**

First address of first input section of type **DATA**. (Note 2)

**stext, \_stext**

First address of first input section of type **TEXT**. (Note 2)

**\_\_SDA\_BASE\_, \_\_SDA\_BASE\_, \_gp, \_\_gp**

The base address for access to data in the **.sdata** and **.sbss** sections. Defined as the base of the output **.sdata** section + 0x7ff0, but only if at least one of these sections is present. Loaded into register **\$28** by startup module **crt0.o**. (Note 3)

**\_\_SDA2\_BASE\_, \_\_SDA2\_BASE\_, \_gp2, \_\_gp2**

The base address for access to data in the **.sdata2** section. Defined as the base of the output **.sdata2** section + 0x7ff0, but only if this section is present. Loaded into register **\$23** by startup module **crt0.o**. (Note 4)

**\_\_GLOBAL\_OFFSET\_TABLE\_,**

**\_\_PROCEDURE\_LINKAGE\_TABLE\_,**

**\_\_DYNAMIC**

Base addresses for access to data in the **.got**, **.plt**, and **.dynamic** sections.

**Notes:**

1. **.endof....**, **.sizeof....**, and **.startof....** cannot be used in C code because C identifiers must include only alphanumeric characters and underscores. But they can be used in assembly code. See [19.3 Unary Operators](#), p.333.
2. See *type-spec* in [Type Specification: \(\[=\]BSS\), \(\[=\]COMMENT\), \(\[=\]CONST\), \(\[=\]DATA\), \(\[=\]TEXT\), \(\[=\]BTEXT\); OVERLAY, NOLOAD, OPTIONAL](#), p.422, for a discussion of output section types **DATA** and **TEXT**. As noted there, if an output section contains more than one type of input section, then its type is a union of the input section types. In this case, the symbols related to the **DATA** and **TEXT** sections as described above are not well-defined.
3. If **-Xsmall-data** is greater than 0, then variables of size less than or equal to that value will be allocated in the **SDATA** section class, called the Small Data Area, with initialized variables placed in the **.sdata** section, and uninitialized variables in the **.sbss** section. The **default.dld** linker command file includes the following lines:

```
.sdata (DATA) : {}
.sbss (BSS) : {}
```

This collects all input **.sdata** and **.sbss** sections into output sections having the same names, and locates the **.sbss** section immediately after the **.sdata** section. With **\_SDA\_BASE\_** defined by the linker as the address of the output **.sdata** section + 0x7ff0, and loaded into the **\$28** base register by startup module **crt0.o**, all of the data in these two sections is accessible with a 16-bit offset. The sizes of the two sections does not matter as long as their combined size is not larger than 64KB - 0x10 bytes.



---

**NOTE:** The linker warns if a symbol beginning with **\_SDA\_BASE** is referred to in some module but not defined (either explicitly, or implicitly by the presence of an **.sdata** output section).

---

4. If **-Xsmall-const** is greater than 0, then symbol **\_SDA2\_BASE\_** is defined as the base of section **.sdata2** plus 0x7ff0, loaded into base register **\$23**, and used to access data there in a manner similar to that of **\_SDA\_BASE\_**.

For example, the following prints the first address after the highest allocated memory area:

```
extern char end [];

main() {
 printf("Free memory starts at 0x%x\n",end);
}
```

**end** is made an incomplete array to ensure that it is not placed in the small data area.

## 23.4 .abs Sections

Input files may contain sections with names of the form **.abs.nnnnnnnnn**, where *nnnnnnnn* is eight hexadecimal digits (zero-filled if necessary). Such sections will automatically be located at the address given by *nnnnnnnn*.

The compiler generates such sections in response to **#pragma section** directives of the form

```
#pragma section class_name [addr_mode] [acc_mode] [address=n]
```

where the value given the **address=n** clause becomes the *nnnnnnnn* in the section name.

## 23.5 COMMON Sections

*Common* variables are public variables declared either:

- In compiled code outside of any function, without the **extern** or **static** qualifier, and which are not initialized, e.g. at the module level:

```
int x[10];
```

- With **.comm** or **.lcomm** in assembly language.

Such variables are assigned to an artificial **COMMON** section.

The linker gathers all common variables together and appends them to the end of the output section named **.bss**; that is, the combined artificial **COMMON** sections for all modules becomes the end of the **.bss** output section.

These are the standard actions if the **-Xbss-common-off** option is *not* used. If the **-Xbss-common-off** option is used:

- There must be exactly one definition of each such variable in the modules of a link, with all other declarations being **extern** or **.xref**, or the linker will report an error.
- Each such variable will be part of the **.bss** section for the module in which it is defined. Because the location of individual sections may be controlled on a per file basis when linking, such variables can be located more precisely.

If an incremental link is requested (option **-r**), **COMMON** sections are allocated only if the **-a** option is also given.



---

**NOTE:** Because the compiler does not create a “small common,” small data variables are treated as if covered by **-Xbss-common-off**. For example, with **-Xsmall-data** set to its default value of 8, an **int** variable will be located in the **.sbss** section for the file in which it is defined.

---

### Linker Command File Requirements with COMMON

As noted above, by default the linker places **COMMON** sections at the end of output section **.bss**. If there is no **.bss** section, then the linker command file must include a *section-contents* of the form **[COMMON]** (see [Section Contents](#), p.419).

### SCOMMON Section

The linker can process an **SCOMMON** section, typically holding “small” common variables and sometimes produced by other tools. This section is not normally used by the Wind River tools. Just as the **COMMON** section is appended to the **.bss** output section, the **SCOMMON** section, if present, is appended to the **.sbss** output section; if there is no **.sbss** output section, it is appended to the **.bss** output section. If neither the **.sbss** nor **.bss** output section exists, then the linker command file must contain a *section-contents* of the form **[SCOMMON]** (see [Section Contents](#), p.419).

## 23.6 COMDAT Sections

A COMDAT section is created by using “**o**” for the section type in an assembler **.section** directive (see [.section name, \[alignment\], \[type\]](#), p.355), or by using the compiler option **-Xcomdat-on** which causes sections generated for templates and

run-time type information to be marked COMDAT (see [5.4.27 Mark Sections as COMDAT for Linker Collapse \(-Xcomdat\)](#), p.74). See this latter discussion for the an example of the use of COMDAT sections.

When the linker encounters identical COMDAT sections, it removes all except one instance and resolves all references to symbols in the COMDAT section to the single instance.

If a non-COMDAT section is present along with one or more identical COMDAT sections, the linker will still collapse the COMDAT sections to one instance, but will treat the symbols in the COMDAT section as *weak*. See [weak Pragma](#), p.148 for the treatment of weak symbols.

## 23.7 Sorted Sections

The **GROUP** definition described in [GROUP Definition](#), p.426, is the usual way for a user to explicitly control the order of input sections in an output section. A second mechanism for controlling input section order, called *sorted sections* is described here.

An input section is a *sorted section* if its name begins with a period and ends with “\$*nn*”, where *nn* is a two-digit decimal number, for example `.init$15`. The first part of the name (before the \$*nn*) is called the *common section name* and the \$*nn* part is called the *priority*. Input sections can also be assigned priority in the linker command file.

As described beginning on [25.10.1 Section-Definition](#), p.418, a *section-definition* defines an *output section* and may include a list of input sections. The order in the output section of the input sections is undefined. However if the list of input sections includes a common section name, then all input sections having that common section name will be placed together and will be sorted in the output section in order of their ascending priority numeric priority.

An input section having the common section name but no priority suffix is given priority 50. The order among sorted sections with the same priority is undefined.

This sorted section feature is used by the compiler to order sections when generating initialization code. See [15.4.8 Run-time Initialization and Termination](#), p.284 for details.

## 23.8 Warning Sections

If a section is named **.warning**, the linker prints the text from that section to standard output as a warning message if any section is loaded from the file. The warning is printed only during the final linking; incremental linking will put such sections into the output file. This is useful when the library has stub functions that need to be replaced.

Example:

```
#pragma section DATA ".warning" N

char __warning[] = "No chario output routine has been given.\n"
 "Printing through write() or printf() will not work.\n";

#pragma section DATA

int __outchar(int c, int last)
{
}
```

The linker prints the following message:

```
dld: warning:
No chario output routine has been given.
Printing through write() or printf() will not work.
```

## 23.9 .frame\_info sections

The compiler generates **.frame\_info** sections for C++ programs when exception-handling is enabled. A section is created for any function that might appear on the call stack between a **try** and a **throw**; the linker concatenates these into a searchable table that is used for stack-unwinding and object clean-up after an exception occurs. For each function, the table contains a small (8- to 24-byte) record that includes pointers to structures in the **.data** section. Since the C++ support functions in **libd.a** are compiled with exception-handling enabled, most C++ programs have at least some **.frame\_info** data.

By default, C functions do not have **.frame\_info** sections. To generate **.frame\_info** sections for C functions—essential in mixed programs in which C++ exceptions may propagate back through C functions—use the **-Xframe-info** compiler option. Throwing an exception through C code that is not compiled with **-Xframe-info**

results in a call to the C++ standard-library **terminate()** function. Pure C++ applications and applications that only call C from C++, never the other way around, do not need to use **-Xframe-info**.





# 24

## *The dld Command*

[24.1 The dld Command 387](#)

[24.2 Defaults 390](#)

[24.3 Order on the Command Line 391](#)

[24.4 Linker Command-Line Options 391](#)

[24.5 Linker -X options 399](#)

### 24.1 The dld Command

The linker is invoked by the following command:

```
dld [options] input-file . . .
```

Options are described in [24.4 Linker Command-Line Options](#), p.391 and [24.5 Linker -X options](#), p.399.

The linker decides what to do with each *input-file* given on the command line by examining its contents to determine its type. Each file is either an object file, an archive library file, or a text file containing directives to the linker:

- **Object files:** these are loaded in the order given on the command line.
- **Archive files:** if there is a reference to an unresolved external symbol after loading the objects, then any archive library files given on the command line

(or specified with **-I** options) are searched for the symbol, and the first object module defining the missing symbol is loaded from the libraries.

Library search order depends on the use of the **-L**, **-Y L**, **-Y U**, **-Y P**, and **-Xrescan-libraries** options. See [Specify Search Directories for -l \(-Y L, -Y P, -Y U\)](#), p.398 and [Re-scan Libraries \(-Xrescan-libraries...\)](#), p.404 for details.

Archive libraries may be built with the **dar** tool. Archive libraries built by other archivers must conform to the ELF format accepted by the linker.

- **Text files:** a text file is interpreted as a file of linker commands. These commands are described in [25. Linker Command Language](#). More than one linker command file is allowed.

## Linker Command Structure

A typical linker command will be as follows in outline (where “...” means repetition, and on one line when entered):

```
ld -YP,search-paths -o output-file-name -l:startup-object-file object-file ...
library... -llibs... linker-command-file
```

where:

**-YP**,search-paths

Directories to search for files named by **-I** options and **-l**: options. The paths for the default directories are based on the default target. See [Select Target Processor and Environment \(-t tof:environ\)](#), p.398.

(Search paths can also be specified using other **-Y** options and the **-L** option as described later).

**-o** output-file-name

Options to specify the name of the output file (the default is **a.out** if no **-o** option is given).

**-l**:startup-object-file

Startup object file. Link this file first to help establish the order of various initialization sections. Searched for in the directories specified by **-Y** or **-L** options (no path prefix allowed). Because the first character after **-l** is “:” the search is for a file with the exact name following the colon. Contrast with **-I** below.

Alternatively, the startup object file can be named directly on the command line, in which case a path prefix is allowed.

*object-file...*

The object files to be linked.

*library... -llibs...*

Libraries to be searched for modules defining otherwise undefined external symbols. Libraries can be given directly on the command line with path prefix, or searched for in the **-Y** or **-L** **directories** by using the **-lname** form. In the latter case, the library name **libname.a** is constructed from *name* and no path prefix is allowed.

*linker-command-file*

Text file of linker commands. A path prefix is allowed.

To get a map to **stdout**, add the **-m**, **-m2**, or **-m6** option (with increasing detail).

A good way to gain experience with linker command lines, and to see default values for the parts of the command line outlined above, is to invoke **dcc** or **dplus** with the **-#** option to show the command line for each subprogram. For example, the following command line:

```
dcc -# -o hello.out hello.c -m > hello.map
```

would effectively invoke the linker with the following command line (assumes default of no floating point, and shows each argument on a separate line for readability):

```
dld -Y P,/diab/4.x/MIPSEN/simple:/diab/4.x/MIPSEN:
 /diab/4.x/MIPSE/simple:/diab/4.x/MIPSE
-l:crt0.o
hello.o
-o hello.out
-lc
/diab/4.x/conf/default.dld
-m > hello.map
```

where:

**-Y P,/diab/4.x/...**

Directories to search for files named by **-l** options.

**-l:crt0.o**

Startup object file from the directories specified by the **-YP** option.

**hello.o**

The object module to be linked.

**-o hello.out**

The name of the output file instead of **a.out**.

**-lc**

Search for library **libc.a** for modules defining unresolved externals in the directories specified by **-YP**.

```
/diab/4.x/conf/default.dld
```

Use the default linker command file.

```
-m > hello.map
```

Request a minimal map and redirect it from **stdout** to **hello.map** (the driver **dcc** passes any option it does not recognize, the **-m** in this case, to the linker).

## 24.2 Defaults

In addition to application input object files, the linker typically needs a linker command file to direct the link, libraries to satisfy undefined externals, and often a startup object file.

When the linker is invoked explicitly with the **dld** command, there will be no default linker command file, no libraries, and no startup file—all must be specified using command-line options as described in this chapter.

When the linker is invoked automatically by the **dcc** or **dplus** drivers, it is invoked with options which specify default linker command file, libraries, and startup object file.

These defaults are as follows:

- Linker command file: the default is *version\_path/conf/default.dld*. To specify a different linker command file when using **dcc** or **dplus**, use the **-Wmfile** option (5.3.29 *Specify Linker Command File (-W mfile)*, p.49). Note that **-Wm** is an option to the compiler driver directing its sub-invocation of the linker; **-Wm** is not a linker option. To provide a linker command file when invoking the linker directly, just name it on the **dld** command line.
- Libraries: the defaults are libraries **libc.a** and, for C++, **libd.a** from the directories associated with the default target, and/or as specified with **-l**, **-L**, and/or **-Y** options on the command line as documented later in this manual.
- Startup object file: the default is **crt.o** from the selected target subdirectory. To specify a different startup object file when using **dcc** or **dplus**, use the **-Wsfile** option (5.3.30 *Specify Startup Module (-W sfile)*, p.49). As with **-Wm** this is a driver, not a linker, option.

To see the defaults for a particular case, execute **dcc** or **dplus** with the **-#** option to display the command line for the compiler, assembler, and linker as each is automatically invoked.




---

**NOTE:** Linker command files formerly used an extension of **.lnk**. As of version 4.2, this is changed to **.dld** because **.lnk** is used by Windows to designate a shortcut. In the **conf** directory, identical copies of each linker command file using each extension will be present for an interim period.

---

## 24.3 Order on the Command Line

Options and files may be intermixed and may be given in any order except that an option which specifies a search directory for **-I**, **that is -L or -Y**, must be given before a **-I** to which it is to apply. However the following order is recommended:

- options
- object files
- libraries and **-I** options which name libraries
- linker command file

Other options may be mixed in any order. While libraries and objects may be in any order (with the default setting of **-Xrescan-libraries**, see [Re-scan Libraries \(-Xrescan-libraries...\)](#), p.404), a link will be faster if there is no need to re-scan a library. The linker may also be more efficient in processing a linker command file if its has encountered all objects first.

## 24.4 Linker Command-Line Options

This section contains standard command-line options common to many linkers. The next section documents **-X** options which provide additional detailed control over the linker (beginning with [24.5 Linker -X options](#), p.399).

For a concise list of all options, see the table of contents.

### Show Option Summary (-?, -?X)

**-?, -h**

**--help**

Show synopsis of command-line options.

**-?X, -hX**

Show synopsis of **-X** options (see [24.5 Linker -X options](#), p.399).

### Read Options From an Environment Variable or File (-@name, -@@name)

**-@ name**

Read command-line options from environment variable *name* if it exists, else from file *name*.

In an environment variable, separate options with a space. In a file, place one or more options per line, separated by a space.

**-@@name**

Same as **-@name**; also prints all command-line options on standard output.

### Redirect Output (-@E=file, -@E+file, -@O=file, -@O+file)

**-@E=file**

Redirect any output to standard error to the given *file*.

**-@O=file**

Redirect any output to standard output to the given *file*.

Use of "+" instead of "=" will append the output to the file.

### Link Files From an Archive (-A name, -A...)

**-A filename**

**-A -lname**

**-A -l:filename**

Link all files from the specified archive. The **-A** option affects only the argument immediately following it, which can be a filename or **-l** option. (See [Specify Library or File to Process \(-lname, -l:filename\)](#), p.395.) If *filename* or *name* is not an archive, **-A** has no effect.

Sections can still be dropped with the **-Xremove-unused-sections** option.

**-A1...**

Same as **-A**.

**-A2...**

Same as **-A**, but overrides **-Xremove-unused-sections** for the specified archives.

**-A3...**

Same as **-A2**, but also overrides **-s** and **-ss** for the specified archives.

**Allocate Memory for Common Variables When Using -r (-a)****-a**

Common variables are not normally allocated when an incremental link is requested by the **-r** option. The **-a** option forces allocation in this case. See [23.5 COMMON Sections](#), p.381 for details.

**Set Address for Data and tExt (-Bd=address, -Bt=address)****-Bd=address****-Bt=address**

Allocate **.text** section and other constant sections to the given *address*. The **-Bd** and **-Bt** options provide a simple way to define where to allocate the sections without having to write a linker command file. If either **-Bd** or **-Bt** is specified, the linker will use the following command specification:

```
SECTIONS {
 GROUP Bt-address : {
 .text (TEXT) : {
 *(.text) *(.rdata) *(.rodata)
 *(.init) *(.fini)
 }
 .sdata2 (TEXT) : {}
 }
 GROUP Bd-address: {
 .data (DATA) : {}
 .sdata (DATA) : {}
 .sbss (BSS) : {}
 .bss (BSS) : {}
 }
}
```

If the **-N** option is given, the **.data** section is placed immediately after the **.text** section.



---

**NOTE:** The **-Bd** and **-Bt** options are ignored if a linker command file is present. The **default.dld** linker command file will be present by default if the linker is invoked implicitly by **dcc** or **dplus**. To use **-Bd** and **-Bt**, suppress the use of the default linker command file with the **-W m** option with no name on the **dcc** or **dplus** command line.

---

### Bind Function Calls to Shared Library (-Bsymbolic)

When creating a shared library, bind function calls, if possible, to functions defined within the shared library. For VxWorks RTP application development.

### Define a Symbol At An Address (-Dsymbol=address)

**-Dsymbol=address**

Define specified symbol at specified address.

### Define a Default Entry Point Address (-e symbol)

**-e symbol**

*symbol* is made the default entry address and entered as an undefined symbol in the symbol table. It should be defined by some module.

### Specify “fill” Value (-f value, size, alignment)

**-f value**

**-f value, size**

**-f value, size, alignment**

Fill all “holes” in any output section with 16-bit *value* rather than the default value of zero. Optional *size* and *alignment* are specified in bytes; the default is 2, 1.



**Specify Directory for -I search List (-L dir)****-L *dir***

Add *dir* to the list of directories searched by the linker for libraries or files specified with the **-I** option. More than one **-L** option can be given on the command line.

Must occur prior to a **-I** option to be effective for that option.

**Specify Library or File to Process (-lname, -l:filename)****-lname**

Specify a library with the constructed name **libname.a** to be searched for object modules defining missing symbols.

**-l:filename**

Process the given *filename* (without modification, no path prefix allowed): an object file is linked, an archive is searched as necessary, a text file is taken as a linker command file.

For both forms, search for the file is performed in the following order:

- The directories given by **-L *dir*** options in the order these options are encountered.
- The directories as given by any **-Y L**, **-Y P**, or **-Y U** options (see these options in [Specify Search Directories for -l \(-Y L, -Y P, -Y U\)](#), p.398).

Any **-L** or **-Y** option must occur prior to all **-l** options to which it applies.

If no **-L** or **-Y** option is present, search a set of directories based on the selected target and environment. See [4.2 Selected Startup Module and Libraries](#), p.28 for details.

**Generate link map (-m, -m2, -m4)****-m** (equivalent to **-m1**)

Generate a link map of the input and output sections on the standard output.

**-m2**

Generate a more detailed link map of the input and output sections, including symbols and addresses, on the standard output. **-m2** is a superset of **-m1**.

**-m4**

Generate a link map with a cross reference table.

File names for a symbol in a cross-reference table are listed in reverse linking order; that is, the last file in the list is pulled in first. (However, if a file *defines* the symbol, but does not *reference* the symbol, it will be listed first, before all references.) This may be useful to know in the case where a symbol is referenced by multiple files and you want to know which symbol reference caused which **.o** file to be pulled in by the linker.

**-m6**

Equivalent to **-m2** plus **-m4**: generated a detailed link map and cross reference table.

The value following “**m**” is converted to hexadecimal and used as a mask; thus, **-m3** is equivalent to **-m2**. Undefined bits in the mask are ignored.

**Allocate .data Section Immediately After .text Section (-N)**

**-N**

This option is used in conjunction with options **-Bd** and **-Bt**. See them for details (*Set Address for Data and tExt (-Bd=address, -Bt=address)*, p.393).

**Change the Default Output File (-o file)**

**-o file**

Use *file* as the name of the linked object file instead of the default filename **a.out**.

**Perform Incremental Link (-r, -r2, -r3, -r4, -r5)**

**-r**

The linked output file will still contain relocation entries so that the file can be re-input to the linker. The output file will not be executable, and no unresolved reference complaints will be reported.

**-r2**

Link the program as usual, but create relocation tables to make it possible for an intelligent loader to relocate the program to another address. Absent other options, a reference to an unresolved symbol is an error.

**-r3**

Equivalent to the **-r2** option except that unresolved symbols are not treated as errors.

**-r4**

Link for the VxWorks loader.

**-r5**

Equivalent to the **-r** option except that **COMDAT** sections are merged and converted to normal sections.

The **-r** options are required only for *incremental* linking, not when producing an ordinary absolute executable.

**Rename Symbols (-R symbol1=symbol2)****-R symbol1=symbol2**

Rename symbols in the linker output file symbol table. The order of the symbol names is not significant; **-R symbol1=symbol2** does the same thing as **-R symbol2=symbol1**. If both symbols exist, both are renamed: *symbol1* becomes *symbol2* and *symbol2* becomes *symbol1*.

**Search for Shared Libraries on Specified Path (-rpath)****-rpath path**

Search for shared libraries on specified *path*, a colon-separated list of directories. (If no search path is specified, the linker looks in the directory where the executable resides.) For VxWorks RTP application development.

**Do Not Output Symbol Table and Line Number Entries (-s, -ss)****-s**

Do not output symbol table and line number entries to the output file.

**-ss**

Same as **-s**, plus also suppresses all **.comment** sections in the output file.

### Specify Name for Shared Library (-soname)

**-soname**=*libraryName*

Use *libraryName* as the name of the shared object containing compiled library code. For VxWorks RTP application development.

### Select Target Processor and Environment (-t tof:environ)

**-t** *tof:environ*

Select the target processor, object format, floating point support, and environment libraries. See the **-t** option in [4. Selecting a Target and Its Components](#) for details. This option is not valid in a linker command file.

### Define a Symbol (-u symbol)

**-u** *symbol*

Add *symbol* to the symbol table as an undefined symbol. This can be a way to force loading of modules from an archive.

### Print version number (-V)

**-V**

Print the version of the linker.

### Do Not Output Some Symbols (-X)

**-X**

Do not output symbols starting with **@L** and **.L** in the generated symbol table. These symbols are temporaries generated by the compiler.

### Specify Search Directories for -l (-Y L, -Y P, -Y U)

**-Y L**,*dir*

Use *dir* as the first default directory to search for libraries or files specified with the **-l** option.

**-Y P,*dir***

*dir* is a colon-separated list of directories. Search each of the directories in the list for libraries or files specified with the **-l** option.

**-Y U,*dir***

Use *dir* as the second default directory to search for libraries or files specified with the **-l** option.

## Notes:

1. These options must occur prior to all **-l** options to which they are to apply.
2. The **dcc** and **dplus** programs (but not **dld** itself) generate a **-Y P** option suitable for the selected target and environment. Unless you are replacing the libraries, you should not normally use this option. Use the **-L** option to specify libraries to be searched before the Wind River libraries. (See [Specify Directory for -l search List \(-L dir\)](#), p.395.)
3. If no **-Y** or **-l** options are present on the **dld** command line, the linker will automatically search the directories associated with the default target. See [4.2 Selected Startup Module and Libraries](#), p.28 for details.
4. If a **-Y** option is used, **-Y P** is recommended. The older **-Y L** and **-Y U** options are provided for compatibility. Use of **-Y P** together with **-Y L** or **-Y U** is undefined.

## 24.5 Linker -X options

The following **-X** options provide additional detailed control over the linker. Many are present to improve compatibility and ease of conversion from other tool sets.

### Use Late Binding for Shared Libraries (-X)

**-Xbind-lazy**

Bind each shared-library function the first time it is called. (By default, binding occurs when the module is loaded.) For VxWorks RTP application development.

### Enable Cache Optimization (-Xcache-optimization)

#### **-Xcache-optimization**

Enable cache optimization. See [25.11 Cache Optimization \(CACHE and PROFILE Commands\)](#), p.427.

### Check Input Patterns (-Xcheck-input-patterns)

#### **-Xcheck-input-patterns**

Check that every input section pattern in the linker command file matches at least one input section. Emit a warning if an unmatched pattern is found.

#### **-Xcheck-input-patterns=2**

Same as **-Xcheck-input-patterns**, but emit a message of severity level “information” instead of “warning”. (For use with **-Xstop-on-warning**.)

### Check for Overlapping Output Sections (-Xcheck-overlapping)

#### **-Xcheck-overlapping**

Check for overlapping output sections and sections which wrap around the 32-bit address boundary.

### Compress Debugging Information

#### **-Xcompress-debug info**

Compress debugging information sections in executable files by finding and eliminating redundant debugging information and then generating new debugging information sections.

Compression of debugging information requires extra memory and CPU resources at link time.

By default, **-Xcompress-debug-info** is turned off.

**Force Linker to Continue After Errors (-Xdont-die)****-Xdont-die**

Force the linker to continue after errors which would normally halt the link. For example, issue warnings rather than errors for undefined symbols and out-of-range symbols.

When the linker is forced to continue it produces reasonable output and returns error code 2 to the parent process. By default, the make utility stops on such errors; if you want it to continue you must handle this error code in the makefile explicitly.

**Do Not Create Output File (-Xdont-link)****-Xdont-link**

Do not create a linker output file. Useful when the linker is started only to create a memory map file.

**Use Shared Libraries (-Xdynamic)****-Xdynamic**

Link against shared libraries (**.so** files). For VxWorks RTP application development.

**Use ELF Format for Output File (-Xelf)****-Xelf**

This is the default.

**ELF Format Relocation Information (-Xelf-rela-...)****-Xelf-rela**

Use RELA relocation information format for ELF output. This is the default.

**-Xelf-rela-off****-Xelf-rela=0**

Use REL relocation information format for ELF output.

### Do Not Export Symbols from Specified Libraries (-Xexclude-libs)

#### **-Xexclude-libs=*list***

Do not automatically export symbols from the libraries specified in the comma-delimited *list*. (Use the same library names, prefixed with "l", that you would use with the **-l** option.) Example: **-Xexclude-libs=lc,lm**. For VxWorks RTP application development.

### Do Not Export Specified Symbols (-Xexclude-symbols)

#### **-Xexclude-symbols=*list***

Do not export the symbols specified in the comma-delimited *list* when creating a shared library. Example: **-Xexclude-symbols=function1,function2**. For VxWorks RTP application development.

### Write Explicit Instantiations File (-Xexpl-instantiations)

#### **-Xexpl-instantiations**

Cause the linker to write the source lines of an explicit instantiations file to **stdout**. To minimize space taken by template classes, the output from **-Xexpl-instantiations** can be used to create an explicit instantiations file (necessary header files must still be added); see [Templates](#), p.243. This option is deprecated.

### Store Segment Address in Program Header (-Xgenerate-paddr)

#### **-Xgenerate-paddr**

Store the address of each segment in the **p\_paddr** field of the corresponding entry in the program header table. Without this option, the **p\_paddr** value will be 0.

### Generate RTA Information (-Xgenerate-vmap)

#### **-Xgenerate-vmap**

Generates special information used by the RTA.



**Perform Link-Time Lint (-Xlink-time-lint)****-Xlink-time-lint**

See [5.4.86 Perform Link-Time Lint \(-Xlink-time-lint\)](#), p.98.

**Do Not Align Output Section (-Xold-align)****-Xold-align**

Do not align output sections.

Without this option (the default), each output section is given the alignment of the input section having the largest alignment. Output sections must be aligned to support position-independent code.

With this option, output sections are not aligned, and each output section begins immediately after the previous output section. (In this later case, input sections will still be aligned per their requirements, potentially leaving a gap from the start of the output section to the start of the first input section within it.)

**Pad Input Sections to Match Existing Executable File (-Xoptimized-load)****-Xoptimized-load=*n*****-Xoptimized-load**

Minimize the difference between the already existing executable file (if any) and the new file by padding input sections. *n* specifies how much relative space the linker can use for padding, where 0 means no padding and 100 is the default. The larger the value of *n*, the more similar the images are likely to be.

The linker saves the old executable file with the **.old** extension and generate a diff file with the **.blk** extension.

**Add Leading Underscore “\_” to All Symbols (-Xprefix-underscore)****-Xprefix-underscore**

Add a leading underscore “\_” to all symbols in the files specified after this command. Use **-Xprefix-underscore=0** to turn off this feature. The default is off.

## Remove Unused Sections (-Xremove-unused-sections)

### -Xremove-unused-sections

#### -Xremove-unused-sections-off

Remove all unused sections. By default the linker keeps unused sections.

A section is used if it:

- Is referred to by another used section.
- Has a program entry symbol—that is, a symbol defined with the **-e** option (*Define a Default Entry Point Address (-e symbol)*, p.394) or one of **\_\_start**, **\_start**, **start**, **\_\_START**, **\_START**, **\_main**, or **main** (order reflects priority).
- Is not referenced by any section and has a name that starts with **.debug**, **.fini**, **.frame\_info**, **.init**, **.j\_class\_table**, or **.line**.
- Defines a symbol used in an expression in the linker command file.
- Defines a symbol specified with the **-u** option (*Define a Symbol (-u symbol)*, p.398).



---

**NOTE:** This option is especially useful in combination with **-Xsection-split** (*5.4.126 Generate Each Function in a Separate CODE Section Class (-Xsection-split)*, p.116) to reduce code size. When both options are used, each function in a module will generate a separate **CODE** section, and thus functions which are not called will be removed.

---

## Re-scan Libraries (-Xrescan-libraries...)

### -Xrescan-libraries

#### -Xrescan-libraries-off

Request that the linker re-scan libraries to satisfy undefined externals. This is the default. It solves the ordering problem which occurs when one library uses symbols in another and vice-versa.

Use **-Xrescan-libraries-off** to force the linker to scan libraries and object files in precisely the order given on the command line.

**Re-scan Libraries Restart (-Xrescan-restart...)****-Xrescan-restart****-Xrescan-restart-off**

If **-Xrescan-libraries** is on, when more than one library is presented to the linker, force the linker to rescan the libraries from first to last in order for each undefined symbol. This is the default.

Use **-Xrescan-restart-off** with **-Xrescan-libraries** to cause the linker, after finding symbols in one library, to continue with the next library for the rest of the undefined symbols.

**Align Sections (-Xsection-align=n)****-Xsection-align=n**

Force COFF input sections to have an alignment of *n* instead of the default 8. (Ignored for ELF output.)

**Build Shared Libraries (-Xshared)****-Xshared**

Build shared libraries (rather than stand-alone executables). For VxWorks RTP application development.

**Sort .frame\_info Section (-Xsort-frame-info)****-Xsort-frame-info****-Xsort-frame-info-off**

To enable sorting of the **.frame\_info** section, use **-Xsort-frame-info**. By default, sorting is disabled (**-Xsort-frame-info-off**).

**Link to Static Libraries (-Xstatic)****-Xstatic**

Link against static (**.a**) libraries rather than shared (**.so**) libraries. Use this option when both static and shared libraries are available. For VxWorks RTP application development.

### Stop on Redefinition (-Xstop-on-redefinition)

By default, the linker issues a warning each time it encounters a redefinition. If **-Xstop-on-redefinition** is specified, the linker halts with an error on the first redefinition.

### Stop on Warning (-Xstop-on-warning)

#### **-Xstop-on-warning**

Request that the linker stop the first time it finds a problem with severity of warning or greater.

### Suppress Leading Dots “.” (-Xsuppress-dot)

#### **-Xsuppress-dot**

Suppress leading dots “.” in the object files following this option.

### Suppress Section Names (-Xsuppress-section-names)

#### **-Xsuppress-section-names**

Do not output section names to the symbol table. This option is for other tools which cannot process these names.

### Suppress Paths in Symbol Table (-Xsuppress-path)

#### **-Xsuppress-path**

In the symbol table, suppress any pathname in “file” symbols (type **STT\_FILE**, see [Table F-5](#)).

### Suppress Leading Underscores ‘\_’ (-Xsuppress-underscore)

#### **-Xsuppress-underscore**

Suppress leading underscores “\_” in the object files following this option. Note that for symbols with more than one leading underscore, only the first will be removed.

**Remove/Keep Unused Sections (-Xunused-sections...)****-Xunused-sections-remove**

Same as **-Xremove-unused-sections** (*Remove Unused Sections (-Xremove-unused-sections)*, p.404).

**-Xunused-sections-keep**

Same as **-Xremove-unused-sections-off** (*Remove Unused Sections (-Xremove-unused-sections)*, p.404).

**-Xunused-sections-list**

Print a list of removed sections.



# 25

## *Linker Command Language*

- 25.1 Introduction 410
- 25.2 Example “bubble.dld” 410
- 25.3 Syntax Notation 412
- 25.4 Pattern Matching in Linker Command Files 413
- 25.5 Numbers 414
- 25.6 Symbols 414
- 25.7 Expressions 415
- 25.8 Command File Structure 416
- 25.9 MEMORY Command 417
- 25.10 SECTIONS Command 418
- 25.11 Cache Optimization (CACHE and PROFILE Commands) 427
- 25.12 Assignment Commands 430
- 25.13 Examples 431

## 25.1 Introduction

This chapter covers the *linker command language*. Use the linker command language to:

- Specify input files and options for linking.
- Specify how to combine the input sections into output sections.
- Specify how memory is configured and assign output sections to memory areas.
- Assign addresses or other values to symbols.

A default linker command file, **default.dld**, is present in the **conf** directory. See [24.2 Defaults](#), p.390 for its use.

## 25.2 Example “bubble.dld”

Some examples in this chapter are drawn from the **bubble.dld** command file on the next page for the “bubble sort” program in the *Getting Started* manual. This example is distributed with the compiler suite in directory *version\_path/example/mips*. The chapter ends with additional unrelated examples. Some notes follow the figure.



Figure 25-1 bubble.dld Linker Command File Extract

| Linker Commands                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                     | Explanation                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                            |
|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <pre>MEMORY {     rom1:    org = 0x20000, len = 0x10000     rom2:    org = 0x30000, len = 0x10000     ram:     org = 0x80000, len = 0x30000     stack:   org = 0xb0000, len = 0x10000 }</pre>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                       | Define four memory areas.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                              |
| <pre>SECTIONS {     GROUP : {         .text : { *(.text)                     *(.init) *(.fini) }         .ctors ALIGN(4):         { ctordtor.o(.ctors) *(.ctors) }         .dtors ALIGN(4):         { ctordtor.o(.dtors) *(.dtors) }         .sdata2 : {}     } &gt; rom1      .text2 : { *(.text2)                __DATA_ROM = .;     } &gt; rom2      GROUP : {          __DATA_RAM    = .;         .data LOAD(__DATA_ROM) : {}          .sdata (DATA)         LOAD(ADDR(.sdata) - ADDR(.data)               + __DATA_ROM )         : {}          __DATA_END    = .;         __BSS_START    = .;         .sbss : {}         .bss : {}         __BSS_END      = .;          __HEAP_START = .;     } &gt; ram</pre> | <p>Collect code sections from all input files into a single output <b>.text</b> section and locate it in <b>rom1</b> memory (except for <b>.text2</b> code sections). Also, locate <b>.sdata2</b> with the <b>.text</b> sections (“small” <b>const</b> variables, actually of 0 length in the example).</p> <p><b>.ctors</b> and <b>.dtors</b> sections for startup and termination invocation.</p> <p>Collect all <b>.text2</b> sections and locate in <b>rom2</b>. Define <b>__DATA_ROM</b> as equal to the current location. The symbols defined this way are used within this file and during initialization.</p> <p>Group <b>.data</b>, <b>.sdata</b>, <b>.sbss</b>, and <b>.bss</b> output sections together in the order given.</p> <p>Collect initialized data sections (<b>.data</b>) from all input files “{ }” into a single output <b>.data</b> section and locate logically in <b>ram</b> memory. But use <b>LOAD</b> to place the actual data after the <b>.text2</b> section in <b>rom2</b>. <b>__init_main()</b> will move the actual data from <b>rom2</b> to <b>ram</b>.</p> <p>Similarly locate <b>.sdata</b> logically in <b>ram</b>, use <b>LOAD</b> to place it physically after <b>.data</b> in <b>rom2</b>.</p> <p>Reserve space for all <b>.bss</b> and <b>.sbss</b> sections in <b>ram</b> after the <b>.data</b> section. Remaining space will be used as heap by <b>malloc()</b>.</p> <p>Define other symbols used by <b>crt0.s</b>, <b>init.c</b>, and <b>sbrk.c</b> to control initialization and memory allocation:<br/>... Start of heap memory for <b>sbrk.c</b>.</p> |

Figure 25-1 **bubble.dld** Linker Command File Extract (cont'd)

| Linker Commands                                     | Explanation                                                |
|-----------------------------------------------------|------------------------------------------------------------|
| <code>__HEAP_END = ADDR(ram)+SIZEOF(ram);</code>    | End of heap memory for <code>sbrk.c</code> .               |
| <code>__SP_INIT = ADDR(stack)+SIZEOF(stack);</code> | Initial address of stack pointer for <code>crt0.s</code> . |
| <code>__SP_END = ADDR(stack);</code>                | Only used when stack probing for <code>sbrk.c</code> .     |

**Notes for bubble.dld**

Two features of **bubble.dld** are especially noteworthy:

- The use of the **LOAD** specification to create two images of variables having initial values, a *physical* image containing the initial values and intended for some form of read-only memory, and a *logical* image where the variables will reside during execution. See the [LOAD Specification](#), p.424 and [Copying Initial Values From “ROM” to “RAM”, Initializing .bss](#), p.281 for details.
- The definition of nine of the symbols:
  - `__DATA_ROM`, `__DATA_RAM`, and `__DATA_END` used in copying the initial values and `__BSS_START` and `__BSS_END` used in clearing static uninitialized variables (see [Copying Initial Values From “ROM” to “RAM”, Initializing .bss](#), p.281).
  - `__HEAP_START` and `__HEAP_END` to define the heap for use by `malloc()` and related functions. See [15.4.7 Dynamic Memory Allocation - the heap, malloc\(\), sbrk\(\)](#), p.283.
  - `__SP_INIT` and `__SP_END` to define the stack. See [15.4.6 Stack Initialization and Checking](#), p.283.

25.3 Syntax Notation

*Italic* words such as *area-name* represent items you must supply. The required type of each item — symbol name or number, can be gathered from the examples.

The following special characters are parts of commands and are required where shown:

{ } ( ) , ; > \*

The following characters are used only in the command descriptions and not in the linker command language itself. They have the meanings shown:

|  
“or”

[ ]

The enclosed construct is optional. When several optional items are adjacent, they may be given in any order.

...

The preceding item or construct may be repeated.

For example

a [b | c] ...

means that **a** is required, then any number of **b** or **c**.

Note that the “{” and “}” characters are part of commands and do *not* indicate a set of alternatives from which one must be chosen.

Long lists of alternative tokens are given by following the phrase “one of” with a list of the tokens on one or more lines, as in

```
assign-op: one of
 = += -= *= /=
```

## 25.4 Pattern Matching in Linker Command Files

The linker supports UNIX-style (filename) pattern matching. Note that any pattern more complex than `*` should be enclosed in double quotes. For example:

```
text_libfoo.a (TEXT) :
 libfoo.a[*] (.myText)
```

will read in all sections named **.myText** from all object files in the archive **libfoo.a** into the **text\_libfoo.a (TEXT)** output section.

To read in sections named **.myText** and **.myData** from only those modules in the library **libfoo.a** whose name are prefixed with *bar*, use

```
text_libfoo.a (TEXT) :
 libfoo.a["bar*"] (".my**")
```

(In this second example, one could substitute “.my????” for “.my\*” and get the same results.) For more information, consult documentation on UNIX shell-style pattern matching (e.g., **fnmatch()**).

Note that, when specifying filenames, case matters. For example, suppose the linker command file contains this directive:

```
.MYRODATA (TEXT) : {
 My_directory/foo.o (.rodata)
```

If you specify **my\_directory/foo.o** as a command-line argument to the linker, the directive will not be executed, because the linker sees **My\_directory** and **my\_directory** as two different names, even if the host operating system ignores case. Note too that the linker will not generate a warning in the case that an object to be pulled is not found.

## 25.5 Numbers

Several linker commands require a number, for example to specify an address or a size.

Numbers are hexadecimal if they begin with “0X” or “0x”, else octal if they begin with “0”, else decimal. Hexadecimal digits are “0” - “9”, “a” - “f”, and “A” - “F”; octal digits are “0” - “7”; decimal digits are “0V” - “9”.

## 25.6 Symbols

A *symbol*, once defined, may be used anywhere a number is required except in a **MEMORY** command. Symbols are defined in object files or by assignment commands (see [25.12 Assignment Commands](#), p.430).

A *symbol* defined in an assignment command is an identifier following the rules of the C language with the addition of “\$” and “.” as valid characters. Symbols may be up to 1,000 characters long.



**NOTE:** A symbol or filename which does not follow these rules may be given by quoting it with double-quote characters, for example, an object file named `"1234o.o"`.

## 25.7 Expressions

A linker *expression* is allowed anywhere a number is required, and is one of the following forms from the C language:

```
number
symbol
unary-op expression
expression binary-op expression
expression ? expression : expression
(expression)
```

where the operators are the following operators from the C language:

*unary-op*: one of

```
! ~ -
```

*binary-op*: one of

```
* / %
+ -
>> <<
== != >< <= >=
&
|
&&
||
```

The operators have their meaning and precedence as in C. Parentheses can be used to change the precedence.

See also [25.3 Syntax Notation](#), p.412.

When a symbol name is used in an expression, the address of that symbol is used. The symbol "." means the current location counter (allowed only within a statement list in a **SECTIONS** command).

The following pseudo functions are valid in expressions. Forward references are permitted.

**SIZEOF** (*section-name*)

Size of the named section (see [Example 25-6 Empty Sections](#), p.434 for an important limitation when using the **SIZEOF** operator).

**SIZEOF** (*memory-area-name*)

Size of a memory area defined with the **MEMORY** command.

**ADDR** (*section-name*)

Address of the named section.

**ADDR** (*memory-area-name*)

Address of a memory area.

**NEXT** (*expr*)

First multiple of *expr* that falls into unallocated memory.

**HEADERSZ**

Total size of all the headers.

**FILEOFFSET** (*section-name*)

File offset of the named section.

**ALIGN** (*value*)

$((. + value - 1) \& \sim (value - 1))$

## 25.8 Command File Structure

A command file is a list of commands. These are:

```
MEMORY { memory-area-definition }
SECTIONS { section-or-group-definition ... }
assignment-command
object-filename
archive-filename
command-line-option
```

The above commands may each be repeated as many times as required and may be given in any order as long as names are defined before use.

Each of these commands is described below except for the last three: in addition to, or instead of, being given as arguments on the command line, object and archive library files and command-line options may be given as commands.



**NOTE:** While different object files may be named on both the command line and in a linker command file, do not duplicate the same object filename in both places. This may cause sections from the duplicated object file to be duplicated in memory.

The command language is free format. More than one command may be given on a line, and a command may be written on multiple lines without need for any special continuation character.

Identifiers are as in C with the addition of period “.” and “\$” as a valid identifier characters; identifiers may be up to 1,000 characters long.

Whitespace is generally required as in C around identifiers and numbers but not special characters.

C-style comments are allowed anywhere whitespace would be.

## 25.9 MEMORY Command

```
MEMORY {
 area-name : { origin | org | o } = start-address [,]
 { length | len | l } = number-of-bytes [,]
 ...
}
```

The **MEMORY** command names one or more areas of memory, e.g. “rom”, “ram”. Each area is defined by a start address and a length in bytes. A later *section-definition* command can then direct that an output section be located in a named area. The linker will warn if the total length of the sections assigned to any area exceeds the area’s length. Example:

```
MEMORY {
 rom1: org = 0x010000, len = 0x10000
 rom2: org = 0x020000, len = 0x10000
 ram: org = 0x100000, len = 0x70000
 stack: org = 0x170000, len = 0x10000
}
```

Symbols (25.6 *Symbols*, p.414) cannot be used within the **MEMORY** command; *start-address* and *number-of-bytes* must be numeric expressions.

## 25.10 SECTIONS Command

```
SECTIONS {
 section-definition | group-definition
 ...
}
```

The **SECTIONS** command does most of the work in a linker command file. Each input object file consists of *input sections*. The primary task of the linker is to collect input sections and link them into *output sections*. The **SECTIONS** command defines each output section and the input sections to be made part of it. Within the **SECTIONS** command, a **GROUP** statement may be used to collect several output sections together.

The components of the **SECTIONS** command are described next. See [Figure 25-1](#) for example illustrating many of the possibilities.

### 25.10.1 Section-Definition

At a minimum, each *section-definition* defines a new *output section* and specifies the *input sections* that are to be put into that output section. Optional clauses may:

- Specify an address for the output section or place the output section in a memory area defined by an earlier **MEMORY** command.
- Align the section.
- Fill any holes in the section with a fixed value.
- Define symbols to be used later in the linker command file or in the code being linked.

The full form of a *section-definition* is shown in [Figure 25-2](#). For clarity, each clause is written on a separate line and is identified to its right for description below.



Figure 25-2 **section-definition**

| Syntax                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                       | Element                                                                                                                                                      |
|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <i>output-section-name</i><br>[ ( [ = ] [ BSS   COMMENT   CONST   DATA   TEXT   BTEXT ]<br>[ OVERLAY ] [ NOLOAD ] [ OPTIONAL ] ... ) ]<br>[ <i>address-value</i>   BIND ( <i>expression</i> ) ]<br>[ ALIGN ( <i>expression</i> ) ]<br>[ LOAD ( <i>expression</i> ) ]<br><br>[ OVERFLOW ( <i>size-expression</i> , <i>overflow-section-name</i> )<br>:<br>{ <i>section-contents</i> }<br>[ = <i>fill-value</i>   = ( <i>fill-value</i> [ , <i>size</i> [ , <i>alignment</i> ] ] ) ]<br>[ > <i>area-name</i> ] | <i>type-spec</i><br><br><br><i>address-spec</i><br><i>align-spec</i><br><i>load-spec</i><br><i>overflow-spec</i><br><br><i>fill-spec</i><br><i>area-spec</i> |

Note that most clauses are optional, and section modifiers (those preceding the “:”) may be in any order. Thus, the minimum *section-definition* has the form:

*output-section-name* : { *section-contents* }



**NOTE:** Exercise caution when naming custom sections. Section names that begin with a dot (.) may conflict with the compilation environment’s namespace.

Section Contents

*section-contents* is required in a *section-definition*. *section-contents* is a sequence of one or more of the forms from [Figure 25-1](#) separated by whitespace or comment:

(empty)

That is, { } with no explicitly named *section-contents*: include in the output section all sections from all input object files which have the same name as the *output-section-name*. Example:

.data : { }



**NOTE:** The empty form is processed only after the linker has examined and processed all other input specifications. Thus, input sections loaded directly or indirectly as a result of other more explicit specifications will not be re-loaded by an { } form, even if they appear after it.

*filename*

Include all sections from the named object file which have the same name as the *output-section-name*. Example:

```
.data : { test1.o, test2.o }
```

\* ( *input-section-spec* ... )

*input-section-spec* may be one of four forms:

*section-name*

Include the named sections from all input object files *but do not include input sections already included earlier*. Example:

```
.data : { *(.data) }
```

*section-name*[*symbol*]

Include the section defining the given symbol. The “[” and “]” characters do not mean “optional” in this case but rather are to be used as shown.

Example:

```
.text : { *(.text[malloc]) }
```

This form is especially useful with option **-Xsection-split**. See [5.4.126 Generate Each Function in a Separate CODE Section Class \(-Xsection-split\)](#), p.116.

\*

Include all sections.

*input-section-spec*=*n*

Include sections according to *input-section-spec* and assign them priority *n*. (See [23.7 Sorted Sections](#), p.383.)

*object-filespec* ( *input-section-spec* ... )

Include the named sections from the named object file, where *input-section-spec* is as defined immediately above and *object-filespec* is a pattern expression.

The pattern expression for *object-filespec* follows this syntax:

```
filename | { expression }
```

where *expression* is one of the following:

```
! expression
expression | expression
expression & expression
(expression)
filename
```

and *filename* can include the following special characters:

\* matches any string, including the null string.  
 ? matches any single character.  
 [...] matches any one of the enclosed characters. A pair of characters separated by a comma denotes a range.

(See also [25.4 Pattern Matching in Linker Command Files](#), p.413.)

Example:

```
.rom1 : { rom1.o(.data), rom1.o(.sdata) }
```

*archive-filespec*[*member-name*] ( *input-section-spec* ... )

Include the named sections from the named object file, where *input-section-spec* is as defined above, and *archive-filespec* and *member-name* are pattern expressions, meaning they use the same syntax as described for *object-filespec*, above. Example:

```
.text : { libproj.a[malloc.o](.text) }
```




---

**NOTE:** Referring to object and archive files in linker command files does not necessarily mean that these objects will be pulled in. Rather, these names are just references, and unless these names appear as part of the objects to be linked, the linker will not pull them in. Therefore, such files must be listed in the linker command file outside of the **MEMORY** or **SECTIONS** areas, or must be otherwise provided (e.g., on the command line or in a file to be read in with **-@file**). Note that that linker will not issue a warning if referenced objects are not pulled in.

---

#### [COMMON]

For explicit placement of **COMMON** sections. See [Linker Command File Requirements with COMMON](#), p.382 for additional information.

#### [SCOMMON]

For explicit placement of **SCOMMON** sections. See [SCOMMON Section](#), p.382 for additional information.

#### *assignment-command*

Define a symbol or change the program counter to create a “hole” (which may be filled by a *fill-value*). See [25.12 Assignment Commands](#), p.430.

#### ASSERT ( *expression* [, *text*] )

Evaluate *expression* and display an error message if *expression* is zero. Optional *text* is included in error message.

#### STORE ( *expression*, *size-in-bytes* )

Reserve and initialize storage (see [STORE Statement](#), p.426).

The order of the sections listed in the *section-contents* is undefined as is the order of output sections in a **SECTIONS** command. A **GROUP** definition may be used to ensure the order of a set of output sections. (See [GROUP Definition](#), p.426.)



---

**NOTE:** A section-contents specification must have at least one non-COMMENT input section, e.g., a **BSS**, **CONST**, **DATA**, or **TEXT** section, or the type of the output section will default to **COMMENT**, and it will not be allocated any memory. See below regarding section types.

---

**Type Specification: ([=]BSS), ([=]COMMENT), ([=]CONST), ([=]DATA), ([=]TEXT), ([=]BTEXT); OVERLAY, NOLOAD, OPTIONAL**

The *type-spec* clause sets the type of the output section. If absent, the type will be determined by the types of the input sections. If all input sections in a given output section are of the same type, the type of the output section will be that of the input sections and no *type-spec* clause is necessary. Mixing input sections of different types in a single output section is not recommended. If input sections do have different types, the linker will choose a type from the input sections in the following order from highest priority to least: **TEXT**, **CONST**, **DATA**, **BSS**, and **COMMENT**.

To force the linker to choose the specified type regardless of the types of the input sections, use the “=” form. For example, **(=DATA)** will force the output section to have the **DATA** type.

*type-spec* can also be used when linking files produced by third-party tools which do not tag each section with its type.

The alternative type specifications indicate the expected contents of the section:

**(BSS)**

Section contains uninitialized data space.

**(COMMENT)**

Section debug or other information not part of the program memory space.

**(CONST)**

Section contains initialized data space.

**(DATA)**

Section contains initialized variables.

**(TEXT)**

Section contains code and/or constants.

**(BTEXT)**

Blank text section.

**OVERLAY** tells the linker that the section can overlap other sections. The section should have **BIND** specification; memory is not allocated for it. Example:

```
.text1 (TEXT OVERLAY) BIND(ADDR(.text)) : { }
```

**NOLOAD** tells the linker not to mark the section as loadable.

**OPTIONAL** tells the linker that the section should be discarded if it is empty.

For example, specifying

```
.text1 : (OPTIONAL)
```

means that the **.text1** section will be created only if it will not be empty, and, if it is created, it inherits its type from its contents.

## Address Specification

The form of the *address-spec* is:

```
address-value | BIND (expression)
```

The *address-spec* clause specifies the address for the first byte of the output section. It is either an absolute address, *address-value*, or the word **BIND** followed by an expression that can contain the functions **SIZEOF**, **ADDR**, and **NEXT** (see [25.7 Expressions](#), p.415). An *address-spec* is not allowed inside a **GROUP** (see [GROUP Definition](#), p.426).




---

**NOTE:** A section with an address specification (*address-spec*) does not need a memory-area specification (*area-spec*), since the linker automatically marks the corresponding address range as reserved. If both an *address-spec* and an *area-spec* are provided, the linker checks that the address range is completely inside the memory area and displays a warning if it is not.

---

## ALIGN Specification

The form of the *align-spec* is:

```
ALIGN (expression)
```

An *align-spec* clause causes the linker to align the section on the byte boundary given by the value of *expression*.

## LOAD Specification

The form of the *load-spec* is:

**LOAD** ( *expression* )

In a typical embedded system, the values for all variables with explicit initialization must be stored in some type of read-only memory before the system is “powered up”. During execution, the variables must themselves be located in RAM so they can be set (except for **const** variables which can remain in ROM). Thus, during startup, the initial values for these variables must be copied from ROM to RAM.

To distinguish these two locations, we refer to the *physical* and *logical* addresses of the output section.


- *physical address*: This is the address given by the *expression* in the *load-spec*. It is this address which is used in the section header when the section is written to the linked output file. Thus, if a dynamic loader loads the section, or the section data is burned into a ROM, it will be at this *physical* address.
- *logical address*: This address is set by an *address-spec* or an *area-spec* in the *section-definition*. This will be actual address of the section during execution. Thus, when linking references to a variable in the section, the linker will use the variable's *logical* address.



**NOTE:** The *load-spec* only controls the physical/logical addressing of the section. Typically, assignment statements are used to define symbols for the physical and logical addresses of the section and its length. These symbols are then used by startup code to copy the physical data from ROM to its logical location in RAM. See the examples in this chapter, as well as **default.dld** in the **conf** directory and **crt0.s** in the appropriate target directory for the startup copying code.

Also, copying code in the startup module, **init.c**, copies only a single contiguous physical section. Thus, while more than one **LOAD** specification is permitted, the output sections named in the *expressions* must be contiguous.

The following example is from [Figure 25-1](#):

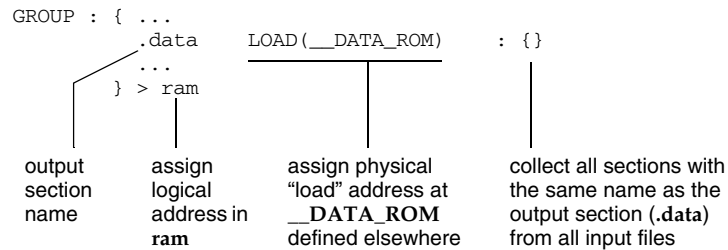

## OVERFLOW Specification

The overflow specification enables you to specify the size limit of a section and to request that the linker place input sections which will not fit into the initial section into a different section, called the *overflow section*.

The form of the *overflow-spec* is:

**OVERFLOW** (*size-expression*, *overflow-section-name*)

The *size-expression* specifies the size of the initial section in bytes, and *overflow-section-name* names the section that is to receive the input sections that cannot fit into the initial section.

## Fill Specification

The form of the *fill-spec* is

`=fill-value`

or

`=( fill-value[, size[, alignment ]] )`

The *fill-spec* instructs the linker to fill any holes in an output section with a two-byte pattern. A hole is created when an assignment statement is used to advance the location counter `"."`. The linker also creates holes to align input sections according to *alignment*. *size* and *alignment* are in bytes; valid values are 1, 2, and 4.

## Area Specification

The form of the *area-spec* is

> *area-name*

where *area-name* is defined by an earlier **MEMORY** command (see [25.9 MEMORY Command](#), p.417).

An *area-spec* causes the linker to locate the output section at the next available location in the given area (subject to any **ALIGN** clause, see [ALIGN Specification](#), p.423).

## STORE Statement

The **STORE** statement reserves and initializes memory space. Its form is:

**STORE** ( *expression*, *size-in-bytes* )

where *expression* is the value to be stored at the current address, and *size-in-bytes* is the size of the storage area, normally 4 for 32-bit values. Example:

```
_ptr_to_main = . ;
STORE(_main, 4)
```

will create a label **\_ptr\_to\_main** that contains the 4-byte pointer to the label **\_main**.

## GROUP Definition

A **SECTIONS** command may contain *group-definitions* as well as *section-definitions* (see [25.10 SECTIONS Command](#), p.418).

A group treats several output sections together and ensures they are located in a continuous memory block in the order given in the *group-definition*. When sections are not in a group, their order is not defined, although it may be dictated implicitly by, for example, *address-spec* clauses.

The full form of a *group-definition* is shown below. For clarity, each clause is written on a separate line and is identified to its right.



**GROUP**

|                                                              |                     |
|--------------------------------------------------------------|---------------------|
| [ <i>address-value</i>   <b>BIND</b> ( <i>expression</i> ) ] | <i>address-spec</i> |
| [ <b>ALIGN</b> ( <i>expression</i> ) ]                       | <i>align-spec</i>   |
| :                                                            |                     |
| { <i>section-definition</i> ... }                            |                     |
| [ > <i>area-name</i> ]                                       | <i>area-spec</i>    |

The clauses in a **GROUP** are defined above: *address-spec* in [Address Specification](#), p.423, *align-spec* in [ALIGN Specification](#), p.423, *section-definition* in [25.10.1 Section-Definition](#), p.418, and *area-spec* in [Area Specification](#), p.426.



**NOTE:** The *address-value* and **BIND** clauses may not be used on a *section-definition* inside a **GROUP**, only on the **GROUP** itself.

Both a *section-definition* and a *group-definition* can end with an *area-spec*. Usually when defining a group, an *area-spec* is used only on the *group-definition* and not on the *section-definitions* enclosed within it.

## 25.11 Cache Optimization (CACHE and PROFILE Commands)

The linker can perform cache optimization through code repositioning. Cache optimization can be achieved by utilizing the following:

- the linker option **-Xcache-optimization** (see [24.5 Linker -X options](#), p.399)
- two extensions to the linker command file syntax, **CACHE** and **PROFILE**:

```
cache-declaration ::=
 CACHE (cache-size , line-size [, associativity])

cache-size ::= expression
line-size ::= expression
associativity ::= expression

profile-declaration ::=
 PROFILE { popular-function-declarations [;] }

popular-function-declarations ::=
 [popular-function-declarations ;] popular-function
```

```
popular-function ::=
 symbol-name [weight] [{ children [;] }]

children ::=
 [children ;] symbol-name [weight]

symbol-name ::=
 symbol-identifier [@ section-identifier] [[file-name]]

weight ::= expression
```

where

*popular-function*

Represents a code section from a linker input object file. It contains one function when the **-Xsection-split** command-line option is given to the compiler. (See [5.4.126 Generate Each Function in a Separate CODE Section Class \(-Xsection-split\)](#), p.116.) However, the routine does not have to be a real function; positioning algorithms can be applied to any continuous segments of code. For optimization to be possible, segments should be smaller than the cache size. Only segments that are executed frequently ("popular") need to be listed.

*children*

Represents code segments (e.g., functions) that are executed after parent code is executed but before the parent is executed again.

Note that if function X calls function Y and then calls function Z, Y and Z are children of X, but Z is also a child of Y. In other words, the term *children* is used here to indicate a temporal relationships between two code segments; a normal call graph describes only a subset of such relationships.

When *children* is not specified, the linker uses relocation data to reconstruct a static call graph.

*weight*

Indicates how many times control passes from a parent to this child. A parent weight indicates how many times the function was called and is used only to estimate children's weights when they are not given.

When *weight* is not specified, the linker assigns a weight of 1 for listed functions, and 0 otherwise.

The linker uses the cache declaration data and the list of popular functions to alter the layout of code sections.

In its simplest form, a profile consists of a list of popular functions and can be created manually even without using a profiler.

All parts of the profile data are optional; in fact, function positioning will often have a positive effect even when the profile data is incomplete.

The instruction set simulator, WindISS, can collect cache utilization data useful in evaluating the effect of cache optimization. See [31.3 Simulator Mode](#), p.470, for more information.

**CACHE** and **PROFILE** are top-level commands, and may be placed before or after a **SECTIONS** command, in any order, and may even go in their own, separate linker command file.

The following excerpt from a sample linker command file shows what cache optimization, using **CACHE** and **PROFILE**, might look like:

```
CACHE (CACHE_SIZE, 1, 1024)

PROFILE {
 drc_GetRefSymbol[dreloc.o] 176243;
 sdc_GetOutAddress[symbol.o] 127648;
 GetOffsetFromSectionData[dreloc.o] 117140;
 GetDestinationInfo[dreloc.o] 117140 {
 sdc_GetOutAddress[symbol.o] 117140;
 drc_GetRefSymbol[dreloc.o] 117140;
 };
 do_Relocate[dreloc.o] 117140 {
 ...

deleteEXPARR[exparg.o] 1 {
 allocate[exparg.o] 1;
};
dld_CreateAPUInfoSections[main.o] 1;
}

MEMORY {
 ram: origin = 0x0, length = 32 * 1024 * 1024
}

SECTIONS {
GROUP : {
 .text (TEXT) : {
 * (.text)
 ...

__BSS_START = __BSS_START;
__BSS_END = __BSS_END
```

## 25.12 Assignment Commands

An *assignment* command defines or redefines the value of a symbol. Assignment commands are allowed at the outer-most level of a linker command file, and as items in the *section-contents* of a *section-definition* (see [Section Contents](#), p.419).

An assignment command may have either of the following forms:

```
symbol assign-operator expression ;
 create an absolute symbol and assign it the value of expression

symbol @ {section-name | symbol2 } assign-operator expression ;
 create a symbol in the given section, or the same section as symbol2, and
 assign it the value of expression
```

where:

*symbol* and *symbol2*: an identifier following the rules of the C language with the addition of "\$" and "." as valid characters and limited to 1,000 characters.

*assign-operator*: one of

=      +=      -=      \*=      /=

The assign";" is required.

When the assignment is inside a *section-definition*, the special symbol "." is allowed on either the left or right and refers to the current location counter.

A "hole" can be created in a section by incrementing the "." symbol. If the *fill-spec* is used on the *section-definition*, the reserved space is filled with the *fill-value*.

Example - create a 100 byte gap in a section:

```
. += 100;
```

Example - define the beginning of the stack for use by initialization code:

```
__SP_INIT = ADDR(stack) + SIZEOF(stack);
```

## 25.13 Examples

### Example 25-1 Avoiding Long Command Lines

A simple command file to avoid having to give a long command line when invoking the linker could look as follows:

```
main.o
load.o
read.o
arch.a
-m2
```

This means: load files **main.o**, **load.o** and **read.o**, search archive **arch.a**, and generate a detailed memory map.

The output sections for the above, not being defined in the command file itself, and absent **-Bd** and/or **-Bt** options on the command line, will be as described for these options (see [Set Address for Data and tExt \(-Bd=address, -Bt=address\)](#), p.393), and using default addresses for each which are appropriate to the target.

### Example 25-2 Basic

The command file:

```
MEMORY
{
 mem1 : origin = 0x2000, length = 0x4000
 mem2 : origin = 0x8000, length = 0xa000
}

SECTIONS
{
 .text : {} > mem2
 .data : {} > mem1
 .bss : {} > mem1
}

_start_addr = start;
```

means that all **.text** sections are collected together and positioned in the memory area starting at 8000 hex. The sections **.data** and **.bss** are placed in order in the **mem1** area beginning at 2000 hex. The symbol **\_start\_addr** is defined to be the same as the address of the symbol **start** from one of the input files.

The input object files for the above linker command file are those given on the command line (and any others extracted from libraries to satisfy unresolved external symbols in those files).

### Example 25-3 Define a Symbol, Create a “Hole”

## The command file

```
SECTIONS
{
 .text : {}
 .data ALIGN(8) :
 {
 f1.o (.data)
 _af1 = .;
 . = . + 2000;
 * (.data)
 } = 0x1234
 .bss : {}

}
```

means first load the **.text** sections. Align on 8 and load the **.data** section from the file **f1.o**. Set the symbol **\_af1** to the current address. Create a hole in the output section with a size of 2000 decimal bytes. Load the rest of the **.data** sections from the files given on the command line. Fill the hole with the value 0x1234. Load the **.bss** sections thereafter.

### Example 25-4 Groups

## The command file

```
MEMORY
{
 a: org = 0x100a8, len = 0x7ffeff58
}

SECTIONS
{
 .text BIND((0x10000 + HEADERSZ+7) & (~7)) :
 {
 *(.init) *(.text)
 }

 GROUP BIND(NEXT(0x10000) +
 ((ADDR(.text) + SIZEOF(.text)) % 0x2000)) :
 {
 .data : {}
 .bss : {}
 }
}
```

means that all input sections called **.init** or **.text** are combined into the output section **.text**. This output section is allocated at the address "0x10000 + size of all headers aligned on 8".

If **HEADERSZ** is 0xe0, the address becomes 0x100e0.

The sections **.data** and **.bss** are grouped together and put at the next multiple of 0x10000 added to the remainder of the end address of **.text** divided by 0x2000.

If **.text** is 0x23450 bytes long, the values are defined to be:

```
NEXT(0x10000) = 0x40000
ADDR(.text) = 0x100e0
SIZEOF(.text) = 0x23450
(ADDR(.text)+SIZEOF(.text))%0x2000 = 0x01530
address of .data = 0x41530
```

This is a typical default algorithm in a paged system where it is important to align the section addresses on the file-offset in the executable file.

#### Example 25-5 Document With C-Style Comments

The following command file is documented with C-style comments.

```
/*
 * The following section defines two memory areas:
 * one 1 MB RAM area starting at address 0
 * one 1 MB ROM area starting at address 0x1000000
 */
MEMORY
{
 ram: org = 0x0, len = 0x100000
 rom: org = 0x1000000, len = 0x100000
}

/*
 * The following section defines where to put the
 * different input sections. .text contains all
 * code + optionally strings and constant data, .data
 * contains initialized data, and .bss contains
 * uninitialized data.
 */

SECTIONS
{
 /* Allocate code in the ROM area. */

 .text : {} > rom

 /*
 * Allocate data in the RAM area.
 * Initialized data is actually put at the end of the
 * .text section with the LOAD specification.
 */
 GROUP : {
 .data LOAD(ADDR(.text)+SIZEOF(.text)) : {}
 .bss : {}
 } > ram
}
```

Note the use of the **LOAD** clause to allocate the **.data** section to a physical address in ROM, after the **.text** section, while the logical address (the address used during execution) is in the RAM. The initialized data in **.data** has to be moved from the physical address to the logical address during startup.

Example 25-6 **Empty Sections**

It may be an error to define a section without any input sections. This extended example begins with a sample linker command file extract likely to be faulty, and then discusses some potential workarounds. Recommended solutions are at the end of the example. While some of the workarounds are not recommended, they serve to illustrate a number of principles in linker command file construction.

Consider the following example:

```
SECTIONS
{
 ...
 .stack : {
 stack_start = .;
 stack_end = stack_start + 0x10000;
 } > ram
 ...
}
```

The above is apparently intended to reserve space for a stack and to define symbols marking its beginning and end.

There are four potential problems:

- The address of the current location, “.”, and therefore of **stack\_start**, is not well-defined. If there are no input sections named **.stack** in the input files, then **stack\_start** will be at the “next” unfilled location in **ram**, or at the beginning of the **ram** memory area if no other commands directing output to **ram** precede the above **.stack** output section definition.

However, if **.stack** sections do appear in the input files, these will be automatically included in this **.stack** output section — but whether they will appear before or after the address given to **stack\_start** is undefined (the rules are complex and subject to change, so no guarantee of order is made for this poorly constrained case).



If **.stack** sections do appear in the input files, the definition of “.” and therefore of **.stack\_start** can be made well defined by adding an input section specification as follows:

```
.stack ALIGN(4) : {
 stack_start = .;
 *(.stack)
 stack_end = .;
} > ram
```

- **stack\_start** may not be aligned as required. Lacking an *align-spec* as in the case above, the alignment will be 1, which may not be valid if the **.stack** section definition is preceded by a section with, for example, an odd length.

This problem could be solved by providing an *align-spec*:

```
.stack ALIGN(4) : { ... }
```

- The assignment to **stack\_end** will as expected define it to be **stack\_start** plus 0x10000 bytes, *but this assignment in and of itself does not allocate/reserve memory*. If other section definitions result in object bytes in what is intended to be the stack area, the linker will not warn of the conflict.

This problem could be solved by incrementing the current location:

```
stack_start = .;
. += 0x10000;
stack_end = .;
```

Incrementing “.” creates a “hole”. The hole will be zero-filled (absent specification of a different constant with option **-f** — see *Specify “fill” Value (-f value, size, alignment)*, p.394).

A reminder: the current location symbol, “.”, may appear only in a **SECTIONS** command, either between section definitions, or within a *section-definition* (25.10.1 *Section-Definition*, p.418) or a *group-definition* (*GROUP Definition*, p.426).

- Creating a hole by incrementing “.” actually uses space in the output image (which could be more of an issue with larger stack). If the area reserved for the stack is expected to be 0, this unnecessary space in the output image can be eliminated by a **BSS type-spec** (*Type Specification: ([=]BSS), ([=]COMMENT), ([=]CONST), ([=]DATA), ([=]TEXT), ([=]BTEXT); OVERLAY, NOLOAD, OPTIONAL*, p.422):

```
.stack (BSS) ALIGN(4) : { ... }
```

Combining all of the above, the following is at least valid and likely to produce an acceptable result if there are no **.stack** sections in input files.

```
SECTIONS
{
 ...
 .stack (BSS) ALIGN(4): {
 stack_start = .;
 . += 0x10000;
 stack_end = .;
 } > ram
 ...
}
```

However, because of its potential problems as described in this example, this approach is not recommended. A recommended way to define a stack, especially in combination with a heap, is to use **GROUP** definitions to locate sections in the desired order, and then to define a stack and heap from the end of the final **GROUP** (using assignment commands as above). Another way is to define a separate memory area for the heap or stack with the **MEMORY** command. These approaches are combined in the **default.ld** linker command file. See [25. Linker Command Language](#) for details.

Example 25-7 **Right and Wrong Ways to Use SIZEOF**

Adding the size of a section to its address is *not* a reliable way to calculate the address of the next section to follow because there may be an alignment gap between the sections. For example, the following figure shows incorrect and correct ways to define the physical address in a **LOAD** specification and to define a heap symbol. Incorrect commands in the incorrect method and changes in the correct method are in bold.

Figure 25-3 Correct and Incorrect Use of SIZEOF

```
MEMORY (Used by both incorrect and correct examples.)
{
 rom1: org = 0x20000, len = 0x10000 /* 3rd 64KB */
 rom2: org = 0x30000, len = 0x10000 /* 4th 64KB */
 ram: org = 0x80000, len = 0x30000 /* 512KB - 703KB */
 stack: org = 0xb0000, len = 0x10000 /* 7043B - 768KB */
}
```

### Incorrect LOAD Specification and Symbol Definition Using SIZEOF

```
SECTIONS
{
 GROUP : {
 .text : { *(.text) *(.init) *(.fini) }
 .ctors ALIGN(4):{ ctordtor.o(.ctors) *(.ctors) }
 .dtors ALIGN(4):{ ctordtor.o(.dtors) *(.dtors) }
 .sdata2 : {}
 } > rom1

 .text2 : { *(.text2) } > rom2

 GROUP : {
 .data LOAD(ADDR(.text2) + SIZEOF(.text2)) : {}
 .sdata LOAD(ADDR(.text2) + SIZEOF(.text2) + SIZEOF(.data)) : {}
 .sbss : {}
 .bss : {}
 } > ram
 ...

 __HEAP_START = ADDR(.bss) + SIZEOF(.bss); (Alignment gap after .bss could
 make __HEAP_START wrong.)

 __HEAP_END = ADDR(ram) + SIZEOF(ram); (Memory areas are fixed size;
 SIZEOF use is correct.)
```

Figure 25-3 Correct and Incorrect Use of SIZEOF (cont'd)

### Corrected

```
SECTIONS
{
 GROUP : {
 .text : { *(.text) *(.init) *(.fini) }
 .ctors ALIGN(4):{ ctordtor.o(.ctors) *(.ctors) }
 .dtors ALIGN(4):{ ctordtor.o(.dtors) *(.dtors) }
 .sdata2 : {}
 } > rom1

 .text2 : { *(.text2) } > rom2

 __DATA_ROM= .; (Define symbol for use in LOAD.)

 } > rom2

 GROUP : {
 .data LOAD(__DATA_ROM) : {}
 .sdata (DATA) LOAD(ADDR(.sdata) - ADDR(.data) + __DATA_ROM) : {}
 .sbss : {}
 .bss : {}
 } > ram
 ...

 __HEAP_END = ADDR(ram) + SIZEOF(ram); Memory areas are fixed size;
 __SP_INIT = ADDR(stack) + SIZEOF(stack); SIZEOF use is correct.)
 __SP_END = ADDR(stack);
```

### Example 25-8 Copying Code from “ROM” to “RAM”

In embedded systems, code and data are typically burned into a ROM-type device, and then initial values for global and static variables are copied to RAM during system startup. The startup code can automatically copy such initial values as described in [Copying Initial Values From “ROM” to “RAM”, Initializing .bss](#), p.281, which makes reference to the linker **LOAD** specification. (See [LOAD Specification](#), p.424.)

Copying code, not just initial data values, to high speed RAM can increase performance because it can be much faster to access than ROM. This example shows how to modify a simplified version the `version_path/conf/sample.dld` file shipped with the compiler suite to support this. In addition, a new `copy_to_ram()` function is required, and `crt0.s` is modified to call it.



**NOTE:** For simplicity, the small data and small constant areas have been removed from this example.

This example assumes an understanding of the startup code and the **LOAD** specification referred to above.

The first part of this discussion describes changes that are made to the linker command file. The following **SECTIONS** directive can be used to locate code physically in ROM but logically in RAM:


```
SECTIONS
{
 .text LOAD (ROM_ADDRESS) :{}
} > ram
```

The **LOAD** instruction tells the linker where code is to be loaded in ROM at load time — the *physical* address (for example, when the PROM is burned). The area specification (the **> ram** part of the statement) tells the linker where the code will be during execution — the *logical* address. Note that this **SECTIONS** directive does not copy the data from ROM to RAM; it only tells the linker where to resolve references to functions, labels, string constants located with code, and so forth. In this example a user-supplied function called **copy\_to\_ram()** does the actual copying of code from ROM to RAM during system startup.

If a **LOAD** directive and an area specification such as those shown above are used for the *initialization code*, that code will not be accessible. This is because the linker would resolve references to the initialization code in the **ram** area, and so the initialization code would never be found. One solution to this “chicken and egg” problem is to refrain from copying the initialization code, **crt0.o** and **copy\_to\_ram()**, to RAM, leaving it in ROM.

Here are the details:

1. Locate initialization code into ROM only, in a section called **.startup**. The startup code consists of **crt0.o** and **copy\_to\_ram()**.
2. Locate the rest of the code, and all global and static variables, physically in ROM but logically in RAM, except for uninitialized variables, which is only placed in RAM.
3. Assign symbols to keep track of important addresses in RAM and ROM. See the diagram below.

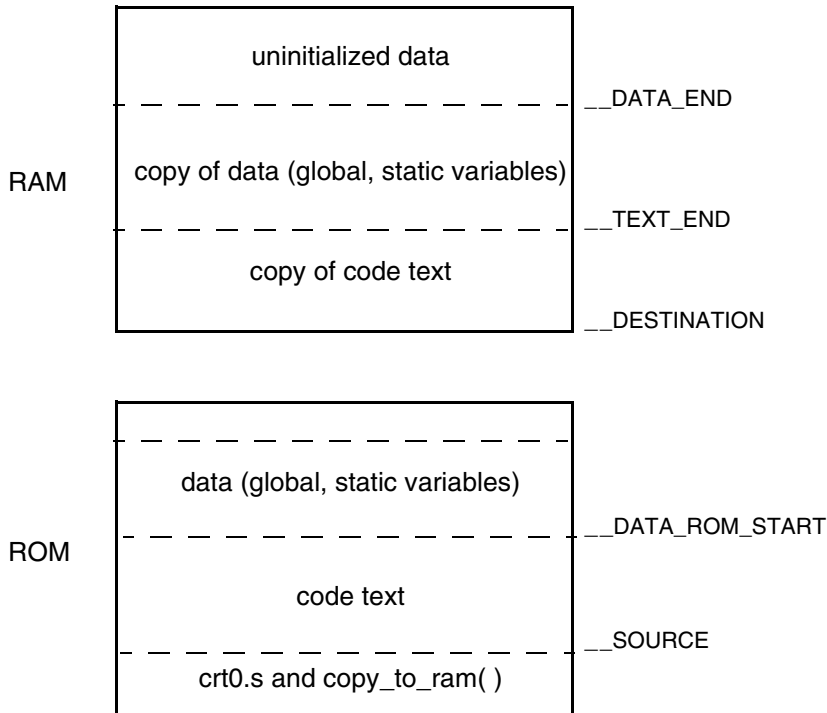

The symbols `__SOURCE` (in ROM) and `__DESTINATION` (in RAM) mark the beginning of the code areas (not including the initialization code). `__DATA_ROM_START` marks the beginning of data in ROM, and `__TEXT_END` marks the end of the `.text` section in RAM. `__DATA_END` marks the end of the code and variable sections that are to be copied.

The next two pages show the simplified **sample.dld**, before and after changes are made. Comments have been reduced to improve readability and unnecessary details have been omitted; changes appear in bold text in the second version of **sample.dld**. See **bubble.dld** for another example of more complete linker command files in [25. Linker Command Language](#).

In the “after” linker command file ([Figure 25-5](#)), note that `__DATA_ROM` and `__DATA_RAM` are made equal to each other in order to prevent **crt0.o** from redundantly copying data. (**crt0.o** copies data from ROM to RAM if those symbols are not equal; see [Copying Initial Values From “ROM” to “RAM”, Initializing .bss](#), p.281.)

Figure 25-4 **sample.lds As It Is Distributed**

```

MEMORY
{
 rom: org=0x0, len=0x100000
 ram: org=0x100000, len=0x100000
 stack: org=0x300000, len=0x100000
}

SECTIONS
{
 GROUP :
 {
 .text (TEXT) :{
 *(.text) *(.rodata) *(.rdata)
 *(.frame_info) *(.j_class_table)
 *(.init) *(.fini)
 .ctors ALIGN(4){ ctordtor.o(.ctors)
 *(.ctors) }
 .dtors ALIGN(4){ ctordtor.o(.dtors)
 *(.dtors) }
 }

 __DATA_ROM = .;
 } > rom

 GROUP : {
 __DATA_RAM = .;

 .data (DATA) LOAD(__DATA_ROM) :
 { *(.data) *(.j_pdata) }

 __DATA_END = .;

 __BSS_START = .;
 .bss (BSS) : {}
 __BSS_END = .;

 __HEAP_START= .;
 } > ram
}

```

Specify memory layout.

The first **GROUP** contains code and constant data, and is allocated in the **rom** memory area.

The second **GROUP** allocates space for initialized and uninitialized data in the **ram** memory area, as directed by **> ram** at the end of the **GROUP**. This is the “logical” location; references to symbols in the **GROUP** are to **ram**.

But the **LOAD** specification on the **.data** output section causes that section to follow be at **\_\_DATA\_ROM** in the **GROUP** above in the actual image (the “physical” address).

Allocate uninitialized sections.

Figure 25-5 **sample.lds Highlighting Changes Made for Copying from ROM to RAM**

|                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                       |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                         |
|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <pre> MEMORY { ... }  SECTIONS {     .startup (TEXT) : {         crt0.o(.text)         *(.startup)         __SOURCE = (. + 3) &amp; ~3;     } &gt; rom      GROUP :     {         __DESTINATION = .;         .text (TEXT) LOAD(__SOURCE) : {             *(.text) ...         }          __TEXT_END = .;         __DATA_ROM_START = __SOURCE +             __TEXT_END - __DESTINATION;          .data (DATA) LOAD(__DATA_ROM_START) :         { *(.data) *(.j_pdata) }          __DATA_END = .;          __BSS_START = .;         .bss (BSS) : {}         __BSS_END = .;          __HEAP_START = .;     } &gt; ram }  __DATA_ROM = 0; __DATA_RAM = __DATA_ROM; </pre> | <p>Create a startup section for initialization code, <code>crt0.o</code> and <code>copy_to_ram()</code>, that will only be placed in ROM. <code>__SOURCE</code> is the beginning address for the ROM to RAM copy.</p> <p>Make sure <code>__SOURCE</code> is aligned.</p> <p>Combine the rest of the code and data into a group located in RAM. Use <code>LOAD</code> directives to place all of this group (except uninitialized data) in RAM. <code>__DESTINATION</code> is the address in RAM for the ROM-to-RAM copy. Some details (such as <code>.ctors</code> and <code>.dtors</code>) have been removed.</p> <p><code>__TEXT_END</code> marks the end of code.</p> <p><code>__DATA_ROM_START</code> marks the beginning of data in ROM.</p> <p><code>__DATA_END</code> marks the end of data to be copied.</p> <p>Allocate uninitialized sections.</p> <p>Make <code>__DATA_ROM</code> and <code>__DATA_RAM</code> equal so initialization code will not copy initial values from ROM to RAM.</p> |
|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|

**Example 25-9 A Simple Copy Program from ROM to RAM, Using Linker Symbols**

A simple copy program can be used to copy from ROM to RAM, using `__DATA_END` and `__DESTINATION` to calculate the number of bytes to copy.

```

/* These symbols are defined in a linker command file. */

extern int __SOURCE[], __DESTINATION[], __DATA_END[];

#pragma section CODE ".startup"

void copy_to_ram(void) {

```



```

unsigned int i;
unsigned int n;
/* Calculate length of the region in ints */
n = __DATA_END - __DESTINATION;

for (i = 0; i < n; i++) {
 __DESTINATION[i] = __SOURCE[i];
}

```

**crt0.s** must call **copy\_to\_ram()**. The following is added after the comment “insert other initialization code here,” before calling **\_\_init\_main()**.

```

jal copy_to_ram
nop

```




---

**NOTE:** An alternative to using **copy\_to\_ram()**, which is implemented with a **for** loop, would be to call **memcpy()** from **crt0.o**, but then **memcpy()** would remain in ROM, with its slow access.

---



# Wind River Compiler Utilities

|    |                                            |     |
|----|--------------------------------------------|-----|
| 26 | Utilities .....                            | 447 |
| 27 | D-AR Archiver .....                        | 449 |
| 28 | D-BCNT Profiling Basic Block Counter ..... | 455 |
| 29 | D-DUMP File Dumper .....                   | 459 |
| 30 | dmake Makefile Utility .....               | 467 |
| 31 | WindISS Simulator and Disassembler .....   | 469 |



# 26

## *Utilities*

[26.1 Introduction 447](#)

[26.2 Common Command-Line Options 447](#)

### **26.1 Introduction**

The following chapters describe utility tools that accompany the compiler suite; this chapter details the common command-line options.

### **26.2 Common Command-Line Options**

All tools in the Wind River suite accept the following command-line options where meaningful. They are repeated here for convenience.

### Show Option Summary (-?)

-?, -h,  
--help

Show synopsis of command-line options.

### Read Command-Line Options from File or Variable

(-@name, -@ @name)

-@name

Read command-line options from either a file or an environment variable. When -@name is encountered on the command line, the tool first looks for an environment variable with the given *name* and substitutes its value. If an environment variable is not found then it tries to open a file with given *name* and substitutes the contents of the file. If neither an environment variable or a file can be found, an error message is issued and the tool terminates.

-@@name

Same as -@name; also prints all command-line options on standard output.

### Redirect Output (-@E=file, -@E+file, -@O=file, -@O+file)

-@E=file

Redirect any output to standard error to the given file.

-@O=file

Redirect any output to standard output to the given file.

Use of "+" instead of "=" will append the output to the file.

# 27

## *D-AR Archiver*

[27.1 Synopsis 449](#)

[27.2 Syntax 449](#)

[27.3 Description 450](#)

[27.4 Examples 453](#)

### 27.1 Synopsis

Create and maintain an archive of files of any type, with special features for object files.

### 27.2 Syntax

**dar** *command* [*position-name*] *archive-file* [*name*] ...

## 27.3 Description

The **dar** command maintains files in an archive. Archives can contain files of any kind. However, object files are handled in a special way. If any of the included files is an object file, the archiver will generate an invisible symbol table in the archive. This symbol table is used by the linker to search for missing identifiers without scanning through the whole archive.



---

**NOTE:** An archive file consisting only of object files is also called a library, and so the archiver is often referred to as a *librarian*.

---

*command* is composed of a hyphen (-) followed by a command letter. One or more optional modifier letters for some commands may either be concatenated to the command letter, or may be given as separate option arguments (see below for examples).

*position-name* is the name of a file in the archive used for relative positioning with the **-r** and **-m** commands.

*archive-file* is the archive file pathname.

*name* is one or more files in the archive. Multiple *name* arguments are separated by whitespace.

### 27.3.1 dar Commands

dar commands and modifiers are as follows. Modifiers are shown in brackets. See also [26.2 Common Command-Line Options](#), p.447.

**-d** [**lv**]

Delete the named files from the archive.

**-m** [**abiv**]

Move the named files. If any of the [**abi**] modifiers are employed, the *position-name* argument must be present and the files will be positioned in the same manner as with the **-r** command. Otherwise the files are moved to the end of the archive.

**-p** [**sv**]

Print the contents of the named files on the standard output. This is useful only with text files in an archive; binary files, e.g., object files, are not converted and so are not normally printable.



- q [cflv]**  
Quickly append the named files at the end of the archive without checking whether the files already exists. If the archive contains any object files, the symbol table file will be updated. If the **[f]** modifier is used, the files will be appended without updating the symbol table file, which is considerably faster. Use the **-s** command when all files have been inserted in the archive to update the symbol table.
- r [abciluv]**  
Replace the named files in the archive. New files are placed at the end of the archive unless one of the **[abi]** modifiers is used. If so, *position-name* must be given to specify a position in the archive. With the **[bi]** modifiers, the named files will be positioned before *position-name*; with the **[a]** modifier, after it.
- If the archive does not exist, create it.
- If the **[u]** modifier is specified, then only files with a modification date later than the corresponding files in the archive will be replaced.
- s [IR]**  
Update the symbol table file in the archive. Used when the archive is created with the **-qf** command.
- t [sv]**  
List a table of contents for the archive on the standard output.
- V**  
Print the version number of **dar**.
- x [lsv]**  
Extract the named files from the archive and place them in the current directory. The archive is not changed.

Table 27-1 **dar Command Modifiers**

|                          | Use With<br>Commands |                                                                                                    |
|--------------------------|----------------------|----------------------------------------------------------------------------------------------------|
| a                        | <b>-m -r</b>         | Insert the named files in the archive after the file <i>position-name</i> .                        |
| b                        | <b>-m -r</b>         | Insert the named files in the archive before the file <i>position-name</i> . Same as “i” modifier. |
| c                        | <b>-q -r</b>         | Does not display any message when a new archive <i>archive-file</i> is created.                    |
| <b>D</b> <i>pathname</i> |                      |                                                                                                    |

Table 27-1 **dar Command Modifiers** (cont'd)

|          | Use With<br>Commands            |                                                                                                                                                                                                                                                                                                                                                                       |
|----------|---------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
|          | <b>-q -r</b>                    | When adding to or replacing files in an archive, prefix <i>pathname</i> to name of each file to be stored to access it in the file system (but do not store the additional <i>pathname</i> in the symbol table).                                                                                                                                                      |
| <b>f</b> | <b>-q</b>                       | Append files to the archive, without updating the symbol table file. If any of the files already exist, multiple copies will exist in the archive. The next time the <b>-s</b> command is used <b>dar</b> will delete all copies but the last of the files with the same name.                                                                                        |
| <b>i</b> | <b>-m -r</b>                    | Insert the named files in the archive before the file <i>position-name</i> . Same as “ <b>b</b> ” modifier.                                                                                                                                                                                                                                                           |
| <b>j</b> | <b>-q -r</b>                    | Store a path prefix if given with an object file in the archive symbol table instead of just the base filename.<br><br><b>NOTE:</b> The path prefix becomes part of the name in the archive. Thus, if a single file <b>x.o</b> is added once as <b>x.o</b> and a second time as <b>lib/x.o</b> using the “ <b>j</b> ” option, it will be stored twice in the archive. |
| <b>l</b> | <b>-d -q -r -s -x</b>           | Place temporary files in the current directory instead of the directory specified by the environment variable <b>TMPDIR</b> , or in the default temporary directory.                                                                                                                                                                                                  |
| <b>s</b> | <b>-p -t -x</b>                 | Same as the <b>-s</b> command.                                                                                                                                                                                                                                                                                                                                        |
| <b>u</b> | <b>-r</b>                       | Replace those files that have a modification date later than the files in the archive.                                                                                                                                                                                                                                                                                |
| <b>v</b> | <b>-d -m -p<br/>-q -r -t -x</b> | Verbose output.                                                                                                                                                                                                                                                                                                                                                       |
| <b>R</b> | <b>-s</b>                       | Sort object files in the archive so that the linker does not have to scan the symbol table in multiple passes.                                                                                                                                                                                                                                                        |

## 27.4 Examples

Some later examples build on earlier examples.

### Example 27-1 New Archive

Create a new archive **lib.a** and add files **f.o** and **h.o** to it (the **-r** command could also be used):

```
dar -q lib.a f.o h.o
```

### Example 27-2 Modify Above Archive: Replace File, Add File

Replace file **f.o**, and insert file **g.o** in archive **lib.a**, and also display the version of **dar**. Without the “a” modifier, the new file **g.o** would be appended to the end of the archive. With the “a” modifier and the first **f.o** acting as the *position-name* in the command, new file **g.o** is inserted after the replaced **f.o**:

```
dar -rav f.o lib.a f.o g.o
```

### Example 27-3 Alternative command for Example 2

[Example 27-1](#) - [Example 27-2](#) can also be given in the following form with the modifier letters given as separate options. The first item following **dar** must always be the command from [27.3.1 dar Commands](#), p.450.

```
dar -r -a -v f.o lib.a f.o g.o
```

### Example 27-4 Quick Append to Archive

Quickly append **f.o** to the archive **lib.a**, without checking if **f.o** already exists. This operation is very fast and can be used as long as the archive is later cleaned with the **-sR** command (see below):

```
dar -qf lib.a f.o
```

### Example 27-5 Cleanup Archive After Quick Appends

Cleanup archive **lib.a** by creating a new sorted symbol table and removing all but the last of files with the same name. This is useful after many files have been added with the **-qf** option:

```
dar -sR lib.a
```

Example 27-6 **Extract File from Archive Without Changing Archive**

Extract **file.c** from archive **source.a** and place it in the current directory. The archive is unchanged.

```
dar -x source.a file.c
```

Example 27-7 **Delete File from Archive Permanently**

Delete **file.c** files from archive **source.a**. The file is deleted without being written anywhere:

```
dar -d source.a file.c
```

# 28

## *D-BCNT Profiling Basic Block Counter*

- [28.1 Synopsis 455](#)
- [28.2 Syntax 455](#)
- [28.3 Description 456](#)
- [28.4 Files 457](#)
- [28.5 Examples 457](#)
- [28.6 Coverage 458](#)
- [28.7 Notes 458](#)

### 28.1 Synopsis

Display profile data collected from one or more runs of a program.

### 28.2 Syntax

```
dbcnt [-f profile-file] [-h n] [-l n] [-n] [-t n] source-file, ...
```

## 28.3 Description

The **dbcnt** command displays the number of times each line in a source program has been executed. It can also be used to show “coverage” information (see [28.6 Coverage](#), p.458).

The files to be measured must be compiled with the **-Xblock-count** option. By definition, a basic block is a segment of code with exactly one entrance and one exit. Thus, all statements in a basic block will have the same count. Compiling with **-Xblock-count** causes the compiler to insert code into each basic block to record each execution of the block. Each time the resulting program is run, the profile data is stored in the file named in the environment variable **DBCNT**. If **DBCNT** is not set, the file **dbcnt.out** will be used. If the program is executed more than once, the new profile data will be added to the existing **DBCNT** file.

After the profile data has been collected and returned to the host, to display one or more source files together with their line counts, enter the command:

```
dbcnt [options] source-file1, source-file2, ...
```

If the name of the **DBCNT** file is not **dbcnt.out**, use the **-f** option to provide the pathname of the actual file with the line counting information. See below for examples.

**dbcnt** options are as follows. See also [26.2 Common Command-Line Options](#), p.447.

### 28.3.1 **dbcnt** Options

- f file**  
Read profile data from *file* instead of **dbcnt.out**.
- h n**  
Do not print lines executed more than *n* times.
- l n**  
Do not print lines executed fewer than *n* times.
- n**  
Print the line number of every source line.
- t n**  
Print the *n* most frequently executed lines.
- V**  
Print the version number of **dbcnt**.

## 28.4 Files

*Files processed by **dbcnt** must be unique in their first 16 characters.*

### 28.4.1 Output File for Profile Data

#### **dbcnt.out**

Default output file for profile data.

#### **DBCNT**

Environment variable giving the name of the profile data file.

## 28.5 Examples

The file *file.c* (shown annotated below) is compiled with:

```
gcc -Xblock-count -o file file.c
```

When executed, the following output is produced:

```
47 numbers are multiples of 3 or 5.
```

**dbcnt** is used to show how many times each line is executed:

```
dbcnt file.c
```

**dbcnt** produces the following output:

```
file.c (1 run(s)):
main()
{
1 int i = 100, n = 0;
1
101 while(i > 0) {
100 if ((i % 3) == 0 || (i % 5) == 0) {
67
47 n++;
47 }
100 i--;
100 }
1 printf("%d numbers are multiples of 3 or 5.\n",n);
}
```



---

**NOTE:** When a source line contains more than one basic block, such as the if statement above, empty lines are added to show the count of the basic blocks after the first.

---

The following will find the 100 most frequently executed source lines in a program:

```
dbcnt -n -t100 *.c
```

## 28.6 Coverage

The following will find all source lines which did not execute in a program:

```
dbcnt -h0 -l0 -n *.c
```

(The second option, **-l0**, is hyphen, lower-case L, 0.)

## 28.7 Notes

The functions `__dbinic()` and `__dbexit()` must exist in the standard library in order for the linker to be able to link the files compiled with the **-Xblock-count** option.

For information on support for file I/O and environment variables in an embedded environment, see [15.8.2 File I/O](#), p.289 and [15.11 Target Program Arguments, Environment Variables, and Predefined Files](#), p.294.

See [15.12 Profiling in an Embedded Environment](#), p.296 for an additional example.



# 29

## *D-DUMP File Dumper*

[29.1 Synopsis 459](#)

[29.2 Syntax 459](#)

[29.3 Description 460](#)

[29.4 Examples 465](#)

### 29.1 Synopsis

Dump or convert all or parts of object files and archive files.

### 29.2 Syntax

```
ddump [command] [modifiers] file, ...
```

## 29.3 Description

An object file consists of several different parts which can be individually dumped or converted with the **ddump** command.

**ddump** accepts both object files and archive files; in the latter case, each file in the archive is processed by the **ddump** command. **ddump** can generate debugging information only for code that is fully bound at link time; it does not work on relocatable object files.

*command* is composed of a hyphen (-) followed by one or more command letters. One or more optional modifier letters for some commands may either be concatenated to the command letter, or may be given as separate option arguments. Commands and options are all represented by unique letters and so may be mixed in any order. Typically modifiers consisting of a single letter are concatenated with commands, while modifiers taking a separate argument are given as separate options (e.g., **-Rv** versus **-R -o name**).

See also [26.2 Common Command-Line Options](#), p.447.

### 29.3.1 **ddump** commands

**-a**

Dump the archive header for all the files in an archive file.

**-B**

Convert a hexadecimal file to binary format. Each pair of hexadecimal numbers is translated to one byte in the output file. Whitespace (spaces, tabs, and newlines) are ignored. Unless the **-o** modifier is used, the output file will be named **bin.out**.

**-C**

Generate a difference file (either a SingleStep **.blk** file or an S-Record) from two ELF executable files. Usage:

```
ddump -c [modifiers] file1 file2
```

The following special modifiers are available:

**-h**

Generate differences for read-only sections and a complete dump for writable sections. Useful when the original executable has already run on the target and has modified some writable information.

- v**  
Generate differences for initialized sections. Useful when the executable has initialized uninitialized data.
- p2**  
Generate an S-Record instead of a **.blb** file.
- c**  
Dump the string table in each object file.
- D**  
Dump the DWARF debugging information in each object file.
- F**  
Demangle C++ names entered interactively, one per line (no files are processed). Enter **Ctrl-C** or the end-of-file character to terminate interactive mode. If combined with other options, prints demangled names. See [13.6 C++ Name Mangling](#), p.246 for details on how names are mangled.
- f**  
Dump the file header in each object file.
- g**  
Dump the symbols in the global symbol table in each archive file.
- H**  
Display the contents of any file in hexadecimal and ASCII formats. The **-p** modifier will display hexadecimal only.
- h**  
Dump the section headers in each object file.
- l**  
Dump the line number information in each object file.
- N**  
Dump the symbol table information in each object file. Similar to the UNIX **nm** command. The following special modifiers are available. See also the **-t** option below for a more readable dump but without further options.
  - x**  
Display numbers in hexadecimal.
  - o**  
Display numbers in octal.
  - u**  
Display only undefined symbols.

- p** Display symbols in BSD format.
- h** Suppress header.
- r** Display filename before symbol name.
- g** Emulate GNU **nm** output.

**-o** Dump the optional header in each object file.



---

**NOTE:** **-o** is both a command and an option. If any of the commands **-B**, **-I**, or **-R** are encountered, then a following **-o** is assumed to specify the output file for the **-B**, **-I**, or **-R** command. If **-o** is encountered first, then it is the command. See the **-o** modifier on [29.3.1 ddump commands](#), p.460.

---

**-R** Convert an executable (usually, or object) file to different formats, especially Motorola S-Record format. The output file will be named **srec.out** unless the **-o** modifier is used (see [29.3.1 ddump commands](#), p.460). Sections may be selected with the **-n** or **-d** and **+d** modifiers as usual.

The following special modifiers are available:

- mt** Write S-Records of the given type: 1 for 16-bit addresses, 2 for 24 bit-addresses, 3 for 32-bit addresses (the default). No space is permitted between "**m**" and *t*.
- p** Write a plain ASCII file in hexadecimal (not S-Record format).
- u** Write a binary file (not S-Record format). Inter-section gaps of size less than or equal to 10KB are filled with 0. The size may be changed with the **-y** option described in [29.3.1 ddump commands](#), p.460. A larger gap will cause an error.
- v** Do not output the **.bss** or **.sbss** section (applies to all output formats).

Without **-v**, S-Records will be generated to set **.bss** and **.sbss** sections to 0. This will increase transmission or programming time when sending S-Records to PROM programmers or other devices and may not be desirable.

**-wn**

Set the line width of the S-records to represent  $n$  data characters. The actual line length is  $2n$  plus the size of other fields such as the address field. The default value of  $n$  is 20.  $2n$  is used instead of  $n$  because it takes  $2n$  hex digits to represent  $n$  characters. No space is permitted between “**w**” and  $n$ .

**-r**

Dump the relocation information in each object file.

**-S**

Display the size of the sections. Similar to the UNIX **size** command. By using the **-f** modifier, the section names will be included in the output. By default, only the **.text**, **.data**, and **.bss** sections will be included. By using the **-v** modifier, all sections will be included.

**-s**

Dump the section contents in each object file.




---

**NOTE:** Use of the **v** modifier, that is, **-sv**, is highly recommended.

---

**-t**

Dump the symbol table information in each object file.

**-tindex**

Dump the symbol table information for the symbol indexed by *index* in the symbol table.

**+tindex**

Dump the symbol table information for the symbols in the range given by the **-t** option through the **+t** option. If no **-t** was given, 0 is used as the lower limit.

**-V**

Print the version number of **ddump**.

**-zname**

Dump the line number information for the function *name*.

**-zname,number**

Dump the line number information in the range *number* to *number2* given by **+z** for the function *name*.

**+znumber2**  
Provide the upper limit for the **-z** option.

Table 29-1 **ddump command modifiers**

|                              | Use With<br>Command   |                                                                                                                                                                                                                                                                                                                                                                                               |
|------------------------------|-----------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>-d</b><br><i>number</i>   | <b>-h -l -R -s</b>    | Dump information for sections greater than or equal to <i>number</i> . Sections are numbered 1, 2, etc.                                                                                                                                                                                                                                                                                       |
| <b>+d</b><br><i>number</i>   | <b>-h -l -R -R -s</b> | Dump information for sections less than or equal to <i>number</i> .                                                                                                                                                                                                                                                                                                                           |
| <b>-n</b><br><i>namelist</i> | <b>-h -l -R -s -t</b> | Dump the information associated with each section name in a comma-separated list of section names.                                                                                                                                                                                                                                                                                            |
| <b>-o</b> <i>name</i>        | <b>-I -R</b>          | Specify an output filename for the <b>-B</b> , <b>-I</b> , and <b>-R</b> commands. (See note regarding the <b>-o</b> command in <a href="#">29.3.1 ddump commands</a> , p.460.)                                                                                                                                                                                                               |
| <b>-p</b>                    | any but <b>-I</b>     | Suppress printing of headers. Special meaning with <b>-R</b> .                                                                                                                                                                                                                                                                                                                                |
| <b>-p</b> <i>name</i>        | <b>-I</b> only        | Set the processor name in the “Module Begin” record. If this option is not specified the processor name is taken from the magic number of the input file. A list of processor names and magic numbers can be found in the IEEE 695 specification.                                                                                                                                             |
| <b>-u</b>                    | any                   | Underline filenames. Special meaning with <b>-R</b> .                                                                                                                                                                                                                                                                                                                                         |
| <b>-v</b>                    | any                   | Dump information in verbose mode. Special meaning with <b>-R</b> .                                                                                                                                                                                                                                                                                                                            |
| <b>-yn</b> [, <i>c</i> ]     | <b>-Ru</b>            | Change the size of the gap allowed by the <b>-Ru</b> command to <i>n</i> and, optionally, fill it with the character <i>c</i> (see <a href="#">29.3.1 ddump commands</a> , p.460). For example:<br><br><code>ddump -Ru -y20000,0x20 ...</code><br><br>permits gaps from 1 through 20,000 bytes, and fills those gaps with the space character. By default, <i>n</i> is 10k and <i>c</i> is 0. |

## 29.4 Examples

### Example 29-1 Dump File Header and Symbol Table for Files in Archive

Dump the file header and symbol table from each object file in an archive in verbose mode:

```
ddump -ftv lib.a
```

### Example 29-2 Convert Executable File to Motorola S-Records

Convert an executable file named **test.out** to Motorola S-Record format, naming the output file **test.rom**. Use the **-v** option to suppress the **.bss** section (without **-v**, S-Records would be generated to fill the **.bss** section with zeros).

```
ddump -Rv -o test.rom test.out
```

### Example 29-3 Generate S-Records Only for “data” Sections

Same as the prior example but convert and output only sections **.data** and **.sdata** and call the result **data.rom**.

```
ddump -R -n .data,.sdata -o data.rom test.out
```

### Example 29-4 Display Section Sizes

Use **-Sf** to show the size of all sections loaded on the target. See below:

```
ddump -Sf a.out
9056(.text+.sdata2) + 772(.data+.sdata) + 428(.sbss+.bss) =
10256
```

### Example 29-5 Demangle C++ Names

Demangle C++ names with **ddump -F**:

|                              |                  |
|------------------------------|------------------|
| <b>ddump -F</b>              | command entry    |
| <b>mymain__FiPPc</b>         | user entry       |
| <b>mymain(int , char **)</b> | demangled result |
| <b>init__7myclassFv</b>      | user entry       |
| <b>myclass::init(void )</b>  | demangled result |





# 30

## *dmake Makefile Utility*

[30.1 Introduction 467](#)

[30.2 Installation 467](#)

[30.3 Using dmake 468](#)

### 30.1 Introduction

Rebuilding the Wind River libraries requires the special make utility, **dmake**, by Dennis Vadura. **dmake** is shipped and installed automatically with the tools.

**dmake** supports the standard set of basic rules and features supported by most “make” utilities—see the documentation for other “make” utilities for details.

### 30.2 Installation

The **dmake** executable is shipped in the **bin** directory and requires no special installation.

## 30.3 Using dmake

Use **dmake** as a typical “make” utility. For example, enter **dmake** without parameters to cause it to look for a makefile named, on Windows, **makefile** (case-insensitive), and on UNIX, first **makefile** and then **Makefile**.

Enter **dmake -h** for a list of command-line options.

**dmake** requires a “startup” file unless the **-r** option is given on the command line, and will look for the file in the following locations in order:

- The value of the macro **MAKESTARTUP** if defined on the command line.
- The value of the **MAKESTARTUP** environment variable if defined.
- The file *version\_path/dmake/startup.mk* (supplied as shipped).

# 31

## *WindISS Simulator and Disassembler*

[31.1 Introduction 469](#)

[31.2 Synopsis 469](#)

[31.3 Simulator Mode 470](#)

[31.4 Batch Disassembler Mode 476](#)

[31.5 Interactive Disassembler Mode 477](#)

[31.6 Examples 478](#)

### **31.1 Introduction**

WindISS, the Wind River Instruction Set Simulator, is a simulator for executables and a disassembler for object files and executables. The disassembler mode provides both batch and interactive disassembly.

### **31.2 Synopsis**

The three modes of operation are selected by:

**windiss ...**  
Simulation (with no **-i** option).

**windiss -i ...**  
Batch disassembly.

**windiss -ir ...**  
Interactive disassembly.

The modes of operation are described the following sections.

### 31.3 Simulator Mode

In simulator mode, **windiss** can take command-line arguments, input from standard input, and send output to standard output.

Table 31-1   **Syntax (Simulator Mode)**

|                                                                                      |                                                                                                                                                                                                                                               |
|--------------------------------------------------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <code>windiss [-a size]</code>                                                       | Enable instruction cache simulation and the collection of cache statistics. <i>size</i> indicates the size of the instruction cache. See <a href="#">25.11 Cache Optimization (CACHE and PROFILE Commands)</a> , p.427, for more information. |
| <code>windiss [-b binary-offset]</code>                                              | Load file at address; requires <b>-t</b> option.                                                                                                                                                                                              |
| <code>[-d debug-mask]</code>                                                         | Write debugging information.                                                                                                                                                                                                                  |
| <code>[-D]</code>                                                                    | Trace execution, show disassembly and register state.                                                                                                                                                                                         |
| <code>[-Df trace-file]</code>                                                        | Send <b>-D...</b> trace output to file.                                                                                                                                                                                                       |
| <code>[-Di trigger-address[. . stop-address]</code><br><code>[, trace-count]]</code> | Trace only on execution in address range;<br>trace for count instructions.                                                                                                                                                                    |
| <code>[-Dm range-start[. . range-stop]</code><br><code>[, trace-count]]</code>       | Start trace on first read/write in address range;<br>trace for count instructions.                                                                                                                                                            |
| <code>[-Ds skip-count[, trace-count]]</code>                                         | Start trace after <i>skip-count</i> instructions; trace for count.                                                                                                                                                                            |

Table 31-1 **Syntax (Simulator Mode)** (cont'd)

|                                                                                                                                                                                               |                                                                                                                         |
|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------------------------------------------|
| <b>-Dx</b> <i>max-count</i>                                                                                                                                                                   | Execute <i>max-count</i> instructions, then stop.                                                                       |
| <b>-e</b> <i>entry-point</i>                                                                                                                                                                  | Set entry point address.                                                                                                |
| <b>-h</b> <i>hex-offset</i>                                                                                                                                                                   | Load at offset; requires <b>-t</b> option.                                                                              |
| <b>-i</b> <i>mem-init-value</i>                                                                                                                                                               | Initialize memory to low byte of value, else to 0.                                                                      |
| <b>-m</b> <i>mem-size</i>                                                                                                                                                                     | Set memory size in bytes; suffixes K (kilo) or M (mega).                                                                |
| <b>-ma</b>                                                                                                                                                                                    | Allocate memory automatically when accessed.                                                                            |
| <b>-mm</b> <i>range-start</i> [ <i>. . range-end</i> ] [ <b>r</b> ][ <b>w</b> ][ <b>x</b> ]<br>[, <i>range-start</i> [ <i>. . range-end</i> ] [ <b>r</b> ][ <b>w</b> ][ <b>x</b> ]] [, . . .] | Specify memory map in address range(s); <b>r</b> , <b>w</b> , and <b>x</b> set memory type to read, write, and execute. |
| <b>-M</b> <i>address-mask</i>                                                                                                                                                                 | Specify address mask applied to simulated target.                                                                       |
| <b>-N</b> <i>nice-value</i>                                                                                                                                                                   | Run with lower priority on windows; <i>nice-value</i> can be 0 (default) to 6 (lowest priority).                        |
| <b>-p</b>                                                                                                                                                                                     | Generate count profile without using <b>-Xprof...</b> options.                                                          |
| <b>-q</b>                                                                                                                                                                                     | Quiet mode—no messages except user output.                                                                              |
| <b>-r</b>                                                                                                                                                                                     | Internal use by RTA.                                                                                                    |
| <b>-s</b> <i>clock-speed</i>                                                                                                                                                                  | Set clock speed (in megahertz).                                                                                         |
| <b>-s</b> <i>stack-address</i>                                                                                                                                                                | Specify initial value of stack and environment area.                                                                    |
| <b>-t</b> <i>target-name</i>                                                                                                                                                                  | Set target. <i>target-name</i> may be set to MIPS, MIPS32R2, R3000, or R4000.                                           |
| <b>-v</b>                                                                                                                                                                                     | Display version number.                                                                                                 |
| <b>-x</b> <i>exception-mask</i>                                                                                                                                                               | Set exception mask.                                                                                                     |
| <i>filename</i> [ <i>argument...</i> ]                                                                                                                                                        | Executable file to simulate and arguments to it if any.                                                                 |

### 31.3.1 Compiling for the WindISS Simulator

The simulator is easiest to use with ELF files that were compiled for the **windiss** environment. **windiss** does not support 64-bit registers or instructions. To select the **windiss** environment when compiling, assembling, and linking, either:

- Use **-ttof:windiss** on the compiler, assembler, or linker command line.
- Use **dctrl -t** to specify the target and environment. When **dctrl** prompts **Select environment**, select **other**, and then enter **windiss**.

If object files were not compiled with ELF object file coding, the linker option **-Xelf** can be used to produce ELF file executables. Also, special switches described below allow for simulation using binary and hex files.

### 31.3.2 Simulator Mode Command and Options

The following shows options for running **windiss** in simulator mode. The space between the option and its value is optional unless otherwise noted. When an option has multiple values, no other spaces are allowed. All numeric values may be specified in decimal or hex, e.g., 16 or 0x10.

**-b** *address*

Load binary file at *address*. The **-t** option must be used to indicate the target.

**-d** *debug-mask*

Write debugging information using *debug-mask* to indicate options. Mask bits may be OR-ed and are specified in hex, e.g. 0xc. Mask bits not listed below are reserved. The mask bits are as follows:

- 1, 2 Turn logging on for the RTA server. Bit 2 requests more detail than bit 1.
- 4 Cannot be used without bit 8. When used with bit 8, **windiss** displays the contents of buffers for POSIX calls.
- 8 Log POSIX calls.
- 16 Log exceptions, if exceptions are enabled. For example, the timer interrupt can be logged.
- 64 Log target memory handling.

**-D**

Show initial register state; trace execution, showing disassembly for all instructions; show values for all registers that are changed.

**-Df** *trace-file*

Direct output from all **-D** tracing options (**-D**, **-Di**, **-Dm**, and **-Ds**) to the *trace-file*.

**-Di** *trigger-address*  
 [*.. stop-address*]  
 [, *trace-count*]

Enable tracing, displaying each instruction as it executes and any registers modified by it on **stdout**. No space is allowed in the arguments except after **-Di**.

Start tracing when the PC enters the range from *trigger-address*..*stop-address*. The default for *stop-address* gives a range of one instruction at the *trigger-address*.

Addresses may be symbols.

Stop tracing when execution reaches the *stop-address* or after *trace-count* instructions. If neither is present, tracing continues until the program terminates. Note that the program does not terminate when tracing stops—the program always runs until completion unless the **-Dx** option is present.

If *trace-count* is 0, tracing is enabled as long as the PC is within the specified function or range. When the PC is outside of range (e.g. when executing a subroutine), tracing is disabled.

Program output to **stdout** is intermixed with trace output unless the **-Df** option is used to redirect trace output to a different file. Examples:

```
windiss -Di main hello.out
 Trace beginning at main.
```

```
windiss -Di main,1 hello.out
 Trace one instruction beginning at main.
```

```
windiss -Di main..printf hello.out
 Trace from main through the first entry to printf.
```

```
windiss -Di printf,0 hello.out
 Trace printf, skipping subroutine calls.
```

Note: simulation is slower with this option.

**-Dm** *range-start* [*.. range-stop*] [, *trace-count*]

Start tracing on the first read or write to any memory location in the given range. Stop tracing after *trace-count* instructions if present.

See **-Di** for other details and related examples.

**-Ds** *skip-count* [, *trace-count*]

Execute at full speed until *skip-count* instructions have been executed and then begin tracing each instruction as executed. Stop tracing after *trace-count* instructions if present.

See **-Di** for other details and related examples.

**-Dx** *max-count*

Execute *max-count* instructions and then stop.

**-e** *entry-point*

Specify the entry point of binary file.

**-El**

**-Eb**

Specify endianness for a binary file: **-Eb** for big-endian, or **-El** for little-endian.

**-h** *address*

Load hex file at *address*. The **-t** option must be used to indicate the target.

**-I** *mem-init-value*

Initialize memory to the low-order byte of the given value. Memory is cleared to 0 without this option.

**-m** *mem-size*

Specify size of memory in simulator. Sizes can be specified in bytes, kilobytes with “**k**” or “**K**”, or megabytes with “**m**” or “**M**”. For example, the following are equivalent: **-m 2M**, **-m 2048K**, **-m 2097152**, and **-m 0x200000**. The program terminates with an error if the end of memory is reached.

**-ma**

Use automatic memory allocation. Memory is allocated when accessed.

**-mm** *range-start*[. . *range-end*] [**r**][**w**][**x**] [, *range-start*[. . *range-end*] [**r**][**w**][**x**] [, ...]

Specify a memory map starting at *range-start* and ending at *range-end*. The **r**, **w**, and **x** flags set the memory type to read, write, and execute; the default is **rwX**. Multiple ranges can be specified.

**-M** *memory-mask*

Specify an address mask to be applied to all target addresses before access to the simulated memory. Used to mask off high address bits to fit applications linked to high memory.

**-N** *nice-value*

Run **windiss** using lower priority on windows. *nice-value* can be 0 to 6, where 0 is the default (normal execution) and 6 is the lowest priority.

(none) or **-?**

Use **windiss** alone on the command line to see a list of **windiss** options.

**-p**

Generate count profile data even for programs not compiled with **-Xprof-...** options, effectively using **-Xprof-count** (112; hierarchical profile data not available). Without **-r**, upon program completion, the profile data is written to **stdout**. With **-r**, the **RTA** collects the profile data.



- q** Run in quiet mode: do not print messages other than output from the user's program.
- r** Not for direct use. Used for connection to the RTA.
- s** *clock-speed* Set simulated clock speed in megahertz. The default is 10 (MHz). *clock-speed* must be an integer. This does not change the execution speed of **windiss** itself; rather, it changes the simulated time reported by **windiss**.
- s** *stack-address* Specify the initial value of the stack and environment area. The default is to use the highest available memory address, or 0xA0000000 if automatic memory allocation is used (see **-ma** above).
- t** *target-name* Specify target processor for program. Not needed for ELF files. Abbreviated names are used for specifying target processors: ARM, M32R, MC68K, MCF (for ColdFire), MCORE, MIPS, NEC, PPC, SH, SPARC, and X86. (Note that these abbreviated names are only the initial part of the *t* component of the **-ttof:environ** option to the compiler, linker and assembler. Only the abbreviated forms shown are currently permitted with **windiss**.)

#### MIPS-v

Print **windiss** version.

- x** *exception-mask* *exception-mask* is a 32-bit target-specific value that controls which exceptions are handled by **windiss**. The least significant bit corresponds to exception 0, the next bit to exception 1, and so on. If a bit is 1, **windiss** simulates the corresponding exception (branching to the exception handler, which must be supplied by the application program). If the bit is 0 (the default), **windiss** terminates the program when the exception occurs.

Only the following exceptions are implemented (by bit number):

- |   |                                                                                                                                                               |
|---|---------------------------------------------------------------------------------------------------------------------------------------------------------------|
| 2 | TLB Load and Fetch (handler offset 0x100): page fault. Generated if an attempt is made to load data or code at an address outside the simulated memory space. |
| 3 | TLB Store (handler offset 0x180): page fault. Generated if an attempt is made to store data to an address outside the simulated memory space.                 |
| 4 | Misaligned Load Access (handler offset 0x200).                                                                                                                |
| 5 | Misaligned Store Access (handler offset 0x280).                                                                                                               |

|    |                                                                                                                                                       |
|----|-------------------------------------------------------------------------------------------------------------------------------------------------------|
| 8  | System Call (handler offset 0x400). Generated by the <b>SYSCALL</b> instruction.                                                                      |
| 9  | Breakpoint (handler offset 0x480). Generated by the <b>BREAK</b> instruction.                                                                         |
| 10 | Illegal Instruction (handler offset 0x500).                                                                                                           |
| 12 | Overflow (handler offset 0x600). Generated if an arithmetic overflow occurs when executing the <b>ADD</b> , <b>SUB</b> , or <b>ADDI</b> instructions. |

## 31.4 Batch Disassembler Mode

### 31.4.1 Syntax (Disassembler Mode)

```
windiss -i[o | e | l] [label] [-v target-name] [-R1 start-address] [-R2 end-address]
[-R3 section] filename
```

*label* is used only with the **l** modifier.

For the **-ir** option, see [31.5 Interactive Disassembler Mode](#), p.477.

### 31.4.2 Description

Batch disassembly mode is selected by the **-i** option with no “**r**” modifier. In batch disassembler mode, **windiss** disassembles ELF object files and executables and writes the assembly code to standard output. The **-i** stands for instructions.

**windiss** can disassemble programs compiled either:

- For the **windiss** environment, without hardware floating point support. See [31.3.1 Compiling for the WindISS Simulator](#), p.472.
- For other environments, if there are no floating point instructions.

The modifiers **o**, **e**, and **l** are appended to the **-i** without an additional hyphen and with no spaces allowed. Modifiers may be used together in any order. To disassemble code use:

- **-i** alone to disassemble the whole file.

- **[e] -R1 start-address [-R2 end-address]** to specify code addresses. Use 0x for hex numbers. If part of a function is specified by a **-R1** and **-R2** options, the entire function is disassembled unless the “**e**” option is used to request exact addresses. A space is required between either the **-R1** or **-R2** option and the address.
- **-R3 section** to specify a section index in the object file. If the specified section has zero length, the option is ignored.
- **o** to also show machine code.
- **l label** to specify the name of a function to be disassembled.
- **-v target-name** to specify variant-specific processor behavior. If **-v** is not present, the default MIPS target (generic MIPS instruction set) is simulated. Options include **MIPS** (same as default), **R3000**, **R4000**, and **MIPS64**.

## 31.5 Interactive Disassembler Mode

### 31.5.1 Syntax (Interactive Disassembler Mode)

```
windiss -ir[o] filename
```

### 31.5.2 Description

In interactive disassembler mode, **windiss** prints the disassembled ELF object code and executables interactively. The **-i** stands for instructions; the **r** modifier selects interactive mode; the **o** modifier shows hex machine code in addition to assembly language. **windiss** can disassemble programs compiled either:

- For the **windiss** environment, without hardware floating point support. See [31.3.1 Compiling for the WindISS Simulator](#), p.472.
- For other environments, if there are no floating point instructions.

To disassemble code in interactive mode:

```
d[isasm] label | [-e] start-address [end-address]
```

If part of a function is specified, the entire function will be disassembled unless the **-e** option is given. The **-e** option requests that exact addresses be disassembled, without other code.

To quit interactive mode:

```
q[uit]
```

## 31.6 Examples

### Example 31-1 Simulate Using All Defaults

Run **windiss** in simulator mode. The program output is 17.

```
windiss a.out

17
windiss: task finished, exit code: 83521, Instructions executed: 2118
windiss: interrupts were never enabled
```

### Example 31-2 Simulate with Specified Memory Sizes

Run **windiss** in simulator mode, specifying memory size as 20,000 bytes, and then 1 megabyte:

```
windiss -m 20000 a.out

windiss: loading outside of memory, EA=0x4c00 (increase by using -m
<size>)

windiss -m 1M a.out

17
windiss: task finished, exit code: 83521, Instructions executed: 2118
windiss: interrupts were never enabled
```

### Example 31-3 Simulate Showing POSIX Calls

Run **windiss** in simulator mode, and use the debug option with a mask to show POSIX calls.

```
windiss -d 8 a.out
%% posix call 120: isatty(1), ret=1, errno=0
%% posix call 4: write(1, 0x6bfc, 4)
```

```
17
windiss: task finished, exit code: 83521, Instructions executed: 2118
windiss: interrupts were never enabled
```

Example 31-4    **Batch Disassemble Entire File**

Disassemble **a.out**:

```
windiss -i a.out
```

Example 31-5    **Batch Disassemble One Function in File**

Disassemble **main** in **a.out**:

```
windiss -il main a.out
```

Example 31-6    **Batch Disassemble Functions in Address Range**

Disassemble all code in function which includes addressees from 0x9c to 0x4e:

```
windiss -i -R1 0x9c -R2 0x4e a.out
```

Disassemble only code from 0x9c to 0x4e:

```
windiss -ie -R1 0x9c -R2 0x4e a.out
```

Example 31-7    **Interactive Disassembly**

Disassemble **a.out** in interactive mode, examine **main** and addresses 0xa0 to 0xa4:

|                                                                                                                                                                                                                                                                                                                                                                            |                                                                                                                       |
|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-----------------------------------------------------------------------------------------------------------------------|
| <pre>windiss -ir a.out d main 0x0000009c: &lt;main&gt;:      addi      \$29,\$29,-24 0x000000a0: &lt;main+4&gt;:    addi      \$2,\$0,10 0x000000a4: &lt;main+8&gt;:    addi      \$29,\$29,24 0x000000a8: &lt;main+12&gt;:   jr        \$31 0x000000ac: &lt;main+16&gt;:   sll       \$0,\$0,0 d -e 0xa0 0xa4 0x000000a0: &lt;main+4&gt;:    addi      \$2,\$0,10 q</pre> | <p>command line<br/>interactive command<br/>windiss output</p> <p>exact address range<br/>windiss output<br/>quit</p> |
|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-----------------------------------------------------------------------------------------------------------------------|

Example 31-8    **Simulate, Showing Instructions and Data as Executed**

Run **windiss** in simulator mode. Run normally until 2293 instructions are executed and then show the register contents and all instructions until the end of the program. Note: The 17 that appears first is output from the program. Lines containing register information are indented one space.

Figure 31-1 **windiss Output Starting with Specified Instruction Number**

```
windiss -Ds 2293 a.out

17
SR 00000000 EPC 00000000 $0 00000000 $1 00000000
$2 ffffffff $3 00000064 $4 00000003 $5 00006bfc
$6 00000004 $7 00000000 $8 00000000 $9 00000000
$10 00000000 $11 00006be0 $12 00006788 $13 00000001
$14 00006be0 $15 00000002 $16 00000000 $17 00000000
$18 00000000 $19 00000000 $20 001ffe34 $21 00000001
$22 00014641 $23 0000eb00 $24 ffffffff $25 00000000
$26 00000000 $27 00000000 $28 0000eb04 $29 001ffdcc
$30 0000099c $31 00000208
0x00000208: <exit+148>: addu $4,$22,$0
$4 00014641
0x0000020c: <exit+152>: jal <__exit>
$31 00000214
0x00000210: <exit+156>: sll $0,$0,0
0x000002fc: <__exit>: j <__trap>
0x00000300: <__exit+4>: ori $2,$0,1
$2 00000001
0x000002dc: <__trap>: syscall
```

---

## PART VI

# C Library

|    |                                     |     |
|----|-------------------------------------|-----|
| 32 | Library Structure, Rebuilding ..... | 483 |
| 33 | Header Files .....                  | 497 |
| 34 | C Library Functions .....           | 503 |





# 32

## *Library Structure, Rebuilding*

[32.1 Introduction 483](#)

[32.2 Library Structure 484](#)

[32.3 Library Sources, Rebuilding the Libraries 493](#)

### 32.1 Introduction

These chapters describe the C libraries provided with Wind River compiler.

Documentation for C++ and C99 libraries may be found online at [https://portal.windriver.com/noAuth/wr\\_compiler\\_docs](https://portal.windriver.com/noAuth/wr_compiler_docs).



---

**NOTE:** This Web site provides documentation for some features not provided with the Wind River Compiler for MIPS. While examine the documentation, bear in mind that nonstandard C++ and C99 headers are not supported for the Wind River Compiler for MIPS.

---

The libraries are compliant with the following standards and definitions:

- ANSI X3.159-1989
- ISO/IEC 9945-1:1990
- POSIX IEEE Std 1003.1
- SVID Issue 2

For C++ specific headers, see [13.2 Header Files](#), p.240.

## 32.2 Library Structure



---

**NOTE:** Libraries are usually selected automatically by the **-t** option to the linker, or by default as set by **dctrl -t**. This section is provided for user customization of the process and can be skipped for standard use.

---

The Wind River library structure supports a wide range of processors, types of floating point support, and execution environments. This section describes that structure and the mechanism used by the linker to select particular libraries.

This section should be read in conjunction with the following:

- [2. Configuration and Directory Structure.](#)
- [4. Selecting a Target and Its Components.](#)

These sections describe the location of the components of the tools and the configuration variables (and their equivalents—environment variables and command-line options) used to control their operation. That knowledge is assumed here.

### 32.2.1 Libraries Supplied

The following paragraphs describe the libraries distributed with the standalone compiler and tools. This does not include **libc.a**, which is not an archive library, but is instead a text file which includes other libraries (see [32.2.3 libc.a](#), p.489). These libraries are distributed in various subdirectories of *version\_path* as described following the table.



---

**NOTE:** The standard C libraries documented here are *not* the ones used for VxWorks applications. If you specify the **:rtp** or **:vxworksx.x** execution environment, the tools will automatically link a different set of C libraries. See the documentation that accompanied your VxWorks development tools for more information.

---

**libcfp.a**

Floating point functions called by user code, including, for example, the **printf** and **scanf** formatting functions (but not the actual device input/output code). The version selected depends on the type of floating point selected: hardware, software, or none as described below.

Typically included automatically by **libc.a** (see [32.2.3 libc.a](#), p.489).

**libchar.a**

Basic operating system functions using simple character input/output for **stdin** and **stdout** only (**stderr** and named files are not supported). This is an alternative to **libram.a**.

Sometimes included automatically by **libc.a**, see [32.2.3 libc.a](#), p.489.

**libcomplex.a**

C++ complex math class library for use with older compiler releases. See [Older Versions of the Compiler](#), p.234.

Not automatic; include with **-l complex** option.

**libd.a**

Additional standard library and support functions delivered with C++ only (**libc.a** is also required).

Included automatically in the link command generated by **dplus**. If the linker is invoked directly (command **dld**), then must be included by the user with the **-ld** option.

**libdold.a**

Additional standard library and support functions delivered with C++ only (**libc.a** is also required) for use with older compiler releases. See [Older Versions of the Compiler](#), p.234.

Included automatically in the link command generated by **dplus** when the **-Xc++-old** option is used. If the linker is invoked directly (command **dld**), then must be included by the user with the **-ldold** option.

**libi.a**

General library containing all standard ANSI C functions except those in **libcfp.a**, **libchar.a**, and **libram.a**.

Typically included automatically by **libc.a** (see [32.2.3 libc.a](#), p.489).

**libimpfp.a**

Conversions between floating point and other types. There are three versions: one for use with hardware floating point, one for software floating point, and an empty file when “none” is selected for floating point.

**libimpl.a**

Utility functions called by compiler-generated or runtime code for constructs not implemented in hardware, e.g. low-level software floating point (except conversions), 64-bit integer support, and register save/restore when absent in the hardware.

Typically included automatically by **libc.a** (see [32.2.3 libc.a](#), p.489).

**libios.a**

C++ **iostream** class library for use with older compiler releases. See [Older Versions of the Compiler](#), p.234.

Not automatic; include with **-lios** option.

**libm.a**

Advanced math function library.

Not automatic; include with an **-lm** option.

**libstl.a**

Alias for **libstlstd.a**.

Not automatic; include with **-lstdl** (or **-lstdlstd**) option.

**libstlabr.a**

Abridged standard C++ library. Does not provide exception-handling functions or the **type\_info** class for RTTI support. For more information, see [13.3 C++ Standard Libraries](#), p.240.

Not automatic; include with **-lstlabr** option.

**libstlstd.a**

C++ **iostream** and complex math class libraries.

Not automatic; include with **-lstdlstd** (or **-lstdl**) option.

**libwindiss.a**

Support library required by the **windiss** core instruction-set simulator. This library is included automatically whenever a **-t** option ending in “:**windiss**” is used, for example, **-tMIPSES:windiss**. See [31. WindISS Simulator and Disassembler](#) for details.

**libpthread.a**

Unsupported implementation of POSIX threads for use with the example programs. Text file which includes sub-libraries **libdk\*.a**.

**libram.a**

Basic operating system functions using Ram-disk file input/output—an alternative to **libchar.a**.

Sometimes included automatically by **libc.a** (see [32.2.3 libc.a](#), p.489).

The tools accommodate requirements for different floating point and target operating system and input/output support using two mechanisms:

- **libc.a** is a text file which includes a number of the libraries listed above. Several **libc.a** files which include different combinations are delivered for each target.
- The configuration information held in the configuration variables **DTARGET**, **DOBJECT**, **DFP**, and **DENVIRON** causes **dcc** or **dplus** to generate a particular set of paths used by the linker to search for libraries. By setting these configuration variables appropriately, the user can control the search and consequently the particular **libc.a** or other libraries used by the linker to resolve unsatisfied externals.

As described in [4. Selecting a Target and Its Components](#), these four configuration variables are normally set indirectly using the **-ttof:environ** option on the command line invoking the compiler, assembler, or linker or by default with the **dctrl** program.

- The **DENVIRON** configuration variable (set from the *environ* part of **-ttof:environ**) designates the “target operating system” environment. The tools use two standard values: **simple** and **cross**, which as shown below, help define the library search paths.

In addition, the tools may be supplied with directories and files to support other *environ* operating-system values. See the release notes and other relevant documentation for details on any particular operating system supported.

The remainder of this section describes these mechanisms in more detail.

### 32.2.2 Library Directory Structure

For MIPS microprocessors:

- The library directories all begin with “MIPS,” as shown in [Table 32-1](#).
- The object module format specifier — the *o* part of the **-ttof:environ** option or its equivalent — is “L” for ELF.
- The tools have been installed in the *version\_path* directory as described in [Table 2-1](#).

Given the above assumptions, and following the pattern described in [4. Selecting a Target and Its Components](#), the libraries above ([32.2.1 Libraries Supplied](#), p.484) will be arranged as shown in [Table 32-1](#).

Table 32-1 Library Directory Locations

| Directory / file            | Contents                                                                                                                                                      |
|-----------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>MIPSE/</b>               | Directories and files for ELF components (final “E” in <b>MIPSE</b> ).                                                                                        |
| <b>libc.a</b>               | Text file which includes other ELF libraries as described below - no input/output support.                                                                    |
| <b>libchar.a</b>            | ELF basic operating system functions using character input/output for <b>stdin</b> and <b>stdout</b> only ( <b>stderr</b> and named files are not supported). |
| <b>libi.a</b>               | ELF standard ANSI C functions.                                                                                                                                |
| <b>libimpl.a</b>            | ELF functions called by compiler-generated or runtime code.                                                                                                   |
| <b>libd.a</b>               | ELF additional C++ standard and support functions.                                                                                                            |
| <b>libram.a</b>             | ELF basic operating system functions using RAM-disk input/output.                                                                                             |
| <b>cross/libc.a</b>         | ELF <b>libc.a</b> which includes the RAM-disk input/output library <b>libram.a</b> .                                                                          |
| <b>simple/libc.a</b>        | ELF <b>libc.a</b> which includes the basic character input/output library <b>libchar.a</b> .                                                                  |
| <b>windiss/libwindiss.a</b> | Support library for WindISS instruction-set simulator when supplied. Note: implicitly also uses <b>cross/libc.a</b> .                                         |
| <b>MIPSEN/</b>              | ELF floating point stubs for floating point support of “None”.                                                                                                |
| <b>libcfp.a</b>             | Stubs to avoid undefined externals.                                                                                                                           |
| <b>libimpcf.a</b>           | Empty file required by different versions of <b>libc.a</b> .                                                                                                  |
| <b>MIPSES/</b>              | ELF software floating point libraries:                                                                                                                        |
| <b>libcfp.a</b>             | Floating point functions called by user code.                                                                                                                 |
| <b>libcomplex.a</b>         | Old C++ complex math class library.                                                                                                                           |
| <b>libimpcf.a</b>           | Conversions between floating point and other types.                                                                                                           |
| <b>libios.a</b>             | Old C++ <b>iostream</b> class library.                                                                                                                        |
| <b>libm.a</b>               | Math library.                                                                                                                                                 |

Table 32-1 Library Directory Locations (cont'd)

| Directory / file    | Contents                                                                                                                                                                |
|---------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>libpthread.a</b> | Unsupported implementation of POSIX threads for use with the example programs. Text file which includes sub-libraries <b>libdk*.a</b> .                                 |
| <b>libstlstd.a</b>  | C++ <b>iostream</b> and complex math class libraries.                                                                                                                   |
| <b>MIPSEH/</b>      | ELF hardware floating point libraries supporting hardware floating point built into the processor; parallel to <b>MIPSES</b> .                                          |
| <b>MIPS-64E.../</b> | Parallel directories for ELF libraries with 64-bit support.                                                                                                             |
| <b>MIPSF.../</b>    | Parallel directories for ELF “far” libraries with <b>-Xsmall-data=0</b> and <b>-Xsmall-const=0</b> as opposed to the default values of 8 for both (8 and 0 for MIPS16). |
| <b>MIPSL.../</b>    | Parallel directories for libraries built in little-endian mode.                                                                                                         |

### 32.2.3 **libc.a**

There are three **libc.a** files in the table above. Each of these is a short text file which contains **-l** option lines, each line naming a library. The **-l** option is the standard command-line option to specify a library for the linker to search. When the linker finds that **libc.a** is a text file, it reads the **-l** lines in the **libc.a** and then searches the named libraries for unsatisfied externals. (As with any **-l** option, only the portion of the name following “lib” is given; thus, **-li** identifies library **libi.a**.)

This approach allows the functions in **libc.a** to be factored into groups for different floating point and input/output requirements. Three of the **libc.a** files delivered with the tools are:

Table 32-2 **libc.a** Files Delivered With the Tools

| <b>liba.c files</b> | <b>Contents</b>                  | <b>Use</b>                                                                                                  |
|---------------------|----------------------------------|-------------------------------------------------------------------------------------------------------------|
| <b>MIPSE/libc.a</b> | -li<br>-lcfp<br>-limpl<br>-limfp | Standard C runtime but with no input/output support; if input/output calls are made they will be undefined. |

Table 32-2 **libc.a Files Delivered With the Tools** (cont'd)

| liba.c files        | Contents                                   | Use                                                                                                                                                    |
|---------------------|--------------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------|
| MIPSE/simple/libc.a | -li<br>-lcfp<br>-lchar<br>-limpl<br>-limfp | Supports character input/output by adding <b>libchar.a</b> for <b>stdin</b> and <b>stdout</b> only ( <b>stderr</b> and named files are not supported). |
| MIPSE/cross/libc.a  | -li<br>-lcfp<br>-lram<br>-limpl<br>-limfp  | Supports RAM-disk input/output by adding <b>libram.a</b> . Used automatically by <b>windiss</b> .                                                      |

Notes:

- Only one of the **simple** or **cross** (or similar) libraries should be used.
- **windiss** is a pseudo-value for *environ*: it selects the **windiss/libwindiss.a** library silently and in addition selects the **cross/libc.a** library.
- The order of the lines in each **liba.c** file determines the order in which the linker will search for unsatisfied externals.

The particular **libc.a** found, as well as the directories for the libraries listed in each **libc.a**, are determined by the search path given to the linker as described in the next section.

### 32.2.4 Library Search Paths

When **dcc** or **dplus** is invoked, it invokes the compiler, assembler, and linker in turn. The generated linker command line includes:

- an **-lc** option to cause the linker to search for **libc.a**
- for C++, an **-ld** option to cause the linker to search for **libd.a**
- a **-Y P** option which specifies the directories to be searched for these libraries and also for the libraries named in the selected **libc.a** (and any others specified by the user with **-l libname options**)

The **-Y P** option generated for each target is a function of the **-ttof:environ** option or its equivalent environment variables, and is defined in [4.2 Selected Startup Module and Libraries](#), p.28.



Following the pattern there, the assumptions made here will generate a **-Y P** option listing the following directories *in the order given* for each setting of the floating point *f* part of the **-t:tof** option or its equivalent, and where *environ* is either **simple** or **cross**:

Table 32-3 Directories Searched for Libraries

| <i>f</i>                      | Directories                                                                                                                                                                              | Environment                                | Floating point support                                   |
|-------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|--------------------------------------------|----------------------------------------------------------|
| <b>N</b>                      | <i>version_path</i> / <b>MIPSEN</b> / <i>environ</i><br><i>version_path</i> / <b>MIPSEN</b><br><i>version_path</i> / <b>MIPSE</b> / <i>environ</i><br><i>version_path</i> / <b>MIPSE</b> | specific<br>generic<br>specific<br>generic | None<br>None<br>not applicable<br>not applicable         |
| <b>S</b>                      | <i>version_path</i> / <b>MIPSEs</b> / <i>environ</i><br><i>version_path</i> / <b>MIPSEs</b><br><i>version_path</i> / <b>MIPSE</b> / <i>environ</i><br><i>version_path</i> / <b>MIPSE</b> | specific<br>generic<br>specific<br>generic | Software<br>Software<br>not applicable<br>not applicable |
| <b>H</b><br>( <b>SH4/4A</b> ) | <i>version_path</i> / <b>MIPSEh</b> / <i>environ</i><br><i>version_path</i> / <b>MIPSEh</b><br><i>version_path</i> / <b>MIPSE</b> / <i>environ</i><br><i>version_path</i> / <b>MIPSE</b> | specific<br>generic<br>specific<br>generic | Hardware<br>Hardware<br>not applicable<br>not applicable |

Notes:

- There is no error if a directory given with the **-Y P** option does not exist.
- The difference between “None” floating point support and “not applicable” is that the directories for the “not applicable” cases do not contain any floating point code, only integer, while the “None” cases will use the **MIPSEN/libcfp.a** and **MIPSEN/libimpfp.a** libraries. **MIPSEN/libcfp.a** provides stubs functions that call **printf** with an error message for floating point externals used by compiler-generated or runtime code so that these externals will not be undefined; **MIPSEN/libimpfp** is an empty file needed because each **libc.a** is common to all types of floating point support.

The following table gives examples of the libraries found given the above directory search order. Note that the search for the libraries included by a **libc.a** is independent of the search for **libc.a**. That is, regardless of which directory supplies **libc.a**, the search for the libraries it names begins anew with the first directory in the selected row of Table 32-3 above. In all cases, a library is taken from the first directory in which it is found.

Table 32-4 Examples of Libraries Found for Different -t Options

| -t option        | Libraries Found                                                                                                                              | Notes                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                |
|------------------|----------------------------------------------------------------------------------------------------------------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| -tMIPSE:simple   | MIPSE/simple/libc.a<br>MIPSE/libi.a<br>MIPSE/libcfp.a<br>MIPSE/libchar.a<br>MIPSE/libimpl.a<br>MIPSE/libimpfp.a                              | <p><b>libc.a</b> is specific to the environment, but never to the floating point support. It is found in the third directory searched. It names four libraries:</p> <ul style="list-style-type: none"> <li>▪ <b>libi.a</b> and <b>libimpl.a</b> are common to all <b>MIPSE</b> systems and are found in the fourth directory <b>MIPS</b>.</li> <li>▪ The floating point support is independent of the environment and comes from the second directory <b>MIPSEN</b>.</li> <li>▪ The character input/output support is independent of the floating point support, and while it has been selected because of the <b>simple</b> environment setting, it resides in the generic fourth directory <b>MIPS</b>.</li> </ul> |
| -tMIPSES:cross   | MIPSE/cross/libc.a<br>MIPSE/libi.a<br>MIPSES/libcfp.a<br>MIPSE/libram.a<br>MIPSE/libimpl.a<br>MIPSES/libimpfp.a                              | <p>Again, <b>libc.a</b> is specific to the environment but not the floating point support, and is found in the third directory <b>MIPSE/cross</b>. It again names four libraries:</p> <ul style="list-style-type: none"> <li>▪ <b>libi.a</b> and <b>libimpl.a</b> are in the fourth directory <b>MIPSE</b> as before.</li> <li>▪ The software floating point library <b>libcfp.a</b> is from the second directory, now <b>MIPSES</b>.</li> <li>▪ This time <b>libram.a</b> has been selected by <b>MIPSE/cross/libc.a</b> instead of <b>libchar.a</b> (but still from the fourth directory <b>MIPSE</b> as before).</li> </ul>                                                                                       |
| -tMIPSES:windiss | In addition to the libraries found for -tMIPSES:cross, searches <b>windiss/libwindiss.a</b> before searching for <b>MIPSE/cross/libc.a</b> . |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                      |

Table 32-4    Examples of Libraries Found for Different -t Options (cont'd)

| -t option     | Libraries Found                                                                                                          | Notes                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                         |
|---------------|--------------------------------------------------------------------------------------------------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| -tMIPSES:cust | MIPSE/cust/libc.a<br><br>MIPSE/libi.a<br>MIPSES/libcfp.a<br>MIPSE/cust/libchar.a<br>MIPSE/libimpl.a<br>MIPSES/libimpfp.a | <p>The customer has defined a new <b>libc.a</b> in a new <b>MIPSE/cust</b> directory for a C++ project using software floating point. This <b>libc.a</b> text file consists of the following five lines:</p> <pre>-li<br/>-lcfp<br/>-lchar<br/>-limpl<br/>-limpfp</pre> <p>Thus, based on the search order implied by the <b>-tMIPSES:cust</b> option, the standard libraries <b>MIPSE/libi.a</b>, <b>MIPSE/libimpl.a</b>, <b>MIPSES/libcfp.a</b>, and <b>MIPSES/libimpfp.a</b> will be searched.</p> <p>In addition, the library <b>MIPSE/cust/libchar.a</b>, a special character I/O package for the customer's <b>MIPSE -t</b> environment, will also be searched. Because directory <b>MIPSES/cust</b> is searched before <b>MIPSE</b>, the linker will find the customer's <b>libchar.a</b> library rather than the standard <b>MIPSE/libchar.a</b>.</p> |

## 32.3 Library Sources, Rebuilding the Libraries

### 32.3.1 Sources

This section describes how to re-build the libraries from source.

The libraries and makefiles are contained in three subdirectories of *version\_path*/**libraries**:

**build/\***

There are subdirectories for each of **MIPSE**, **MIPSEH**, **MIPSEN**, etc. Each subdirectory contains a main **Makefile** and supporting makefiles.

Only the **MIPSE/Makefile** is to be used directly by the user. It in turn invokes the makefiles in **MIPSEH**, **MIPSEN**, etc. These latter makefiles are self-documenting and begin with comments that should be read before re-building the libraries.

```
include/
 include.cxx/*
 include.unx/*
 Include files used by for the C++ (but not C), and C libraries respectively.

src/*
 Source for all generally distributed library files.
```

### 32.3.2 Rebuilding the Libraries

The following steps rebuild the libraries:

1. If you do not want to run make against all of the libraries, edit the **Makefile** at both the **MIPSE** level and the **MIPSEH**, **MIPSEN**, etc., levels to remove any unwanted libraries.
2. Change directory to *version\_path/libraries/build/MIPSE*.
3. Enter the command:

```
dmake -vd
```

Note: to change the arguments that the libraries build with, change the **CFLAGS** macro defined in *version\_path/libraries/build/defs.mk*.

4. Each library will be built in its corresponding **build** directory, that is, *version\_path/libraries/build/MIPSE*, *version\_path/libraries/build/MIPSEH*, etc.
5. Move the successfully built libraries to the *version\_path/MIPSE*, *version\_path/MIPSEH*, etc. corresponding directories, replace each existing file with the newly built file.

Alternatively, leave the libraries where they are, or move them to some other location, and provide **-Y P** options as described in the first part of this chapter.



**NOTE:** The Dinkum C++ libraries are built with the GNU make utility (**gmake**), not with **dmake**.

---

### 32.3.3 C++ Libraries

The Wind River tools include two versions of the standard C++ library: the complete version (**libstlstd.a**) and the abridged version (**libstlabr.a**). For information about these libraries, see [13.3 C++ Standard Libraries](#), p. 240. By default, **libstlstd.a** is compiled with the full library sources and exception-handling enabled, while **libstlabr.a** is compiled with the abridged library sources and exception-handling disabled. You can compile these libraries in a different configuration by redefining either or both of the macros `__CONFIGURE_EMBEDDED` and `__CONFIGURE_EXCEPTIONS`. These macros are defined in **dtools.conf** and automatically reset by compiler flags such as `-Xc++abr`; hence their definitions must be overridden on the command line if you wish to change them. Setting `__CONFIGURE_EMBEDDED` to 1 uses the abridged library sources and setting `__CONFIGURE_EXCEPTIONS` to 1 enables exception-handling. For example, to compile the **libstlstd.a** without exception-handling, add `__CONFIGURE_EXCEPTIONS=0` to the command line.



# 33

## *Header Files*

33.1 Introduction 497

33.2 Files 498

33.3 Defined Variables, Types, and Constants 500

### 33.1 Introduction

This chapter describes the standard header files used by the Wind River Compiler for MIPS.

Documentation for C++ and C99 libraries may be found online at [https://portal.windriver.com/noAuth/wr\\_compiler\\_docs](https://portal.windriver.com/noAuth/wr_compiler_docs).



---

**NOTE:** This Web site provides documentation for some features not provided with the Wind River Compiler for MIPS. While examine the documentation, bear in mind that nonstandard C++ and C99 headers are not supported for the Wind River Compiler for MIPS.

---

## 33.2 Files

The following list is a subset of the header files provided. Each is enclosed in angle brackets, `< >`, whenever used in text to emphasize their inclusion in the standard C library.

All header files are found in *version\_path/include*. See [2. Configuration and Directory Structure](#) for additional information.



---

**NOTE:** In this manual, some paths are given using UNIX format, that is, using a `/` separator. For Windows, substitute a `\` separator.

---

### 33.2.1 Standard Header Files

`<ar.h>`  
Archive header.

`<assert.h>`  
`assert()` macro.

`<ctype.h>`  
Character handling macros.

`<dcc.h>`  
Prototypes not found elsewhere.

`<errno.h>`  
error macros and `errno` variable.

`<fcntl.h>`  
`creat()`, `fcntl()`, and `open()` definitions.

`<float.h>`  
Floating point limits.

`<limits.h>`  
Limits of processor and operating system.

`<locale.h>`  
Locale definitions.

`<malloc.h>`  
Old `malloc()` definitions. Use `<stdlib.h>`.

`<math.h>`  
Defines the constant `HUGE_VAL` and declares math functions.



**<mathf.h>**  
Single precision versions of **<math.h>** functions.

**<memory.h>**  
Old declarations of **mem\*()**. Use **<string.h>**.

**<mon.h>**  
**monitor()** definitions.

**<netdb.h>**  
Berkeley socket standard header file.

**<netinet/in.h>**  
Berkeley socket standard header file.

**<netinet/tcp.h>**  
Berkeley socket standard header file.

**<regex.h>**  
Regular expression handling.

**<search.h>**  
Search routine declarations.

**<setjmp.h>**  
**setjmp()** and **longjmp()** definitions.

**<signal.h>**  
Signal handling.

**<stdarg.h>**  
ANSI variable arguments handling.

**<stddef.h>**  
ANSI definitions.

**<stdio.h>**  
**stdio** library definitions.

**<stdlib.h>**  
ANSI definitions.

**<string.h>**  
**str\*()** and **mem\*()** declarations.

**<sys/socket.h>**  
Berkeley socket standard header file.

**<sys/types.h>**  
Type definitions.

**<time.h>**  
Time handling definitions.

**<unistd.h>**

Prototypes for UNIX system calls.

**<values.h>**

Old limits definitions. Use **<limits.h>** and **<float.h>**.

**<varargs.h>**

Old variable arguments handling. Use **<stdarg.h>**.



---

**NOTE:** If the macro **\_\_lint** is set (**#define \_\_lint**), the header files will not use any C language extensions. This is useful for checking code before running it with a third party lint facility.

---

## 33.3 Defined Variables, Types, and Constants

The following list is a subset of the variables, types, and constants defined in the header files in the C libraries.

### **errno.h**

Declares the variable **errno** holding error codes. Defines error codes; all starting with E. See the file for more information.

### **fcntl.h**

Defines the following constants used by **open()** and **fcntl()**:

**O\_RDONLY**

Open for reading only.

**O\_WRONLY**

Open for writing only.

**O\_RDWR**

Open for reading and writing.

**O\_NDELAY**

No blocking.

**O\_APPEND**

Append all writes at the end of the file.

**float.h**

Defines constants handling the precision and range of floating point values. See the ANSI C standard for reference.

**limits.h**

Defines constants defining the range of integers and operating system limits. See the ANSI C and POSIX 1003.1 standards for reference.

**math.h**

Defines the value **HUGE\_VAL** that is set to IEEE double precision infinity.

**mathf.h**

Defines the value **HUGE\_VAL\_F** that is set to IEEE single precision infinity.

**setjmp.h**

Defines the type **jmpbuf**, used by **setjmp()** and **longjmp()**.  
Defines the type **sigjmpbuf**, used by **sigsetjmp()** and **siglongjmp()**.

**signal.h**

Defines the signal macros starting with **SIG**.  
Defines the volatile type **sig\_atomic\_t** that can be used by signal handlers.  
Defines the type **sigset\_t**, used by POSIX signal routines.

**stdarg.h**

Defines the type **va\_list** used by the macros **va\_start**, **va\_arg**, and **va\_end**.

## **stddef.h**

Defines **ptrdiff\_t** which is the result type of subtracting two pointers.  
Defines **size\_t** which is the result type of the **sizeof** operator.  
Defines **NULL** which is the null pointer constant.

## **stdio.h**

Defines **size\_t** which is the result type of the **sizeof** operator.  
Defines **fpos\_t** which is the type used for file positioning.  
Defines **FILE** which is the type used by stream and file input and output.  
Defines the **BUFSIZ** constant which is the size used by **setbuf()**.  
Defines the **EOF** constant which indicates end-of-file.  
Defines **NULL** which is the null pointer constant.  
Declares **stdin** as a pointer to the **FILE** associated with standard input.  
Declares **stdout** as a pointer to the **FILE** associated with standard output.  
Declares **stderr** as a pointer to the **FILE** associated with standard error.

## **stdlib.h**

Defines **size\_t** which is the result type of the **sizeof** operator.  
Defines **div\_t** and **ldiv\_t** which are the types returned by **div()** and **ldiv()**.  
Defines **NULL** which is the null pointer constant.  
Defines the **EXIT\_FAILURE** and **EXIT\_SUCCESS** constants returned by **exit()**.

## **string.h**

Defines **NULL** which is the null pointer constant.  
Defines **size\_t** which is the result type of the **sizeof** operator.

## **time.h**

Defines **CLOCKS\_PER\_SEC** constant which is the number of clock ticks per second.

# 34

## *C Library Functions*

34.1 Format of Descriptions 503

34.2 Reentrant Versions 505

34.3 Function Listing 506

### 34.1 Format of Descriptions

This chapter briefly describes the functions and function-like macros provided in the Wind River C libraries. For more detailed descriptions, and for information about the C++ libraries, see the references cited in *Additional Documentation*, p.8.



---

**NOTE:** The standard C libraries documented here are *not* the ones used for VxWorks applications. If you specify the **:rtp** or **:vxworksx.x** execution environment, the tools will automatically link a different set of C libraries. See the documentation that accompanied your VxWorks development tools for more information.

---

Documentation for C++ and C99 libraries may be found online at [https://portal.windriver.com/noAuth/wr\\_compiler\\_docs](https://portal.windriver.com/noAuth/wr_compiler_docs).



---

**NOTE:** This Web site provides documentation for some features not provided with the Wind River Compiler for MIPS. While examine the documentation, bear in mind that nonstandard C++ and C99 headers are not supported for the Wind River Compiler for MIPS.

---

Each function description is formatted as follows:

- name
- header files
- prototype definition
- brief description
- OS calls: optional; see below
- Reference: see below

### 34.1.1 Operating System Calls

Some of the functions described in this chapter make calls on operating system functions that are standard in UNIX environments. In embedded environments, such functions cannot be used unless the embedded environment includes a real-time operating system providing these operating system functions.

The functions which call operating system functions, directly or indirectly, have all the required operating system functions listed. The non-UNIX user can employ this list to see what system functions need to be provided in order to use a particular function.

Some functions refer to standard input, output, and error — the standard input/output streams found in UNIX and Windows environments. For embedded environments, see [15.8.1 Character I/O](#), p.288 and [15.8.2 File I/O](#), p.289 for suggestions for file system support.

### 34.1.2 References

The function descriptions refer to the following standards and definitions:

ANSI

The function/macro is defined in ANSI X3.159-1989.

ANSI 754

The function is define in ANSI/IEEE Std 754-1985.

**DCC**

The function/macro is added to Wind River C.

**POSIX**

The function/macro is defined in IEEE Std 1003.1-1990.

**SVID**

The function/macro is defined in System V Interface Definition 2.

**UNIX**

The function/macro is provided to be compatible with Unix V.3.

**Other references:****MATH**

The math libraries must be specified at link time with the **-lm** option.

**SYS**

The function must be provided by the operating system or emulated in a stand-alone system.

**REENT**

The function is reentrant. It does not use any static or global data.

**REERR**

The function might modify **errno** and is reentrant only if all processes ignore that variable. But see [34.2 Reentrant Versions](#), p.505 below.

Most functions in the libraries have a synonym to conform to various standards. For example, the function **read()** has the synonym **\_read()**. In ANSI C, **read()** is not defined, which means that the user is free to define **read()** as a new function. To avoid conflicts with such user-defined functions, library functions, e.g. **fread()**, call the synonym defined with the leading underscore, e.g. **\_read()**.

## 34.2 Reentrant Versions

In some cases, non-reentrant standard functions are supplied in special reentrant versions. These reentrant versions are not separately documented, but they are easy to find because their names end in **\_r**. For example, **localtime()** (in **gmtime.c**) has a reentrant counterpart called **localtime\_r()** (in **gmtime\_r.c**).

All functions that modify the **errno** variable call the wrapper function **\_\_errno\_fn()**, defined in **error.c**. When a function is marked as REERR in the listing below, you can make it completely reentrant by modifying **\_\_errno\_fn()** to preserve the value of **errno**.

For information about **malloc()** and **free()**, see [15.10 Reentrant and "Thread-Safe" Library Functions](#), p.293.

## 34.3 Function Listing

This section lists all functions in the library in alphabetic order. Leading underscores “\_” are ignored with respect to the alphabetic ordering.

### **a64l()**

```
#include <stdlib.h>
long a64l(const char *s);
```

Converts the base-64 number, pointed to by *s*, to a long value.

Reference: SVID, REENT.

### **abort()**

```
#include <stdlib.h>
int abort(void);
```

Same as **exit()**, but also causes the signal **SIGABRT** to be sent to the calling process. If **SIGABRT** is neither caught nor ignored, all streams are flushed prior to the signal being sent and a core dump results.

OS calls: **close**, **getpid**, **kill**, **sbrk**, **write**.

Reference: ANSI.



**abs()**

```
#include <stdlib.h>
int abs(int i);
```

Returns the absolute value of its integer operand.

Reference: ANSI, REENT.

**access()**

```
#include <unistd.h>
int access(char *path, int amode);
```

Determines accessibility of a file.

The C libraries provide an interface to this operating system call. Please see your OS manual for a complete definition.

Reference: POSIX, SYS.

**acos()**

```
#include <math.h>
double acos(double x);
```

Returns the arc cosine of  $x$  in the range  $[0, \pi]$ .  $x$  must be in the range  $[-1, 1]$ . Otherwise zero is returned, **errno** is set to **EDOM**, and a message indicating a domain error is printed on the standard error output.

OS calls: **write**.

Reference: ANSI, MATH, REERR.

**acosf()**

```
#include <mathf.h>
float acosf(float x);
```

Returns the arc cosine of  $x$  in the range  $[0, \pi]$ .  $x$  must be in the range  $[-1, 1]$ . Otherwise zero is returned, **errno** is set to **EDOM**, and a message indicating a domain error is printed on the standard error output. This is the single precision version of **acos()**.

OS calls: **write**.

Reference: DCC, MATH, REERR.

## **advance( )**

```
#include <regex.h>
int advance(char *string, char *expbuf);
```

Does pattern matching given the string *string* and a compiled regular expression in *expbuf*. See SVID for more details.

Reference: SVID.

## **asctime( )**

```
#include <time.h>
char *asctime(const struct tm *timeptr);
```

Converts time in *timeptr* into a string in the form exemplified by

```
"Sun Sep 16 01:03:52 1973\n".
```

Reference: ANSI.

## **asin( )**

```
#include <math.h>
double asin(double x);
```

Returns the arc sine of *x* in the range  $[-\pi/2, \pi/2]$ . *x* must be in the range  $[-1, 1]$ . Otherwise zero is returned, **errno** is set to **EDOM** and a message indicating a domain error is printed on the standard error output.

OS calls: **write**.

Reference: ANSI, MATH, REERR.

## **asinf( )**

```
#include <mathf.h>
float asinf(float x);
```

Returns the arc sine of *x* in the range  $[-\pi/2, \pi/2]$ . *x* must be in the range  $[-1, 1]$ . Otherwise zero is returned, **errno** is set to **EDOM** and a message indicating a

domain error is printed on the standard error output. This is the single precision version of **asin()**.

OS calls: **write**.

Reference: DCC, MATH, REERR.

## **assert()**

```
#include <assert.h>
void assert(int expression);
```

Puts diagnostics into programs. If *expression* is false, **assert()** writes information about the particular call that failed (including the text of the argument, the name of the source file, and the source line number — the latter are respectively the values of the preprocessing macros **\_\_FILE\_\_** and **\_\_LINE\_\_**) on the standard error file. It then calls the **abort()** function. **assert()** is implemented as a macro. If the preprocessor macro **NDEBUG** is defined at compile time, the **assert()** macro will not generate any code.

OS calls: **close**, **getpid**, **kill**, **sbrk**, **write**.

Reference: ANSI.

## **atan()**

```
#include <math.h>
double atan(double x);
```

Returns the arc tangent of  $x$  in the range  $[-\pi/2, \pi/2]$ .

OS calls: **write**.

Reference: ANSI, MATH, REERR.

## **atanf()**

```
#include <mathf.h>
float atanf(float x);
```

Returns the arc tangent of  $x$  in the range  $[-\pi/2, \pi/2]$ . This is the single precision version of **atan()**.

OS calls: **write**.

Reference: DCC, MATH, REERR.

## **atan2( )**

```
#include <math.h>
double atan2(double x, double y);
```

Returns the arc tangent of  $y/x$  in the range  $[-\pi, \pi]$ , using the signs of both arguments to determine the quadrant of the return value. If both arguments are zero, then zero is returned, **errno** is set to **EDOM** and a message indicating a domain error is printed on the standard error output.

OS calls: **write**.

Reference: ANSI, MATH, REERR.

## **atan2f( )**

```
#include <mathf.h>
float atan2(float x, float y);
```

Returns the arc tangent of  $y/x$  in the range  $[-\pi, \pi]$ , using the signs of both arguments to determine the quadrant of the return value. If both arguments are zero, then zero is returned, **errno** is set to **EDOM** and a message indicating a domain error is printed on the standard error output. This is the single precision version of **atan2( )**.

OS calls: **write**.

Reference: DCC, MATH, REERR.

## **atexit( )**

```
#include <stdlib.h>
void atexit(void (*func) (void));
```

Registers the function whose address is *func* to be called by **exit( )**.

Reference: ANSI.

## **atof( )**

```
#include <stdlib.h>
double atof(const char *nptr);
```

Converts an ASCII number string *nptr* into a **double**.

Reference: ANSI, REERR.

**atoi( )**

```
#include <stdlib.h>
int atoi(const char *nptr);
```

Converts an ASCII decimal number string *nptr* into an **int**.

Reference: ANSI, REENT.

**atol( )**

```
#include <stdlib.h>
long atol(const char *nptr);
```

Converts an ASCII decimal number string *nptr* into a **long**.

Reference: ANSI, REENT.

**bsearch( )**

```
#include <stdlib.h>
void *bsearch(const void *key, const void *base, size_t nel, size_t size,
int (*compar)());
```

Binary search routine which returns a pointer into a table indicating where a datum may be found. The table must be previously sorted in increasing order. *key* points to a datum instance to search for in the table, *base* points to the element at the base of the table, *nel* is the number of elements in the table. *compar* is a pointer to the comparison function, which is called with two arguments that point to the elements being compared.

Reference: ANSI, REENT.

**calloc( )**

```
#include <stdlib.h>
void *calloc(size_t nmemb, size_t size);
```

Allocates space for an array of *nmemb* objects of the size *size*. Returns a pointer to the start (lowest byte address) of the object. The array is initialized to zero. See **malloc( )** for more information.

OS calls: **sbrk**, **write**.

Reference: ANSI.

## **ceil( )**

```
#include <math.h>
double ceil(double x);
```

Returns the smallest integer not less than  $x$ .

OS calls: **write**.

Reference: ANSI, MATH, REENT.

## **ceilf( )**

```
#include <mathf.h>
float ceilf(float x);
```

Returns the smallest integer not less than  $x$ . This is the single precision version of **ceil( )**.

OS calls: **write**.

Reference: DCC, MATH, REENT.

## **\_chgsign( )**

```
#include <math.h>
double _chgsign(double x);
```

Returns  $x$  copies with its sign reversed, not  $0 - x$ . The distinction is germane when  $x$  is +0 or -0 or NaN. Consequently, it is a mistake to use the sign bit to distinguish signaling NaNs from quiet NaNs.

Reference: ANSI 754, MATH, REENT.

## **clearerr( )**

```
#include <stdio.h>
void clearerr (FILE *stream);
```

Resets the error and EOF indicators to zero on the named *stream*.

Reference: ANSI.

**clock( )**

```
#include <time.h>
clock_t clock(void);
```

Returns the number of clock ticks of elapsed processor time, counting from a time related to program start-up. The constant **CLOCKS\_PER\_SEC** is the number of ticks per second.

OS calls: **times**.

Reference: ANSI.

**close( )**

```
#include <unistd.h>
int close(int fildes);
```

Closes the file descriptor *fildes*.

The C libraries provide an interface to this operating system call. Please see your OS manual for a complete definition.

Reference: POSIX, SYS.

**compile( )**

```
#include <regex.h>
int compile(char *instring, char *expbuf, char *endbuf, int eof);
```

Compiles the regular expression in *instring* and produces a compiled expression that can be used by **advance( )** and **step( )** for pattern matching.

Reference: SVID.

**\_copysign( )**

```
#include <math.h>
double _copysign(double x, double y);
```

Returns  $x$  with the sign of  $y$ . Hence, **abs(x) = \_copysign(x, 1.0)** even if  $x$  is NaN.

Reference: ANSI 754, MATH, REENT.

## **cos( )**

```
#include <math.h>
double cos(double x);
```

Returns the cosine of  $x$  measured in radians. Accuracy is reduced with large argument values.

OS calls: **write**.

Reference: ANSI, MATH, REERR.

## **cosf( )**

```
#include <mathf.h>
float cosf(float x);
```

Returns the cosine of  $x$  measured in radians. Accuracy is reduced with large argument values. This is the single precision version of **cos( )**.

OS calls: **write**.

Reference: DCC, MATH, REERR.

## **cosh( )**

```
#include <math.h>
double cosh(double x);
```

Returns the hyperbolic cosine of  $x$  measured in radians. Accuracy is reduced with large argument values.

OS calls: **write**.

Reference: ANSI, MATH, REERR.

## **coshf( )**

```
#include <mathf.h>
float coshf(float x);
```

Returns the hyperbolic cosine of  $x$  measured in radians. Accuracy is reduced with a large argument values. This is the single precision version of **cosh( )**.

OS calls: **write**.

Reference: DCC, MATH, REERR.



**creat( )**

```
#include <sys/types.h>
#include <sys/stat.h>
#include <fcntl.h>
int creat(char *path, mode_t mode);
```

Creates the new file *path*.

The C libraries provide an interface to this operating system call. Please see your OS manual for a complete definition.

Reference: POSIX, SYS.

**ctime( )**

```
#include <time.h>
char *ctime(const time_t *timer);
```

Equivalent to calling **asctime(localtime(*timer*))**.

Reference: ANSI.

**difftime( )**

```
#include <time.h>
double difftime(time_t t1, time_t t0);
```

Returns the difference in seconds between the calendar time *t0* and the calendar time *t1*.

Reference: ANSI, REENT.

**div( )**

```
#include <stdlib.h>
div_t div(int numer, int denom);
```

Divides *numer* by *denom* and returns the quotient and the remainder as a **div\_t** structure.

Reference: ANSI, REENT.

## **drand48( )**

```
#include <stdlib.h>
double drand48(void);
```

Generates pseudo-random, non-negative, double-precision floating point numbers uniformly distributed over the half-open interval [0.0, 1.0[ (i.e. excluding 1.0), using the linear congruential algorithm and 48-bit integer arithmetic. It must be initialized using the **srand48( )**, **seed48( )**, or **lcong48( )** functions.

Reference: SVID.

## **dup( )**

```
#include <unistd.h>
int dup(int fildes);
```

Duplicates the open file descriptor *fildes*.

The C libraries provide an interface to this operating system call. Please see your OS manual for a complete definition.

Reference: POSIX, SYS.

## **ecvt( )**

```
#include <dcc.h>
char *ecvt(double value, int ndigit, int *decpt, int *sign);
```

Converts *value* to a null-terminated string of *ndigit* digits and returns a pointer to it. The high-order digit is non-0 unless *value* is zero. The low-order digit is rounded to the nearest value (5 is rounded up). The position of the decimal point relative the beginning of the string is stored through *decpt* (negative means to the left of the returned digits). If the sign of the result is negative, the integer pointed to by *sign* is set to one, otherwise it is set to zero.

Reference: DCC.

## **erf( )**

```
#include <math.h>
double erf(double x);
```

Returns the error function of *x*.

Reference: SVID, MATH, REENT.

### **erff( )**

```
#include <mathf.h>
float erff(float x);
```

Returns the error function of  $x$ . This is the single precision version of **erf( )**.

Reference: DCC, MATH, REENT.

### **erfc( )**

```
#include <math.h>
double erfc(double x);
```

Complementary error function =  $1.0 - \text{erf}(x)$ . Provided because of the extreme loss of relative accuracy if **erf( $x$ )** is called for large  $x$  and the result subtracted from 1.0.

Reference: SVID, MATH, REENT.

### **erfcf( )**

```
#include <mathf.h>
float erfcf(float x);
```

Complementary error function =  $1.0 - \text{erff}(x)$ . Provided because of the extreme loss of relative accuracy if **erff( $x$ )** is called for large  $x$  and the result subtracted from 1.0. This is the single precision version of **erfc( )**.

Reference: DCC, MATH, REENT.

### **exit( )**

```
#include <stdlib.h>
void exit(int status);
```

Normal program termination. Flushes all open files. Executes all functions submitted by the **atexit( )** function. Does not return to its caller. The following *status* constants are provided:

|                     |                          |
|---------------------|--------------------------|
| <b>EXIT_FAILURE</b> | unsuccessful termination |
| <b>EXIT_SUCCESS</b> | successful termination   |

OS calls: **\_exit**, **close**, **sbrk**, **write**.

Reference: ANSI.

## **\_exit( )**

```
#include <unistd.h>
void _exit(int status);
```

Program termination. All files are closed. Does not return to its caller.

The C libraries provide an interface to this operating system call. Please see your OS manual for a complete definition.

Reference: POSIX, SYS.

## **exp( )**

```
#include <math.h>
double exp(double x);
```

Returns the exponential function of  $x$ . Returns **HUGE\_VAL** when the correct value would overflow or 0 when the correct value would underflow, and sets **errno** to **ERANGE**.

OS calls: **write**.

Reference: ANSI, MATH, REERR.

## **expf( )**

```
#include <mathf.h>
float expf(float x);
```

Returns the exponential function of  $x$ . Returns **HUGE\_VAL** when the correct value would overflow or 0 when the correct value would underflow and sets **errno** to **ERANGE**. This is the single precision version of **exp( )**.

OS calls: **write**.

Reference: DCC, MATH, REERR.

**fabs( )**

```
#include <math.h>
double fabs(double x);
```

Returns the absolute value of  $x$ .

Reference: ANSI, MATH, REENT.

**fabsf( )**

```
#include <mathf.h>
float fabsf(float x);
```

Returns the absolute value of  $x$ . This is the single precision version of **fabs( )**.

Reference: DCC, MATH, REENT.

**fclose( )**

```
#include <stdio.h>
int fclose(FILE *stream);
```

Causes any buffered data for the named *stream* to be written out, and the stream to be closed.

OS calls: **close**, **sbrk**, **write**.

Reference: ANSI.

**fcntl( )**

```
#include <fcntl.h>
int fcntl(int fildes, int cmd, ...);
```

Controls the open file *fildes*.

The C libraries provide an interface to this operating system call. Please see your OS manual for a complete definition.

Reference: POSIX, SYS.

## **fcvt( )**

```
#include <dcc.h>
char *fcvt(double value, int ndigit, int *decpt, int *sign);
```

Rounds the correct digit for **printf** format "%f" (FORTRAN F-format) output according to the number of digits specified. See **ecvt( )**.

Reference: DCC.

## **fdopen( )**

```
#include <stdio.h>
FILE *fdopen(int fildes, const char *type);
```

See **fopen( )**. **fdopen( )** associates a stream with a file descriptor, obtained from **open( )**, **dup( )**, **creat( )**, or **pipe( )**. The *type* of stream must agree with the mode of the open file.

OS calls: **fcntl**, **lseek**.

Reference: POSIX.

## **feof( )**

```
#include <stdio.h>
int feof (FILE *stream);
```

Returns non-zero when end-of-file has previously been detected reading the named input *stream*.

Reference: ANSI.

## **ferror( )**

```
#include <stdio.h>
int ferror (FILE *stream);
```

Returns non-zero when an input/output error has occurred while reading from or writing to the named *stream*.

Reference: ANSI.

**fflush( )**

```
#include <stdio.h>
int fflush(FILE *stream);
```

Causes any buffered data for the named *stream* to be written to the file, and the *stream* remains open.

OS calls: **write**.

Reference: ANSI.

**fgetc( )**

```
#include <stdio.h>
int fgetc(FILE *stream);
```

Behaves like the macro **getc( )**, but is a function. Runs more slowly than **getc( )**, takes less space, and can be passed as an argument to a function.

OS calls: **isatty**, **read**, **sbrk**, **write**.

Reference: ANSI.

**fgetpos( )**

```
#include <stdio.h>
int fgetpos(FILE *stream, fpos_t *pos);
```

Stores the file position indicator for *stream* in *\*pos*. If unsuccessful, it stores a positive value in **errno** and returns a nonzero value.

OS calls: **lseek**.

Reference: ANSI.

**fgets( )**

```
#include <stdio.h>
char *fgets(char *s, int n, FILE *stream);
```

Reads characters from *stream* into the array pointed to by *s*, until *n*-1 characters are read, or a new-line character is read and transferred to *s*, or an EOF is encountered. The string is terminated with a null character.

OS calls: **isatty**, **read**, **sbrk**, **write**.

Reference: ANSI.

## **fileno( )**

```
#include <stdio.h>
int fileno (FILE *stream);
```

Returns the integer file descriptor associated with the named *stream*; see **open( )**.

Reference: POSIX.

## **\_finite( )**

```
#include <math.h>
double _finite(double x);
```

Returns a non-zero value if  $- < x < +$  , and returns 0 otherwise.

Reference: ANSI 754, MATH, REENT

## **floor( )**

```
#include <math.h>
double floor(double x);
```

Returns the largest integer (as a double-precision number) not greater than  $x$ .

Reference: ANSI, MATH, REENT.

## **floorf( )**

```
#include <mathf.h>
float floorf(float x);
```

Returns the largest integer (as a single-precision number) not greater than  $x$ . This is the single precision version of **floor( )**.

Reference: DCC, MATH, REENT.

## **fmod( )**

```
#include <math.h>
double fmod(double x, double y);
```



Returns the floating point remainder of the division of  $x$  by  $y$ , zero if  $y$  is zero or if  $x/y$  would overflow. Otherwise the number is  $f$  with the same sign as  $x$ , such that  $x=iy+f$  for some integer  $i$ , and absolute value of  $f$  is less than absolute value of  $y$ .

Reference: ANSI, MATH, REENT.

### **fmodf( )**

```
#include <mathf.h>
float fmodf(float x, float y);
```

Returns the floating point remainder of the division of  $x$  by  $y$ , zero if  $y$  is zero or if  $x/y$  would overflow. Otherwise the number is  $f$  with the same sign as  $x$ , such that  $x=iy+f$  for some integer  $i$ , and absolute value of  $f$  is less than absolute value of  $y$ . This is the single precision version of **fmod( )**.

Reference: DCC, MATH, REENT.

### **fopen( )**

```
#include <stdio.h>
FILE *fopen(const char *filename, const char *type);
```

Opens the file named by *filename* and associates a stream with it. Returns a pointer to the **FILE** structure associated with the stream. *type* is a character string having one of the following values:

|      |                                                        |
|------|--------------------------------------------------------|
| "r"  | open for reading                                       |
| "w"  | truncate or create for writing                         |
| "a"  | append; open for writing at EOF, or create for writing |
| "r+" | open for update (read and write)                       |
| "w+" | truncate or create for update                          |
| "a+" | append; open or create for update at EOF               |

A "b" can also be specified as the second or third character in the above list, to indicate a binary file on systems where there is a difference between text files and binary files. Examples: "rb", "wb+", and "a+b".

OS calls: **lseek**, **open**.

Reference: ANSI.

## fprintf( )

```
#include <stdio.h>
int fprintf(FILE *stream, const char *format, ...);
```

Places output argument on named output stream. See **printf( )**.



**NOTE:** By default in most environments, **fprintf** buffers its output until a newline is output. To cause output character-by-character without waiting for a newline, call [setbuf\( \)](#), p.561, with a NULL buffer pointer after opening but before writing to the stream:

```
setbuf(*stream, 0);
```

OS calls: **isatty**, **sbrk**, **write**.

Reference: ANSI.

## fputc( )

```
#include <stdio.h>
int fputc(int c, FILE *stream)
```

Behaves like the macro **putc( )**, but is a function. Therefore, it runs more slowly, takes up less space, and can be passed as an argument to a function.

OS calls: **isatty**, **sbrk**, **write**.

Reference: ANSI.

## fputs( )

```
#include <stdio.h>
int fputs(const char *s, FILE *stream);
```

Writes the null-terminated string pointed to by *s* to the named output *stream*.

OS calls: **isatty**, **sbrk**, **write**.

Reference: ANSI.

**fread( )**

```
#include <stdio.h>
#include <sys/types.h>
int fread(void *ptr, size_t size, int nitems, FILE *stream);
```

Copies *nitems* items of data from the named input *stream* into an array pointed to by *ptr*, where an item of data is a sequence of bytes of length *size*. It leaves the file pointer in *stream* pointing to the byte following the last byte read.

OS calls: **isatty**, **read**, **sbrk**, **write**.

Reference: ANSI.

**free( )**

```
#include <stdlib.h>
void free(void *ptr);
extern int __no_malloc_warning;
```

Object pointed to by *ptr* is made available for further allocation. *ptr* must previously have been assigned a value from **malloc( )**, **calloc( )**, or **realloc( )**.

If the pointer *ptr* was freed or not allocated by **malloc( )**, a warning is printed on the **stderr** stream. The warning can be suppressed by assigning a non-zero value to the integer **\_\_no\_malloc\_warning**. See **malloc( )** for more information.

OS calls: **sbrk**, **write**.

Reference: ANSI.

**freopen( )**

```
#include <stdio.h>
FILE *freopen(const char *filenam, const char *type, FILE *stream);
```

See **fopen( )**. **freopen( )** opens the named file in place of the open *stream*. The original stream is closed, and a pointer to the **FILE** structure for the new stream is returned.

OS calls: **close**, **lseek**, **open**, **sbrk**, **write**.

Reference: ANSI.

## **frexp( )**

```
#include <math.h>
double frexp(double value, int *eptr);
```

Given that every non-zero number can be expressed as  $x \cdot (2^n)$ , where  $0.5 \leq |x| < 1.0$  and  $n$  is an integer, this function returns  $x$  for a *value* and stores  $n$  in the location pointed to by *eptr*.

Reference: ANSI, REENT.

## **frexpf( )**

```
#include <mathf.h>
float frexpf(float value, int *eptr);
```

Given that every non-zero number can be expressed as  $x \cdot (2^n)$ , where  $0.5 \leq |x| < 1.0$  and  $n$  is an integer, this function returns  $x$  for a *value* and stores  $n$  in the location pointed to by *eptr*. This is the single precision version of **frexp( )**.

Reference: DCC, MATH, REENT.

## **fscanf( )**

```
#include <stdio.h>
int fscanf(FILE *stream, const char *format, ...);
```

Reads formatted data from the named input *stream* and optionally assigns converted data to variables specified by the *format* string. Returns the number of successful conversions (or EOF if input is exhausted). See **scanf( )**.

OS calls: **isatty**, **read**, **sbrk**, **write**.

Reference: ANSI.

## **fseek( )**

```
#include <stdio.h>
int fseek(FILE *stream, long offset, int whence);
```

Sets the position of the next input or output operation on the *stream*. The new position is at the signed distance *offset* bytes from the beginning, from the current position, or from the end of the file, according to *whence*. The next operation on a file opened for update may be either input or output. *whence* has one of the following values:

|                 |                                                       |
|-----------------|-------------------------------------------------------|
| <b>SEEK_SET</b> | offset is absolute position from beginning of file.   |
| <b>SEEK_CUR</b> | offset is relative distance from current position.    |
| <b>SEEK_END</b> | offset is relative distance from the end of the file. |

OS calls: **lseek**, **write**.

Reference: ANSI.

## **fsetpos( )**

```
#include <stdio.h>
int fsetpos(FILE *stream, const fpos_t *pos);
```

Sets the file position indicator for *stream* to *\*pos* and clears the EOF indicator for *stream*. If unsuccessful, stores a positive value in **errno** and returns a nonzero value.

OS calls: **lseek**, **write**.

Reference: ANSI.

## **fstat( )**

```
#include <sys/types.h>
#include <sys/stat.h>
int fstat(int fildes, struct stat *buf);
```

Gets file status for the file descriptor *fildes*.

The C libraries provide an interface to this operating system call. Please see your OS manual for a complete definition.

Reference: POSIX, SYS.

## **ftell( )**

```
#include <stdio.h>
long ftell(FILE *stream);
```

See **fseek( )**. Returns the offset of the current byte relative to the beginning of the file associated with the named *stream*.

OS calls: **lseek**.

Reference: ANSI.

## **fwrite( )**

```
#include <stdio.h>
#include <sys/types.h>
int fwrite(const void *ptr, size_t size, int nitems, FILE *stream);
```

Appends at most *nitems* items of data from the array pointed to by *ptr* to the named output *stream*. See **fread( )**.

OS calls: **isatty**, **sbrk**, **write**.

Reference: ANSI.

## **gamma( )**

```
#include <math.h>
double gamma(double x);
extern int signgam;
```

Returns the natural logarithm of the absolute value of the gamma function of *x*. The argument *x* must be a positive integer. The sign of the gamma function is returned as -1 or 1 in *signgam*.

OS calls: **write**.

Reference: UNIX, MATH, REERR.

## **gammaf( )**

```
#include <mathf.h>
float gammaf(float x);
extern int signgamf;
```

Returns the natural logarithm of the absolute value of the gamma function of *x*. The argument *x* must be a positive integer. The sign of the gamma function is returned as -1 or 1 in *signgamf*. This is the single precision version of **gamma( )**.

OS calls: **write**.

Reference: DCC, MATH, REERR.

## **gcvt( )**

```
#include <dcc.h>
char *gcvt(double value, int ndigit, char *buf);
```

See **ecvt()**. Converts *value* to a null-terminated string in the array pointed to by *buf* and returns *buf*. Produces *ndigit* significant digits in FORTRAN F-format if possible, otherwise E-format. Any minus sign or decimal point will be included as part of the string. Trailing zeros are suppressed.

Reference: DCC.

### **getc()**

```
#include <stdio.h>
int getc(FILE *stream);
```

Returns the next character (i.e. byte) from the named input *stream*. Moves the file pointer, if defined, ahead one character in *stream*.

OS calls: **isatty**, **read**, **sbrk**, **write**.

Reference: ANSI.

### **getchar()**

```
#include <stdio.h>
int getchar(void);
```

Same as **getc**, but defined as **getc(stdin)**.

OS calls: **isatty**, **read**, **sbrk**, **write**.

Reference: ANSI.

### **getenv()**

```
#include <stdlib.h>
char *getenv(char *name);
```

Searches the environment list for a string of the form *name=value*, and returns a pointer to value if present, otherwise a null pointer.

Reference: ANSI, REENT.

## getopt( )

```
#include <stdio.h>
int getopt(int argc, char *const *argv, const char *optstring);
extern char *optarg;
extern int optind, opterr;
```

Returns the next option letter in *argv* that matches a letter in *optstring*, and supports all the rules of the command syntax standard. *optarg* is set to point to the start of the option-argument on return from **getopt( )**. **getopt( )** places the *argv* index of the next argument to be processed in *optind*. Error message output may be disabled by setting *opterr* to 0.

OS calls: **write**.

Reference: SVID.

## getpid( )

```
#include <unistd.h>
pid_t getpid(void);
```

Gets process ID.

The C libraries provide an interface to this operating system call. Please see your OS manual for a complete definition.

Reference: POSIX, SYS.

## gets( )

```
#include <stdio.h>
char *gets(char *s);
```

Reads characters from **stdin** into the array pointed to by *s*, until a new-line character is read or an EOF is encountered. The new-line character is discarded and the string is terminated with a null character. The user is responsible for allocating enough space for the array *s*.

OS calls: **isatty**, **read**, **sbrk**, **write**.

Reference: ANSI.



**getw( )**

```
#include <stdio.h>
int getw(FILE *stream);
```

Returns the next word (i.e., the next integer) from the named input *stream*, and increments the file pointer, if defined, to point to the next word.

OS calls: **isatty**, **read**, **sbrk**, **write**.

Reference: SVID.

**gmtime( )**

```
#include <time.h>
struct tm *gmtime(const time_t *timer);
```

Breaks down the calendar time *timer* into sections, expressed as Coordinated Universal Time.

Reference: ANSI.

**hcreate( )**

```
#include <search.h>
int hcreate(unsigned nel);
```

Allocates sufficient space for a hash table. See **hsearch( )**. The hash table must be allocated before **hsearch( )** is used. *nel* is an estimate of the maximum number of entries the table will contain.

OS calls: **sbrk**.

Reference: SVID.

**hdestroy( )**

```
#include <search.h>
void hdestroy(void);
```

Destroys the hash table, and may be followed by another call to **hcreate( )**. See **hsearch( )**.

OS calls: **sbrk**, **write**.

Reference: SVID.

## hsearch( )

```
#include <search.h>
ENTRY *hsearch(ENTRY item, ACTION action);
```

Hash table search routine which returns a pointer into the hash table, indicating the location where an entry can be found. *item.key* points to a comparison key, and *item.data* points to any other data for that key. *action* is either **ENTER** or **FIND** and indicates the disposition of the entry if it cannot be found in the table. **ENTER** means that *item* should be inserted into the table and **FIND** indicates that no entry should be made.

OS calls: **sbrk**.

Reference: SVID.

## hypot( )

```
#include <math.h>
double hypot(double x, double y);
```

Returns  $\sqrt{x^2 + y^2}$ , taking precautions against unwarranted overflows.

Reference: UNIX, MATH, REERR.

## hypotf( )

```
#include <mathf.h>
float hypotf(float x, float y);
```

Returns  $\sqrt{x^2 + y^2}$ , taking precautions against unwarranted overflows. This is the single precision version of **hypot( )**.

Reference: DCC, MATH, REERR.

## irand48( )

```
#include <stdlib.h>
long irand48(unsigned short n);
```

Generates pseudo-random non-negative long integers uniformly distributed over the interval  $[0, n-1]$ , using the linear congruential algorithm and 48-bit integer arithmetic. Must be initialized using **srand48( )**, **seed48( )**, or **lcong48( )** functions.

Reference: UNIX.

**isalnum( )**

```
#include <ctype.h>
int isalnum(int c);
```

Tests for any letter or digit. Returns non-zero if test is true.

Reference: ANSI, REENT.

**isalpha( )**

```
#include <ctype.h>
int isalpha(int c);
```

Tests for any letter. Returns non-zero if test is true.

Reference: ANSI, REENT.

**isascii( )**

```
#include <ctype.h>
int isascii(int c);
```

Tests for ASCII character, code between 0 and 0x7f. Returns non-zero if test is true.

Reference: SVID, REENT.

**isatty( )**

```
#include <unistd.h>
int isatty(int fildes);
```

Tests for a terminal device. Returns non-zero if *fildes* is associated with a terminal device.

Although not a system call in the UNIX environment, it needs to be implemented as such in an embedded environment using the **stdio** functions.

Reference: POSIX.

**iscntrl( )**

```
#include <ctype.h>
int iscntrl(int c);
```

Tests for control character (0x7f or less than 0x20). Returns non-zero if test is true.

Reference: ANSI, REENT.

### **isdigit( )**

```
#include <ctype.h>
int isdigit(int c);
```

Tests for digit [0-9]. Returns non-zero if test is true.

Reference: ANSI, REENT.

### **isgraph( )**

```
#include <ctype.h>
int isgraph(int c);
```

Tests for printable character not including space. Returns non-zero if test is true.

Reference: ANSI, REENT.

### **islower( )**

```
#include <ctype.h>
int islower(int c);
```

Tests for lower case letter. Returns non-zero if test is true.

Reference: ANSI, REENT.

### **\_isnan( )**

```
#include <math.h>
double _isnan(double x);
```

Returns a non-zero value if *x* is a NaN, and returns 0 otherwise.

Reference: ANSI 754, MATH, REENT

### **isprint( )**

```
#include <ctype.h>
int isprint(int c);
```

Tests for printable character (including space). Returns non-zero if test is true.

Reference: ANSI, REENT.

### **ispunct( )**

```
#include <ctype.h>
int ispunct(int c);
```

Tests for printable punctuation character. Returns non-zero if test is true.

Reference: ANSI, REENT.

### **isspace( )**

```
#include <ctype.h>
int isspace(int c);
```

Tests for space, tab, carriage return, new-line, vertical tab, or form-feed. Returns non-zero if test is true.

Reference: ANSI, REENT.

### **isupper( )**

```
#include <ctype.h>
int isupper(int c);
```

Tests for upper-case letters. Returns non-zero if test is true.

Reference: ANSI, REENT.

### **isxdigit( )**

```
#include <ctype.h>
int isxdigit(int c);
```

Tests for hexadecimal digit (0-9, a-f, A-F). Returns non-zero if test is true.

Reference: ANSI, REENT.

## **j0( )**

```
#include <math.h>
double j0(double x);
```

Returns the Bessel function of  $x$  of the first kind of order 0.

OS calls: **write**.

Reference: UNIX, MATH, REERR.

## **j0f( )**

```
#include <mathf.h>
float j0f(float x);
```

Returns the Bessel function of  $x$  of the first kind of order 0. This is the single precision version of **j0( )**.

OS calls: **write**.

Reference: DCC, MATH, REERR.

## **j1( )**

```
#include <math.h>
double j1(double x);
```

Returns the Bessel function of  $x$  of the first kind of order 1.

OS calls: **write**.

Reference: UNIX, MATH, REERR.

## **j1f( )**

```
#include <mathf.h>
float j1f(float x);
```

Returns the Bessel function of  $x$  of the first kind of order 1. This is the single precision version of **j1( )**.

OS calls: **write**.

Reference: DCC, MATH, REERR.

**jn()**

```
#include <math.h>
double jn(double n, double x);
```

Returns the Bessel function of  $x$  of the first kind of order  $n$ .

OS calls: **write**.

Reference: UNIX, MATH, REERR.

**jnf()**

```
#include <mathf.h>
float jnf(float n, float x);
```

Returns the Bessel function of  $x$  of the first kind of order  $n$ . This is the single precision version of **jn()**.

OS calls: **write**.

Reference: DCC, MATH, REERR.

**jrand48()**

```
#include <stdlib.h>
long jrand48(unsigned short xsubi[3]);
```

Generates pseudo-random non-negative long integers uniformly distributed over the interval  $[-2^{31}, 2^{31}-1]$ , using the linear congruential algorithm and 48-bit integer arithmetic. The calling program must place the initial value  $X_i$  into the *xsubi* array and pass it as an argument.

Reference: SVID.

**kill()**

```
#include <signal.h>
int kill(int pid, int sig);
```

Sends the signal *sig* to the process *pid*.

The C libraries provide an interface to this operating system call. Please see your OS manual for a complete definition.

Reference: POSIX, SYS.

## **krand48( )**

```
#include <stdlib.h>
long krand48(unsigned short xsubi[3], unsigned short n);
```

Generates pseudo-random non-negative long integers uniformly distributed over the interval  $[0, n-1]$ , using the linear congruential algorithm and 48-bit integer arithmetic.

Reference: UNIX.

## **l3tol( )**

```
#include <dcc.h>
void l3tol(long *lp, char *cp, int n);
```

Converts the list of  $n$  three-byte integers packed into the character string pointed to by  $cp$  into a list of long integers pointed to by  $*lp$ .

Reference: UNIX, REENT.

## **l64a( )**

```
#include <stdlib.h>
char *l64a(long l);
```

Converts the long integer  $l$  to a base-64 character string.

Reference: SVID.

## **labs( )**

```
#include <stdlib.h>
long labs(long i);
```

Returns the absolute value of  $i$ .

Reference: ANSI, REENT.

## **lcong48( )**

```
#include <stdlib.h>
void lcong48(unsigned short param[7]);
```



Initialization entry point for **drand48()**, **lrand48()**, and **rand48()**. Allows the user to specify parameters in the random equation: **Xi** is *param*[0-2], multiplier *a* is *param*[3-5], and addend *c* is *param*[6].

Reference: UNIX.

## ldexp()

```
#include <math.h>
double ldexp(double value, int exp);
```

Returns the quantity: *value* \* ( $2^{\text{exp}}$ ). See also **frexp()**.

Reference: UNIX, REERR.

## ldexpf()

```
#include <mathf.h>
float ldexpf(float value, int exp);
```

Returns the quantity: *value* \* ( $2^{\text{exp}}$ ). See also **frexpf()**. This is the single precision version of **ldexp()**.

Reference: DCC, MATH, REERR.

## ldiv()

```
#include <stdlib.h>
ldiv_t ldiv(long int numer, long int denom);
```

Similar to **div()**, except that arguments and returned items all have the type **long int**.

Reference: ANSI, REENT.

## \_lessgreater()

```
#include <math.h>
double _lessgreater(double x, double y);
```

The value of  $x <> y$  is non-zero only when  $x < y$  or  $x > y$ , and is distinct from  $\text{NOT}(x = y)$  per Table 4 of the ANSI 754 standard.

Reference: ANSI 754, MATH, REENT.

## **lfind( )**

```
#include <stdio.h>
#include <search.h>
void *lfind(const void *key, const void *base, unsigned *nelp, int size,
 int (*compar)());
```

Same as **lsearch( )** except that if datum is not found, it is not added to the table. Instead, a null pointer is returned.

Reference: UNIX, REENT.

## **link( )**

```
#include <unistd.h>
int link(const char *path1, const char *path2);
```

Creates a new link *path2* to the existing file *path1*.

The C libraries provide an interface to this operating system call. Please see your OS manual for a complete definition.

Reference: SYS.

## **localeconv( )**

```
#include <locale.h>
struct lconv *localeconv(void);
```

Loads the components of an object of the type **struct lconv** with values appropriate for the formatting of numeric quantities (monetary and otherwise) according to the rules of the current locale. See also **setlocale( )**.

Reference: ANSI.

## **localtime( )**

```
#include <time.h>
struct tm *localtime(const time_t *timer);
```

Breaks down the calendar time *timer* into sections, expressed as local time.

Reference: ANSI.

**log( )**

```
#include <math.h>
double log(double x);
```

Returns the natural logarithm of a positive  $x$ .

OS calls: **write**.

Reference: ANSI, MATH, REERR.

**\_logb( )**

```
#include <math.h>
double _logb(double x);
```

Returns the unbiased exponent of  $x$ , a signed integer in the format of  $x$ , except that **logb(NaN)** is NaN, **logb(infinity)** is + , and **logb(0)** is - and signals the division by zero exception. When  $x$  is positive and finite the expression **scalb( $x$ , -logb( $x$ ))** lies strictly between 0 and 2; it is less than 1 only when  $x$  is denormalized.

Reference: ANSI 754, MATH, REENT.

**logf( )**

```
#include <mathf.h>
float logf(float x);
```

Returns the natural logarithm of a positive  $x$ . This is the single precision version of **log( )**.

OS calls: **write**.

Reference: DCC, MATH, REERR.

**log10( )**

```
#include <math.h>
double log10(double x);
```

Returns the logarithm with base ten of a positive  $x$ .

OS calls: **write**.

Reference: ANSI, MATH, REERR.

## log10f( )

```
#include <mathf.h>
float log10f(float x);
```

Returns the logarithm with base ten of a positive *x*. This is the single precision version of **log10( )**.

OS calls: **write**.

Reference: DCC, MATH, REERR.

## longjmp( )

```
#include <setjmp.h>
void longjmp(jmp_buf env, int val);
```

Restores the environment saved in *env* by a corresponding **setjmp( )** function call. Execution will continue as if the **setjmp( )** had just returned with the value *val*. If *val* is 0 it will be set to 1 to avoid conflict with the return value from **setjmp( )**.

Reference: ANSI, REENT.

## lrand48( )

```
#include <stdlib.h>
long lrand48(void);
```

Generates pseudo-random non-negative long integers uniformly distributed over the interval  $[0, 2^{31}-1]$ , using the linear congruential algorithm and 48-bit integer arithmetic. Must be initialized using **srand48( )**, **seed48( )**, or **lcong48( )** functions.

Reference: SVID.

## lsearch( )

```
#include <stdio.h>
#include <search.h>
void *lsearch(const void *key, const void *base, unsigned *nelp, int size,
 int (*compar)());
```

Linear search routine which returns a pointer into a table indicating where a datum may be found. If the datum is not found, it is added to the end of the table. *base* points to the first element in the table. *nelp* points to an integer containing the

number of elements in the table. *compar* is a pointer to the comparison function which the user must supply (for example, **strcmp()**).

Reference: SVID, REENT.

### **lseek()**

```
#include <unistd.h>
off_t lseek(int fildes, off_t offset, int whence);
```

Moves the file pointer for the file *fildes* to the file offset *offset*. *whence* has one of the following values:

|                 |                                                      |
|-----------------|------------------------------------------------------|
| <b>SEEK_SET</b> | offset is absolute position from beginning of file   |
| <b>SEEK_CUR</b> | offset is relative distance from current position    |
| <b>SEEK_END</b> | offset is relative distance from the end of the file |

The C libraries provide an interface to this operating system call. Please see your OS manual for a complete definition.

Reference: SYS.

### **ltol3()**

```
#include <dcc.h>
void ltol3(char *cp, long *lp, int n);
```

Converts a list of long integers to three-byte integers. It is the inverse of **l3tol()**.

Reference: UNIX, REENT.

### **mallinfo()**

```
#include <malloc.h>
struct mallinfo mallinfo(void)
```

Used to determine the best setting of **malloc()** parameters for an application. Must not be called until after **malloc()** has been called.

Reference: SVID.

## **malloc( )**

```
#include <stdlib.h>
void *malloc(size_t size);
```

Allocates space for an object of size *size*. Returns a pointer to the start (lowest byte address) of the object. Returns a null pointer if no more memory can be obtained by the OS.

The first time **malloc( )** is called, it checks the following environment variables:

### **DMALLOC\_INIT=*n***

If set, **malloc( )** initializes allocated memory with the byte value *n*. This is useful when debugging programs that may depend on **malloc( )** areas always being set to zero.

### **DMALLOC\_CHECK**

If set, **malloc( )** and **free( )** check the free-list every time they are called. This is useful when debugging programs that may trash the free-list.



---

**NOTE:** **malloc( )** and related functions must be initialized by the function **\_\_init( )** in **crtlibso.c**. See the note at the end of [15.4.3 Notes for crtlibso.c and ctordtor.c](#), p.280 for details. See also [15.10 Reentrant and “Thread-Safe” Library Functions](#), p.293.

---

OS calls: **sbrk**.

Reference: ANSI.

## **\_\_malloc\_set\_block\_size( )**

```
#include <malloc.h>
size_t __malloc_set_block_size(size_t blocksz);
```

To avoid excess execution overhead, **malloc( )** acquires heap space in 8KB master blocks and sub-allocates within each block as required, re-using space within each 8KB block when individual allocations are freed. The default 8KB master block size may be too large on systems with small RAM. To change this, call this **\_\_malloc\_set\_block\_size** function. The argument must be a power of two.

## **mallopt( )**

```
#include <malloc.h>
int mallopt(int cmd, int value);
```

Used to allocate small blocks of memory quickly by allocating a large group of small blocks at one time. This function exists in order to be compatible to SVID, but its use is not recommended, since the **malloc()** function is already optimized to be fast.

Reference: SVID.

## **matherr()**

```
#include <math.h>
int matherr(struct exception *x);
```

Invoked by math library routines when errors are detected. Users may define their own procedure for handling errors, by including a function named **matherr()** in their programs. The function **matherr()** must be of the form described above. When an error occurs, a pointer to the exception structure *x* will be passed to the user-supplied **matherr()** function. This structure, which is defined by the **<math.h>** header file, includes the following members:

```
int type;
char *name;
double arg1, arg2, retval;
```

The member **type** is an integer describing the type of error that has occurred from the following list defined by the **<math.h>** header file:

|                  |                              |
|------------------|------------------------------|
| <b>DOMAIN</b>    | argument domain error        |
| <b>SING</b>      | argument singularity         |
| <b>OVERFLOW</b>  | overflow range error         |
| <b>UNDERFLOW</b> | underflow range error        |
| <b>TLOSS</b>     | total loss of significance   |
| <b>PLOSS</b>     | partial loss of significance |

The member **name** points to a string containing the name of the routine that incurred the error. The members **arg1** and **arg2** are the first and second arguments with which the routine was invoked.

The member **retval** is set to the default value that will be returned by the routine unless the user's **matherr()** function sets it to a different value.

If the user's **matherr()** function returns non-zero, no error message will be printed, and **errno** will not be set.

If the function **matherr()** is not supplied by the user, the default error-handling procedures, described with the math library routines involved, will be invoked upon error. **errno** is set to **EDOM** or **ERANGE** and the program continues.

Reference: SVID, MATH.

### **matherrf( )**

```
#include <mathf.h>
int matherrf(struct exceptionf *x);
```

This is the single precision version of **matherr( )**.

Reference: DCC, MATH.

### **mblen( )**

```
#include <stdlib.h>
int mblen(const char *s, size_t n);
```

If *s* is not a null pointer, the function returns the number of bytes in the string *s* that constitute the next multi-byte character, or -1 if the next *n* (or the remaining bytes) do not compromise a valid multi-byte character. A terminating null character is not included in the character count. If *s* is a null pointer and the multi-byte characters have a state-dependent encoding in current locale, the function returns nonzero; otherwise, it returns zero.

Reference: ANSI, REENT.

### **mbstowcs( )**

```
#include <stdlib.h>
size_t mbstowcs(wchar_t *pwc, const char *s, size_t n);
```

Stores a wide character string in the array whose first element has the address *pwc*, by converting the multi-byte characters in the string *s*. It converts as if by calling **mbtowc( )**. It stores at most *n* wide characters, stopping after it stores a null wide character. It returns the number of wide characters stored, not counting the null character.

Reference: ANSI, REENT.

### **mbtowc( )**

```
#include <stdlib.h>
int mbtowc(wchar_t *pwc, const char *s, size_t n);
```



If *s* is not a null pointer, the function returns the number of bytes in the string *s* that constitute the next multi-byte character. (The number of bytes cannot be greater than **MB\_CUR\_MAX**). If *pwc* is not a null pointer, the next multi-byte character is converted to the corresponding wide character value and stored in *\*pwc*. The function returns -1 if the next *n* or the remaining bytes do not constitute a valid multi-byte character. If *s* is a null pointer and multi-byte characters have a state-dependent encoding in current locale, the function stores an initial shift state in its internal static duration data object and returns nonzero; otherwise it returns zero.

Reference: ANSI, REENT.

### **memcpy()**

```
#include <string.h>
void *memcpy(void *s1, const void *s2, int c, size_t n);
```

Copies characters from *s2* into *s1*, stopping after the first occurrence of character *c* has been copied, or after *n* characters, whichever comes first.

Reference: SVID, REENT.

### **memchr()**

```
#include <string.h>
void *memchr(const void *s, int c, size_t n);
```

Locates the first occurrence of *c* (converted to unsigned char) in the initial *n* characters of the object pointed to by *s*. Returns a null pointer if *c* is not found.

Reference: ANSI, REENT.

### **memcmp()**

```
#include <string.h>
int memcmp(const void *s1, const void *s2, size_t n);
```

Compares the first *n* character of *s1* to the first *n* characters of *s2*. Returns an integer greater than, equal to, or less than zero according to the relationship between *s1* and *s2*.

Reference: ANSI, REENT.

## **memcpy( )**

```
#include <string.h>
void *memcpy(void *s1, const void *s2, size_t n);
```

Copies *n* character from the object pointed to by *s2* into the object pointed to by *s1*. The behavior is undefined if the objects overlap. Returns the value of *s1*.

Reference: ANSI, REENT.

## **memmove( )**

```
#include <string.h>
void *memmove(void *s1, const void *s2, size_t n);
```

Copies *n* characters from the object pointed by *s2* into the object pointed to by *s1*. It can handle overlapping while copying takes place as if the *n* characters were first copied to a temporary array, then copied into *s1*. Returns the value of *s1*.

Reference: ANSI, REENT.

## **memset( )**

```
#include <string.h>
void *memset(void *s, int c, size_t n);
```

Copies the value of *c* into each of the first *n* characters of the object pointed to by *s*. Returns the value of *s*.

Reference: ANSI, REENT.

## **mktemp( )**

```
#include <stdio.h>
char *mktemp (char *template);
```

Replaces the contents of the string pointed to by *template* with a unique filename, and returns the address of *template*. The *template* string should look like a filename with six trailing Xs, which will be replaced with a letter and the current process ID.

OS calls: **access**, **getpid**.

Reference: SVID.

**mktime( )**

```
#include <time.h>
time_t mktime(struct tm *timeptr);
```

Converts the local time stored in *timeptr* into a calendar time with the same encoding as values returned by the **time( )** function, but with all values within their normal ranges. It sets the structure members **tm\_mday**, **tm\_wday**, **tm\_yday**.

Reference: ANSI, REENT.

**modf( )**

```
#include <math.h>
double modf(double value, double *iptr);
```

Returns the fractional part of *value* and stores the integral part in the location pointed to by *iptr*. Both the fractional and integer parts have the same sign as *value*. See also **frexp( )**.

Reference: ANSI, REENT.

**modff( )**

```
#include <mathf.h>
float modff(float value, float *iptr);
```

Returns the fractional part of *value* and stores the integral part in the location pointed to by *iptr*. Both the fractional and integer parts have the same sign as *value*. See also **frexpf( )**. This is the single precision version of **modf( )**.

Reference: DCC, MATH, REENT.

**rand48( )**

```
#include <stdlib.h>
long rand48(void);
```

Generates pseudo-random non-negative long integers uniformly distributed over the interval  $[-2^{31}, 2^{31}-1]$ , using the linear congruential algorithm and 48-bit integer arithmetic. Must be initialized using **srand48( )**, **seed48( )**, or **lcong48( )** functions.

Reference: SVID.

## **\_nextafter( )**

```
#include <math.h>
double _nextafter(double x, double y);
```

Returns the next representable neighbor of  $x$  in the direction toward  $y$ . The following special cases arise: if  $x = y$ , then the result is  $x$  without any exception being signaled; otherwise, if either  $x$  or  $y$  is a quiet NaN, then the result is one or the other of the input NaNs. Overflow is signaled when  $x$  is finite but **\_nextafter( $x$ ,  $y$ )** lies strictly between  $+2^{\text{Emin}}$  and  $-2^{\text{Emin}}$ . In both cases, inexact is signaled.

Reference: ANSI 754, MATH, REENT.

## **rand48( )**

```
#include <stdlib.h>
long rand48(unsigned short xsubi[3]);
```

Generates pseudo-random non-negative long integers uniformly distributed over the interval  $[0, 2^{31}-1]$ , using the linear congruential algorithm and 48-bit integer arithmetic.

Reference: SVID.

## **offsetof( )**

```
#include <stddef.h>
size_t offsetof(type, member);
```

Returns the offset of the member *member* in the structure *type*. Implemented as a macro.

Reference: ANSI, REENT.

## **open( )**

```
#include <fcntl.h>
int open(const char *path, int oflag, int mode);
```

Opens the file *path* for reading or writing according to *oflag*. Usual values of *oflag* are:

|                 |                       |
|-----------------|-----------------------|
| <b>O_RDONLY</b> | open for reading only |
| <b>O_WRONLY</b> | open for writing only |

**O\_RDWR** open for reading and writing

The C libraries provide an interface to this operating system call. Please see your OS manual for a complete definition.

Reference: POSIX, SYS.

## **perror( )**

```
#include <stdio.h>
void perror(const char *s);

extern int errno;
extern char *sys_errlist[];
extern int sys_nerr;
```

Produces a message on the standard error output describing the last error encountered during a call to a system or library function. The array of message strings **sys\_errlist[]** may be indexed by **errno** to access the message string directly without the new-line. **sys\_nerr** is the number of messages in the table. See **strerror( )**.

OS calls: **write**.

Reference: ANSI.

## **pow( )**

```
#include <math.h>
double pow(double x, double y);
```

Returns the value of  $x^y$ . If  $x$  is zero,  $y$  must be positive. If  $x$  is negative,  $y$  must be an integer.

OS calls: **write**.

Reference: ANSI, MATH, REERR.

## **powf( )**

```
#include <mathf.h>
float powf(float x, float y);
```

Returns the value of  $x^y$ . If  $x$  is zero,  $y$  must be positive. If  $x$  is negative,  $y$  must be an integer. This is the single precision version of **pow( )**.

OS calls: **write**.

Reference: DCC, MATH, REERR.

## **printf( )**

```
#include <stdio.h>
int printf(const char *format, ...);
```

Places output arguments on **stdout**, controlled by *format*. Returns the number of characters transmitted or a negative value if there was an error. A summary of the **printf( )** conversion specifiers is shown below. Each conversion specification is introduced by the character %. Conversion specifications within brackets are optional.

% {*flags*} {*field\_width*} {*precision*} {*length\_modifier*} *conversion*

### *flags*

Single characters which modify the operation of the format as follows:

- left adjusted field
- +  
signed values will always begin with plus or minus sign
- space  
values will always begin with minus or space
- #  
Alternate form. Has the following effect: For **o** (octal) conversion, the first digit will always be a zero. **G**, **g**, **E**, **e** and **f** conversions will always print a decimal point. **G** and **g** conversions will also keep trailing zeros. **X**, **x** (hex) and **p** conversions will prepend non-zero values with **0x** (or **0X**)
- 0  
zero padding to field width (for **d**, **i**, **ll**, **o**, **q**, **u**, **x**, **X**, **e**, **E**, **f**, **g**, and **G** conversions)

### *field\_width*

Number of characters to be printed in the field. Field width will be padded with space if needed. If given as *"\*"*, the next argument should be an integer holding the field width.

*.precision*

Minimum number of digits to print for integers (**d**, **i**, **ll**, **o**, **q**, **u**, **x**, and **X**).  
 Number of decimals printed for floating point values (**e**, **E**, and **f**). Maximum number of significant digits for **g** and **G** conversions. Maximum number of characters for **s** conversion. If given as **"\*"** the next argument should be an integer holding the precision.

*length\_modifier*

The following length modifiers are used:

**h**

Used before **d**, **i**, **o**, **n**, **u**, **x**, or **X** conversions to denote a **short int** or **unsigned short int** value.

**l**

Used before **d**, **i**, **o**, **n**, **u**, **x**, or **X** conversions to denote a **long int** or **unsigned long int** value.

**L**

Used before **e**, **E**, **f**, **g**, or **G** conversions to denote a **long double** value.  
 Used before **d**, **i**, **o**, **u**, **x**, or **X** conversions to denote a **long long** value.

*conversion*

The following conversion specifiers are used:

**d**

Write signed decimal integer value.

**i**

Write signed decimal integer value.

**ll**

Write signed **long long** decimal integer value.

**o**

Write unsigned octal integer value.

**q**

Write signed **long long** decimal integer value.

**u**

Write unsigned decimal integer value.

**x**

Write unsigned hexadecimal (0-9, abc...) integer value.

**X**

Write unsigned hexadecimal (0-9, ABC...) integer value.

- e**  
Write floating point value: [-]d.ddde+dd .
- E**  
Write floating point value: [-]d.dddE+dd .
- f**  
Write floating point value: [-]ddd.ddd .
- g**  
Write floating point value in **f** or **e** notation depending on the size of the value ("best" fit conversion).
- G**  
Write floating point value in **f** or **E** notation depending on the size of the value ("best" fit conversion).
- c**  
Write a single character.
- s**  
Write a string.
- p**  
Write a pointer value (address).
- n**  
Store current number of characters written so far. The argument should be a pointer to integer.
- %**  
Write a percentage character.

The floating point values Infinity and Not-A-Number are printed as **inf**, **INF**, **nan**, and **NAN** when using the **e**, **E**, **f**, **g**, or **G** conversions.



**NOTE:** By default in most environments, **printf** buffers its output until a newline is output. To cause output character-by-character without waiting for a newline, call [setbuf\(\)](#), p.561, with a NULL buffer pointer after opening but before writing to the stream:

```
setbuf(*stream, 0);
```

OS calls: **isatty**, **sbrk**, **write**.

Reference: ANSI.



**putc( )**

```
#include <stdio.h>
int putc(int c, FILE *stream)
```

Writes the character *c* onto the output *stream* at the position where the file pointer, if defined, is pointing.

OS calls: **isatty**, **sbrk**, **write**.

Reference: ANSI.

**putchar( )**

```
#include <stdio.h>
int putchar(int c)
```

Similar to **putc( )** but writes to **stdout**.

OS calls: **isatty**, **sbrk**, **write**.

Reference: ANSI.

**putenv( )**

```
#include <stdlib.h>
int putenv(char *string);
```

*string* points to a string of the form *name=value*, and **putenv( )** makes the value of the environmental variable *name* equal to *value*. The string pointed to by *string* becomes part of the environment, so altering *string* alters the environment.

OS calls: **sbrk**, **write**.

Reference: SVID.

**puts( )**

```
#include <stdio.h>
int puts(const char *s);
```

Writes the null-terminated string pointed to by *s*, followed by a new-line character, to **stdout**.

OS calls: **isatty**, **sbrk**, **write**.

Reference: ANSI.

## putw( )

```
#include <stdio.h>
int putw(int w, FILE *stream)
```

Writes the word (i.e., integer) *w* to the output *stream* at the position at which the file pointer, if defined, is pointing.

OS calls: **isatty**, **sbrk**, **write**.

Reference: SVID.

## qsort( )

```
#include <stdlib.h>
void qsort(void *base, size_t nel, size_t size, int (*compar)());
```

Sorts a table in place using the quick-sort algorithm. *base* points to the element at the base of the table, *nel* is the number of elements. *size* is the size of each element. *compar* is a pointer to the user supplied comparison function, which is called with two arguments that point to the elements being compared.

Reference: ANSI, REENT.

## raise( )

```
#include <signal.h>
int raise(int sig);
```

Sends the signal *sig* to the executing program.

OS calls: **getpid**, **kill**.

Reference: ANSI.

## rand( )

```
#include <stdlib.h>
int rand(void);
```

Returns a pseudo random number in the interval [0, **RAND\_MAX**].

Reference: ANSI.

**read( )**

```
#include <unistd.h>
int read(int fildes, void *buf, unsigned nbyte);
```

Reads max *nbyte* bytes from the file associated with the file descriptor *fildes* to the buffer pointed to by *buf*.

The C libraries provide an interface to this operating system call. Please see your OS manual for a complete definition.

Reference: SYS.

**realloc( )**

```
#include <stdlib.h>
void *realloc(void *ptr, size_t size);
extern int __no_malloc_warning;
```

Changes the size of the object pointed to by *ptr* to the size *size*. *ptr* must have received its value from **malloc( )**, **calloc( )**, or **realloc( )**. Returns a pointer to the start address of the possibly moved object, or a null pointer if no more memory can be obtained from the OS.

If the pointer *ptr* was freed or not allocated by **malloc( )**, a warning is printed on the **stderr** stream. The warning can be suppressed by assigning a non-zero value to the integer variable **\_\_no\_malloc\_warning**. See **malloc( )** for more information.

OS calls: **sbrk**, **write**.

Reference: ANSI.

**remove( )**

```
#include <stdio.h>
int remove(const char *filename);
```

Removes the file *filename*. Once removed, the file cannot be opened as an existing file.

OS calls: **unlink**.

Reference: ANSI.

**rename( )**

```
#include <stdio.h>
int rename(const char *old, const char *new);
```

Renames the file *old* to the file *new*. Once renamed, the file *old* cannot be opened again.

OS calls: **link**, **unlink**.

Reference: ANSI.

## **rewind( )**

```
#include <stdio.h>
void rewind(FILE *stream);
```

Same as **fseek**(*stream*, **0L**, **0**), except that no value is returned.

OS calls: **isatty**, **read**, **sbrk**, **write**.

Reference: ANSI.

## **sbrk( )**

```
#include <unistd.h>
void *sbrk(int incr);
```

Gets *incr* bytes of memory from the operating system.

The C libraries provide an interface to this operating system call. Please see your OS manual for a complete definition.

Reference: UNIX, SYS.

## **\_scalb( )**

```
#include <math.h>
double _scalb(double x, int N);
```

Returns  $y * 2^N$  for integral values  $N$  without computing  $2^N$ .

Reference: ANSI 754, MATH, REENT.

## **scanf( )**

```
#include <stdio.h>
int scanf(const char *format, ...);
```

Reads formatted data from **stdin** and optionally assigns converted data to variables specified by the *format* string. Returns the number of successful conversions (or **EOF** if input is exhausted).

If the format string contains white-space characters, input is scanned until a non-white-space character is found.

A conversion specification is introduced by the character %.

If the format string neither contains a white-space nor a %, the format string and the input characters must match exactly.

A summary of the **scanf()** conversion specifiers is shown below. Conversion specifications within braces are optional.

% {\*} {*field\_width*} {*length\_modifier*} *conversion*

\*

No assignment should be done (just scan the field).

*field\_width*

Maximum field to be scanned (default is until no match occurs).

*length\_modifier*

The following length modifiers are used:

**l**

Used before **d**, **i**, or **n** to indicate **long int** or before **o**, **u**, **x** to denote the presence of an **unsigned long int**. For **e**, **E**, **g**, **G**, and **f** conversions the **l** character implies a **double** operand.

**h**

Used before **d**, **i**, or **n** to indicate **short int** or before **o**, **u**, or **x** to denote the presence of an **unsigned short int**.

**L**

For **e**, **E**, **g**, **G**, and **f** conversions the **L** character implies a **long double** operand. For **d**, **i**, **o**, **u**, **x**, and **X** conversions the **L** character implies a **long long** operand.

*conversion*

The following conversions are available:

**d**

Read an optionally signed decimal integer value.

- i**  
Read an optionally signed integer value in standard C notation. Default is decimal notation, but octal (0n) and hex (0xn, 0Xn) notations are also recognized.
- ll**  
Read an optionally signed **long long** decimal integer value.
- o**  
Read an optionally signed octal integer.
- q**  
Read an optionally signed **long long** decimal integer value.
- u**  
Read an unsigned decimal integer.
- x, X**  
Read an optionally signed hexadecimal integer.
- f, e, E, g, G**  
Read a floating point constant.
- s**  
Read a character string.
- c**  
Read *field\_width* number of characters (1 is default).
- n**  
Store the number of characters read so far. The argument should be a pointer to an integer.
- p**  
Read a pointer value (address).
- [**  
Read characters as long as they match any of the characters that are within the terminating **]**. If the first character after **[** is a **^**, the matching condition is reversed. If the **[** is immediately followed by **]** or **^**, the **]** is assumed to belong to the matching sequence, and there must be another terminating character. A range of characters may be represented by first-last, thus **[a-f]** equals **[abcdef]**.
- %**  
Read a **%** character.

Notes: Except for the **l**, **c**, or **n** specifiers leading white-space characters are skipped. Variables must always be expressed as addresses in order to be assignable by **scanf**.

OS calls: **isatty**, **read**, **sbrk**, **write**.

Reference: ANSI.

### **seed48( )**

```
#include <stdlib.h>
unsigned short *seed48(unsigned short seed16v[3]);
```

Initialization entry point for **drand48( )**, **lrand48( )**, and **rand48( )**.

Reference: SVID.

### **setbuf( )**

```
#include <stdio.h>
void setbuf(FILE *stream, char *buf);
```

May be used after the *stream* has been opened but before reading or writing to it. It causes the array pointed to by *buf* to be used instead of an automatically allocated buffer. If *buf* is the null pointer, then input/output will be unbuffered. The constant **BUFSIZ** in **<stdio.h>** defines the required size of *buf*.

OS calls: **isatty**, **sbrk**, **write**.

Reference: ANSI.

### **setjmp( )**

```
#include <setjmp.h>
int setjmp(jmp_buf env);
```

Saves the current execution environment in *env* for use by the **longjmp( )** function. Returns 0 when invoked by **setjmp( )** and a non-zero value when returning from a **longjmp( )** call.

Reference: ANSI, REENT.

### **setlocale( )**

```
#include <locale.h>
char *setlocale(int category, const char *locale);
```

Selects the appropriate portion of the program's locale as specified by the *category* and *locale* arguments. Can be used to change or query the program's entire locale with the category `LC_ALL`; the other values for *category* name only portions of the program's locale. `LC_COLLATE` affects the behavior of the `strcoll()` and `strxfrm()` functions. `LC_CTYPE` affects the behavior of the character handling functions and the multi-byte functions. `LC_MONETARY` affects the monetary formatting information returned by the `localeconv()` function. `LC_NUMERIC` affects the decimal-point character for the formatted input/output functions and the string conversion functions, as well as the non-monetary formatting information returned by the `localeconv()` function. `LC_TIME` affects the behavior of the `strftime()` function.

A value of "C" for *locale* specifies the minimal environment for C translation; a value of "" for *locale* specifies the implementation-defined native environment. Other implementation-defined strings may be passed as the second argument to `setlocale()`.

At program start-up, the equivalent of `setlocale(LC_ALL, "C")` is executed.

The compiler currently supports only the "C" locale.

Reference: ANSI.

## **setvbuf()**

```
#include <stdio.h>
void setvbuf(FILE *stream, char *buf, int type, size_t size);
```

See `setbuf()`. *type* determines how the *stream* will be buffered:

|                     |                                    |
|---------------------|------------------------------------|
| <code>_IOFBF</code> | causes stream to be fully buffered |
| <code>_IOLBF</code> | causes stream to be line buffered  |
| <code>_IONBF</code> | causes stream to be unbuffered     |

*size* specifies the size of the buffer to be used; `BUFSIZ` in `<stdio.h>` is the suggested size.

OS calls: `sbrk`, `write`.

Reference: ANSI.



**signal( )**

```
#include <signal.h>
void (*signal(int sig, void (*func)()))(void);
```

Specifies the action on delivery of a signal. When the signal *sig* is delivered, a signal handler specified by *func* is called.

The C libraries provide an interface to this operating system call. Please see your OS manual for a complete definition.

Reference: ANSI, SYS.

**sin( )**

```
#include <math.h>
double sin(double x);
```

Returns the sine of *x* measured in radians. It loses accuracy with a large argument value.

OS calls: **write**.

Reference: ANSI, MATH, REERR.

**sinf( )**

```
#include <mathf.h>
float sinf(float x);
```

Returns the sine of *x* measured in radians. It loses accuracy with a large argument value. This is the single precision version of **sin( )**.

OS calls: **write**.

Reference: DCC, MATH, REERR.

**sinh( )**

```
#include <math.h>
double sinh(double x);
```

Returns the hyperbolic sine of *x* measured in radians. It loses accuracy with a large argument value.

Reference: ANSI, MATH, REERR.

## **sinhf( )**

```
#include <mathf.h>
float sinhf(float x);
```

Returns the hyperbolic sine of  $x$  measured in radians. It loses accuracy with a large argument value. This is the single precision version of **sinh( )**.

Reference: DCC, MATH, REERR.

## **sprintf( )**

```
#include <stdio.h>
int sprintf(char *s, const char *format , ...);
```

Places output arguments followed by the null character in consecutive bytes starting at **\*s**; the user must ensure that enough storage is available. See **printf( )**.

Reference: ANSI, REENT.

## **sqrt( )**

```
#include <math.h>
double sqrt(double x);
```

Returns the non-negative square root of  $x$ . The argument must be non-negative.

OS calls: **write**.

Reference: ANSI, MATH, REERR.

## **sqrtf( )**

```
#include <mathf.h>
float sqrtf(float x);
```

Returns the non-negative square root of  $x$ . The argument must be non-negative. This is the single precision version of **sqrt( )**.

OS calls: **write**.

Reference: DCC, MATH, REERR.

**srand( )**

```
#include <stdlib.h>
void srand(unsigned seed);
```

Resets the random-number generator to a random starting point. See **rand( )**.

Reference: ANSI.

**srand48( )**

```
#include <stdlib.h>
void srand48(long seedval);
```

Initialization entry point for **drand48( )**, **lrand48( )**, and **mrnd48( )**.

Reference: SVID.

**sscanf( )**

```
#include <stdio.h>
int sscanf(const char *s, const char *format, ...);
```

Reads formatted data from the character string *s*, optionally assigning converted data to variables specified by the *format* string. It returns the number of successful conversions (or **EOF** if input is exhausted). See **scanf( )**.

Reference: ANSI, REENT.

**step( )**

```
#include <regex.h>
int step(char *string, char *expbuf);
```

Does pattern matching given the string *string* and a compiled regular expression *expbuf*. See SVID for more details.

Reference: SVID.

**strcat( )**

```
#include <string.h>
char *strcat(char *s1, const char *s2);
```

Appends a copy of the string pointed to by *s2* (including a null character) to the end of the string pointed to by *s1*. The initial character of *s2* overwrites the null character at the end of *s1*. The behavior is undefined if the objects overlap.

Reference: ANSI, REENT.

### **strchr( )**

```
#include <string.h>
char *strchr(const char *s, int c);
```

Locates the first occurrence of *c* in the string pointed to by *s*.

Reference: ANSI, REENT.

### **strcmp( )**

```
#include <string.h>
int strcmp(const char *s1, const char *s2);
```

Compares *s1* to *s2*. Returns an integer greater than, equal to, or less than zero according to the relationship between *s1* and *s2*.

Reference: ANSI, REENT.

### **strcoll( )**

```
#include <string.h>
int strcoll(const char *s1, const char *s2);
```

Compares *s1* to *s2*, both interpreted as appropriate to the LC\_COLLATE category of the current locale. Returns an integer greater than, equal to, or less than zero according to the relationship between *s1* and *s2*.

Reference: ANSI, REENT.

### **strcpy( )**

```
#include <string.h>
char *strcpy(char *s1, const char *s2);
```

Copies the string pointed to by *s2* (including a terminating null character) into the array pointed to by *s1*. The behavior is undefined if the objects overlap.

Reference: ANSI, REENT.

### **strcspn( )**

```
#include <string.h>
size_t strcspn(const char *s1, const char *s2);
```

Computes the length of the maximum initial segment of *s1* which consists entirely of characters not from *s2*.

Reference: ANSI, REENT.

### **strdup( )**

```
#include <string.h>
char *strdup(const char *s1);
```

Returns a pointer to a new string which is a duplicate of *s1*.

OS calls: **sbrk**.

Reference: SVID.

### **strerror( )**

```
#include <string.h>
char *strerror(int errnum);
```

Maps the error number in *errnum* to an error message string.

Reference: ANSI, REENT.

### **strftime( )**

```
#include <time.h>
size_t strftime(char *s, size_t maxsize, const char *format,
 const struct tm *timeptr);
```

Uses the format *format* and values in the structure *timeptr* to generate formatted text. Generated characters are stored in successive locations in the array pointed to by *s*. It stores a null character in the next location in the array. Each non-% character is stored in the array. For each % followed by a character, a replacement character sequence is stored as shown below. Examples are in parenthesis.

|           |                                       |
|-----------|---------------------------------------|
| <b>%a</b> | abbreviated weekday name (Mon)        |
| <b>%A</b> | full weekday name (Monday)            |
| <b>%b</b> | abbreviated month name (Jan)          |
| <b>%B</b> | full month name (January)             |
| <b>%c</b> | date and time (Jan 03 07:22:43 1990)  |
| <b>%d</b> | day of the month (04)                 |
| <b>%H</b> | hour of the 24-hour day (13)          |
| <b>%I</b> | hour of the 12-hour day (9)           |
| <b>%j</b> | day of the year, Jan 1 = 001 (322)    |
| <b>%m</b> | month of the year (11)                |
| <b>%M</b> | minutes after the hour (43)           |
| <b>%p</b> | AM/PM indicator (PM)                  |
| <b>%S</b> | seconds after the minute (37)         |
| <b>%U</b> | Sunday week of the year, from 00 (34) |
| <b>%w</b> | weekday number, Sunday = 0 (3)        |
| <b>%W</b> | Monday week of the year, from 00 (23) |
| <b>%x</b> | date (Jan 23 1990)                    |
| <b>%X</b> | time (23:33:45)                       |
| <b>%y</b> | year of the century (90)              |
| <b>%Y</b> | year (1990)                           |
| <b>%Z</b> | time zone name (PST)                  |
| <b>%%</b> | percent character (%)                 |

Reference: ANSI, REENT.

## **strlen( )**

```
#include <string.h>
size_t strlen(const char *s);
```

Computes the length of the string *s*.

Reference: ANSI, REENT.

### **strncat( )**

```
#include <string.h>
char *strncat(char *s1, const char *s2, size_t n);
```

Appends not more than *n* characters from the string pointed to by *s2* to the end of the string pointed to by *s1*. The initial character of *s2* overwrites the null character at the end of *s1*. The behavior is undefined if the objects overlap. A terminating null character is always appended to the result.

Reference: ANSI, REENT.

### **strncmp( )**

```
#include <string.h>
int strncmp(const char *s1, const char *s2, size_t n);
```

Compares not more than *n* characters (characters after a null character are ignored) in *s1* to *s2*. Returns an integer greater than, equal to, or less than zero according to the relationship between *s1* and *s2*.

Reference: ANSI, REENT.

### **strncpy( )**

```
#include <string.h>
char *strncpy(char *s1, const char *s2, size_t n);
```

Copies not more than *n* characters from the string pointed to by *s2* (including a terminating null character) into the array pointed to by *s1*. The behavior is undefined if the objects overlap. If *s2* is shorter than *n*, null characters are appended.

Reference: ANSI, REENT.

### **strpbrk( )**

```
#include <string.h>
char *strpbrk(const char *s1, const char *s2);
```

Locates the first occurrence of any character from the string pointed to by *s2* within the string pointed to by *s1*.

Reference: ANSI, REENT.

### **strrchr( )**

```
#include <string.h>
char *strrchr(const char *s, int c);
```

Locates the last occurrence of *c* within the string pointed to by *s*.

Reference: ANSI, REENT.

### **strspn( )**

```
#include <string.h>
size_t strspn(const char *s1, const char *s2);
```

Computes the length of the maximum initial segment of *s1* which consists entirely of characters from *s2*.

Reference: ANSI, REENT.

### **strstr( )**

```
#include <string.h>
char *strstr(const char *s1, const char *s2);
```

Locates the first occurrence of the sequence of characters (not including a null character) in the string pointed to by *s2* within the string pointed to by *s1*.

Reference: ANSI, REENT.

### **strtod( )**

```
#include <stdlib.h>
double strtod(const char *str, char **endptr);
```

Returns as a double-precision floating point number the value represented by the character string pointed to by *str*. The string is scanned to the first unrecognized character. Recognized characters include optional white-space character(s), optional sign, a string of digits optionally containing a decimal point, optional **e** or



E followed by an optional sign or space, followed by an integer. At return, the pointer at *\*endptr* is set to the first unrecognized character.

Reference: ANSI, REERR.

### **strtok( )**

```
#include <string.h>
char *strtok(char *s1, const char *s2);
```

Searches string *s1* for address of the first element that equals none of the elements in string *s2*. If the search does not find an element, it stores the address of the terminating null character in the internal static duration data object and returns a null pointer. Otherwise, searches from found address to address of the first element that equals any one of the elements in string *s2*. If it does not find element, it stores address of the terminating null character in the internal static duration data object. Otherwise, it stores a null character in the element whose address was found in second search. Then it stores address of the next element after end in the internal duration data object (so next search starts at that address) and returns address found in initial search.

Reference: ANSI.

### **strtol( )**

```
#include <stdlib.h>
long strtol(const char *str, char **endptr, int base);
```

Returns as a long integer the value represented by the character string pointed to by *str*. The string is scanned to the first character inconsistent with the base.

Leading white-space characters are ignored. At return, the pointer at *\*endptr* is set to the first unrecognized character.

If *base* is positive and less than 37, it is used as the base for conversion. After an optional sign, leading zeros are ignored, and "0x" or "0X" is ignored if *base* is 16.

If *base* is zero, the string itself determines the base: after an optional leading sign a leading zero indicates octal, a leading "0x" or "0X" indicates hexadecimal, else decimal conversion is used.

Reference: ANSI, REERR.

## strtoul( )

```
#include <stdlib.h>
long strtoul(const char *, char **endptr, int base);
```

Returns as an unsigned long integer the value represented by the character string pointed to by *s*. The string is scanned to the first character inconsistent with the base. Leading white-space characters are ignored. This is the same as **strtol( )**, except that it reports a range error only if the value is too large to be represented as the type **unsigned long**.

Reference: ANSI, REERR.

## strxfrm( )

```
#include <string.h>
size_t strxfrm(char *s1, char *s2, size_t n);
```

Transforms *s2* and places the result in *s1*. No more than *n* characters are put in *s1*, including the terminating null character. The transformation is such that if **strcmp( )** is applied to the two strings, it returns a value greater than, equal to, or less than zero, corresponding to the result of the **strcoll( )** function applied to the same two original strings. Copying between objects that overlap causes undefined results.

Reference: ANSI, REENT.

## swab( )

```
#include <dcc.h>
void swab(const char *from, char *to, int nbytes)
```

Copies *nbytes* bytes pointed to by *from* to the array pointed to by *to*. *nbytes* must be even and non-negative. Adjacent even and odd bytes are exchanged.

Reference: SVID, REENT.

## tan( )

```
#include <math.h>
double tan(double x);
```

Returns the tangent of *x* measured in radians.

OS calls: **write**.

Reference: ANSI, MATH, REERR.

### **tanf( )**

```
#include <mathf.h>
float tanf(float x);
```

Returns the tangent of  $x$  measured in radians. This is the single precision version of **tan( )**.

OS calls: **write**.

Reference: DCC, MATH, REERR.

### **tanh( )**

```
#include <math.h>
double tanh(double x);
```

Returns the hyperbolic tangent of  $x$  measured in radians.

Reference: ANSI, MATH, REENT.

### **tanhf( )**

```
#include <mathf.h>
float tanhf(float x);
```

Returns the hyperbolic tangent of  $x$  measured in radians. This is the single precision version of **tanh( )**.

Reference: DCC, MATH, REENT.

### **tdelete( )**

```
#include <search.h>
void *tdelete(const void *key, void **rootp, int (*compar)());
```

The **tdelete( )** function deletes a node from a binary search tree. The value for *rootp* will be changed if the deleted node was the root of the tree. Returns a pointer to the parent of the deleted node. See **tsearch( )**.

Reference: SVID.

## **tell( )**

```
#include <dcc.h>
long tell(int fildes);
```

Returns the current location in the file descriptor *fildes*. This is the same as **lseek(*fildes*,0L,1)**.

OS calls: **lseek**.

Reference: DCC.

## **tempnam( )**

```
#include <stdio.h>
char *tempnam(const char *dir, const char *pfx);
```

Creates a unique filename, allowing control of the choice of directory. If the **TMPDIR** variable is specified in the user's environment, it is used as the temporary file directory. Otherwise, the argument *dir* points to the name of the directory in which the file is to be created. If *dir* is invalid, the path-prefix **P\_tmpdir** (<stdio.h>) is used. If **P\_tmpdir** is invalid, **/tmp** is used. See **tmpnam( )**.

Reference: SVID.

## **tfind( )**

```
#include <search.h>
void *tfind(void *key, void *const *rootp, int (*compar)());
```

**tfind( )** will search for a datum in a binary tree, and return a pointer to it if found, otherwise it returns a null pointer. See **tsearch( )**.

Reference: SVID, REENT.

## **time( )**

```
#include <time.h>
time_t time(time_t *timer);
```

Returns the system time. If *timer* is not a null pointer, the time value is stored in *timer*.

The C libraries provide an interface to this operating system call. Please see your OS manual for a complete definition.

Reference: ANSI, SYS.

### **tmpfile()**

```
#include <stdio.h>
FILE *tmpfile(void);
```

Creates a temporary file using a name generated by **tmpnam()** and returns the corresponding **FILE** pointer. File is opened for update ("w+"), and is automatically deleted when the process using it terminates.

OS calls: **lseek, open, unlink**.

Reference: ANSI.

### **tmpnam()**

```
#include <stdio.h>
char *tmpnam(char *s);
```

Creates a unique filename using the path-prefix defined as **P\_tmpdir** in **<stdio.h>**. If *s* is a null pointer, **tmpnam()** leaves the result in an internal static area and returns a pointer to that area. At the next call to **tmpnam()**, it will destroy the contents of the area. If *s* is not a null pointer, it is assumed to be the address of an array of at least **L\_tmpnam** bytes (defined in **<stdio.h>**); **tmpnam()** places the result in that array and returns *s*.

OS calls: **access, getpid**.

Reference: ANSI.

### **toascii()**

```
#include <ctype.h>
int toascii(int c);
```

Turns off all bits in the argument *c* that are not part of a standard ASCII character; for compatibility with other systems.

Reference: SVID, REENT.

## **tolower( )**

```
#include <ctype.h>
int tolower(int c);
```

Converts an upper-case letter to the corresponding lower-case letter. The argument range is -1 through 255, any other argument is unchanged.

Reference: ANSI, REENT.

## **\_tolower( )**

```
#include <ctype.h>
int _tolower(int c);
```

Converts an upper-case letter to the corresponding lower-case letter. Arguments outside lower-case letters return undefined results. The speed is somewhat faster than **tolower( )**.

Reference: SVID, REENT.

## **toupper( )**

```
#include <ctype.h>
int toupper(int c);
```

Converts a lower-case letter to the corresponding upper-case letter. The argument range is -1 through 255, any other argument is unchanged.

Reference: ANSI, REENT.

## **\_toupper( )**

```
#include <ctype.h>
int _toupper(int c);
```

Converts a lower-case letter to the corresponding upper-case letter. Arguments outside lower-case letters return undefined results. The speed is somewhat faster than **toupper( )**.

Reference: SVID, REENT.

**tsearch( )**

```
#include <search.h>
void *tsearch(const void *key, void ** rootp, int (*compar)());
```

Used to build and access a binary tree. The user supplies the routine *compar* to perform comparisons. *key* is a pointer to a datum to be accessed or stored. If a datum equal to *\*key* is in the tree, a pointer to that datum is returned. Otherwise, *\*key* is inserted, and a pointer to it is returned. *rootp* points to a variable that points to the root of the tree.

Reference: SVID.

**twalk( )**

```
#include <search.h>
void twalk(void *root, void (*action)());
```

**twalk( )** traverses a binary tree. *root* is the root of the tree to be traversed, and any node may be the root for a walk below that node. *action* is the name of the user supplied routine to be invoked at each node, and is called with three arguments. The first argument is the address of the node being visited. The second argument is a value from the enumeration data type **typedef enum {preorder, postorder, endorder, leaf} VISIT** (see <search.h>), depending on whether this is the first, second, or third time the node has been visited (during a depth-first, left-to-right traversal of the tree), or whether the node is a leaf. The third argument is the level of the node in the tree, with the root as level zero. See **tsearch( )**.

Reference: SVID, REENT.

**tzset( )**

```
#include <sys/types.h>
#include <time.h>
void tzset(void);
```

**tzset( )** uses the contents of the environment variable **TZ** to override the value of the different external variables for the time zone. It scans the contents of **TZ** and assigns the different fields to the respective variable. **tzset( )** is called by **asctime( )** and may be called explicitly by the user.

Reference: POSIX.

## ungetc( )

```
#include <stdio.h>
int ungetc(int c, FILE *stream);
```

Inserts character *c* into the buffer associated with input *stream*. The argument *c* will be returned at the next **getc( )** call on that stream. **ungetc( )** returns *c* and leaves the file associated with *stream* unchanged. If *c* equals EOF, **ungetc( )** does nothing to the buffer and returns EOF. Only one character of push-back is guaranteed.

Reference: ANSI.

## unlink( )

```
#include <unistd.h>
int unlink(const char *path);
```

Removes the directory entry *path*.

The C libraries provide an interface to this operating system call. Please see your OS manual for a complete definition.

Reference: POSIX, SYS.

## \_unordered( )

```
#include <math.h>
double _unordered(double x, double y);
```

Returns a non-zero value if *x* is unordered with *y*, and returns zero otherwise. See Table 4 of the ANSI 754 standard for the meaning of *unordered*.

Reference: ANSI 754, MATH, REENT.

## vfprintf( )

```
#include <stdarg.h>
#include <stdio.h>
int vfprintf(FILE *stream, const char *format, va_list arg);
```

This is equivalent to **fprintf( )**, but with the argument list replaced by *arg*, which must have been initialized with the **va\_start** macro.





**NOTE:** By default in most environments, **vfprintf** buffers its output until a newline is output. To cause output character-by-character without waiting for a newline, call **setbuf()**, p.561, with a NULL buffer pointer before after opening but before writing to the stream:

---

```
setbuf(*stream, 0);
```

---

OS calls: **isatty**, **sbrk**, **write**.

Reference: ANSI.

34

### **vfscanf()**

```
#include <stdarg.h>
#include <stdio.h>
int vfscanf(FILE *stream, const char *format, va_list arg);
```

This is equivalent to **fscanf()**, but with the argument list replaced by *arg*, which must have been initialized with the **va\_start** macro.

OS calls: **isatty**, **read**, **sbrk**, **write**.

Reference: DCC.

### **vprintf()**

```
#include <stdarg.h>
#include <stdio.h>
int vprintf(const char *format, va_list arg);
```

This is equivalent to **printf()**, but with the argument list replaced by *arg*, which must have been initialized with the **va\_start** macro.



**NOTE:** By default in most environments, **vprintf** buffers its output until a newline is output. To cause output character-by-character without waiting for a newline, call **setbuf()**, p.561, with a NULL buffer pointer before after opening but before writing to the stream:

---

```
setbuf(*stream, 0);
```

---

OS calls: **isatty**, **sbrk**, **write**.

Reference: ANSI.

## **vscanf( )**

```
#include <stdarg.h>
#include <stdio.h>
int vscanf(const char *format, va_list arg);
```

This is equivalent to **scanf( )**, but with the argument list replaced by *arg*, which must have been initialized with the **va\_start** macro.

OS calls: **isatty**, **read**, **sbrk**, **write**.

Reference: DCC.

## **vsprintf( )**

```
#include <stdarg.h>
#include <stdio.h>
int vsprintf(char *s, const char *format, va_list arg);
```

This is equivalent to **sprintf( )**, but with the argument list replaced by *arg*, which must have been initialized with the **va\_start** macro.

OS calls: **isatty**, **sbrk**, **write**.

Reference: ANSI, REENT.

## **vsscanf( )**

```
#include <stdarg.h>
#include <stdio.h>
int vsscanf(const char *s, const char *format, va_list arg);
```

This is equivalent to **sscanf( )**, but with the argument list replaced by *arg*, which must have been initialized with the **va\_start** macro.

OS calls: **isatty**, **read**, **sbrk**, **write**.

Reference: DCC, REENT.

## **wcstombs( )**

```
#include <stdlib.h>
size_t wcstombs(char *s, const wchar_t *wcs, size_t n);
```

Stores a multi-byte character string in the array whose first element has the address *s* by converting each of the characters in the string *wcs*. It converts as if calling

**wctomb( )**. It stores no more than  $n$  characters, stopping after it stores a null character. It returns the number of characters stored, not counting the null character; unless there is an error, in which case it returns -1.

Reference: ANSI.

### wctomb( )

```
#include <stdlib.h>
int wctomb(char *s, wchar_t wchar);
```

If  $s$  is not a null pointer, the function determines the number of bytes needed to represent the multi-byte character corresponding to the wide character  $wchar$ . It converts  $wchar$  to the corresponding multi-byte character and stores it in the array whose first element has the address  $s$ . It returns the number of bytes required, not counting the terminating null character; unless there is an error, in which case it returns -1.

Reference: ANSI.

### write( )

```
#include <unistd.h>
int write(int fildes, const void *buf, unsigned nbytes);
```

Writes  $nbyte$  bytes from the buffer  $buf$  to the file  $fildes$ .

The C libraries provide an interface to this operating system call. Please see your OS manual for a complete definition.

Reference: POSIX, SYS.

### y0( )

```
#include <math.h>
double y0(double x);
```

Returns the Bessel function of positive  $x$  of the second kind of order 0.

OS calls: **write**.

Reference: UNIX, MATH, REERR.

### **y0f( )**

```
#include <mathf.h>
float y0f(float x);
```

Returns the Bessel function of positive  $x$  of the second kind of order 0. This is the single precision version of **y0( )**.

OS calls: **write**.

Reference: DCC, MATH, REERR.

### **y1( )**

```
#include <math.h>
double y1(double x);
```

Returns the Bessel function of positive  $x$  of the second kind of order 1.

OS calls: **write**.

Reference: UNIX, MATH, REERR.

### **y1f( )**

```
#include <mathf.h>
float y1f(float x);
```

Returns the Bessel function of positive  $x$  of the second kind of order 1. This is the single precision version of **y1( )**.

OS calls: **write**.

Reference: DCC, MATH, REERR.

### **yn( )**

```
#include <math.h>
double yn(double n, double x);
```

Returns the Bessel function of positive  $x$  of the second kind of order  $n$ .

OS calls: **write**.

Reference: UNIX, MATH, REERR.

**ynf( )**

```
#include <mathf.h>
float ynf(float n, float x);
```

Returns the Bessel function of positive  $x$  of the second kind of order  $n$ . This is the single precision version of **yn( )**.

OS calls: **write**.

Reference: DCC, MATH, REERR.



---

## PART VII

# Appendices

|          |                                                        |            |
|----------|--------------------------------------------------------|------------|
| <b>A</b> | <b>Configuration Files .....</b>                       | <b>587</b> |
| <b>B</b> | <b>Compatibility Modes: ANSI, PCC, and K&amp;R C .</b> | <b>601</b> |
| <b>C</b> | <b>Compiler Limits .....</b>                           | <b>607</b> |
| <b>D</b> | <b>Compiler Implementation-Defined Behavior ....</b>   | <b>609</b> |
| <b>E</b> | <b>Assembler Coding Notes .....</b>                    | <b>617</b> |
| <b>G</b> | <b>Compiler -X Options Numeric List .....</b>          | <b>637</b> |





# A

## *Configuration Files*

[A.1 Configuration Files 587](#)

[A.2 How Commands, Environment Variables, and Configuration Files Relate 588](#)

[A.3 Standard Configuration Files 590](#)

[A.4 The Configuration Language 594](#)

### A.1 Configuration Files

The compiler drivers and other tools are controlled by options from two sources: the command line, and standard *configuration files* installed automatically as part of the compiler suites.

Configuration files permit options to be constructed from string constants and variables using assignment, **if**, **switch**, **include**, and other statements.

For the most part, configuration files are used internally by the compiler suites to support multiple target processors. The current default target configuration is stored in the *version\_path/conf/default.conf* configuration file (see [4.3 Alternatives for Selecting a Target Configuration](#), p.29).

This appendix explains configuration file processing and the configuration language. It will be useful to those wishing to create configuration files, or to understand or modify the standard configuration files normally used by the tools.

## A.2 How Commands, Environment Variables, and Configuration Files Relate

If a tool is executed with no options on the command line, no configuration file, and no environment variables set, then all options will have their default values as described here.

In practice, each tool is usually executed with some options on the command line, perhaps some options set with environment variables, and a number of site-dependent defaults set in configuration files, with remaining options having default values.



---

**NOTE:** Configuration files are used when the **dcc**, **dplus**, **das**, or **dld** programs are executed explicitly, e.g., from the command line or in a makefile. In this chapter, the term *tool* refers to any of these programs when executed explicitly.

When the **dcc** or **dplus** command automatically invoke the **das** or **dld** commands, configuration file processing is done for the **dcc** or **dplus** command and not again for the implicit **das** or **dld** command.

---

### A.2.1 Configuration Variables and Precedence

Variables may be set in three places:

- In the operating system environment (see [2.4 Environment Variables](#), p.15).
- On the command line using the **-WD** option for any variable, the **-WC** option for configuration variable **DCONFIG**, and the **-t** option to implicitly set configuration variables **DTARGET**, **DOBJECT**, **DFP**, and **DENVIRON**.
- In configuration files using assignment statements.

These are in order of precedence from lowest to highest: a variable defined on the command line overrides an environment variable of the same name, and a variable set in a configuration file overrides both a command line and an environment variable of the same name. (Thus, in a configuration file, it is usual to test whether a variable has a value before assigning it a default value—see examples below.)

A.2.2 Startup

Here is how each tool processes the command line and configuration files at startup.



**NOTE:** Order is important. If a variable is given a value, or an option appears more than once, the final instance is taken unless noted otherwise.

1. The tool scans the command line for an **-@** option followed by the name of either an environment variable or a file, and replaces the option with the contents of the variable or file.
2. The tool scans the command line for each **-WD *variable=value*** option. If a variable matches an existing environment variable, the new value effectively replaces the existing value for the duration of the command (the operating system environment is not changed).  
  
The option **-WC *config-file-name*** is equivalent to **-WDDCONFIG=*config-file-name***. Thus, if both **-WC** and **-WDDCONFIG** options are present, the *config-file-name* will be taken from the final instance, and if either is present, they will override any **DCONFIG** environment variable.
3. The tool finds the main configuration file by checking first for a value of variable **DCONFIG**, and then if that is not set, looking in the standard location as given in [Table A-1](#). The tool parses each statement in the configuration file as described in the following subsections.
4. After parsing the configuration file, the tool processes each of the input files on the command line using the options set by command-line and configuration-file processing.

[Figure A-1](#) below, provides a simplified example of how the above works.

The remainder of this chapter provides additional details and examples and explains each of the statements allowed in a configuration file.

Figure A-1    **Example of Command-Line and Configuration-File Processing**

**Situation**

An engineer works on Project 1 and normally uses *target1* with standard optimization (**-O** option). Now the engineer has a *target2* prototype and wants to use extended optimization (**-XO**).

**Environment variables** (set using operating system commands not shown)

Figure A-1    **Example of Command-Line and Configuration-File Processing** (cont'd)

|                                                                                                                                           |                                                                                                                                                                                                                                                                                                                                                                             |
|-------------------------------------------------------------------------------------------------------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <code>DFLAGS:    -O</code>                                                                                                                | As described in <a href="#">2.4.1 Environment Variables Recognized by the Compiler</a> , p.16, <b>DFLAGS</b> is a convenient way to give options with an environment variable.                                                                                                                                                                                              |
| <b>Command line</b><br><br><code>dcc -ttarget2 -XO test1.c</code>                                                                         | The command line is used to select the special processor <i>target2</i> and extended optimization.                                                                                                                                                                                                                                                                          |
| <b>Excerpts from configuration file dtools.conf</b><br><br><code>if (!\$DTARGET) DTARGET=target1<br/>...<br/><br/>\$DFLAGS<br/>\$*</code> | If the target had not been set on the command line or elsewhere, it would default to <i>target1</i> .<br><br><br><b>\$DFLAGS</b> evaluates to <b>-O</b> . <b>\$*</b> is a special variable evaluating to all of the command-line arguments. The <b>-XO</b> option from the command line overrides the related <b>-O</b> option from the <b>DFLAGS</b> environment variable. |

### A.3 Standard Configuration Files

Wind River recommends the use of three configuration files in a hierarchy. Standard versions of two of the files, **dtools.conf** and **default.conf** are shipped with the tools.

The tool identifies the main configuration file using the **DCONFIG** variable as described in [A.2.2 Startup](#), p.589. If **DCONFIG** is not set, it then looks for the file **dtools.conf**. Its standard location is the **conf** subdirectory of the directory holding the selected version of the tools as shown in the following table (see also [Table 2-1](#)).

Table A-1    **Main Configuration File: Standard Name and Location**

| System                 | Path and Name                                       |
|------------------------|-----------------------------------------------------|
| UNIX                   | <code>/usr/lib/diab/version/conf/dtools.conf</code> |
| Windows 95, 98, and NT | <code>c:\diab\version\conf\dtools.conf</code>       |

The standard location of the main configuration file can be changed by setting the **DCONFIG** environment variable, by using the **-WC** option, or by using the **-WDDCONFIG** option.

The standard **dtools** file is structured broadly as shown in [Figure A-2](#) on the next page **dtools** shows how the compiler combines the various environment variables and command-line options. **dtools** also serves as an example of how to write the configuration language.

Avoid altering **dtools**. Instead, set defaults and specific options by using the **-t** option on the command line to set **DTARGET**, **DOBJECT**, **DFP**, and **DENVIRON** (see [4.1 Selecting a Target](#), p.23), or otherwise modifying **default.conf**, and/or by providing your own **user.conf**.

As shown in [Figure 4-b](#), the **dtools** configuration file includes **default.conf** and then **user.conf** near the beginning. These files must be located in the same directory as **dtools.conf** (no path is allowed on **include** statements in configuration files). If you want a private copy of these files, copy all the configuration files to a local directory and change the location of **dtools.conf** as described at the beginning of this section.

No error is reported if an **include** statement names a non-existent file; therefore, both files are optional.

### A.3.1 DENVIRON Configuration Variable

Configuration variable **DENVIRON** is set in **default.conf** and may be overridden by setting an environment variable of the same name or by providing a **-ttof:environ** option on the command line executing **dcc**, **dplus**, **das**, or **dld**.

As shown in [Figure A-2](#), if a file named **\$DENVIRON.conf** exists in the **conf** subdirectory, it will be included by **dtools.conf**. The tools are delivered with several such “environment” **.conf** files. These are used to set options as required for several different target operating systems support by Wind River.

The **DENVIRON** configuration variable also controls the default search path use by the linker to find libraries. See the *environ* entry in the [Table 4-1](#) and the section [4.2 Selected Startup Module and Libraries](#), p.28 for details.

Figure A-2 **Standard dtools.conf Configuration File - Simplified Structure**

---

|    |                                          |                                                                                                                                                                                                                                                                                                                   |
|----|------------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| 1. |                                          | Variables and assignments used to customize selection and operation of the tools.                                                                                                                                                                                                                                 |
| 2. | <code>include<br/>default.conf</code>    | Read the second of the two configuration files included with the tools. This file records the target configuration in variables <b>DTARGET</b> , <b>DOBJECT</b> , and <b>DFP</b> , and <b>DENVIRON</b> , and is updated automatically during installation or by <b>dctrl -t</b> .                                 |
| 3. | <code>include<br/>user.conf</code>       | ASCII file to be created by the user to set, for example, default <b>-X</b> options and optimizations, additional default include files and libraries, default preprocessor macros, etc.                                                                                                                          |
| 4. |                                          | Switch and other statements using <b>DTARGET</b> , <b>DOBJECT</b> , and <b>DFP</b> to set options and flags, especially with respect to different targets. Also selection of tools if not customized above.                                                                                                       |
| 5. | <code>include<br/>\$DENVIRON.conf</code> | This optional file sets options for a specific target operating system. See <a href="#">A.3.1 DENVIRON Configuration Variable</a> , p.591.                                                                                                                                                                        |
| 6. | <b>dcc, dplus</b> section                | Standard options to be used unless overridden by <b>\$UFLAGS2</b> . To be set by the user in the <b>user.conf</b> configuration file.                                                                                                                                                                             |
|    | <code>\$UFLAGS1</code>                   |                                                                                                                                                                                                                                                                                                                   |
|    | <code>\$DFLAGS</code>                    | As described in <a href="#">2.4.1 Environment Variables Recognized by the Compiler</a> , p.16, <b>\$DFLAGS</b> is a convenient way to set an environment variable for widely used options. Because it follows <b>\$UFLAGS1</b> , an option in <b>\$DFLAGS</b> will override the same option in <b>\$UFLAGS1</b> . |
|    | <code>\$*</code>                         | All arguments from the command line ( <b>-t</b> , <b>-WD</b> , and <b>-WC</b> options are not re-processed). Options here will override the same options in both <b>\$UFLAGS1</b> and <b>\$DFLAGS</b> .                                                                                                           |
|    | <code>\$UFLAGS2</code>                   | Overrides for <b>\$UFLAGS1</b> , <b>\$DFLAGS</b> , and the command line. To be set by the user in the <b>user.conf</b> configuration file.                                                                                                                                                                        |
| 7. | <b>das</b> section                       | <b>\$UAFLAGS1</b> and <b>\$UAFLAGS2</b> can be set in <b>user.conf</b> to provide options for the assembler when it is executed explicitly, with <b>\$UFLAGS1</b> options processed before command-line options and <b>\$UFLAGS2</b> options processed after.                                                     |
|    | <code>\$UAFLAGS1</code>                  |                                                                                                                                                                                                                                                                                                                   |
|    | <code>\$*</code>                         |                                                                                                                                                                                                                                                                                                                   |
|    | <code>\$UAFLAGS2</code>                  |                                                                                                                                                                                                                                                                                                                   |
| 8. | <b>dld</b> section                       | And similarly, <b>\$ULFLAGS1</b> and <b>\$ULFLAGS2</b> can be set in <b>user.conf</b> to set options for the linker when it is executed explicitly.                                                                                                                                                               |
|    | <code>\$ULFLAGS1</code>                  |                                                                                                                                                                                                                                                                                                                   |
|    | <code>\$*</code>                         |                                                                                                                                                                                                                                                                                                                   |
|    | <code>\$ULFLAGS2</code>                  |                                                                                                                                                                                                                                                                                                                   |

---

### A.3.2 UFLAGS1, UFLAGS2, DFLAGS Configuration Variables

Configuration file processing gives you several ways to provide options. The standard configuration files shipped with the tools are intended to be used as follows:

- **UFLAGS1** and **UFLAGS2** are intended for compiler options that should “always” be used. It is intended that **UFLAGS1** and **UFLAGS2** be set in a local configuration file, **user.conf**, that you supply. Since you will not want to change this frequently, options set there will be “permanent” unless overridden.

As shown in [Figure A-2](#) above, **UFLAGS1** is expanded before command-line options and files, and **UFLAGS2** after command-line options.

Example: to make sure that the lint facility is always on and that the compiler checks for prototypes, create a **user.conf** with the following lines:

```
File: user.conf
Always perform lint + check for prototypes. (Note: as
assignment, quotes are required with embedded spaces.)
UFLAGS1="-Xlint -Xforce-prototypes"
```




---

**NOTE:** Variables are referenced with a “\$”, e.g., **\$UFLAGS1** as shown in [Figure A-2](#), but are written without a “\$” when being set by an assignment statement.

---

If there is a site-wide **user.conf**, the tools administrator can make sure that any user using it will not require too much memory by adding the following to **user.conf**:

```
Limit memory for optimization.
UFLAGS2=-Xparse-size=1000
```

- **DFLAGS** is intended to be an environment variable for options that change more frequently than those in the configuration files, but not with every compile. For example, it may be conveniently used to select levels for optimization and debugging information.

**DFLAGS** applies only to explicit execution of **dcc** and **dplus**, not to explicit execution of **das** or **dld**. However, some options are passed by **dcc** and **dplus** to the assembler or linker, e.g., the **-L** or **-Y P** options to specify a library search directory for the linker, or the **-Wa,arguments** or **-Wl,arguments** options to pass arguments to the assembler or linker. If **DFLAGS** includes such options, they will be passed along as usual.

- Options for a specific compilation are given on the command line. These override any options set with **UFLAGS1**, **DFLAGS**, but not **UFLAGS2** since **UFLAGS2** occurs after **\$\*** in **dtools.conf**.



---

**NOTE:** **UFLAGS1** and **UFLAGS2** (and **UAFLAGS1**, **UAFLAGS2**, **ULFLAGS1**, **ULFLAGS2**) cannot be overridden by environment variables of the same name. This is because they are reset to empty strings at the beginning of **dtools.conf** before being read from **user.conf**. This is in contrast to **DFLAGS** which is not so reset and can therefore be an environment variable.

---

### A.3.3 **UAFLAGS1, UAFLAGS2, ULFLAGS1, ULFLAGS2 Configuration Variables**

Similar to the way **UFLAGS1** and **UFLAGS2** are intended to provide “permanent” options to be processed before and after command-line options for the compiler, **UAFLAGS1** and **UAFLAGS2** provide before-and-after options for the assembler and **ULFLAGS1** and **ULFLAGS2** provide before-and-after options for the linker.

As with **UFLAGS1** and **UFLAGS2**, it is expected that these options will be assigned values in a user-supplied **user.conf** configuration file, and because they are reset to the empty string at the beginning of **dtools.conf** they cannot be set as environment variables. See [Figure A-2](#) for additional details.

## A.4 The Configuration Language

As noted above, the ultimate purpose and effect of configuration file processing is to provide values for options. The simplest type of configuration file is an ordinary text file containing multiple lines where each line sets a single option.

Beyond this, a straight-forward *configuration language* allows greater control over configuration file processing, so that different options and their values may be set depending on options present on the command line, on environment variables, and on variables defined by the user within a configuration file or a file included by a configuration file.

The remainder of this section describes the configuration language and ends with an extended example.



### A.4.1 Statements and Options

A configuration file consists of a sequence of *statements* and *options* separated by whitespace. A `#` token at any point on a line not in a quoted string introduces a comment; the rest of the line is ignored. Thus, a line may contain multiple statements and options ending in a comment.

A *statement* is either an assignment statement or starts with one of the keywords **error**, **exit**, **include**, **if** (and **else**), **print**, or **switch** (and **case**, **break**, and **endsw**).

In general, it is preferable to write one statement or option per line. This makes a configuration file easier to understand and modify. An exception to this rule is made for lines containing an **if** or **else** statement, each of which governs the remaining statements and options on a line as described below.

Whitespace, consisting of spaces or tabs, may be used freely between statements and/or options for readability. Blank lines are ignored.

A line may not be continued to a second line, but there is no practical limit on the length of a line except that which may be imposed by an operating system or text editor.

Any text which is not a statement or comment per the above is taken as options. In general, options have one of four forms, each introduced by a single character option letter *x*:

```
-x
-x name
-x value
-x name=value
```

Either the name or the value may a quoted or unquoted string of characters as allowed by a particular option, and either may include variables introduced by a “\$” character (see [A.4.4 Variables](#), p.596 below). Examples:

```
-O
-XO "O" is a name
-o test.out "test.out" is a value
-Xlocal-data-area=0
-I$HOME/include "$HOME" is a variable
```

### A.4.2 Comments

A `#` token at any point on a line not in a quoted string introduces a comment — the rest of the line is ignored. Examples:

```
..... # This is a comment through the end of the line.
not_a_comment = "# This is an assignment, not a comment"
```

### A.4.3 String Constants

A string constant is any sequence of characters ending in whitespace (spaces and tabs) or at end-of-line. To include whitespace in a string constant, enclose the entire constant in double quotes. Also, a string may include a variable prefixed with a "\$" character.

There is no practical length limit except that imposed by the maximum length of a line. Examples:

```
Simple_string_constant
"string constant with embedded spaces"
"$XFLAGS -Xanother-X-flag" # $XFLAGS will be expanded
```

### A.4.4 Variables

All variables are of type string. Variable names are any sequence of letters, digits, and underscores, beginning with a letter or underscore (letters are "A" - "Z" and "a" - "z", digits are "0" - "9"). There is no practical length limit to a variable name except that imposed by the maximum length of a line.

Variables are case sensitive.

To set a variable in a configuration file use an assignment statement. (See [A.4.5 Assignment Statement](#), p.597).

To evaluate a variable, that is, to use its value, precede it with a "\$" character. See [A.2.1 Configuration Variables and Precedence](#), p.588 for a discussion of how *environment* variables and variables used in configuration files relate and their precedence.

Variables are not declared. A variable which has not been set evaluates to a zero-length string equivalent to "".

The special variable \$\* evaluates to all arguments given on the command line. (However -WC and -WD arguments have already been processed and are effectively ignored.) See examples below and also [Figure A-2](#).

The special variable \$-x, where x is one or more characters, evaluates to any user specified option starting with x, if given previously (on the command line or in the configuration file). Otherwise it evaluates to the zero-length string. If more than one option begins with x, only the first is used.

For example, if the command line includes option -Dtest=level9, then \$-Dtest evaluates to -Dtest-level9.

The special variable `$$` is replaced by a dollar sign `"$"`.

The special variable `$/` is replaced by the directory separation character on the host system: `"/"` on UNIX and `"\"` on Windows. (On any specific system, you can just use the appropriate character. Wind River uses `"$/"` for portability.)

Examples: assume that the environment variable `DFLAGS` is set to `"-XO"`, and that the following command is given:

```
dcc -Dlevel99 -g2 -O -WDDFP=soft file.c
```

The following table shows examples of how variables are set given these assumptions.

Table A-2 Variable Evaluation in Configuration Files

| Variable               | Evaluates To                        | Comment (see assumptions above)                                                                                                                                     |
|------------------------|-------------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <code>\$DFLAGS</code>  | <code>"-XO"</code>                  | Environment variable.                                                                                                                                               |
| <code>\$DFP</code>     | <code>"soft"</code>                 | Value is as if <code>-WD</code> set the <code>DFP</code> configuration variable (see <a href="#">5.3.27 Define Configuration Variable (-W Dname=value)</a> , p.49). |
| <code>-\$WDFP</code>   | <code>"-WDDFP=soft"</code>          | In the form <code>-\$x</code> , <code>x</code> is the entire <code>WD</code> option.                                                                                |
| <code>-\$Dlevel</code> | <code>"-Dlevel99"</code>            | In the form <code>-\$x</code> , <code>x</code> need match only the beginning of an option.                                                                          |
| <code>\$*</code>       | <code>"-Dlevel99 ... file.c"</code> | Evaluates to the entire command minus the initial <code>dcc</code> .                                                                                                |

A.4.5 Assignment Statement

The assignment statement assigns a string to a variable. Its form is:

```
variable = [string-constant]
```

As noted above, a *string-constant* may include a variable — see the last example.

Examples:

```
DLIBS= # Set to empty string.
XLIB=$HOME/lib # Variable XLIB is set.
YFLAGS="$XFLAGS -X12" # Use "" for spaces in a string.
if (...) PF=-p GF=-g # Two on one line (see if below).
$XFLAGS="$XFLAGS -Xanother-flag" # Inner $XFLAGS will be expanded.
```

#### A.4.6 Error Statement

The **error** statement terminates configuration file processing with an error. See the **switch** statement for an example.

#### A.4.7 Exit Statement

The **exit** statement stops configuration file processing. This is useful, for example, in an header file that specifies all compiler options, but does not want the compiler to continue the parsing in **default.conf** and **dtools.conf**.

#### A.4.8 If Statement

The **if** statement provides for conditional branching in a configuration file. There are two forms:

```
if (expression) statements and/or options
and
```

```
if (expression) statements and/or options
else statements and/or options
```

If *expression* is true, the rest of the same line is interpreted and, if the next line begins with **else**, the remainder of that line is ignored. If *expression* is false, the remainder of the line is skipped, and, if the next line begins with **else**, the remainder of that line is interpreted. Blank lines are not allowed between **if** and **else** lines.

*expression* is one of:

|                                  |                                                       |
|----------------------------------|-------------------------------------------------------|
| <i>string</i>                    | true if <i>string</i> is non-zero length              |
| <b>!</b> <i>string</i>           | true if <i>string</i> is zero length                  |
| <i>string1</i> == <i>string2</i> | true if <i>string1</i> is equal to <i>string2</i>     |
| <i>string1</i> != <i>string2</i> | true if <i>string1</i> is not equal to <i>string2</i> |

Note that because any statement can follow **else**, one may write a sequence of the form

```
if
else if
else if
...
else
```

Examples:

```
if (!$LIB) LIB=/usr/lib # if LIB s not defined, set it
if ($OPT == yes) -O # option -O if OPT is "yes"
else -g # else option -g
```

#### A.4.9 Include Statement

The **include** permits nesting of configuration files. Its form is:

**include** *file*

The contents of file *file* are parsed as if inserted in place of the **include** statement. The file must be located in the same directory as the main configuration file since no path is allowed in **include** statements. (See [A.3 Standard Configuration Files](#), p.590.)

If the given file does not exist, the statement is ignored. Example:

```
include user.con
```

#### A.4.10 Print Statement

The print statement outputs a string to the terminal. Its form is:

**print** *string*

Example:

```
if (!$DTARGET) print "Error: DTARGET not set"
```

#### A.4.11 Switch Statement

The switch provides for multi-way branching based on patterns. It has the form:

```
switch (string)
case pattern1:
...

break
case pattern-n:
...
endsw
```

where each *pattern* is any string, which can contain the special tokens "?" (matching any one character), "\*" (matching any string of characters, including the empty string) and "[" (matching any of the characters listed up to the next "]"). When a **switch** statement is encountered, the **case** statements are searched in order to find a pattern that matches the *string*. If such a pattern is found, interpretation continues at that point. If no match is found, interpretation continues after the **endsw** statement. If more than one *pattern* matches the *string*, the first will be used.

If a **break** statement is found within the case being interpreted, interpretation continues after **endsw**. If no **break** is present at the end of a case, interpretation falls through to the next case.

Example:

```
switch ($DTARGET)
 case CHIP*:
 ...
 break
 case *:
 # any other DTARGET
 print Error: DTARGET not set"
 error
endsw
```

# B

## Compatibility Modes: ANSI, PCC, and K&R C



**NOTE:** This section relates to C, not C++. Of the options listed in [Table B-1](#), only **-Xdialect-strict-ansi** (equivalent to **-Xstrict-ansi**) affects the C++ compiler.

The Wind River compiler supports various standards, including ANSI C89, ANSI C99, and ANSI C++. Many existing C programs are coded in accordance with slightly varying standards. To ease porting of these programs, C modules can be compiled in four different modes as selected by an option from the following table:

Table B-1 **Compatibility Mode Options for C Programs**

| Mode        | Option                       | Meaning                                                                                                                                        |
|-------------|------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------|
| C89         | <b>-Xdialect-c89</b>         | Conform to the ISO/IEC 9899:1990 standard for C.                                                                                               |
| C99         | <b>-Xdialect-c99</b>         | Conform to the ISO/IEC 9899:1999 standard for C.                                                                                               |
| ANSI        | <b>-Xdialect-ansi</b>        | Conform to ANSI X3.159-1989 with some additions as shown in the table below.                                                                   |
| Strict ANSI | <b>-Xdialect-strict-ansi</b> | Conform strictly to the ANSI X3.159-1989 standard. Equivalent to <b>-Xstrict-ansi</b> .                                                        |
| K & R       | <b>-Xdialect-k-and-r</b>     | Conform to the pre-ANSI “standard” defined in <i>The C Programming Language</i> by Kernighan and Ritchie, with most ANSI extensions activated. |

Table B-1    **Compatibility Mode Options for C Programs** (cont'd)

| Mode | Option               | Meaning                                            |
|------|----------------------|----------------------------------------------------|
| PCC  | <b>-xdialect-pcc</b> | Emulate the behavior of System V.3 UNIX compilers. |

The following table describes the differences among these modes. If not otherwise noted, “y” means “yes” and “n” means “no”.

Table B-2    **Features of Compatibility Modes for C Programs**

| Functionality                                                                                                                                                                                                                          | K&R | ANSI | Strict ANSI | PCC |
|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-----|------|-------------|-----|
| <b>long float</b> is same as <b>double</b> .                                                                                                                                                                                           | y   | n    | n           | y   |
| The <b>long long</b> type is defined; but a warning (w) is generated when <b>long long</b> is used.                                                                                                                                    | y   | y    | w           | y   |
| The <b>asm</b> keyword is defined.                                                                                                                                                                                                     | y   | y    | n           | y   |
| The <b>volatile</b> , <b>const</b> , and <b>signed</b> keywords are defined.                                                                                                                                                           | y   | y    | y           | n   |
| “Double underscore” keywords (e.g. <b>__inline__</b> and <b>__attribute__</b> ) are defined.                                                                                                                                           | y   | y    | n           | y   |
| The type of a hexadecimal constant $\geq 0x80000000$ is <b>unsigned int</b> (u) or <b>int</b> (i).                                                                                                                                     | i   | u    | u           | i   |
| In ANSI it is legal to initialize automatic arrays, structures, and unions. The compiler always accepts this and is either silent (s) or gives a warning (w).                                                                          | s   | s    | s           | w   |
| A scalar type can be cast explicitly to a structure or union type, if the sizes of the types are the same. Such typecasts generate a warning (w).                                                                                      | w   | w    | n           | w   |
| When two integers are mixed in an expression, they cause conversions and the result type is either “unsigned wins” (u) or “smallest possible wins” (s). Example:<br><br>((unsigned char)1 > -1)<br><br>which is 0 if (u) and 1 if (s). | u   | s    | s           | u   |



Table B-2    **Features of Compatibility Modes for C Programs** (cont'd)

| Functionality                                                                                                                                                                                                                              | K&R | ANSI | Strict<br>ANSI | PCC |
|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-----|------|----------------|-----|
| When a bit-field is promoted to a larger integral type, sign is always preserved.                                                                                                                                                          | y   | y    | n              | y   |
| When prototypes are used and the arguments do not match an error (e) or warning (w) is generated.                                                                                                                                          | w   | e    | e              | w   |
| Float expressions are computed in <b>float</b> (f) or <b>double</b> (d).                                                                                                                                                                   | f   | f    | f              | d   |
| When an array is declared without a dimension in an invalid context an error (e) or warning (w) is generated.                                                                                                                              | e   | e    | e              | w   |
| When an array is declared with a zero dimension, generates a warning.                                                                                                                                                                      | n   | n    | y              | n   |
| Incompletely braced structure and array initializers can either be parsed top-down (t) or bottom-up (b). May be controlled by the <b>-Xbottom-up-init</b> option (5.4.14 <i>Parse Initial Values Bottom-up (-Xbottom-up-init)</i> , p.68). | t   | t    | t              | b   |
| When pointers and integers are mismatched, generates an error (e) or a warning (w). May be controlled by the <b>-Xmismatch-warning</b> (5.4.101 <i>Warn On Type and Argument Mismatch (-Xmismatch-warning)</i> , p.106).                   | e   | e    | e              | w   |
| Trigraphs, e.g. "???" sequences, are recognized.                                                                                                                                                                                           | y   | y    | y              | n   |
| Illegal structure references generate either an error (e) or a warning (w). If more than one defined structure contains a member, an error is always generated. Example:<br><br>int *p; p->m = 1;                                          | e   | e    | e              | w   |
| <b>p</b> is both a pointer to an <b>int</b> and a pointer to a structure containing member <b>m</b> . This is likely an error.                                                                                                             |     |      |                |     |
| Comments are replaced by nothing (n) or a space (s).                                                                                                                                                                                       | n   | s    | s              | n   |

**B**

Table B-2 Features of Compatibility Modes for C Programs (cont'd)

| Functionality                                                                                                                                                                                             | K&R | ANSI | Strict<br>ANSI | PCC |
|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-----|------|----------------|-----|
| Macro arguments are replaced in strings and character constants. Example:<br><br><pre>#define x(a) if (a) printf("a\n");</pre> The "a" in the <b>printf</b> string will be replaced only for K&R and PCC. | y   | n    | n              | y   |
| A missing parameter name after a # in a macro declaration generates an error.                                                                                                                             | n   | n    | y              | n   |
| Characters after an <b>#endif</b> directive will generate a warning.                                                                                                                                      | n   | n    | y              | n   |
| Preprocessor errors are either errors (e) or warnings (w).                                                                                                                                                | e   | e    | e              | w   |
| Preprocessor recognizes vararg macros. (Not available with <b>-Xpreprocessor-old</b> option.                                                                                                              | y   | y    | y              | n   |
| <b>__STDC__</b> macro is predefined to (0), (1) or is not predefined (n).                                                                                                                                 | n   | 0    | 1              | n   |
| <b>__STDC__</b> macro can be undefined with <b>#undef</b> .                                                                                                                                               | y   | y    | n              | y   |
| <b>__STRICT_ANSI__</b> macro is predefined.                                                                                                                                                               | n   | n    | y              | n   |
| Spaces are legal before cpp #-directives.                                                                                                                                                                 | n   | y    | y              | n   |
| Parameters redeclared in the outer most level of a function will generate an error (e) or warning (w).                                                                                                    | w   | e    | e              | w   |
| If the function <b>setjmp( )</b> is used in a function, variables without the <b>register</b> attribute will be forced to the stack (s) or can be allocated to registers (r).                             | r   | r    | r              | s   |
| C++ comments <b>"/"</b> are recognized in C files.                                                                                                                                                        | y   | y    | n              | y   |
| Predefined macros without leading underscores, e.g., <b>unix</b> , are available.                                                                                                                         | y   | y    | n              | y   |
| The following construct, in which a newly defined type is used to declare a parameter, is legal:<br><br><pre>f(i) typedef int i4; i4 i; {}</pre>                                                          | n   | n    | n              | y   |





# C

## *Compiler Limits*

The C and C++ compiler limits usually relate to the size of internal data structures. Most internal data structures are dynamically allocated and are therefore limited only by total available virtual memory.

The following shows the minimum limits required by Section 2.2.4.1 of the ANSI X3.159-1989 C standard. The Wind River Compiler meets or exceeds these limits in all cases. When not limited by available memory (effectively unlimited), the C and C++ limit is shown in parentheses. “No limit” is shown in some cases for emphasis.

- 15 nesting levels of compound statements, iteration control, and selection control structures
- 8 nesting levels for **#include** directives (Wind River: 100)
- 8 nesting levels of conditional inclusion
- 12 pointer, array, and function declarators modifying a basic type in a declaration
- 127 expressions nested by parentheses
- 31 initial characters are significant in an internal identifier or a macro name (Wind River: no limit)
- 6 significant initial characters in an external identifier (Wind River: no limit)
- 511 external identifiers in one source file (Wind River: no limit)
- 127 identifiers with block scope in one block
- 1,024 macro identifiers simultaneously defined in one source file

- 31 parameters in one function definition and call
- 31 parameters in one macro definition and invocation
- 509 characters in a logical source line
- 509 characters in a string literal (after concatenation)
- 32,767 bytes in an object
- 255 case labels in a **switch** statement

The length of a symbol output by the compiler is limited to approximately 8,000 characters. In C++ projects with complex hierarchies, it is possible, though unlikely, that mangled names will run up against this limit, resulting in assembler errors, linker errors, or unexpected runtime behavior (when the wrong function or variable is accessed).

Memory is dynamically allocated as required, and is a function of:

- The size of the largest function in the source file. The size is measured in number of expression nodes, where each operand and operator generate one node in addition to several nodes per function. After code generation, the memory used by a function is reused.
- Optimization level. Some optimizations use a large amount of memory. Reaching analysis uses memory proportional to the number of basic blocks multiplied by the number of variables used in the function.
- Large initialized arrays.

In addition, the number of KBytes the compiler is allowed to use to delay code generation in order to perform interprocedural optimizations is limited internally. The default value is 3000KB with **-O** and 6MB with **-XO**. It can be changed with option **-Xparse-size** (see [5.4.109 Specify Optimization Buffer Size \(-Xparse-size\)](#), p.109).

The compiler does not generate correct debug information if there are more than 1023 included files.

# *D*

## *Compiler Implementation-Defined Behavior*

- [D.1 Introduction 609](#)
- [D.2 Translation 610](#)
- [D.3 Environment 612](#)
- [D.4 Library functions 613](#)

### **D.1 Introduction**

The ANSI C standard X3.159-1989 leaves certain aspects of a C implementation to the tools vendor. This appendix describes how Wind River has implemented these details. Note that there are differences between C and C++; this appendix addresses C only.



---

**NOTE:** This chapter contains material applicable to execution environments supporting file I/O and other operating system functions. Much of it therefore depends on the operating system present, if any, and may not be relevant in an embedded environment.

---

## D.2 Translation

### Diagnostics

See the error messages reference guide.

### Identifiers

There are no limitations on the number of significant characters in an identifier. The case of identifiers is preserved.

### Characters

ASCII is the character set for both source and for generated code (constants, library routines).

There are no shift states for multi-byte characters.

A character consists of eight bits.

Each character in the source character set is mapped to the same character in the execution set.

There may be up to four characters in a character constant. The internal representation of a character constant with more than one character is constructed as follows: as each character is read, the current value of the constant is multiplied by 256 and the value of the character is added to the result. Example:

```
'abc' == (('a'*256)+'b')*256+'c'
```

By default, wide characters are implemented as **long** integers (32 bits). See also [5.4.157 Define Type for wchar \(-Xwchar=n\)](#), p.126.

Unless specified by the use of the **-Xchar-signed** or **-Xchar-unsigned** options ([5.4.20 Specify Sign of Plain Char \(-Xchar-signed, -Xchar-unsigned\)](#), p.70), the treatment of plain **char** as a **signed char** or an **unsigned char** is as defined in [Table 8-1](#).

### Integers

Integers are represented in two's-complement binary form. The properties of the different integer types are defined in [8.2 Basic Data Types](#), p.178.

Bitwise operations on signed integers treat both operands as if they were unsigned, but treat the result as signed.

The sign of the remainder on integer division is the same as that of the divisor on all supported processors.



Right shifting a negative integer divides it by the corresponding power of 2, with an odd integer rounded down. In the binary representation (on all supported processors), the sign bit is propagated to the right as bits are dropped from the right end of the number.

### Floating Point

The floating point types use the IEEE 754-1985 floating point format on all supported processors. The properties of the different floating point types are defined in [8.2 Basic Data Types](#), p.178.

The default rounding mode is “round to nearest”.

### Arrays and Pointers

The maximum number of elements in an array is equal to  $(\text{UINT\_MAX}-4)/\text{sizeof}(\text{element-type})$ . For `UINT_MAX`, see `limits.h`.

Pointers are implemented as 32 bit entities. A cast of a pointer to an `int` or `long`, and vice versa, is a bitwise copy and will preserve the value.

The type required to hold the difference between two pointers, `ptrdiff_t`, is `int` (this is sufficient to avoid overflow).

### Registers

All local variables of any basic type, declared with or without the `register` storage class can be placed in registers. `struct` and `union` members can also be put in registers.

Variables explicitly marked as having the `auto` storage class are allocated on the stack.

### Structures, Unions, Enumerations, and Bit-fields

If a member of a `union` is accessed using a member of a different type, the value will be the bitwise copy of original value, treated as the new type.

See pages [178](#) to [182](#) for more information about the implementation of structures and unions, bit-fields, and enumerations.

### Qualifiers

Volatile objects are treated as ordinary objects, with the exception that all read / write / read-modify-write accesses are performed prior to the next sequence-point as defined by ANSI.

### Declarators

There is no limit to how many pointer, array, and function declarators are able to modify a type.

### Statements

There is no limit to the number of **case** labels in a **switch** statement.

### Preprocessing Directives

Single-character constants in **#if** directives have the same value as the same character constant in the execution character set. These characters can be negative.

Header files are searched for in the order described for the **-I** command-line option (see [Set Header Files Directory \(-I path\)](#), p.304). The name of the included file is passed to the operating system (after truncation if necessary to conform to operating system limits).

The **#pragma** directives supported are described in [6.3 Pragmas](#), p.137.

The preprocessor treats a pathname beginning with **"/**", **"\"**", and a "driver letter" (**c:**) as an absolute pathname. All other pathnames are taken as relative.

## D.3 Environment

The function called at startup is called **main()**. It can be defined in three different ways:

- With no arguments:

```
int main(void) {...}
```

- With two arguments, where the first argument (**argc**) has a value equal to the number of program parameters plus one. Program parameters are taken from the command line and are passed untransformed to **main()** in the second argument **argv[]**, which is a pointer to a null-terminated array of pointers to the parameters. **argv[0]** is the program name. **argv[argc]** contains the null pointer

```
int main(int argc, char *argv[]) {...}
```

- With three arguments, where **argc** and **argv** are as defined above. The argument **env** is a pointer to a null-terminated array of pointers to environment variables. These environment variables can be accessed with the **getenv( )** function

```
int main(int argc, char *argv[], char *env[]) {...}
```

## D.4 Library functions

The **NULL** macro is defined as 0.

The **assert** function, when the expression is false, will write the following message on standard error output and call the **abort** function:

```
Assertion failed: expression, file file, line-number
```

The **ctype** functions test for the following characters:

Table D-1 **ctype Functions**

| Function | Decimal ASCII Value and Character |                   |                   |
|----------|-----------------------------------|-------------------|-------------------|
| isalnum  | 65-90 ("A"- "Z")                  | 97-122 ("a"- "z") | 48-57 ("0"- "9")  |
| isalpha  | 65-90 ("A"- "Z")                  | 97-122 ("a"- "z") |                   |
| iscntr   | 10-31                             |                   |                   |
| isdigit  | 48-57 ("0"- "9")                  |                   |                   |
| isgraph  | 33-126                            |                   |                   |
| islower  | 97-122 ("a"- "z")                 |                   |                   |
| isprint  | 32-126                            |                   |                   |
| ispunct  | 33-47                             | 58-64             | 91-96 123-126     |
| isspace  | 9-13 (TAB, NL, VT, FF, CR)        | 32 (" ")          |                   |
| isupper  | 65-90 ("A"- "Z")                  |                   |                   |
| isxdigit | 48-57 ("0"- "9")                  | 65-70 ("A"- "F")  | 97-102 ("a"- "f") |

The mathematics functions do not set **errno** to **ERANGE** on undervalue errors.

The first argument is returned and **errno** is set if the function **fmod** has a second argument of zero.

Information about available signals can be found in the target operating system documentation.

The last line of a text stream need not contain a new-line character.

All space characters written to a text stream appear when read in.

No null characters are appended to text streams.

A stream opened with append ("**a**") mode is positioned at the end of the file unless the update flag ("**+**") is specified, in which case it is positioned at the beginning of the file.

A write on a text stream does not truncate the file beyond that point.

The libraries support three buffering schemes: unbuffered streams, fully buffered streams, and line buffered streams. See function [setbuf\( \)](#), p.561 and [setvbuf\( \)](#), p.562 for details.

Zero-length files exist.

The rules for composing valid filenames can be found in the documentation of the target operating system.

The same file can be opened multiple times.

If the **remove** function is applied on an opened file, it will be deleted after it is closed.

If the new file already exists in a call to **rename**, that file is removed.

The **%p** conversion in **fprintf** behaves like the **%X** conversion.

The **%p** conversion in **fscanf** behaves like the **%x** conversion.

The character **"-"** in the scanlist for **"%["** conversion in the **fscanf** function denotes a range of characters.

On failure, the functions **fgetpos** and **ftell** set **errno** to the following values:

```
EBADF if file is not an open file descriptor.
ESPIPE if file is a pipe or FIFO.
```

The messages are generated by the **perror** and **strerror** functions may be found in file **errno.h** in the **sys** subdirectory of the **include** subdirectory (see [Table 2-2](#) for the location of **include**).

The memory allocation functions **calloc**, **malloc**, and **realloc** return **NULL** if the size requested is zero. The function **abort** flushes and closes any open file(s).

Any status returned by the function **exit** other than **EXIT\_SUCCESS** indicates a failure.

The set of environment variables defined is dependent upon which variables the system and the user have provided. See [15.11 Target Program Arguments, Environment Variables, and Predefined Files](#), p.294. These variables can also be defined with the **setenv** function.

The **system** function executes the supplied string as if it were given from the command line.

The local time zone and the Daylight Saving Time are defined by the target operating system.

The function **clock** returns the amount of CPU time used since the first call to the function **clock** if supported.

D



# *E*

## *Assembler Coding Notes*

- [E.1 Introduction 617](#)
- [E.2 Instruction Mnemonics 617](#)
- [E.3 Operand Addressing Modes 618](#)

### **E.1 Introduction**

This chapter describes the conventions used in the assembler to specify instruction mnemonics and addressing modes.

### **E.2 Instruction Mnemonics**

The assembler supports all MIPS instructions as described in the *MIPS RISC Architectures* manuals.

One extra macro instruction has been added:

```
jbal label
```

This is a function call that is always position-independent. Depending on the distance to the *label*, this will be translated to either a **bal** instruction, or the following:

```
lui $1,%pichi(func)
addu $1,$1,$23
addi $1,$1,%piclo(func)
jalr $1
```

## E.3 Operand Addressing Modes

### E.3.1 Registers

This section specifies the valid names for registers. See [9.6 Register Use](#), p.194 for details on register use.

Registers can be specified in the following ways, in either lower or upper case:

Table E-1 Register Names

| Register Name | Software Name          | Use/Description                                                                                                                             |
|---------------|------------------------|---------------------------------------------------------------------------------------------------------------------------------------------|
| \$0           | \$zero<br>zero         | Always zero.                                                                                                                                |
| \$1           | \$at<br>at             | Reserved for the assembler.                                                                                                                 |
| \$2 - \$3     | \$v0 - \$v1<br>v0 - v1 | Temporary registers; not preserved by functions. Hold variables whenever possible. Also used for result passing.                            |
| \$4 - \$7     | \$a0 - \$a3<br>a0 - a3 | Temporary registers; not preserved by functions. Hold variables whenever possible. Also used to pass the first 4 words of actual arguments. |
| \$8 - \$15    | \$t0 - \$t7<br>t0 - t7 | Temporary registers; not preserved by functions. Hold variables whenever possible.                                                          |



Table E-1 **Register Names** (cont'd)

| Register Name | Software Name          | Use/Description                                                                                                                                                                                  |
|---------------|------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| \$16 - \$22   | \$s0 - \$s6<br>s0 - s6 | Preserved registers; saved when used by functions. Hold variables which cannot be put in the temporary registers.                                                                                |
| \$23          | \$s7<br>s7             | Pointer to code section; used for position-independent code (PIC).                                                                                                                               |
| \$24 - \$25   | \$t8 - \$t9<br>t8 - t9 | Temporary registers; not preserved by functions. Hold variables whenever possible.                                                                                                               |
| \$26 - \$27   | \$k0 - \$k1<br>k0 - k1 | Reserved by the operating system.                                                                                                                                                                |
| \$28          | \$gp<br>gp             | Global Pointer; points to the small data section (SDA) and is also used for position-independent data (PID).                                                                                     |
| \$29          | \$sp<br>sp             | Stack pointer; saved when used by function. See information on stack layout on <a href="#">9.2 Stack Layout</a> , p. 190, for details about this register.                                       |
| \$30          | \$s8<br>s8             | Preserved register; saved when used by functions. Hold variables which cannot be put in the temporary registers. Used as a frame pointer for functions using the <code>alloca()</code> function. |
| \$31          | \$ra<br>ra             | Return address; saved if used by function.                                                                                                                                                       |
| \$f0 - \$f2   |                        | Temporary registers; not preserved by functions. Hold variables whenever possible. Also used for result passing.                                                                                 |
| \$f4 - \$f10  |                        | Temporary registers; not preserved by functions. Hold variables whenever possible.                                                                                                               |
| \$f12 - \$f14 |                        | Temporary registers; not preserved by functions. Hold variables whenever possible. Also used to pass the first two words of floating point arguments.                                            |
| \$f16 - \$f18 |                        | Temporary registers; not preserved by functions. Hold variables whenever possible.                                                                                                               |

E

Table E-1    **Register Names** (cont'd)

| Register Name | Software Name | Use/Description                                                                                                      |
|---------------|---------------|----------------------------------------------------------------------------------------------------------------------|
| \$f20 - \$f30 |               | Preserved floating point registers; saved when used by functions. Hold variables which cannot be put in \$f0- \$f18. |

E.3.2 Expressions

See Chapter 19. *Assembler Expressions*, for a complete description of valid expressions. There are no limits on the complexity of an expression as long as all the operands are constants. When a label is used in the expression, the assembler will generate a relocation entry so that the linker can patch the instruction with the correct address. See Table F-5 for a complete list of relocation types.

The following table shows examples of expressions for common addressing modes:

| Example                                                                      | Description                                                                                                                                                                                                                                                            |
|------------------------------------------------------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| lui    \$2,%hi(var)<br>lw     \$2,%lo(var)(\$2)                              | Load \$2 with the value pointed to by the 32 bit address of <i>var</i> . %hi( <i>var</i> ) will extract the higher 16 bits and adjust them so that when adding the sign extended lower 16 bits, <i>var@l</i> , the resulting value will be the address of <i>var</i> . |
| lui    \$2,%hi(var+4)<br>lw     \$2,%lo(var+4)(\$2)                          | Same as above, but use the address of <i>var</i> plus 4.                                                                                                                                                                                                               |
| lw     \$2,%sdaoff(svar)(\$28)                                               | Load \$2 with the value of <i>svar</i> located in the 64K Small Data Area (SDA). This area is typically located in sections .sdata and .sbss and is pointed to by register \$gp (\$28).                                                                                |
| lw     \$2,svar(\$0)                                                         | Load \$2 with the value of <i>svar</i> located in the 64K data area around address 0.                                                                                                                                                                                  |
| lui    \$4,%pidhi(var)<br>addu   \$4,\$4,\$28<br>lw     \$4,%pidlo(var)(\$4) | Load \$4 with the value of <i>var</i> by adding a 32 bit offset to the SDA base register described above. This is a way of getting position-independent data for data areas bigger than 64K.                                                                           |

Example

```
lui $4,%pichi(var)
addu $4,$4,$23
lw $4,%piclo(var)($4)
```

Description

Load **\$4** with the value of *var* by adding a 32 bit offset to the code base register **\$23**. This is a way of getting position-independent code for the constant data area and function addresses. See [14.5 Position-Independent Code and Data \(PIC and PID\)](#), p.271, for a complete discussion.



# Object and Executable File Format

F.4 Executable and Linking Format

(ELF) 623

635

## F.4 Executable and Linking Format (ELF)

This section describes the Executable and Linking Format (ELF). The form *NAME(n)* means that the symbolic value *NAME* has the value shown in the parentheses.

### F.4.1 Overall Structure

The ELF Object Format is used both for object files (*.o* extension) and executable files. Some of the information is only present in object files, some only in the executable files.


ELF files consist of the following parts. The ELF header must be in the beginning of the file; the other parts can come in any order (the ELF header gives offsets to the other parts).

ELF header

General information; always present.

- Program header table
  - Information about an executable file; usually only present in executables.
- Section data
  - The actual data for a section; some sections have special meaning, i.e. the symbol table and the string table.
- Section headers
  - Information about the different ELF sections; one for each section.

The following figure shows a typical ELF file structure:

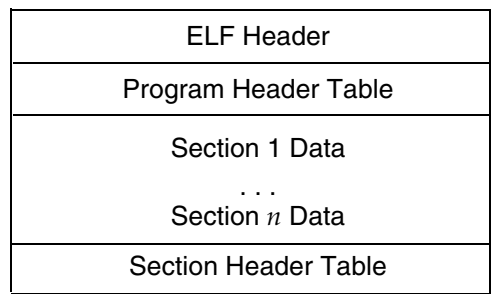

F.4.2 ELF Header

The ELF header contains general information about the object file and has the following structure from the file `elf.h` (`Elf32_Half` is two bytes, the other types are four bytes):

```
#define EI_NIDENT 16

typedef struct {
 unsigned char e_ident[EI_NIDENT];
 Elf32_Half e_e_type;
 Elf32_Half e_machine;
 Elf32_Word e_version;
 Elf32_Addr e_entry;
 Elf32_Off e_phoff;
 Elf32_Off e_shoff;
 Elf32_Word e_flags;
 Elf32_Half e_ehsize;
 Elf32_Half e_phentsize;
 Elf32_Half e_phnum;
 Elf32_Half e_shentsize;
 Elf32_Half e_shnum;
 Elf32_Half e_shstrndx;
};
```

Table F-2 **ELF Header Fields**

| Field              | Description                                                                                                                                                                                                                                                  |
|--------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>e_ident</b>     | Sixteen byte long string with the following content:<br>4-byte file identification: "\x7FELF"<br>1-byte class: 1 for 32-bit objects<br>1-byte data encoding: little-endian: 1, big-endian: 2<br>1-byte version: 1 for current version<br>9-byte zero padding |
| <b>e_type</b>      | The file type: relocatable: 1, executable: 2                                                                                                                                                                                                                 |
| <b>e_machine</b>   | Target architecture:<br><br>8 MIPS R3xxx big-endian<br>10 MIPS R4xxx big-endian                                                                                                                                                                              |
| <b>e_version</b>   | Object file version: set to 1.                                                                                                                                                                                                                               |
| <b>e_entry</b>     | Programs entry address.                                                                                                                                                                                                                                      |
| <b>e_phoff</b>     | File offset to the Program Header Table.                                                                                                                                                                                                                     |
| <b>e_shoff</b>     | File offset to the Section Header Table.                                                                                                                                                                                                                     |
| <b>e_flags</b>     | Not used.                                                                                                                                                                                                                                                    |
| <b>e_ehsize</b>    | Size of the ELF Header.                                                                                                                                                                                                                                      |
| <b>e_phentsize</b> | Size of each entry in the Program Header Table.                                                                                                                                                                                                              |
| <b>e_phnum</b>     | Number of entries in the Program Header Table.                                                                                                                                                                                                               |
| <b>e_shentsize</b> | Size of each entry in the Section Header Table.                                                                                                                                                                                                              |
| <b>e_shnum</b>     | Number of entries in the Section Header Table.                                                                                                                                                                                                               |
| <b>e_shstrndx</b>  | Section Header index of the entry containing the String Table for the section names.                                                                                                                                                                         |

### F.4.3 Program Header

The program header is an array of structures, each describing a loadable segment of an executable file. The following structure from the file **elf.h** describes each entry:

```
typedef struct {
 Elf32_Word p_type;
 Elf32_Off p_offset;
 Elf32_Addr p_vaddr;
 Elf32_Addr p_paddr;
 Elf32_Word p_filesz;
 Elf32_Word p_memsz;
 Elf32_Word p_flags;
 Elf32_Word p_align;
} Elf32_Phdr;
```

#### ELF Program Header Fields

**p\_type**

Type of the segment; only **PT\_LOAD(1)** is used by the linker.

**p\_offset**

File offset where the raw data of the segment resides.

**p\_vaddr**

Address where the segment resides when it is loaded in memory.

**p\_paddr**

Not used.

**p\_filesz**

Size of the segment in the file; it may be zero.

**p\_memsz**

Size of the segment in memory; it may be zero.

**p\_flags**

Bit mask containing a combination of the following flags:

**PF\_X (1)** Execute

**PF\_W (2)** Write

**PF\_R (4)** Read

**p\_align**

Alignment of the segment in memory and in the file.



### F.4.4 Section Headers

There is incitation header for each section in the ELF file, specified by the **e\_shnum** field in the ELF Header. Section headers have the following structure from the file **elf.h**:

```
typedef struct {
 Elf32_Word sh_name;
 Elf32_Word sh_type;
 Elf32_Word sh_flags;
 Elf32_Addr sh_addr;
 Elf32_Off sh_offset;
 Elf32_Word sh_size;
 Elf32_Word sh_link;
 Elf32_Word sh_info;
 Elf32_Word sh_addralign;
 Elf32_Word sh_entsize;
} Elf32_Shdr;
```

Table F-3 **ELF Section Header Fields**

| Field                   | Description                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                             |                     |                 |                         |                                     |                       |              |                       |              |                     |                    |                       |                    |                        |                                                                                                                                                                                                                                                     |
|-------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|---------------------|-----------------|-------------------------|-------------------------------------|-----------------------|--------------|-----------------------|--------------|---------------------|--------------------|-----------------------|--------------------|------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>sh_name</b>          | Specifies the name of the section; it is an index into the section header string table defined below.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                   |                     |                 |                         |                                     |                       |              |                       |              |                     |                    |                       |                    |                        |                                                                                                                                                                                                                                                     |
| <b>sh_type</b>          | Type of the section and one of the below: <table> <tr> <td><b>SHT_NULL (0)</b></td><td>inactive header</td></tr> <tr> <td><b>SHT_PROGBITS (1)</b></td><td>code or data defined by the program</td></tr> <tr> <td><b>SHT_SYMTAB (2)</b></td><td>symbol table</td></tr> <tr> <td><b>SHT_STRTAB (3)</b></td><td>string table</td></tr> <tr> <td><b>SHT_RELA (4)</b></td><td>relocation entries</td></tr> <tr> <td><b>SHT_NOBITS (8)</b></td><td>uninitialized data</td></tr> <tr> <td><b>SHT_COMDAT (12)</b></td><td>like <b>SHT_PROGBITS</b> except that the linker removes duplicate <b>SHT_COMDAT</b> sections having the same name and removes unreferenced <b>SHT_COMDAT</b> sections (used in C++ template instantiation — see <a href="#">Templates</a>, p.243).</td></tr> </table> | <b>SHT_NULL (0)</b> | inactive header | <b>SHT_PROGBITS (1)</b> | code or data defined by the program | <b>SHT_SYMTAB (2)</b> | symbol table | <b>SHT_STRTAB (3)</b> | string table | <b>SHT_RELA (4)</b> | relocation entries | <b>SHT_NOBITS (8)</b> | uninitialized data | <b>SHT_COMDAT (12)</b> | like <b>SHT_PROGBITS</b> except that the linker removes duplicate <b>SHT_COMDAT</b> sections having the same name and removes unreferenced <b>SHT_COMDAT</b> sections (used in C++ template instantiation — see <a href="#">Templates</a> , p.243). |
| <b>SHT_NULL (0)</b>     | inactive header                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                         |                     |                 |                         |                                     |                       |              |                       |              |                     |                    |                       |                    |                        |                                                                                                                                                                                                                                                     |
| <b>SHT_PROGBITS (1)</b> | code or data defined by the program                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                     |                     |                 |                         |                                     |                       |              |                       |              |                     |                    |                       |                    |                        |                                                                                                                                                                                                                                                     |
| <b>SHT_SYMTAB (2)</b>   | symbol table                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                            |                     |                 |                         |                                     |                       |              |                       |              |                     |                    |                       |                    |                        |                                                                                                                                                                                                                                                     |
| <b>SHT_STRTAB (3)</b>   | string table                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                            |                     |                 |                         |                                     |                       |              |                       |              |                     |                    |                       |                    |                        |                                                                                                                                                                                                                                                     |
| <b>SHT_RELA (4)</b>     | relocation entries                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                      |                     |                 |                         |                                     |                       |              |                       |              |                     |                    |                       |                    |                        |                                                                                                                                                                                                                                                     |
| <b>SHT_NOBITS (8)</b>   | uninitialized data                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                      |                     |                 |                         |                                     |                       |              |                       |              |                     |                    |                       |                    |                        |                                                                                                                                                                                                                                                     |
| <b>SHT_COMDAT (12)</b>  | like <b>SHT_PROGBITS</b> except that the linker removes duplicate <b>SHT_COMDAT</b> sections having the same name and removes unreferenced <b>SHT_COMDAT</b> sections (used in C++ template instantiation — see <a href="#">Templates</a> , p.243).                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                     |                     |                 |                         |                                     |                       |              |                       |              |                     |                    |                       |                    |                        |                                                                                                                                                                                                                                                     |

Table F-3 **ELF Section Header Fields** (cont'd)

| Field               | Description                                                                                                                                                                                                                                                                                                                                                                                                             |
|---------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>sh_flags</b>     | Combination of the following flags: <ul style="list-style-type: none"> <li><b>SHF_WRITE (1)</b> contains writable data</li> <li><b>SHF_ALLOC (2)</b> contains allocated data</li> <li><b>SHF_EXECINSTR (4)</b> contains executable instructions</li> </ul>                                                                                                                                                              |
| <b>sh_addr</b>      | Address of the section if the section is to be loaded into memory.                                                                                                                                                                                                                                                                                                                                                      |
| <b>sh_offset</b>    | File offset to the raw data of the section; note that the <b>SHT_NOBITS</b> sections does not have any raw data since it will be initialized by the operating system.                                                                                                                                                                                                                                                   |
| <b>sh_size</b>      | Size of the section; an <b>SHT_NOBITS</b> section may have a non-zero size even though it does not occupy any space in the file.                                                                                                                                                                                                                                                                                        |
| <b>sh_link</b>      | Link to the index of another section header: <ul style="list-style-type: none"> <li><b>SHT_COMDAT</b> section with which this section should be combined</li> <li><b>SHT_RELA</b> the symbol table</li> <li><b>SHT_NOBITS</b> section with which this section should be combined</li> <li><b>SHT_PROGBITS</b> section with which this section should be combined</li> <li><b>SHT_SYMTAB</b> the string table</li> </ul> |
| <b>sh_info</b>      | Contains the following information: <ul style="list-style-type: none"> <li><b>SHT_RELA</b> the section to which the relocation applies</li> <li><b>SHT_SYMTAB</b> index of the first non-local symbol</li> </ul>                                                                                                                                                                                                        |
| <b>sh_addralign</b> | Alignment requirement of the section.                                                                                                                                                                                                                                                                                                                                                                                   |
| <b>sh_entsize</b>   | Size for each entry in sections that contains fixed-sized entries, such as symbol tables.                                                                                                                                                                                                                                                                                                                               |

The following table shows the correspondence between the *type-spec* as defined on [422](#) and the ELF section type and flags assigned to the output section.

Table F-4 **type-spec – ELF Section Type and Flags Correspondence**

| Type-spec | Section Type (sh_type) | Section Flags (sh_flags)  |
|-----------|------------------------|---------------------------|
| BSS       | SHT_NOBITS             | SHF_ALLOC   SHF_WRITE     |
| COMMENT   | SHT_PROGBITS           | (none)                    |
| CONST     | SHT_PROGBITS           | SHF_ALLOC                 |
| DATA      | SHT_PROGBITS           | SHF_ALLOC   SHF_WRITE     |
| TEXT      | SHT_PROGBITS           | SHF_ALLOC   SHF_EXECINSTR |

### F.4.5 Special Sections

Following are the names of some typical sections and explains their contents:

- .text**  
Machine instructions.
- .rdata**  
Constant data and strings. Not available for MIPS16.
- .data**  
Initialized data.
- .sdata**  
Small initialized data; see the **-Xsmall-data** option on [118](#).
- .bss**  
Uninitialized variables.
- .sbss**  
Small uninitialized data.
- .comment**  
Comments from **#ident** directives in C.
- .ctors**  
Code that is to be executed before the **main( )** function.
- .dtors**  
Code that is to be executed when the program has finished execution.

- .debug**  
Symbolic debug information using the DWARF format.
- .line**  
Line number information for symbolic debugging.
- .rela<sub>name</sub>**  
Relocation information for the section *name*.
- .shstrtab**  
Section names.
- .strtab**  
String Table for symbols in the Symbol Table.
- .symtab**  
Contains the Symbol Table.

## F.4.6 ELF Relocation Information

Relocation Information sections contain information about unresolved references. Since compilers and assemblers do not know at what absolute memory address a symbol will be allocated, and since they are unaware of definitions of symbols in other files, every reference to such a symbol will create a relocation entry. The relocation entry will point to the address where the reference is being made, and to the symbol table entry that contains the symbol that is referenced. The linker will use this information to fill in the correct address after it has allocated addresses to all symbols.

When an offset is added to a symbol in the assembly source

```
lw $2, (var+16) ($0)
```

that offset is stored in the **r\_addend** field, so that adding the real address of the symbol with the address field will yield a correct reference.

The relocation section does not normally exist in executable files.

A relocation entry has the following structure from the file **elf.h**:

```
typedef struct {
 Elf32_Addr r_offset;
 Elf32_Word r_info;
 Elf32_Sword r_addend;
} Elf32_Rela;
```

## ELF Relocation Entry Fields

### **r\_offset**

Relative address of the area within the current section to be patched with the correct address.

### **r\_info >> 8**

Upper 24 bits of **r\_info** is an index into the symbol table pointing to the entry describing the symbol that is referenced at **r\_offset**.

### **r\_info & 255**

Lower 8 bits is the relocation type that describes what addressing mode is used; it describes whether the mode is absolute or relative, and the size of the addressing mode. See the table below for a description of the various relocation types.

### **r\_addend**

A constant to be added to the symbol when computing the value to be stored in the relocatable field.

The relocation types for each supported target are documented in *version\_path/include/elf\_target.h*.

Table F-5 ELF Relocation Types and Examples

| Relocation type | Number | Description                                                                                                                                                   |
|-----------------|--------|---------------------------------------------------------------------------------------------------------------------------------------------------------------|
| R_MIPS_16       | 1      | 16 bit absolute address:<br><br>lw     \$2, var(\$0)                                                                                                          |
| R_MIPS_32       | 2      | 32 bit absolute address:<br><br>.long var                                                                                                                     |
| R_MIPS_26       | 4      | 26 bit absolute jump address:<br><br>jal    func                                                                                                              |
| R_MIPS_HI16     | 5      | The adjusted higher 16 bits of an absolute address. If the lower 16 bits is a negative number, one is added to the upper 16 bits:<br><br>lui     \$2,%hi(var) |
| R_MIPS_LO16     | 6      | The lower 16 bits of an absolute address:<br><br>lw       \$2,%lo(var)(\$2)                                                                                   |

Table F-5 **ELF Relocation Types and Examples** (cont'd)

| Relocation type  | Number | Description                                                                                                                                                                                                                                                                                                                                                                                                                                                                    |
|------------------|--------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| R_MIPS_PC16      | 10     | 16 bit PC relative address that will be shifted two bits to the left to create an 18 bit offset:<br><br>bal      func                                                                                                                                                                                                                                                                                                                                                          |
| R_MIPS16_26      | 100    | MIPS16. 26 bit absolute jump address:<br><br>jal      func                                                                                                                                                                                                                                                                                                                                                                                                                     |
| R_MIPS16_SDA     | 101    | MIPS16. 16 bit Small Data Area (SDA) relative address. By using the <b>-Xsmall-data=x</b> compiler option, small variables can be put in the <b>.sdata</b> and the <b>.sbss</b> sections and be accessed through register <b>\$28</b> in a very efficient manner:<br><br>lw      \$2,%sdaoff(var)(\$28)                                                                                                                                                                        |
| R_MIPS_SCA_16    | 245    | 16 bit Small Constant Area (SCA) relative address. By using the <b>-Xsmall-const=x</b> compiler option, small constant variables can be put in the <b>.sdata2</b> section and be accessed through register <b>\$23</b> in a very efficient manner. On the MIPS architecture, the compiler normally puts small constants in the Small Data Area (SDA) instead of the SCA. This can be avoided by using the <b>-Xconst-in-text</b> option:<br><br>lw      \$2,%picoff(var)(\$23) |
| R_MIPS_SCA_16_HA | 246    | The adjusted higher 16 bits of the 32 bit offset from the PIC register ( <b>\$23</b> ). This is used for 32 bit position-independent code.<br><br>lui      \$2,%pichi(var)                                                                                                                                                                                                                                                                                                     |
| R_MIPS_SCA_16_LO | 248    | The lower 16 bits of the 32 bit offset from the PIC register ( <b>\$23</b> ). This is used for 32 bit position-independent code.<br><br>addu    \$2,\$2,\$23<br>lw      \$2,%piclo(var)(\$2)                                                                                                                                                                                                                                                                                   |

Table F-5 ELF Relocation Types and Examples (cont'd)

| Relocation type  | Number | Description                                                                                                                                                                                                                                                                                              |
|------------------|--------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| R_MIPS_SDA_16    | 251    | 16 bit Small Data Area (SDA) relative address. By using the <b>-Xsmall-data=x</b> compiler option, small variables can be put in the <b>.sdata</b> and the <b>.sbss</b> sections and be accessed through register <b>\$28</b> in a very efficient manner:<br><br><pre>lw    \$2,%sdaoff(var)(\$28)</pre> |
| R_MIPS_SDA_16_HA | 252    | The adjusted higher 16 bits of the 32 bit offset from the PID register ( <b>\$28</b> ). This is used for 32 bit position-independent data.<br><br><pre>lui   \$2,%pidhi(var)</pre>                                                                                                                       |
| R_MIPS_SDA_16_LO | 254    | The lower 16 bits of the 32 bit offset from the PID register ( <b>\$28</b> ). This is used for 32 bit position-independent data:<br><br><pre>addu  \$2,\$2,\$28 lw     \$2,%pidlo(var)(\$2)</pre>                                                                                                        |

### F.4.7 Line Number Information

The line number information section **.line** contains the mapping from source line numbers to machine instruction addresses used by symbolic debuggers. This information is only available if the **-g** option is specified to the compiler.

### F.4.8 Symbol Table

The symbol table section **.symtab** is an array of entries containing information about the symbols referenced in the ELF file. A symbol table entry has the following structure from the file **elf.h**:

```
typedef struct {
 ELF32_Word st_name;
 ELF32_Addr st_value;
 ELF32_Word st_size;
 unsigned char st_info;
 unsigned char st_other;
 Elf32_Half st_shndx;
} Elf32_Sym;
```

## ELF Symbol Table Fields

### **st\_name**

Index into the symbol string table which holds the name of the symbol.

### **st\_value**

Value of the symbol:

The alignment requirement of symbols whose section index is  
**SHN\_COMMON**.

- The offset from the beginning of a section in relocatable files.
- The address of the symbol in executable files.

### **st\_size**

Size of an object.

### **st\_info >> 4**

Upper four bits define the binding of the symbol:

**STB\_LOCAL (0)** symbol is local to the file

**STB\_GLOBAL (1)** symbol is visible to all object files

**STB\_WEAK (2)** symbol is global with lower precedence

### **st\_info & 15**

Lower four bits define the type of the symbol:

**STT\_NOTYPE (0)** symbol has no type

**STT\_OBJECT (1)** symbol is a data object (a variable)

**STT\_FUNC (2)** symbol is a function

**STT\_SECTION (3)** symbol is a section name

**STT\_FILE (4)** symbol is the filename

### **st\_other**

Currently not used.

### **st\_shndx**

Index of the section where the symbol is defined. Special section numbers include:

**SHN\_UNDEF (0x0000)** undefined section

**SHN\_ABS (0xffff1)** absolute, non-relocatable symbol

**SHN\_COMMON (0xffff2)** unallocated, external variable



### F.4.9 String Table

The string table sections, **.strtab** and **.shstrtab**, contain the null terminated names of symbols in the symbol table and section names. Those symbols point into the string table through an offset. The first byte of the string table is always zero and after that all strings are stored sequentially.



# G

## *Compiler -X Options Numeric List*

The compiler **-X** options are listed in alphabetic order in [5.4 Compiler -X Options](#), p.55 and following, with the internal numeric equivalent shown for each option.

However, when **-Xshow-configuration=1** is combined with **-S** or **-Xkeep-assembly-file** to create an assembly file, the **-X** options are shown in numeric form only.

This appendix lists compiler **-X** options that have numeric equivalents in numeric order.

Each option is shown in the form:

**-Xn -Xname** (*page number*)

**-X2**

**-Xmismatch-warning** ([106](#))

**-X3**

**-Xfp-min-prec-...** ([88](#))

**-X4**

**-Xmemory-is-volatile** ([104](#))

**-X5**

**-Xlocals-on-stack** ([101](#))

**-X6**

**-Xtest-at-...** ([123](#))

**-X7**

**-Xdialect-...** ([79](#))

- X8
  - Xenum-is-... ([82](#))
- X9
  - Xforce-... ([87](#))
- X10
  - Xstack-probe ([119](#))
- X11
  - Xpass-source ([110](#))
- X12
  - Xbit-fields-... ([67](#))
- X13
  - Xswap-cr-nl ([122](#))
- X14
  - Xsuppress-warnings ([122](#))
- X15
  - Xunroll ([125](#))
- X16
  - Xunroll-size ([125](#))
- X18
  - Xstring-align ([121](#))
- X19
  - Xinline ([93](#))
- X20
  - Xparse-size ([109](#))
- X21
  - Xbottom-up-init ([68](#))
- X22
  - Xtruncate ([124](#))
- X23
  - Xchar-... ([70](#))
- X24
  - Xblock-count ([68](#))
- X25
  - Xopt-count ([109](#))

**-X26**  
    **-XO** ([108](#))

**-X27**  
    **-Xkill-opt** ([96](#))

**-X28**  
    **-Xkill-reorder** ([96](#))

**-X29**  
    **-Xrestart** ([115](#))

**-X34**  
    **-Xadd-underscore** ([64](#))

**-X39**  
    **-Xtarget** ([123](#))

**-X40**  
    **-Xmips16-hw-fp-call** ([105](#))

**-X41**  
    **-Xnested-interrupts...** ([108](#))

**-X54**  
    **-Xalign-functions** ([65](#))

**-X56**  
    **-Xsoft-float** ([119](#))

**-X58**  
    **-Xcode-relative-...** ([73](#))

**-X59**  
    **-Xdata-relative-...** ([77](#))

**-X60**  
    **-Xcharset-ascii** ([70](#))

**-X62**  
    **-Xpic** ([111](#))

**-X63**  
    **-Xident-...** ([90](#))

**-X64**  
    **-Xrtc** ([115](#))

**-X65**  
    **-Xargs-not-aliased** ([66](#))

- X66
  - Xclib-optim-off ([71](#))
- X67
  - Xdollar-in-indent ([81](#))
- X68
  - Xfeedback-frequent ([86](#))
- X69
  - Xfeedback-seldom ([86](#))
- X70
  - Xfp-... ([88](#))
- X71
  - Xunderscore-... ([124](#))
- X73
  - Xsize-opt ([118](#))
- X74
  - Xconst-in-... ([75](#))
- X75
  - Ximport ([91](#))
- X76
  - Xstruct-min-align ([122](#))
- X77
  - Xextend-args ([84](#))
- X78
  - Xkeywords ([95](#))
- X81
  - Xstatic-addr-... ([119](#))
- X82
  - Xieee754-pedantic ([90](#))
- X83
  - Xbss-... ([69](#))
- X84
  - Xlint ([98](#))
- X85
  - Xstop-on-warning ([120](#))

- X86
  - Xwchar (126)
- X87
  - Xinit-locals (92)
- X88
  - Xmember-max-align (104)
- X89
  - Xoptimized-debug-... (109)
- X90
  - Xinit-value (93)
- X91
  - Xinit-section (92)
- X92
  - Xstruct-arg-warning (121)
- X93
  - Xalign-min (65)
- X94
  - Xendian-little (82)
- X96
  - Xdoube-... (81)
- X97
  - Xsmall-data (118)
- X98
  - Xsmall-const (118)
- X99
  - Xdebug-mode (79)
- X100
  - Xaddr-data (64)
- X101
  - Xaddr-sdata (64)
- X102
  - Xaddr-const (64)
- X103
  - Xaddr-sconst (64)

- X104
  - Xaddr-string ([64](#))
- X105
  - Xaddr-code ([64](#))
- X106
  - Xaddr-user ([64](#))
- X115
  - Xlocal-data-area ([100](#))
- X116
  - Xdebug-struct-... ([79](#))
- X117
  - Xcpp-no-space ([76](#))
- X119
  - Xbool-is-... ([68](#))
- X120
  - Xcomdat ([74](#))
- X121
  - Xdynamic-init ([81](#))
- X122
  - Xsect-pri-... ([117](#))
- X123
  - Xprof-... ([112](#))
- X125
  - Xfull-pathname ([89](#))
- X129
  - Xsection-split ([116](#))
- X135
  - Xbit-fields-compress-... ([66](#))
- X136
  - Xexplicit-inline-factor ([84](#))
- X137
  - Xold-inline-asm-cast ([108](#))
- X138
  - Xlicense-wait ([98](#))



- X139
  - Xconservative-static... (75)
- X143
  - Xswitch-table (122)
- X146
  - Xstruct-assign-split-max (121)
- X147
  - Xstruct-assign-split-diff (121)
- X152
  - Xsection-pad (116)
- X153
  - Xdebug-dwarf... (78)
- X154
  - Xintrinsic-mask (95)
- X155
  - Xpreprocessor-old (112)
- X156
  - Xmake-dependency (102)
- X157
  - Xmacro-in-pragma (101)
- X158
  - Xcpp-dump-symbols (76)
- X161
  - Xarray-align-min (66)
- X163
  - Xinline-explicit-force (94)
- X165
  - Xpreprocessor-lineno-off (112)
- X166
  - Xlocal-data-area-static-only (101)
- X167
  - Xvoid-prt-arith-ok (126)
- X170
  - Xdebug-align (77)

- X171
  - Xmacro-undefined-warn ([101](#))
- X172
  - Xincfile-missing-ignore ([91](#))
- X173
  - Xstderr-fully-buffered ([120](#))
- X200
  - Xexceptions-... ([83](#))
- X201
  - Xjumpbuf-size ([95](#))
- X202
  - Xdigraphs-... ([80](#))
- X205
  - Xrtti-... ([115](#))
- X207
  - Ximplicit-templates-... ([91](#))
- X213
  - Xbool-... ([68](#))
- X214
  - Xwchar-... ([126](#))
- X215
  - Xsyntax-warning-... ([123](#))
- X216
  - Xmax-inst-level ([104](#))
- X217
  - Xfor-init-scope-... ([87](#))
- X218
  - Xclass-type-name-... ([71](#))
- X219
  - Xnamespace-on ([107](#))
- X220
  - Xpch-automatic ([110](#))
- X221
  - Xpch-messages ([110](#))

-X222  
-Xpch-diagnostics ([110](#))  
-X223  
-Xusing-std-... ([125](#))  
-X230  
-Xdialect-c{8,9}9 ([79](#))  
-X405  
-Xlink-time-lint ([98](#))  
-X407  
-Xint-reciprocal ([94](#))



# Index

## Symbols

- # comment delimiter, assembler 319
- # comments in configuration file 595
- != binary not equal to, assembler operator 336
- !H 169
- !L 169
- % binary modulo assembler operator 336
- %, assembler binary constant prefix 324
- %f format specifier 520
- %hi unary operator 333
- %hiadj unary operator 333
- %lo unary operator 333
- %p conversion, implementation-defined behavior 614
- %pichi unary operator 334
- %piclo unary operator 334
- %picoff unary operator 334
- %pidhi unary operator 334
- %pidlo unary operator 334
- %pidoff unary operator 334
- %S field, with -Xsubtitle 315
- %scaoff unary operator 334
- %sdaoff unary operator 334
- %T field with -Xtitle 315
- %X conversion, implementation-defined behavior 614
- %x conversion, implementation-defined behavior 614
- & binary bitwise and, assembler operator 336
- && concatenating macro parameter 365
- \* assembler comment delimiter 319
- \* binary multiply assembler operator 336
- + binary add assembler operator 336
- + unary assembler add 335
- +d option, ddump 464
- +t option, ddump 463
- binary subtract assembler operator 336
- unary assembler negate 335
- +z option, ddump 464
- / binary divide assembler operator 336
- := expression assembler directive 340
- < binary less than assembler operator 336
- << binary shift left assembler operator 336
- <= binary less than or equal to assembler operator 336
- =: defines global symbol 321
- =: expression assembler directive 340
- == binary equal to, assembler operator 336
- > binary greater than assembler operator 336
- >= binary greater than or equal to assembler operator 336
- >> binary shift left assembler operator 336
- ? command-line options 40
- @, assembler octal constant prefix 324
- @ name assembler option, options from file or variable 306
- @ name common option, options from file or variable 448

- @ name compiler option, options from file or variable 54
- @@ name common option, options from file or variable 589
- @@ name assembler option, options from file or variable 306
- @@ name common option, options from file or variable 448
- @@ name compiler option, options from file or variable 54
- @E common option, redirecting output 448
- @E compiler option, redirects output 54
- @E linker option, redirects output 392
- @O assembler option, redirecting output 306
- @O common option, redirecting output 448
- @O compiler option, redirects output 54
- @O linker option, redirects output 392
- # option 306
  - display linker command lines 391
  - print command lines as executed 54
- ## compiler option, prints command lines 54
- ### compiler option, prints subprograms 54
- @h unary operator 333
- @ha high adjust operator 335
- @ha unary operator 333
- @l unary operator 333
- \@ special macro parameter 365
- \0 special macro parameter 365
- ^ binary exclusive or, assembler operator 336
- | bitwise or 336
- ~ unary assembler complement 335
- '\' backslash escape sequence 325
- '\b' backspace escape sequence 324
- ' ' single quote escape sequence 325
- '\f' form feed escape sequence 324
- '\n' line feed (newline) escape sequence 324
- '\r' return escape sequence 324
- '\t' horizontal tab escape sequence 324
- '\v' vertical tab escape sequence 324
- , assembler hexadecimal constant prefix 324

## Numerics

0, assembler octal constant prefix 324

0x, assembler hexadecimal constant prefix 324

.2byte assembler directive 340

.4byte assembler directive 340

## A

-A compiler option

define assertion 40, 134

-A- compiler option

ignore macros and assertions 40

.a file extension, archive library 21

.a files

see libraries, shared

-a linker option, forcing -r to allocate common variables 393

-A linker option, link files from archive 392

-a option with ddump 460

a64l conversion function 506

abort function

definition 506

implementation-defined behavior

calling, assert function 613

flushing and closing files 615

abridged C++ library 240

abs absolute value function 507

.abs.nnnnnnnn section. See sections

absolute

assembler expressions 332

expressions 332

variables

accessing at specific addresses 292

accessing with symbolic debugger 266

absolute (\_\_attribute\_\_ keyword) 154

access function determining file accessibility 507

access I/O function, RAM-disk support, checking file accessibility 289

access modes

COMDAT section, with O access mode 263

default values for predefined section

classes 258

defining section accessibility 263

in pragma section & pragma use\_section 254

read, write, execute 263

RW, default for use 258

- RX, default for use 258
- accessing variables and functions at specific addresses 291
- acc-mode
  - See access modes
- acos function 507
- acosh function 507
- ADDR pseudo function 416
- addressing modes
  - definitions, table of 260
  - code generated by compiler for each 267
  - far-absolute 261, 268
    - default for use 258
  - far-code 261, 268
  - far-data 261, 268
    - example 262
  - mode used when referencing a variable 260
  - near-absolute 260, 268
  - near-code 261, 268
    - default for use 258
  - near-data 261, 268
    - default for use 258
  - operands 618
  - r2-relative 272
  - standard 268
    - CODE section class, for 261
    - data sections, equivalent to far-absolute 261
    - default for use 258
    - definition 260
  - table of command-line options that affect the default 262
- addr-mode
  - See addressing modes
- advance function, definition 508
- aliasing
  - pointer arguments 66
  - variables, #pragma no\_alias 141
- .align assembler directive
  - definition 341
- ALIGN keyword 423
- align pragma 137
- aligned (\_\_attribute\_\_ keyword) 155
- alignment
  - array 180
  - classes 181
  - minimum for target memory access, -Xalign-min 65
    - packed structures 144
  - output sections 403
  - #pragma align 137
  - #pragma pack 143
  - scalar types 178
  - strings, -Xstring-align 121
  - structures 181
    - Xmember-max-align 151
    - Xstruct-max-align 104
  - unions 181
- .alignn assembler directive 341
- alloca function
  - dynamic stack space allocation 160
  - in preserved register 196
- \_\_alloca intrinsic function 159
- alloca intrinsic function 158, 159
- allocate storage 329
- ANSI
  - C mode invoked with -Xdialect-ansi 80
  - C standard
    - additions to 131
    - conformance to 6
    - implementation-defined behavior 609
    - library functions disregarded with -Xclib-optim-off 71
    - recommended reference 8
  - C++ standard
    - additions to 131
    - conformance to 6
    - differences from ANSI C 242
    - recommended reference 8
  - compiler limits 607
  - references 504
  - standards conformance 6, 601
- a.out
  - default linked output object file 396
  - naming by default, single executable file 127
- archiver, dar 11
- argc argument, environment 612
- argc defining for target program with setup 294
- argument address optimization
  - explanation 211

- interprocedural optimizations 218
- argument passing 191
  - C++ 192
  - class, struct, union 192
  - floating point 88
    - leading passed in registers 191
    - passing using temporary registers 197
  - hidden
    - call a function with a return type of class, struct, or union 194
    - pass in register \$4 193
  - pointers to members 192
  - registers, save in homing area 191
- argv
  - argument 612
  - defining for target program with setup 294
  - init.c, using in 282
- arrays
  - alignment 180
  - implementation-defined behavior 611
  - incomplete initialization
    - parsing controlled, -Xbottom-up-init 68
    - treatment in different modes 603
  - initialization of automatic arrays in different modes 602
  - large initialized and compiler limits 608
  - size of 180
- .ascii assembler directive 341
- .asciz assembler directive 342
- .asciz directive 342
- asctime function
  - calling .tzset function 577
  - definition 508
- asin function 508, 509
- asinf function 508
- asm
  - macro 168
    - See also assembler macros
  - string statement, disabling optimizations 173
  - strings 165
- \_\_asm\_\_ keyword 149
- asm keyword 149
  - See also assembler macros
  - different modes, allowing in 602
- assembler
  - constants, supported 323
  - decimal constants 324
  - delaying literal generation 312
  - embedding within compiled programs 291
  - mixing C and assembler functions 291
  - operator precedence, table of 336
  - options 303
  - relocation types, table of 268
- assembler directives
  - .2byte 340
  - direct assignment 332
  - .literals 351
  - operand field format 319
  - .set
    - at 357
    - macro 357
    - mips16 357
    - mips32 357
    - noat 357
    - nomacro 357
- assembler macros 165
  - asm 166, 167, 168
  - C++ 168
  - register list line 170
  - storage mode for parameters
    - con 169
  - storage mode line 168
- assembly
  - code
    - generating for each addr-mode 267
  - file
    - keep 95
    - preprocess 111
    - temporary 95
  - output 41, 129
    - including source, -Xpass source 110
  - .section directive 255
- assert
  - macro, standard header files 498
  - preprocessor directive 134
- assert function
  - definition 509
  - implementation-defined behavior 613
- assertions
  - See also assert, -A compiler option



- dumping symbol information 76
- assignment
  - command 430
  - command in section-definition 421
  - pop optimization 212
  - statements, with -WD compiler option 49
- assignment statements
  - configuration files 588
  - configuration language, definition 597
- atan function 509
- atan2 function 510
- atan2f function 510
- atanf function 509
- atexit function
  - definition 510
  - exit function 517
- atof function 510
- atoi function 511
- atol function 511
- \_\_attribute\_\_ keyword 153, 259
- attribute specifiers 153
- auto storage class 611
- automatic variables 138

## B

- B option ddump 460
- b, assembler binary constant suffix 324
- backslash escape sequence, '\ ' 325
- backspace escape sequence, '\b' 324
- backward compatibility 234
- bal func instruction 268
- bal instruction 268
- .balign assembler directive 342
- basic data types, table of 178
- Bd, -Bt options 393
- bgezal instruction 268
- big- vs. little-endian object module format 26
- \_\_BIG\_ENDIAN\_\_ preprocessor predefined macro 131
- binary operators, table of 336
- binary representation of data 160
- binding (VxWorks shared libraries) 399
- bit-fields

- char type 180
- definiton 180
- enum type 180
- implementation-defined behavior 611
- int plain, sign of 237
- int type 180
- long long 159
- long type 180
- making signed with signed keyword 180
- plain treating as
  - signed with -Xbit-fields-signed 67
  - unsigned with -Xbit-fields-unsigned 67
- reducing size with -Xbit-fields-compress-... 66
- short type 180
- blanks in macro arguments, -Xmacro-arg-space-off 313
- .blkb assembler directive 342
- bool
  - \_\_bool preprocessor predefined macro 131
  - type, *see* type, bool
- branch
  - complex optimization 215
  - PC-relative
    - or absolute 261
    - using -Xcode-relative-near and -Xcode-relative-far options 272
    - using -Xcode-relative-near-all and -Xall-far-code relative options 272
  - predicting in feedback optimization 220
  - with tail recursion 209
- break statement
  - configuration language 600
- bsearch function 511
- .bsect assembler directive 342
- .bss assembler directive 342
- .bss section
  - See* sections
- BSS section type 422
- \_\_BSS\_START\_\_, \_\_BSS\_END symbols
  - initializing static variables to zero 282
  - using in clearing static uninitialized variables 412
- Bsymbolic linker option 394
- BTEXT section class
  - See* section classes

BUFSIZ constant  
    defining required size of buf 561  
    defining, `stdio.h` function 502  
    setvbuf, with 562  
building, rebuilding, the libraries 494  
\_\_builtin\_expect intrinsic function 159, 209  
.byte assembler directive 342  
byte ordering 180  
byte-swapping using #pragma pack 143

## C

### C

C++ compatibility  
    exception handling 384  
    functions 242  
driver program, dcc 11  
function calls, optimization of 71  
standard, recommended reference 8  
standards conformance 6  
to C++ migration 241  
-c compiler option, stopping after assembly 21  
.C file extension, C++ source 21  
-C option 40  
    ddump 460  
-c option  
    during separate compilation 128  
    stopping after assembly, producing object 41  
    -Xkeep-object-file 95

### C++

argument passing 192  
calling C functions 242  
classes 182  
code, #pragma inline vs. keyword, linkage 210  
driver program, dplus 11  
exception-handling  
    and C functions 384  
    stack-unwinding 384  
features and compatibility 239  
library 50  
    abridged 240  
    complete 240  
    documentation on 483, 497, 503  
    nonstandard functions 241, 483, 497, 504

standard  
    conformance to 6  
    recommended reference 8  
standards conformance 6  
C0\_EPC register 108  
C0\_SR register 108  
C89 standard 79, 601  
    libraries 97  
C99 standard 72, 80, 601  
    libraries 97  
        documentation on 483, 497, 503  
        nonstandard functions 483, 497, 504  
cache  
    optimization 400, 427  
    optimization and WindISS 470  
    simulation with windiss 470  
CACHE command 427  
calling conventions 189  
    specify n32 with -Xconventions-n32 76  
calloc function  
    definition 511  
    free function 525  
    implementation-defined behavior 615  
    realloc function 557  
case  
    label, implementation-defined behavior 612  
    statement, configuration language 600  
catch C++ keyword 83, 206  
catch keyword  
    disabling exceptions 83  
    flagging as error 245  
    if user-defined identifier, may necessitate  
        modification of program 242  
.cc file extension, C++ source 21  
ceil function 512  
ceilf function 512  
char type  
    *See also* basic data types, table of  
    bit-fields 180  
    signed 179  
    unsigned 179  
character  
    constants  
        escape sequences, table of 326  
        constructing internal representation 610

- entering integral constants 323
- escape sequences for 324
- replacing macro arguments in 604
- swap, -Xswap-cr-nl 122
- constants, assembler 324
- I/O function 288
- implementation-defined behavior 610
- Newline 325
- signed, -Xchar-signed 70
- unsigned, -Xchar-unsigned 70
- chario.c file 288
- \_\_CHAR\_UNSIGNED\_\_ preprocessor predefined macro 132
- \_chgsign function 512
- CIE, Common Information Entry 78
- class
  - auto storage 611
  - definition, type\_info 245
  - instantiation, -Ximplicit-templates-off 91
  - library
    - abridged C++ 486
    - C++ iostream.a 486
    - libcomplex.a
      - C++ complex math class library 14
      - directory location 488
      - supplied with tools 485
    - liblstd.a, directory location 489
  - member
    - function 246
    - name qualifiers 187
  - name mangling 246
  - register storage 611
  - templates 243
  - virtual function table generation, key
    - functions 185
  - with destructors 83
- class C++ keyword 242
- classes
  - alignment 181
  - argument passing 192
  - C++ 182
  - derived
    - adding virtual base pointers 184
    - using the virtual function table
      - pointer 184
  - internal data representation 181
  - local 187
  - meanings
    - if inside a function but outside any
      - class 186
    - if outside any function and any class 186
    - if outside any function but inside a C++
      - class definition 187
    - if within a local C++ class and inside a
      - function 187
  - return type 194
  - storage
    - as permitted by scope 187
    - different classes allowed 186
  - virtual base
    - C++ 182
    - constructors and destructors, with 193
- clearerr function 512
- clock function
  - clock.c, use in 290
  - definition 513
  - implementation-defined behavior 615
- CLOCKS\_PER\_SEC constant
  - clock function 513
- close function
  - definition 513
  - RAM-disk support, closing a file 289
- code
  - generating options, controlling 276
  - location, #pragma section 147, 259
  - relative addressing
    - far-code addr-mode 261
    - near-code addr-mode 261
    - using to achieve PIC 261
- CODE section class
  - See section classes
- COFF
  - output 405
- .coment section
  - See sections
- .comm assembler directive
  - declaring COMMON sections with 381
  - definition 343
  - external symbols 321
  - indicating use of with string COMM 255

- .lcomm, vs. 351
- COMM section
  - See sections
- command-line length limit 38
- command-line options
  - quoting strings 37
  - that affect the default addr-mode, table of 262
- command-line options, writing 36
- command-line order 391
  - symbols in ELF output files 378
- commands
  - dar 449
  - das 302
  - dbcnt 455
  - ddump 459
- comment delimiters in assembler 319
- COMMENT section
  - See sections
- .comment section
  - See sections
- comments
  - configuration language, token 595
  - linker command file 417
- common
  - symbols 322
  - tail optimization 213
- common addressing mode expressions, table of 620
- Common Information Entry (CIE) 78
- COMMON section
  - See sections
- communicating with the target hardware 291
- compatibility modes
  - ANSI 601
  - C programs, table of for ANSI, Strict ANSI, K&R, and PCC 602
  - K&R 601
  - PCC 601
  - strict ANSI 601
  - table of features 601
- compilation
  - conditional 134
  - disabling exception handling 83
  - four stages 127
  - if speed is crucial 201
  - older programs, -Xmemory-is-volatile 105
  - problems 233
  - separate 128
  - speed vs. optimization, trade-off 200
  - stopping, -Xstop-on-warning 120
  - without optimization corrects execution, possible causes 236
  - Xlint, warnings for suspicious constructs 229
- compile function, definition 513
- compile regular expression 513
- compiler
  - backward compatibility 234
  - C++-to-assembly 21
  - code written for older UNIX 234
  - compatibility with
    - older compilers using setjmp / longjmp 205
    - others 6
  - creating temporary objects not visible 249
  - C-to-assembly 21
  - emulating UNIX behavior 602
  - environment variables 16
  - flag keywords: try, catch and throw as errors 245
  - frontend 72
  - invoking 35
  - limits 607
  - options 39
  - producing optimized code 202
  - register use, table of 194
  - time
    - options 277
    - pragmas 277
  - X options 55
- components of installation 9
- compress debug information 400
- concatenate underscore, -Xadd-underscore 64
- conf directory, contains linker command files 287
- configuration files
  - assignment statements 588
  - default.con,
    - using 12
  - default.conf
    - changing overriding variables stored in 30

- standard version shipped with tools 590
  - default.conf, definition 592
  - default.conf, editing 30
  - default.conf, exit statement 598
  - dtools.conf
    - configuration variables 594
    - description 12
    - exit statement 598
    - simplified structure, table of 592
    - standard version shipped with tools 590
  - hierarchy of three 590
  - nesting 599
  - processing at startup 589
  - reading at startup 12
  - relation to command lines and environment
    - variables 588
  - site-dependent defaults 588
  - standard
    - name, location 590
    - shipped with tools 593
  - user.conf, dtools.conf configuration file,
    - simplified structure 592
  - user.conf, providing own 591
  - variable evaluation, table of 597
- configuration language
- comments, token 595
  - options 595
  - purpose and effect 594
  - statements 595
    - break 600
    - case 600
    - else
      - if statement 598
    - syntax 595
  - endsw 600
  - error definition 598
  - exit 598
  - if
    - definition 598
    - syntax 595
    - with `__ERROR__` function 161
  - include 591
    - with dtools 591
  - print 599
  - switch 599
- string constants 596
- variables
- \$\$, expands to \$ 597
  - \*, dtools.conf, simplified structure 592
  - \*, evaluating entire command 597
  - \$, evaluating value of a variable 596
  - \$, introducing variables 595
  - DCONFIG, setting, -WC option 588
  - definition explanation 596
  - DENVIRON
    - avoiding altering dtools -t option 591
    - default library search path controlled by 591
    - dtools.conf 591
    - editing default.conf to change 30
    - overriding with environment variable of same name 16
    - setting, -t option 588
    - t sets 30
- DFLAGS, definition 593
- DFP
- avoiding altering dtools -t option 591
  - dtools.conf, simplified structure 592
  - editing default.conf to change 30
  - evaluating in configuration files 597
  - overriding with environment variable of same name 16
  - setting, -t option 588
  - t sets 30
- DOBJECT
- avoiding altering dtools, -t option 591
  - dtools.conf, simplified structure 592
  - editing default.conf to change settings 30
  - overriding with environment variable of same name 16
  - setting, -t option 588
  - t sets 30
  - Xconventions-n32, with 76
- DTARGET
- avoiding altering dtools, -t option 591
  - editing default.conf to change 30
  - overriding with environment variable

- of same name 16
  - setting, -t option 588
  - t sets 30
- simplified structure 592
- UAFLAGS1
  - definition 594
  - dttools.conf, simplified structure 592
- UAFLAGS2
  - definition 594
  - dttools.conf, simplified structure 592
- UFLAGS1
  - definition 593
  - dttools.conf, simplified structure 592
  - overriding options set by 594
- UFLAGS2
  - definition 593
  - dttools.conf, simplified structure 592
  - occurring after \$\*, in dttools.conf 594
- ULFLAGS1
  - definition 594
  - dttools.conf, simplified structure 592
- ULFLAGS2
  - definition 594
  - dttools.conf, simplified structure 592
- writing 591
- configuration language, assignment statements,
  - definition 597
- configuration, target, *see* target configuration
- \_\_CONFIGURE\_EMBEDDED 495
- \_\_CONFIGURE\_EXCEPTIONS 495
- conformance to C and C++ standards 6, 601
- const
  - data, -Xstrings-in-text in embedded
    - development 277
  - global, default linkage in C and C++ 242
  - keyword
    - and compatibility mode 602
    - help optimizer 203
  - variable
    - moving from "text" to "data" 269
    - Xdata-relative-far, with 77
    - Xdata-relative-near, with 77
- CONST section class
  - See* section classes
  - See* section classes
- constants
  - %, assembler binary prefix 324
  - ~, assembler octal prefix 324
  - , assembler hexadecimal prefix 324
  - 0, assembler octal prefix 324
  - 0x, assembler hexadecimal prefix 324
  - and variable propagation optimization 214
  - assembler character 324
  - assembler decimal 324
  - b, assembler binary suffix 324
  - binary representation of 160
  - BUFSIZ
    - defining required size of buf 561
    - defining, stdio.h function 502
    - setvbuf 562
  - character escape sequences 324
  - CLOCKS\_PER\_SEC
    - clock function 513
    - defining, time.h function 502
  - DOMAIN 545
  - EDOM
    - errno setting, acos function 507
    - errno setting, asin function 508
    - errno setting, atan2 function 510
    - errno setting, matherr function 545
  - ENTER 532
  - EOF
    - defining, studio.h function 502
    - fscanf function 526
    - scanf function 559
    - sscanf function 565
    - ungetc function 578
  - ERANGE setting
    - exp function 518
    - matherr function 545
  - EXIT\_FAILURE
    - defining, stdlib.h function 502
    - providing, exit function 517
  - EXIT\_SUCCESS
    - defining, stdlib.h function 502
    - providing, exit function, successful termination 517
  - FIND hsearch function 532
  - floating point
    - assembler support 323

- format 325
- HUGE\_VAL 501, 518
  - defining, <math.h> header file 498
- HUGE\_VAL\_F 501
- integer 323
- integral 323
- \_IOFBF 562
- \_IOLBF 562
- \_IONBF 562
- LC\_ALL 562
- LC\_COLLATE
  - setlocale function 562
  - strcoll function 566
- LC\_MONETARY 562
- LC\_NUMERIC 562
- LC\_TIME 562
- locating vs. .data sections 268
- locating with -Xconst-in-text, -Xconst-in-data 75
- MB\_CUR\_MAX 547
- NULL
  - defining, stddef.h function 502
  - defining, stdio.h function 502
  - defining, stdlib.h function 502
  - defining, string.h function 502
- o, assembler octal suffix 324
- O\_APPEND defining, fcntl.h function 501
- O\_NDELAY defining, fcntl.h function 500
- O\_RDONLY
  - defining, fcntl.h function 500
  - setting values, open function 550
- O\_RDWR
  - defining, fcntl.h function 500
  - values of, open function 551
- OVERFLOW 545
- O\_WRONLY
  - defining, fcntl.h function 500
  - values, open function 550
- PLOSS 545
- q, assembler octal suffix 324
- RAND\_MAX 556
- SEEK\_CUR 543
- SEEK\_END 543
- SEEK\_SET 543
- short initialized data in .sdata2 328
- SING 545
- static data 64
- supported by assembler 323
- TLOSS 545
- UNDERFLOW 545
- constructor (\_\_attribute\_\_ keyword) 155
- constructors
  - default priority 93
  - global C++ 92
  - mangling 247
  - missing calls to 249
  - operator 243
  - with avoiding setjmp, longjmp functions 249
- contract pragma 137
- control code generation options 276
- copying initial values from "rom" to "ram" 281
- \_copysign function 513
- cos function 514
- cosf function 514
- cosh function 514
- coshf function 514
- \_\_cplusplus preprocessor predefined macro
  - using with #ifdef directives 242
- \_\_cplusplus preprocessor predefined macro
  - definition 132
- .cpp file extension, C++ source 21
- cpp preprocessor
  - defaults 21
  - W compiler option, with 50
- creat function
  - <fcntl.h>, standard header file 498
  - definition 515
  - fdopen function 520
  - RAM-disk support, opening file 289
- cross execution environment 27
- cross reference table in link map 396
- cross/libc.a library
  - ELF standard C libraries 13
  - location 488
- cross-module optimization 72, 206
- crt0.o startup module
  - default overridden, -W sfile compiler option 390
  - source of standard version crt0.s 13
  - specify non-standard, -W s 49

- startup code 13
- crt0.s startup module
  - details 280
  - overview 278
- crtlibso.c startup module
  - details 280
  - overview 278
- ctime function 515
- ctoa preprocessor 21
- ctoa subprogram 12
- ctordtor.c startup module
  - details 280
  - overview 278
- ctype functions
  - isalnum 613
  - isalpha 613
  - iscntr 613
  - isdigit 613
  - isgraph 613
  - islower 613
  - isprint 613
  - ispunct 613
  - isspace 613
  - isupper 613
  - isxdigit 613
  - table of 613
  - test for characters 613
- .cxx file extension, C++ source 21

## D

- D linker option 394
- D option 303
  - ddump 461
- d option, ddump 461, 464
- .dlline assembler directive, using to suppress, -Xdebug-mode 79
- dar
  - archiver 11
  - building archive libraries 388
  - commands
    - p print 450
    - d delete 450
  - examples 453
  - m move 450
  - modifiers, table of 451
  - q quick append 451
  - qf quick update 451
  - r replace 450, 451
  - s symbol table update 451
  - syntax 449
  - t table of contents 451
  - V version 451
  - x extract 451
- das
  - assembler, locating executable 11
  - command 302
- das preprocessor 21
- data
  - basic types 178
  - binary representation of 160
  - char, size and alignment 178
  - constant
    - short initialized in .sdata2 328
    - static 64
    - Xstrings-in-text in embedded development 277
  - double, size and alignment 179
  - enum, same as int 178
  - float, size and alignment 179
  - global
    - pure\_function pragma 147
    - Xaddr-const 64
    - Xaddr-data 64
    - Xaddr-sconst 64
    - Xaddr-sdata 64
  - initialized
    - containing in particular section, with istring 255
    - .data section, in 327
  - int
    - size, alignment, and range 178
  - internal representation 177
  - locating
    - in constant vs. .data sections 268
    - initialized vs. uninitialized 265
  - long double, size and alignment 179
  - long long, size and alignment 178
  - long, size and alignment 178



- non-constant static 64
- pointers, size and alignment 178
- ptr-to-member, type, size and alignment 179
- ptr-to-member-fn, size and alignment 179
- read-only
  - .rdata section 327
- reference, size and alignment 179
- relative addressing
  - far-data addr-mode 261
  - modes, using to achieve PID 261
  - near-data addr-mode 261
- relocation 272
- short
  - initialized in .sdata section 328
  - uninitialized in .sbss section 327
- short, size and alignment 178
- signed char, size and alignment 178
- static 147
- storing in big- or little-endian order 180
- type size 180
- types, table of C/C++ 178
- uninitialized
  - .bss section 327, 342
  - containing in particular section, with
    - usttring 255
- unsigned
  - char, size and alignment 178
  - int, size and alignment 178
  - long long, size and alignment 178
  - long, size and alignment 178
  - short, size and alignment 178
- volatile 277
- .data assembler directive 344
- .data section 269
  - See sections
  - r13 register as a pointer to 272
  - restrictions on using -Xcode-relative-near-
    - all 272
- DATA section class
  - See section classes
- DATA section class, *see* section classes
- database, cross-module optimization 207
- \_\_DATA\_END, \_\_DATA\_RAM, \_\_DATA\_ROM
  - symbols, copy initial values from "rom" to "ram" 281
- \_\_DATA\_END, \_\_DATA\_RAM, \_\_DATA\_ROM
  - symbols, copy initial values from "rom" to "ram", in bubble.dld 412
- \_\_DATE\_\_ preprocessor predefined macro 132
- precompiled headers 251
- dbcnt
  - command syntax 455
  - dbcnt.out file, default 457
  - environment variable, *see* environment variables
  - examples 457
  - generating profiling information 11
  - options 456
    - f profile file 456
    - h high line limit 456
    - l low line limit 456
    - n number every line 456
    - t most frequent lines 456
    - V version 456
  - required functions
    - \_\_dbexit 458
    - \_\_dbini 458
- dbcnt.out
  - DBCNT is not set 456
  - Xfeedback compiler option, with 85
- \_\_dbexit function, required for dbcnt 458
- \_\_dbini function, required for dbcnt 458
- dc.b assembler directive 343
- \_\_DCC\_\_ preprocessor predefined macro 132
- DCC reference 505
- dcc, *see* driver program, dcc
- dc.l assembler directive 343
- DCONFIG environment variable, *see* environment variables
- \_\_DCPLUSPLUS\_\_ preprocessor predefined macro 132
- dctrl program
  - displaying -t options 48
  - locating executable 11
  - setting default target 24
  - setting default target alternatives 30
  - setting default target configuration
    - variables 15
- dc.w assembler directive 344
- DCXXOLD 235

- ddump
    - commands
      - +t symbol table, dump with upper limit 463
      - +z line number information, dump with upper limit 464
      - a archive header, dump 460
      - B binary format, converting to 460
      - C difference file, generate 460
      - c string table, dump 461
      - commands, table of 460
      - D DWARF debugging information, dump 461
    - examples 465
    - F demangle names 461
    - f file header, dump 461
    - g global symbols, dump 461
    - H hex and ASCII, dump 461
    - h section headers, dump 461
    - l line number information, dump 461
    - m write Motorola S-records of a given type 462
    - modifiers, table of 464
    - N symbol table, dump 461
    - o optional header, dump 462
    - p write a plain ASCII file in hexadecimal 462
    - R converting to Motorola S-Records 462
    - r relocation information, dump 463
    - s section contents, dump 463
    - S size of sections, display 463
    - syntax 459
    - t symbol table, dump 463
    - u write a binary file 462
    - v do not output the .bss or .sbss section 462
    - V version 463
    - w set the line width of S-records 463
    - z line number information, dump 463
  - converter utility 297
  - object file converter and dumper 11
- ddump -F demangling utility 249
- debugging
  - Common Information Entry 78
  - compress information 400
  - D option 461
  - DWARF 78, 303, 308, 461, 630
  - g option 43, 303
  - generating debug information for unreferenced types 79
  - local variables, unused 78
  - selecting levels, DFLAGS 593
- declarations
  - force, -Xforce 87
  - in header files 240
- declarators, implementation-defined behavior 612
- declared symbol, definition of 320
- default
  - acc-mode, values for section classes 258
  - addr-mode
    - options that change 261
    - values for section classes 258
  - istring / ustring values for section classes 258
  - tab size, -Xtab-size 315
- default.conf
  - changing overriding variables stored in 30
  - definition 592
  - DENVIRON configuration variable set in 591
  - exit statement 598
  - using 12
- default.conf configuration file
  - standard version shipped with tools 590
- default.conf, default configuration information
  - stored by dctrl program 15
- default.dld linker command file 287
  - component in conf subdirectory 12
  - default overridden, -W m compiler option 390
  - example use of 390
  - \_\_HEAP\_START, \_\_HEAP\_END defined in default.dld 283
  - overriding -Bd and -Bt options 394
  - present in conf directory 410
  - \_SDATA\_BASE\_ defined in 196
  - serving as model 410
  - W m option 49
- default.lnk, *see* default.dld
- #define preprocessor directive 41
- defined
  - symbol, definition of 320
  - variables, types, and constants 500–502

- delaying literal generation 312
- delete
  - array operators 245
  - C++ keyword 242
  - operator 193
- demangling utility, `ddump -F` 249
- DENVIRON environment variable
  - See* environment variables
- deprecated (`__attribute__` keyword) 156
- derived class
  - adding virtual base pointers 184
  - using the virtual function table pointer 184
- destructor (`__attribute__` keyword) 156
- destructors
  - default priority 93
  - increasing efficiency with `-Xexceptions-off` 83
  - mangling 247
  - missing calls to 249
  - operator 243
  - used prior to program termination 243
- DFLAGS environment variable
  - See* environment variables
- DFP environment variable
  - See also* configuration language variables
- `__diab_alloc_mutex` 293
- DIABLIB environment variable
  - See* environment variables
- `__diab_lib_error` function
  - defining in `src/lib_err.c` 286
  - handling errors from library function 286
- `__diab_lock_mutex` 293
- `_DIAB_TOOL` preprocessor predefined macro 132
- `__diab_unlock_mutex` 293
- `difftime` function 515
- Digital Signal Processing
  - assembler instructions for 307
  - enabling 307
- Dinkumware 97
- direct
  - assignment statements
    - definition and syntax 320
  - function for embedding machine code 175
- directives
  - See also* preprocessor directives
- `#ident` in `.comment` 629
- `#pragma`, use with `asm` macro 168
- directories
  - `conf`, contains linker command files 287
  - `src`, source files 287
  - structure 9
- disabling optimization, `-g`, (`-Xoptimized-debug-off`) 109
- disassembler, `windiss` 469
- `div` function definition 515
- `div`, part of `stdlib.h` header file 502
- divide by reciprocal-multiply 94, 118
- `div_t` type 502, 515
- `.dld` file extension, linker 21
- `dld` linker, locating executable 11
- `dld` preprocessor 21
- `dmake`
  - “make” utility 11, 467
  - executable, installation 467
  - requires startup directory 468
  - using 468
- `DMALLOC_CHECK` environment variable, *see* environment variables
- `DMALLOC_INIT` environment variable, *see* environment variables
- `DOBJECT` configuration variable
  - with `-Xconventions-n32` 76
- `DOBJECT` environment variable
  - See* environment variables
- `DOMAIN` constant 545
- `.double float-constant`, . . . assembler directive
  - definition 344
- double values returned in `$2/$3` 193
- `dplus`
  - See also* driver program, `dplus`
  - template instantiation 243
- `drand48` function
  - definition 516
  - `lcong48` function 539
  - `srand48` function 565
- driver program
  - argument order and symbol placement 378
  - `dcc` for C, locating executable 11
  - `dplus` for C++, locating executable 11
  - invoking 35

- main program flow 19
- renaming to access different version 15
- table of subprograms and stopping options 21
- verbose mode, -v 48
- W control meaning of source file extension 52
- ds.b assembler directive 344
- .dsect assembler directive 344
- DSP, *See* Digital Signal Processing
- DTARGET environment variable, *see* environment variables
- dtoa subprogram 12
- dtools.conf configuration file
  - \$DENVIRON.conf 591
  - configuration variables 594
  - description 12
  - exit statement 598
  - simplified structure, table of 592
  - standard version shipped with tools 590
- dumper ddump 11
- dup function
  - definition 516
  - fdopen function 520
- DWARF, debug information 78, 303, 308, 461, 630
  - Common Information Entry 78
- dynamic
  - casts 245
  - stack space allocation, alloca 160
- \_\_DYNAMIC\_ symbol created by linker 379
- dynamic\_cast expression 245

## E

- E compiler option
  - vs. -P compiler option 47
  - write source to standard output 41
- e linker option, default entry point address 394
- e option 42
  - and -Xmismatch-warning 106
  - Xmismatch-warning 43
- ecvt function 516
- \_edata and edata symbols created by linker 379
- Edison Design Group (EDG) 72
- EDOM constant
  - errno setting, acos function 507

- errno setting, asin function 508
- errno setting, atan2 function 510
- errno setting, matherr function 545
- .eject assembler directive 344
- ELF
  - files
    - command-line argument order and symbols 378
    - header fields, table of 625
    - relocation entry fields, table of 631
    - section header fields, table of 627
    - structure, typical 624
    - symbol fields, table of 634
  - format 401
  - header structure 624
  - object files, convert ing to Motorola S-Records, ddump command -R 462
  - object module format 26
    - absolute sections 329
    - libraries 13
    - .org assembler directive, using with 353
    - section alignment 328
  - overall structure 623
  - program header
    - fields, table of 626
    - structure 626
  - relocation
    - entry structure 630
    - selecting information format 401
    - types, table of 631
  - section header structure 627
  - symbol table section structure 633
  - typical sections, table of 629
- #elif preprocessor directive 135
- .else assembler directive 344, 348
- else statement, configuration language
  - if statement 598
  - syntax 595
- .elsec assembler directive 345
  - definition 345
  - equivalent to .else, .endif, .endc 348
- .elseif assembler directive
  - definition 345
  - equivalent to .else, .endif, .endc 348
- embedded

- assembly code 165, 166
  - See also* asm string statement
  - See also* assembler macros
  - methods, table of 166
- environment 609
  - compile time options 276
  - features facilitating access to the
    - hardware 291
  - functions, table of 287
  - hardware exception handling 285
  - linker command file 286
  - miscellaneous functions 290
  - operating system calls 287
  - profiling 296
  - raise function 285
  - setup program 294
  - src directory, source files 287
  - startup and termination 278
  - using in 275
  - volatile keyword 293
- enabling MIPS instructions 105
- encoding modifiers, table of type 248
- \_end and end symbols created by linker 379
- .end assembler directive 345
- .endc assembler directive 345
  - definition 345
  - equivalent to .else, .elsec, .endif 348
- endianness, big vs little object module format 26
- .endif assembler directive
  - definition 345
  - equivalent to .else, .elsec, .endc 348
- #endif preprocessor directive 604
- .endm assembler directive 345
- .endof.section-name symbol created by linker 379
- endsw statement, configuration language 600
- ENTER constant 532
- .entry assembler directive 345
- entry point symbols 322
- enum
  - equivalent to int 82
  - size of in C, C++ 242
  - type bit-field 180
- enumeration
  - implementation-defined behavior 611
  - size of, *see* -Xenum-is-...
- environment
  - embedded 609
  - implementation-defined behavior 612
  - variables
    - See also* configuration variables
    - variables, *see* environment variables
- environment variables
  - compiler 16
  - configuration language 594
  - dbcnt, naming the profile data file 457
  - DCONFIG
    - changing location of main file 591
    - overriding 589
    - recognized by compiler, description 16
  - DCXXOLD 235
  - DENVIRON, recognized by compiler,
    - description 16
  - DFLAGS
    - dtools.conf, simplified structure 592
    - evaluating in configuration files 597
    - recognized by compiler, definition 17
    - using when difficult to change scripts,
      - makefiles, add an option 202
- DFP
  - See also* configuration language
    - variables
- DIABLIB, recognized by compiler,
  - definition 17
- DIABTMPDIR 17
- DMALLOC\_CHECK, malloc function 544
- DMALLOC\_INIT, malloc function 544
- DOBJECT
  - overriding, -WDDOBJECT 305
  - recognized by compiler, description 16
  - WDDOBJECT, assembler option 305
- DTARGET
  - overriding, -WDDTARGET 305
  - overriding, -WDDTARGET assembler
    - option 305
  - recognized by compiler, description 16
- MAKESTARTUP, defining 468
- pointers to 613
- relationship to command lines, configuration
  - files 588
- specify with setup program 282

- TMPDIR 452
- EOF constant
  - defining, studio.h function 502
  - fscanf function 526
  - scanf function 559
  - sscanf function 565
  - ungetc function 578
- .equ assembler directive 346
  - defining a symbol 320
  - definition 346
- ERANGE constant
  - setting, exp function 518
  - setting, matherr function 545
  - value of errno 614
- erf function 516
- erfc function 517
- erfcf function 517
- erff function 517
- errno variable 498, 500, 505, 507, 508, 510, 518, 521, 527, 545, 551, 614
  - See also multi-tasking support
  - \_\_errno\_fn 506
  - library functions set on error 285
  - preserving 506
- \_\_errno\_fn function 506
- error
  - caught by library function 285
  - compilation
    - caused by using try, catch or throw keyword 83
    - generating time with \_\_ERROR\_\_ function 160
    - Xstop-on-warning 120
  - compiler flags keywords try, catch and throw as errors 245
  - fatal 161
  - generated if
    - address of variable, function, string used by static initializer, -Xstatic-addr-error 119
    - double precision operation used, -Xdouble-error 81
    - no environment variable or file found, -@name 54, 306
  - generated with
    - #error string 161
    - exception handling 244
  - generating
    - illegal structure references 603
    - missing parameter name after # in macro declaration 604
  - generating if
    - no environment variable or file found, -@name 448
    - parameters redeclared in outer level of function 604
    - pointers and integers mismatched 603
    - prototypes and arguments do not match 603
  - output, standard 44
  - preprocessor, treatment of 604
  - standard
    - output, assert function 613
    - redirect to file, -@E 54
    - redirecting to file, -@E 306, 392, 448
  - treat warnings as, -Xlint 229
  - undervalue 614
- .error assembler directive 346
- \_\_ERROR\_\_ function, produces compile-time error or warning 160
- error pragma 138
- #error preprocessor directive 135
- error statement, configuration language, definition 598
- \_etext and etext symbols created by linker 379
- etoa preprocessor 21
- \_\_ETOA\_\_ preprocessor predefined macro 132
- etoa subprogram 12
- \_\_ETOA\_IMPLICIT\_USING\_STD preprocessor predefined macro 132
- \_\_ETOA\_NAMESPACES preprocessor predefined macro 132
- .even assembler directive 346
- exception handling 244, 285
  - and C functions 384
  - stack unwinding 384
- exceptions
  - disable with -Xexceptions-off in C++ 83
  - enable with -Xexceptions in C++ 83
  - Xjmpbuf-size in C++ 95

- `__EXCEPTIONS__` preprocessor predefined macro 132
- execution environment
  - cross 27
  - rtp 72
  - simple 27
- execution problems 236
- exit
  - function 502, 506, 510, 517
    - implementation-defined behavior 615
  - statement, configuration language 598
- `_exit` function 518
  - in `_exit.c` termination module 290
- `_exit.c`
  - profile in an embedded environment 296
  - termination module, overview 278
- `exit.c` and `_exit.c` termination module
  - details 282
  - overview 278
- `EXIT_FAILURE` constant
  - defining, `h` `stdlib.h` function 502
  - providing, `exit` function 517
- `.exitm` assembler directive 346
- `EXIT_SUCCESS` constant
  - defining, `stdlib.h` function 502
  - providing, `exit` function, successful termination 517
- `exp` function 518
- `expf` function 518
- `.export` assembler directive 321, 347
  - declaring ordinary external symbols 321
- export keyword 244
- expressions
  - absolute 332
  - common addressing modes, table of 620
  - evaluation precedence 336
  - float 88, 603
  - linker command file 415
  - precedence change with parentheses 332
  - relocatable 332
  - terms 332
  - `typeid` 245
  - `typeid` 245
- extend
  - instruction 218

- optimization 218
- extended keyword, synonym for long double 96, 149
- extern
  - "C" use to avoid name mangling 242, 246
  - keyword 381, 382
  - variable 187
- `.extern` assembler directive 346
- `.extern`, references, making available to linker using
  - `.global` assembler directive 347
- external symbols
  - common 321
  - examples 321
  - global undefined, if not defined in same file 322
  - ordinary 321

## F

- f option 394
  - `ddump` 461
- F option, `ddump` 461
- `fabs` function 519
- `fabsf` function 519
- "far" libraries 14, 489
- far-absolute addressing mode 268
  - See also* addressing modes
- far-code addressing mode 268
- far-data addressing mode 268
- `fclose` function 519
- `fcntl` function 500, 519
  - definition under `<fcntl.h>` header file 498
  - RAM-disk support, getting information about a file 289
- `fcvt` function 520
- `fdopen` function 520
- feedback optimization 220
- `feof` function
  - definition 520
- `ferror` function 520
- `fflush` function 521
- `fgetc` function 521
- `fgetpos` function 521
- `fgets` function 521

- .file assembler directive 347
- file extensions
  - .a, archive library 21
  - .C, C++ source 21
  - .cc, C++ source 21
  - .cpp, C++ source 21
  - .cxx, C++ source 21
  - .dld, linker 21
  - .i, preprocessed source 21
  - .o, object module 21
  - .o, preprocessed source 21
  - .s, assembly source 21
- \_\_FILE\_\_ preprocessor predefined macro 132, 509
- FILE structure 523, 525, 575
- fileno function 522
- files
  - absolute vs. relative pathnames,
    - implementation-defined behavior 612
  - a.out, during compile and link 127
  - header 44, 498
    - search order 612
  - initialize in setup.c in embedded environment 294
  - input 302
  - stderr 525, 557
    - declaring, stdio.h function 502
  - stdin 530, 559
    - declaring, stdio.h function 502
  - stdout 402, 552, 555
    - declaring, stdio.h function 502
  - temporary, DIABTMPDIR 17
  - types 523
    - .o 21, 95
    - .s 95, 166
- .fill assembler directive 347
- finalization 92
  - default priority 93
  - .ctors section, -Xinit-section 92
  - .fini section, -Xinit-section 92
- FIND constant, hsearch function 532
- .fini section in crt0.s 281
- \_finite function 522
- .float assembler directive 347
- float expressions 88, 603
- floating point
  - Xfp-min-prec-long-double 89
  - arguments 88
    - leading 191
    - passing using temporary registers 197
  - conformance to IEEE754 standard 85
  - constants 323
  - float values returned in \$2 193
  - hardware
    - \$f0 register returns floating point values 193
    - libraries 14, 489
    - utilizing floating point register file 194
  - IEEE, .float assembler directive 347
  - implementation defined behavior 611
  - libcfp.a
    - hardware library 488
    - stubs library 14, 488
  - method selection 48
  - register
    - file, utilization of 194
    - not saved by interrupt function 140
    - only even-numbered used 194
  - software
    - libraries 14
  - software emulation
    - float values returned in \$2, double values in \$2/\$3 193
  - specifying with environment variable DFP 16
  - supporting 23
  - types
    - alignments 178
    - ranges 178
    - sizes 178
  - value returned in \$f0 register with hardware floating point 193
  - Xextend-args 84
  - Xfp-float-only 88
  - Xfp-long-double-off 88
  - Xfp-min-prec-float 88
  - Xfp-min-prec-long-double 88
  - Xieee754-pedantic 90
  - Xuse-double
    - See also -Xfp-min-prec-double 88
    - See also -Xfp-min-prec-long-double 89



- Xuse-float
  - See also* -Xfp-min-prec-float 88
- floor function 522
- floorf function 522
- fmod function 522
- fmodf function 523
- fopen function 295, 523
- for statement, scope of initialization part 87
- form feed escape sequence, '\f' 324
- fpos\_t type, defining, stdio.h function 502
- fprintf function 524, 578
  - implementation-defined behavior 614
- fputc function 524
- fputs function 524
- .frame\_info section
  - description 384
  - sorting 405
  - unused 404
- fread function 525
- free function 525, 544
  - thread-safe 293
- freopen function 525
- frexp function 526
- frexpf function 526, 549
- friend C++ keyword 242
- frontend, compiler 72
- fscanf function 526, 579
  - implementation-defined behavior 614
- fseek function 526, 558
- fsetpos function 527
- fstat function 527
- ftel function 527
  - implementation-defined behavior 614
- \_\_FUNCTION\_\_ predefined identifier 132
- function-level optimization 4
- function-like macros 41
- functions
  - See also* individual functions
  - locating specific address 291
  - modifying errno marked by REERR 505
  - name encoding with the types of all arguments 192
  - no return promised, #pragma no\_return 205
  - no side effects promised, #pragma no\_side\_effects 142

- pointers, absolute 261
- #pragma interrupt 140
- pure promised, #pragma pure\_function 147
- standards and definitions, table of 504
- templates 243
- fwrite function, definition 528

## G

- g option 43, 303
  - ddump 461, 462
  - line number information ELF 633
- gamma function 528
- gap in memory, fill value 341
- gap in section
  - creating 430
  - filling 425
- GCC options
  - See* GNU compiler options
- gcvt function 528
- getc function 521, 529, 578
- getchar function 529
- getenv function 295, 529
  - defining target environment variables for 294
  - implementation-defined behavior 613
- getopt function 530
- getpid function 290, 530
- gets function 530
- getw function 531
- global
  - common subexpression elimination
    - optimization 216
  - construction and destruction of objects 243
  - constructors C++ 92
  - data
    - #pragma pure\_function 147
    - Xaddr-const 64
    - Xaddr-data 64
    - Xaddr-sconst 64
    - Xaddr-sdata 64
  - function
    - indicator 'F' in mangled names 246
    - optimization 5

- no\_side\_effects pragma promises no modification of variable 142
- optimization 6
- pointer 619
- register assignments 139
- variables
  - absolute sections 266, 292
  - allocating to register 138
  - constructors 242, 243
  - destructors 243
  - modifying with asm macro 168
  - optimizing in conditionals 70
  - vs. local 202
  - Xsmall-const 118
  - Xsmall-data 118
- .global assembler directive 321, 347
  - declaring ordinary external symbols 321
- \_\_GLOBAL\_OFFSET\_TABLE\_\_ symbol created by linker 379
- global\_register pragma
  - preserve across function calls 138
  - variable used to control allocation 138
- .globl assembler directive 321, 347
  - declaring ordinary external symbols 321
- gmtime function 531
- GNU compatibility
  - GNU local symbols 323
    - enabling, -Xgnu-locals-on 309
  - nm 462
  - phony targets 102
- GNU compiler options
  - translating 238
  - Xgcc-options-... 89
- GNU extended syntax
  - assigning variables to registers 160
  - inline assembler 166
- GNU local symbols
  - disabling, -Xgnu-locals-off 309
- \_\_gp and \_\_gp symbols created by linker 379
- \_\_gp2 and \_\_gp2 symbols created by linker 379
- GROUP definition 426

## H

- @h unary operator 333
- H option 44, 304, 309
  - ddump 461
- h option ddump 460, 461, 462
- h, --help command-line options 40
- @ha unary operator 333
- \_\_hardfp preprocessor predefined macro 132
- hardware exception handling in an embedded environment 285
- hardware floating point
  - \$f0 register returns floating point values 193
  - utilizing floating point register file 194
- \_\_HAS\_TRADITIONAL\_IOSTREAMS preprocessor macro 241
- \_\_HAS\_TRADITIONAL\_STL preprocessor macro 241
- hcreate function 531
- hdestroy function 531
- hdrstop pragma 139, 250, 251
- header
  - field %T title, -Xtitle option 315
  - files 44, 498
    - C++ 240
    - declarations in 240
    - missing standard 234
    - precompiled 249
    - search order 612
    - specify search path, -I option 44
    - standard, table of 498
    - treat #include as #import 91
    - typeinfo.h C++ 245
  - string
    - default format, -Xheader-format 310
    - format specifications, -Xheader-format 310
- HEADERSZ pseudo function, definition 416
- heap, sbrk function manages 283
- \_\_HEAP\_START, \_\_HEAP\_END define heap for sbrk function 283
  - in bubble.c 412
- %hi unary operator 333
- %hiadj unary operator 333
- hole in memory, fill value 341

hole in section, *see* gap in section  
 horizontal tab escape sequence, '\t' 324  
 host\_dir subdirectory 11  
     name under version\_path 10  
 hsearch function 531, 532  
 HUGE\_VAL constant 501, 518  
     defining, <math.h> header file 498  
 HUGE\_VAL\_F constant 501  
 hypot function 532  
 hypotf function 532

## I

.i file extensions, preprocessed source 21  
 -I option 44, 53, 304, 612  
 -i option 45, 139  
     -i file1=file2 change name of header file 45, 234  
 -I@ option 45  
 I/O functions, table of 289  
 ibg.a debugger library 13  
 #ident  
     directives in C in .comment 629  
     preprocessor directive 136, 139  
     strings 90  
 .ident assembler directive 348  
 ident pragma 139  
 identifiers  
     *See* symbols  
     implementation defined behavior 610  
     maximum length, -Xtruncate 124  
     underscores added to, -Xunderscore-... 124  
     user-defined 242  
     -Xtruncate 124  
 IEEE floating point  
     conformance to IEEE754 standard 85  
     double assembler directive 344  
     .float assembler directive 347  
 .if assembler directive 345, 348  
 #if preprocessor directive 135  
     implementation-defined behavior 612  
 if statement  
     configuration language  
         definition 598  
         syntax 595  
         with \_\_ERROR\_\_ function 161  
     .ifc assembler directive 349  
     .ifdef assembler directive 349  
     #ifdef preprocessor directives 136, 242  
     if-else clause optimization 220  
     .ifendian assembler directive 348  
     .ifeq assembler directive 349  
     .ifge assembler directive 349  
     .ifgt assembler directive 349  
     .ifle assembler directive 349  
     .iflt assembler directive 349  
     .ifnc assembler directive 350  
     .ifndef assembler directive 350  
     .ifne assembler directive 350  
     implementation  
         specific behavior in code 237  
 implementation-defined behavior 609–615  
     abort function 613, 615  
     absolute vs. relative pathnames 612  
     arrays 611  
     bit-fields 611  
     characters 610  
     declarators 612  
     enumerations 611  
     environment 612  
         main function C++ 612  
     floating point 611  
     fprintf 614  
     fscanf 614  
     ftell 614  
     getenv function 613  
     identifiers 610  
     #if preprocessor directive 612  
     implementation of library functions 613–615  
     integers 610  
     library functions  
         %p conversion 614  
         %X conversion 614  
         %x conversion 614  
     assert 613  
     calloc 615  
     clock 615  
     denoting range of characters 614  
     exit 615  
     malloc 615

- NULL macro 613
- perror message 614
- realloc 615
- remove 614
- rename 614
- setenv 615
- strerror message 614
- system 615
- pointers 611
- preprocessor directives 612
- qualifiers 611
- registers 611
  - struct members 611
  - union members 611
- statements, case labels 612
- structures 611
- switch statements 612
- unions 611
- .import assembler directive 350
- #import preprocessor directive 136
- .incbin assembler directive 350
- \_\_inchar function 288
- .include assembler directive 350
- #include preprocessor directive 45
  - See also #import preprocessor directive
  - treat as #import directive 91
- include statements, configuration language 591
  - definition 599
  - dttools 591
- include subdirectory, standard header files 12
- including source in assembly code 110
- INF floating point constant 325
- info pragma 139
- #info preprocessor directive 136
- #inform preprocessor directive 136
- #informing preprocessor directive 136
- .init section in crt0.s 281
- init.c startup module
  - overview 278
- init.c startup module, details 281
- initialization
  - constructors 92
  - .ctors section, -Xinit-section 92
  - default priority 93
  - .init section, -Xinit-section 92
  - local variables, -Xinit-locals 92
  - run-time 284
- initialized data
  - containing in particular section, with
    - istring 255
  - .data section, in 327
- initializers for static variables 273
- \_\_init\_main function 280, 281, 290
- inline
  - C++ keyword 242
  - optimization 204
  - keyword 96, 149, 210
  - pragma 139, 204, 210
- inline assembly, *see also* asm string statement and assembler macros
- \_\_inline\_\_ keyword 149
- inlining 200
  - changing options to increase 201
  - cross-module optimization 206
  - optimization 210, 218, 220
  - Xexplicit-inline-factor controls expansion 84
  - Xparse-size 109
  - Xsize-opt option 118
- input file 302
- input/output
  - basic character input/output
    - environ part of -t option, simple 27
    - library, part of simple/libc.a 488
  - RAM-disk
    - environ part of -t option, cross 27
    - library, part of cross/libc.a 488
- installation
  - components 9
  - default pathnames, table of 10
- install\_path directory 10
- instantiation
  - class, -Ximplicit-templates-off 91
  - explicit 402
  - of templates, -Ximplicit-templates-off 91
- Instruction Set Simulator
  - See also windiss 469
- instructions
  - bal 268
  - bal func 268
  - bgezal 268

- extend 218
  - jbal 268
  - mnemonics 617
- int bit-fields 180
  - plain, sign of 237
- integers
  - constants 323
  - implementation defined behavior 610
  - long 610
  - mismatched 603
  - mixing different types in an expression 602
  - types
    - alignments 178
    - magic, preceding virtual base classes 184
    - ranges 178
    - sizes 178
- integral constants 323
- intermodule optimization
  - See cross-module optimization
- internal data representation 177
  - classes 181
  - for aggregates 182
  - for non-aggregates 182
- interprocedural optimizations 109, 200, 201, 218, 608
- interrupt
  - keyword 96, 150
  - pragma 140, 150
- interrupt functions 266
  - C0\_EPC and C0\_SR save and restore, -Xnested-interrupts 108
  - locating at absolute addresses 292
  - #pragma interrupt 140
  - \_\_interrupt\_\_ keyword 150
- intrinsics
  - \_\_alloca( ) function 159
  - alloca( ) function 158, 159
  - \_\_builtin\_expect( ) function 159, 209
- invisible objects in optimized code 249
- invoke
  - a macro 367
  - the compiler 35
- \_IOBF constant 562
- \_IOLBF constant 562
- \_IONBF constant 562
- iostream C++ class library 14, 488
- iostream.a C++ class library 486
- irand48 function 532
- isalnum ctype function 613
- isalnum function 533
- isalpha ctype function 613
- isalpha function 533
- isascii function 533
- isatty function 533
  - RAM-disk support 289
- isctrn ctype function 613
- isctrnl function 533
- isdigit ctype function 613
- isdigit function 534
- isgraph ctype function 613
- isgraph function 534
- islowe function 534
- islower ctype function 613
- \_isnan function 534
- isprint ctype function 613
- isprint function 534
- ispunct ctype function 613
- ispunct function 535
- isspace ctype function 613
- isspace function 535
- isupper ctype function 613
- isupper function 535
- isxdigi function 535
- isxdigit ctype function 613

## J

- j0 function 536
- j0f function 536
- j1 function 536
- j1f function 536
- jbal instruction 268
- jmpbuf type 501
- jn function 537
- jnf function 537
- jrnd48 function 537

## K

K&R mode 68, 80, 602, 604  
kernel mode  
    *See* VxWorks  
key function for a virtual function table 185  
keywords  
    asm 165, 602  
        using to embed assembly code 291  
    catch  
        disabling exceptions 83  
        flagging as error 245  
        if user-defined identifier, may necessitate  
            modification of program 242  
    catch C++ 83, 206, 242  
    const  
        compatibility mode 602  
        help optimizer 203  
    delete C++ 242  
    extended as synonym for long double 96, 149  
    extern 381, 382  
    friend C++ 242  
    inline 96, 210  
        C++ 242  
        optimization, C++ 204  
    interrupt 96, 150  
    namespace C++ 107  
    new C++ 242  
    operator 242  
    \_\_packed\_\_ 151  
        specify structure padding 151  
        specifying structure padding 144  
    packed 96, 151, 180  
    pascal 96, 152  
    private 187, 242  
    protected 187, 242  
    public 187, 242  
    recognize new 95  
    register 101  
        has priority 187  
        using to declare variables 205  
    signed  
        and compatibility mode 602  
        in basic data types 178  
        using to make bit-fields signed 180

static 203, 381  
template C++ 242  
this C++ 242  
throw C++ 83, 206, 242, 245  
try C++ 83, 206, 242, 245  
try, disabling exceptions 83  
\_\_typeof\_\_ 152  
unsigned, in basic data types 178  
using C++ 107  
virtual C++ 242  
void 242  
volatile 104, 204, 236  
    compatibility mode 602  
    in an embedded environment 293  
    use for variables 277  
kill function 290, 537  
krand48 function 538

## L

@l unary assembler operator 333  
-l linker option, specify library or process file 46  
-L option 46, 304, 312, 344  
    .eject assembler directive 344  
    .list assembler directive to turn on listing  
        lines 351  
    search path for -l 395  
-l option 304, 311, 395, 399  
    ddump 461  
    .eject assembler directive 344  
    example 389  
    .list assembler directive to turn on listing  
        lines 351  
    specifying file extension 312  
    use with -Y L 398  
    use with -Y P 399  
    use with -Y U 399  
-lcrt0.o startup module  
    specifying with -YP option 389  
l3tol function 538, 543  
l64a function 538  
labels 318  
    *See also* local symbols  
    "start", in crt0.s 280

- colon optional 318
- for branch instructions, generating 322
- unique, generating in macros 365
- labs absolute value function 538
- LC\_ALL constant 562
- LC\_COLLATE constant
  - setlocale function 562
  - strcoll function 566
- LC\_MONETARY constant 562
- .lcnt assembler directive 351
- LC\_NUMERIC constant 562
- .lcomm assembler directive 343, 351
  - indicating use of with string COMM 255
- lcong4 function 532
- lcong48 function 516, 538, 542, 549
- LC\_TIME constant 562
- \_\_LDBL\_\_ preprocessor predefined macro 132
- ldexp function 539
- ldexpf function 539
- ldiv function 502, 539
- ldiv\_t type 502
- leaf functions do not use stack space 191
- \_lessgreater function 539
- lfind function 540
- libc.a library 377
  - ttof::cross option 289
- libc.a standard C library master file 488
- libc.a, standard C library master file 13
- libcfp.a floating point library 14, 485, 488
- libchar.a basic character I/O library 13, 27, 29, 287, 485, 488
- libcomplex.a
  - C++ complex math class library 14
  - directory location 488
  - supplied with tools 485
- libd.a C++ additional standard library 13, 485, 488
- libdk\*.a thread sub-library 14, 486, 489
- libdold.a C++ additional standard library 485
- libg.a debugger library
  - removing dependency 78
- libi.a standard C library 13, 485, 488
- libimpfp.a compiler support library 14, 485, 488
- libimpl.a compiler support library 13, 486, 488
- libios.a math library 14, 488
- libm.a math library 14, 486, 488
- libpthread.a thread library 14, 486, 489
- libram.a RAM disk I/O library 13, 27, 29, 287, 486, 488
- libraries
  - 64-bit 489
  - abridged C++ 240, 486
  - ANSI C, functions disregarded, -Xclib-optim-off 71
  - basic character input output, part of libc.a 488
  - C++
    - iostream class 486
    - nonstandard 241, 483, 497, 504
    - selecting 240
  - C89, C99 97
  - C99
    - nonstandard 483, 497, 504
  - C99 and C++ documentation on 483, 497, 503
  - ELF "far" root directory 14, 489
  - ELF little-endian root directory 14, 489
  - ELF root directory 12
  - exception handling 285
  - floating point
    - hardware 14, 489
    - libcfp.a 488
    - software 14
    - stubs, libcfp.a 14, 488
  - function, raise 285
  - iostream C++ class 14, 488
  - iostream.a, C++ iostream class 486
  - L option specifying path for -l 395
  - libc.a 13, 377
  - libc.a standard C library master file 488
  - libc.a, standard C library master file 13
  - libcfp.a, floating point 14, 485, 488
  - libchar.a, basic character I/O 13, 27, 29, 287, 485, 488
  - libcomplex.a
    - directory location 488
    - supplied with tools 485
  - libcomplex.a, C++ complex math class 14
  - libd.a, additional standard C++ 13, 485, 488
  - libdk\*.a, thread sub-libraries 14, 486, 489
  - libdold.a, additional standard C++ 485
  - libg.a, debugger 13
    - removing dependency 78

- libi.a standard C 13, 485, 488
- libimfpf.a, compiler support 14, 485, 488
- libimpl.a, compiler support 13, 486, 488
- libios.a, math 14, 488
- libm.a, math 14, 486, 488
- libpthread.a, thread 14, 486, 489
- libram.a, RAM disk I/O 13, 27, 29, 287, 486, 488
- libstl.a 14, 486
- libstlabr.a 486
  - rebuilding 495
- libstlstd.a 14, 486
  - rebuilding 495
- libstlstd.a, math
  - directory location 489
- libwindiss.a support for instruction-set simulator 13
- libwindiss.a supporting instruction set simulator 488
- MIPS64 14
- missing symbols 50
- object (archives) 11
- RAM-disk input output, part of libc.a 488
- rebuilding 494
- search paths 29
  - selecting with environ part of -t option 27
- shared
  - .a and .so files 405
  - Bsymbolic option 394
  - rpath option 397
  - soname option 398
  - Xbind-lazy option 399
  - Xdynamic option 401
  - Xexclude-libs option 402
  - Xexclude-symbols option 402
  - Xpic option 111
  - Xshared option 405
  - Xstatic option 405
- VxWorks 484, 503
  - windiss/libwindiss.a with RAM disk I/O 486
- libstl.a library 14, 486
- libstlabr.a library 486
  - rebuilding 495
- libstlstd.a directory location 489
- libstlstd.a library 14, 486
  - rebuilding 495
- libstlstd.a math library 489
- libwindiss.a library support for instruction-set simulator 13, 488
- license
  - setting proxy path 98
  - turning proxy off 97
  - waiting for 98
- licproxy 97, 98
- #line directive 251
- line feed (newline) escape sequence, '\n 324
- \_\_LINE\_\_ preprocessor predefined macro 132, 509
- .line section 633
- link
  - function
    - definition 540
    - RAM-disk support, causing two filenames to point to same file 290
- linkage and storage allocation 186–187
- linker
  - See also* default.dld linker command file
  - command file
    - assignment
      - definition 430
      - in section-definition 421
  - comments 417
  - default set, -Wm option 49
  - default.dld, example use of 390
  - definiton 286
  - example 411
  - expressions 415
  - GROUP definition 426
  - \_\_HEAP\_START, \_\_HEAP\_END defined in 283
  - identifiers, as symbols 414
  - MEMORY 416, 417
  - numbers 414
  - order of sections 422
  - pattern matching 413
  - section-definition 418
    - address specification 423
    - ALIGN specification 423
    - area specification 426
    - fill specification 425
    - LOAD specification 424



- OVERFLOW specification 425
    - section-contents 419
    - STORE statement 426
    - type specification 422
  - SECTIONS 416, 418
    - GROUP used within 418
  - STORE statement, in section-
    - definition 421
  - structure 416
  - symbols 414
  - syntax 412
  - command language
    - case (upper and lower) 414
    - memory allocation 271
    - pattern matching 413
    - syntax 412
  - dld, locating executable 11
  - example 127
  - link-time lint 98
  - options 391
  - resolving .comm symbols 322
  - syntax 412
- lint
- link-time lint 98
- lint facility, -Xlint 98, 229, 593
- \_\_lint preprocessor predefined macro 133, 500
- .list assembler directive 351
- list file
- line length
    - .llen assembler directive 352
    - .psize assembler directive 354
    - Xllen 313
  - page break margin, -Xpage-skip 313
  - page length
    - .lcnt assembler directive 351
    - .psize assembler directive 354
    - Xplen 313
  - preventing generation, -Xlist-off 311
- literal generation, setting delay of 312
- .literals assembler directive 351
- little- vs. big-endian object module format 26
- little-endian
- ELF libraries 14
- little-endian ELF libraries 489
- \_\_LITTLE\_ENDIAN\_\_ preprocessor predefined
- macro 132
- little-endian, #pragma pack 143
- .llen assembler directive 352
- .llong assembler directive 352
- llopt (assembly-level optimizer) 11, 51, 52
- lm option 505
- .lnk preprocessor 21
- %lo unary operator 333
- LOAD directive 434
- local
- optimization 5
  - symbols 322
    - generic style 322
    - GNU style 323
      - disabling, -Xgnu-locals-off 309
      - enabling, -Xgnu-locals-on 309
  - variable 211
- local data area 270
- and #pragma weak 148
- localeconv function 540, 562
- localtime function 540
- location
- alter with  $\tilde{Z}$  = 329
  - code and variables, #pragma section 147
  - configuration files, change standard 590
  - counter 328
    - alignment, specifying, -Xdefault-align option 346
  - header files, version\_path/include 498
- LOCKS\_PER\_SEC constant
- defining, time.h function 502
- log function 541
- log10 function 541
- log10f function 542
- \_logb function 541
- logf function 541
- long
- integers 610
  - type bit-fields 180
- .long assembler directive 352
- long float 602
- long long
- bit-fields 159
  - C dialects 602
  - constant, specify with LL or ULL suffix 151

- parameters in asm macros 169
- long long values
  - returned in \$2/\$3 193
- longjmp function 501, 542, 561
  - avoiding for safety 249
  - avoiding to improve optimization 205
  - definition under <setjmp.h> header file 499
  - Xjumpbuf-size 95
- loops
  - count-down optimization 215
  - invariant code motion optimization 219
  - maximum
    - nodes for loop unrolling 125
    - size defined 216
  - memory registerization 209
  - splitting 209
  - statics optimization 219
  - strength reduction optimization 215
  - testing, -Xtest-at-bottom, -Xtest-at-top and -Xtest-at both 123
  - unrolling
    - optimization 200, 201, 216, 220
    - Xsize-opt 118
    - Xunroll-size 200
  - unswitching 209
- lpragma.h 42, 47
- lpragma.h file 71
- lrand4 function 565
- lrand48 function 539, 542
- lsearch function 540, 542
- lseek function 543, 574
  - RAM-disk support, positioning file pointer 290
- ltol3 function 543

## M

- M option 46
- m option 395
  - ddump 462
- m2 option 395
- m4 option 395
- machine instruction statements, operand field format 319

- .macro assembler directive 352
- macros 363
  - See also* preprocessor predefined macros
  - \@ special parameter 365
  - \0 special parameter 365
  - assembler 165, 363
  - assert, assert function 509
  - assert, standard header files 498
  - command-line -D option) 41
  - concatenating parameters 365
  - defining 364
  - dumping symbol information 76
  - function-like 41
  - in pragmas 101
  - invoking 367
  - labels, generating unique 365
  - NARG symbol 366
  - object-like 41
  - parameters
    - names, separating from text 365
    - referencing by name 364
    - referencing by number 365
  - va\_arg 501
  - va\_end 501
  - vararg 162
  - va\_start 501, 578, 580
- magic integer, preceding virtual base classes 182, 184
- main function 281
  - define arguments for in embedded environment 294
  - in setup.c in embedded environment 294
  - .init code executing before 629
  - setup.c in embedded environment 294
  - three ways to define 612
- MAKESTARTUP environment variable,
  - defining 468
- mallinfo function 543
- malloc function 525, 544, 557
  - call with sbrk 283
  - checking free list 283
  - \_\_diab\_lib\_err called by 286
  - implementation-defined behavior 615
  - initializing allocated space 283

- old definition with <malloc.h> header file, use  
dlib.h> instead 498
  - thread-safe 293
  - \_\_malloc\_set\_block\_size function 544
  - malloc function 544
  - mangling
    - See name mangling
    - static data members 246
  - MATH functions require math library 505
  - matherr function 545
  - matherrf function 546
  - MB\_CUR\_MAX constant 547
  - mblen function 546
  - mbstowcs function 546
  - mbtowc function 546
  - mem declaration under <string.h> header file 499
  - members
    - alignment 181
    - functions 192
      - class name encoded in name 192
      - constructors 193
      - destructors 193
      - pointers to 193
    - static 187
    - struct 180
  - memcpy function 547
  - memchr function 547
  - memcmp function 547
  - memcpy function 548
  - memfile.c, create with setup program 294
  - memmove function 548
  - MEMORY command 416, 417
  - memory hole, fill value 341
  - memset function 548
  - .mexit assembler directive 352
  - mfix-vr4133 option 46
  - minor transformations optimization 217
  - MIPS instructions, enabling 105
  - \_\_mips preprocessor predefined macro 133
  - \_\_mips\_\_ preprocessor predefined macro 133
  - mips preprocessor predefined macro 133
  - \_\_mips16 preprocessor predefined macro 133
  - \_\_mips16\_\_ preprocessor predefined macro 133
  - MIPS16, mixing MIPS16 and MIPS32 code 197
  - MIPS32 Version 2 308
  - MIPS64
    - compiling assembler code for older  
targets 106
    - libraries 14
    - target support 25
  - mix C and assembler functions 291
  - mktemp function 548
  - mktime function 549
  - mnemonics
    - instruction 617
    - type specify with DOBJECT 16
  - modf function 549
  - modff function 549
  - Motorola
    - S-Record, ddump commands -R 462
  - mrnd48 function 539, 549, 565
  - multi-tasking support 293
    - errno variable, not re-entrant 293
    - malloc and free must be thread-safe 293
  - multi-threaded support assembler instructions 308
- ## N
- N noload access mode 264
  - N option 396
    - ddump 461
    - place .data immediately after .text 393
  - n option ddump 464
  - n\$ local symbols 322
  - n32
    - calling conventions 76
    - specify n32 calling conventions with -  
Xconventions-n32 76
  - .name assembler directive 353
  - name mangling 242, 246
    - avoid in function names 291
    - demangle names with ddump -F 249
    - for cross-module optimization 208
    - table of type encodings for C++ 247
  - namespace C++ keyword 107
  - namespaces
    - compiler implementation 245
    - mangling 246
  - NAN floating point constant 325

NARG macro symbol 366  
NDEBUG preprocessor predefined macro 509  
near-absolute addressing mode 268  
near-code addressing mode 268  
    *See also* addressing modes  
near-data addressing mode 268  
    *See also* addressing modes  
new  
    array operator 245  
    C++ keyword 242  
    compiler frontend 72  
Newline character 325  
NEXT pseudo function definition 416  
\_nextafter function 550  
nm (GNU utility) 462  
no\_alias pragma 141, 204  
nodes  
    inlining functions 94  
    loop unrolling 125  
\_nofp preprocessor predefined macro 133  
.nolist assembler directive 353  
NOLOAD 423  
noload access mode 264  
\_\_no\_malloc\_warning 525, 557  
non-static member function 192  
non-virtual member function 182  
no\_pch pragma 250  
no\_return pragma 205  
no\_return pragma function, no return  
    promised 141  
noreturn, no\_return (\_\_attribute\_\_ keyword) 156  
no\_side\_effects (\_\_attribute\_\_ keyword) 157  
no\_side\_effects pragma 142, 205  
nrand48 function 550  
NULL  
    constant  
        defining, stlib.h function 502  
        defining, stddef.h function 502  
        defining, stdio.h function 502  
        defining, string.h function 502  
    macro, implementation-defined behavior 613  
    pointer 178  
        dereferences 237  
null pointer-to-member function 185  
null-terminated array of pointers 613

## O

O COMDAT access mode 263  
.o file extension 21  
    keeping object files 95  
    object module 21  
-O option 46, 51, 52, 96, 128, 201, 236  
    optimize code 46  
    with environment variable DFLAGS 17  
-o option 47, 128, 302, 304, 396  
    ddump 461, 464  
    example 389  
o, assembler octal constant suffix 324  
O\_APPEND constant, defining, fcntl.h  
    function 501  
object  
    files  
        converter and dumper, ddump 11  
        converting to Motorola S-Records, ddump -  
            R command 462  
        dar archives 450  
        keeping 95  
        libraries (archives) 11  
        module format  
            ELF 26  
            endianity, big vs. little 26  
            selecting 26  
object-like macros 41  
offsetof function 550  
O\_NDELAY constant, defining, fcntl.h  
    function 500  
opcodes  
    assembler directives 319  
    case sensitivity in D-AS 319  
    instructions 319  
    syntax rules 319  
open function 295, 500, 520, 550  
    calling with create function 289  
    definition under <fcntl.h> header file 498  
    RAM-disk support, opening file 290  
operand field 342  
operands  
    addressing modes 618  
    field, syntax rules 319  
    spaces between

- allowing, -Xspace-on 314
  - disallowing, -Xspace-off 314
- operator keyword 242
- operators
  - assembler, precedence 336
  - binary, table of 336
  - compound (like +=) not allowed for volatile
    - members in packed structures 144
  - constructor 243
  - delete 193
  - delete array 245
  - destructor 243
  - new array 245
  - precedence, assembler, table of 336
  - sizeof 126, 161
    - defining, stddef.h function 502
    - defining, stdio.h function 502
    - defining, stdlib.h function 502
    - defining, string.h function 502
- optimization
  - access static and global variables
    - conservatively 75
  - additional loop 222
  - argument
    - address 211
  - assembly-level 11, 51, 52
  - assignment 212
  - basic reordering 221, 223
  - branch complex 215
  - C function calls 71
  - cache 400, 427
  - coding techniques 202
  - common tail 213
  - complex branch 223
  - constant and variable propagation 214, 223
  - control via parameter setting 86
  - cross-module (intermodule, whole
    - program) 72, 206
  - device driver failure 104
  - disable with
    - alloca 160
    - g or -Xoptimized-debug-off 109
    - setjmp and longjmp 205
    - volatile keyword 204
    - Xkill-opt 96, 208
    - Xkill-reorder 96, 221
  - disabling with asm string statements 173
  - effectiveness 203
  - enable 128
    - Xargs-not aliased 66
  - examples 223
  - expose uninitialized variables 236
  - extend 218
  - failure with parameter modifications in asm
    - macros 167
  - feedback 220
  - for size, -Xsize-opt 118
  - function-level 4
  - global 5, 6
    - common subexpression elimination 216, 223
  - guidelines for 201
  - hints 199–206
  - if-else clause 220
  - inlining 4, 200, 210, 218, 220
    - function 223
  - interprocedural 109, 200, 201, 218, 608
    - register allocations 4
  - invoke 46
  - levels 608
  - llopt 11, 51, 52
  - local 5
  - loop
    - count-down 215, 223
    - invariant code motion 219
    - statics 219
    - strength reduction 223
    - unrolling 200, 201, 216, 220
  - minor transformations 217
  - peephole 11, 222, 223
    - reaching analysis 222
  - program-level 4
  - reaching analysis 4
  - register, coloring 217
  - remove entry and exit code 218, 223
  - selecting levels of, DFLAGS 593
  - space vs. speed 200
  - static function 220
  - structure members 212
  - tail call 213

- tail recursion 209
- target-dependent 221
  - done by reorder program 221
- target-independent 208
- undefined variable propagation 216
- unused assignment deletion 217, 223
- use scratch registers for variables 218, 223
- variable live range 214
- vs. compilation speed 200
- Xargs-not-aliased 66
- Xblock-count and -Xfeedback used as guide 201
- Xlint 229
- Xlocal-data-area, operation 270
- Xrestart, start over 115
- optimizations
  - loop
    - strength reduction 215
- optimized code, invisible objects 249
- optimizer
  - llopt 11, 51, 52
  - recompile without -O option 236
  - remove `__ERROR__` function 160
- OPTIONAL section type specification 423
- options
  - appearing more than once 36
  - assembler 303
  - case sensitivity 37
  - compiler 39, 54
    - Xoptions 55
  - disabling 55
  - displaying 40, 47, 54
  - linker 391
  - pragma 142
  - quoting on command line 37
  - writing on command line 36
- O\_RDONLY constant
  - setting values, open function 550
- O\_RDONLY constant, defining, `fcntl.h` function 500
- O\_RDWR constant
  - defining, `fcntl.h` function 500
  - values of, open function 551
- .org assembler directive 329, 353
  - in location counters 329

- `__outchar` function 288
- output
  - assembly 41, 129
  - standard, redirect to file, `-@E` 54
- OVERFLOW
  - constant 545
  - specification 425
- O\_WRONLY constant
  - defining, `fcntl.h` function 500
  - values of, open function 550

## P

- P compiler option, preprocessor, stopping after 21
- P option 40, 47
- p option
  - ddump 462, 464
- p option ddump 462, 464
- p2 option ddump 461
- .p2align assembler directive 353
- pack pragma 143
- packed (`__attribute__` keyword) 157
- `__packed__` keyword 151
  - specify structure padding 144, 151
- packed keyword 96, 151, 180
- pad sections 328
- .page assembler directive 353
- .pagelen assembler directive 353
- pascal keyword 96, 152
- PCC mode 80, 604
- PCH files 250
- pedantic mode (C/C++) 120
- pererror
  - function 551
  - message, implementation-defined behavior 614
- PIC initializers 273
- %pichi unary operator 334
- %piclo unary operator 334
- %picoff unary operator 334
- %pidhi unary operator 334
- %pidlo unary operator 334
- %pidoff unary operator 334
- pipe function 520

- .plen assembler directive 354
- PLOSS constant 545
- pointers
  - arithmetic 126
  - basic data type, size and alignment 178
  - global 619
  - implementation-defined behavior 611
  - NULL 178
  - stack 196
  - to members
    - argument passing 192
    - as arguments and return types 192
    - types, explanation 184
  - to static member function 182
- port programs 294, 601–604
- position-independent code (PIC) 119
  - \$23 register, pointer to code section 195
  - achieve using code relative addressing
    - modes 261
  - address initializer
    - Xstatic-addr-error 119
    - Xstatic-addr-warning 119
  - generate with
    - Xcode-relative-... 73
  - generate with -Xcode-relative-... 277
  - use to provide load-time allocation 272
- position-independent code and data (PIC and PID) 271
- position-independent data (PID)
  - \$28 register, global pointer 196
  - achieve using data relative addressing
    - modes 261
  - generate with -Xdata-relative-... 77, 277
- POSIX reference 505
- pow function 551
- powf function 551
- #pragma no\_side\_effects, example 205
- pragmas 137–??
  - align for structures 137
  - compile-time 277
  - contract 137
  - control code generation 276
  - directives, use with asm macro 168
  - error 138
  - global\_register, preserve across function
    - calls 138
  - hdrstop 139, 250, 251
  - ident 139
  - info 139
  - inline 139, 204, 210
    - versus inline keyword in C++ 210
  - interrupt 140, 150, 285
    - compiler option for embedded
      - development 277
  - macros 101
  - no\_alias 141, 204
  - no\_pch 250
  - no\_return 141, 205
  - no\_side\_effects 142, 205
  - pack for structures 143, 277
  - pure\_function 147
  - section 147
    - C++ limitations 255
    - causing compiler to generate sections 381
    - compiler option for embedded
      - development 277
    - in hardware exception handling 285
    - use to specify a variable be placed at an
      - absolute address 291
  - use\_section 253
  - weak 148
    - COMDAT symbol may be treated as 383
- precedence, assembler operators 336
- precompiled headers 249
- predefined macros
  - See preprocessor predefined macros
- preprocessor 51
  - assembly files 111
  - cpp
    - defaults 21
    - W compiler option, with 50
  - ctoa 21
  - errors, treatment of 604
  - selecting 112
- preprocessor directives 137–??
  - #align 137
  - #assert 134
  - #define 41
  - #elif 135

- `#endif` 604
- `#error` 135
- `#ident` 136, 139
- `#if` 135, 612
- `#ifdef` 136, 242
- implementation-defined behavior 612
- `#import` 136
- `#include` 45
  - See also `#import` preprocessor directive
  - treat as `#import` directive 91
- `#info` 136
- `#inform` 136
- `#informing` 136
- `#pack` 143
- `#pragma`
  - See pragmas
- `#unassert` 134
- `#undef` 48
- `#warn` 137
- `#warning` 137
- preprocessor predefined macros
  - `__BIG_ENDIAN__` 131
  - `__bool` 131
  - `__CHAR_UNSIGNED__` 132
  - `__cplusplus` definition 132
  - `__DATE__` 132
  - `__DCC__` 132
  - `__DCPLUSPLUS__` 132
- defaults predefined in dttools 592
  - `__DIAB_TOOL` 132
  - `__ETOA__` 132
  - `__ETOA_IMPLICIT_USING_STD` 132
  - `__ETOA_NAMESPACES` 132
  - `__EXCEPTIONS__` 132
  - `__FILE__` 132, 509
  - `__FUNCTION__` 132
  - `__hardfp` 132
  - `__LDBL__` 132
  - `__LINE__` 132, 509
  - `__lint` 133, 500
  - `__LITTLE_ENDIAN__` 132
- macro arguments replacing in strings 604
  - `__mips` 133
  - `__mips__` 133
  - `__mips16` 133
  - `__mips16__` 133
  - name, defining with `-D` option 41
  - `NDEBUG` 509
  - `__nofp` 133
  - `__PRETTY_FUNCTION__` 133
  - `__RTTI` 133
  - `SBRK_SIZE`
    - See also `sbrk` function 283
  - `__SIGNED_CHARS__` 133
  - `__softfp` 133
  - `__STDC__` 133
  - `__STRICT_ANSI__` 133
  - suppress extra spaces 76
  - `__TIME__` 133
  - `__wchar_t` 134
- preprocessors
  - `das` 21
  - `dld` 21
  - `etoa` 21
  - `.lnk` 21
- preserved registers 195, 619
- `__PRETTY_FUNCTION__` predefined
  - identifier 133
- `.previous` assembler directive 354
- print statement, configuration language 599
- `printf` function 520, 552
- private keyword 187, 242
- `__PROCEDURE_LINKAGE_TABLE__` symbol
  - created by linker 379
- PROFILE command 427
- profiling
  - in an embedded environment 296
  - information generating, `dbcnt` 11
  - `-Xblock-count` 68
  - `-Xfeedback` 85
  - `-Xprof-exec`, with RTA 113
  - `-Xprof-feedback`, with RTA 113
  - `-Xprof-snapshot`, with RTA 115
- program-level optimization 4
- programs
  - port existing 294
  - reorder 221
  - `setup.c`, initializes arguments, variables, and files in an embedded environment 294



protected keyword 187, 242  
 prototypes  
   force, -Xforce-prototypes 87  
   placement of sections 267  
 .psect assembler directive 354  
 .psize assembler directive 354  
 ptrdiff\_t type 502  
 public keyword 187, 242  
 pure, pure\_function (\_\_attribute\_\_ keyword) 157  
 pure\_function pragma 147  
 putc function 524, 555  
 putchar function 555  
 putenv function 555  
 puts function 555  
 putw function 556

## Q

q, assembler octal constant suffix 324  
 qsort function 556  
 qualifiers, implementation-defined behavior 611  
 quoting command-line values 37

## R

-R assembler option 304  
 -R linker option 397  
 -r option 396  
 -R option, ddump 462  
 -r option, ddump 462, 463  
 -r2 option 396  
 -r3 option 396  
 -r4 option 396  
 -r5 option 396  
 raise function 556  
   in embedded environment 285  
 RAM-disk files 289, 294  
 rand function 556  
 RAND\_MAX constant 556  
 .rdata assembler directive 354  
 .rdata section 269  
   allocation of const variables 258

  allocation of strings 258  
 read function 505, 557  
   RAM-disk support, reading buffer 290  
 read-only data in .rdata section 327  
 realloc function 525, 557  
   implementation-defined behavior 615  
 rebuilding the libraries 494  
 REENT functions are reentrant 505  
 reentrant library functions (multi-tasking support) 293  
 REERR functions modify errno 505  
 register keyword 101  
   has priority 187  
   using to declare variables 205  
 register list line 170  
 registerization 209  
 registers 194  
   \$23 set to \_SDA2\_BASE\_ 195  
   \$28 set to \_SDA\_BASE\_ 196  
   and software names, table of 618  
   assigning variables to 160  
   attribute 604  
   C0\_EPC 108  
   C0\_SR 108  
   coloring optimization 217  
   floating point only even-numbered are used 194  
   global assignments 139  
   I/O, in absolute sections 266, 292  
   implementation-defined behavior 611  
   lower preserved 138  
   preserved 619  
   reserved, compiler using only addressing modes that are relative to 272  
   scratch 140  
     use for variables 218  
   software and hardware names, table of 618  
   storage class 611  
   struct members, implementation-defined behavior 611  
   temporary 194, 618  
   tracking 109  
   union members, implementation-defined behavior 611  
   use, table of 194

- variables 138
- regular expressions
  - compiling 513
- relocatable expressions 332
- relocation
  - data 272
  - information, selecting format 401
  - types, table of 268
- remove
  - entry and exit code optimization 218
  - unused sections 404
- remove function 557
  - implementation-defined behavior 614
- rename function 557
  - implementation-defined behavior 614
- reorder
  - optimizer subprogram 46, 51, 52, 96
  - program
    - input assumed to be correct 221
    - target-dependent optimization 221
- reserved
  - registers, compiler using only addressing modes that are relative to 272
  - storage 329
- restrictions for position-independent code (PIC) 273
- result passing
  - See return results
- return escape sequence, '\r' 324
- return results
  - class 194
  - struct 194
  - union 194
- returning results
  - in \$2-\$3, temporary registers 194
  - in \$f0-\$f2, temporary registers 197
- rewind function 558
- .rodata assembler directive 354
- .rodata section 269
- rpath linker option 397
- RTP
  - See VxWorks
- rtp execution environment (VxWorks) 28
- RTTI
  - See run-time type information

- \_\_RTTI preprocessor predefined macro 133
- run-time
  - error checking, -Xrtc 115
  - initialization 284
- run-time type information
  - control with -Xrtti, -Xrtti-off 115
- RW access mode
  - See also access modes
  - See access modes
- RX access mode
  - See also access modes

## S

- .s files, assembly source 21, 95, 166
- S option 47, 95, 129
  - compiler, stopping after 21
  - ddump 463
  - generate assembly file 166
- s option 397
  - ddump 463
  - suppress symbol table information 378
- sbrk function 283, 412, 558
- .sbss
  - assembler directive 354
  - section 327, 379
    - R, -v suppressing 462
- .sbss section
  - See sections
- .sbttl assembler directive 355
- \_scalb function 558
- scanf function 558, 580
- %scaoff unary operator 334
- SCOMMON sections 382
  - explicit placement 421
- SCONST section class 118
  - See section classes
  - "text" or "data" 269
  - with -Xconst-in-text mask bits 269
  - Xconst-in-data same as -Xconst-in-text=0 270
- scope of for statement initialization part 87
- scratch register 140
  - use for variables 218
- \_SDA2\_BASE\_ symbol

- See also Small Constant Area, `__SDA2_BASE__` 195
- `__SDA2_BASE__`, `__SDA2_BASE__` symbols created by linker 379
- `__SDA_BASE__` 379
- `__SDA_BASE__` symbol
  - See also Small Data Area, `__SDA_BASE__` 196
  - created by linker 380
- `__SDA_BASE__`, `__SDA_BASE__` symbols created by linker 379
- `%sdaoff` unary operator 334
- `.sdata`
  - assembler directive 355
  - section 269, 328
    - pointed to by `a5` 379
- `.sdata` and `sdata` symbols created by linker 379
- SDATA section class 118
  - See section classes
- `.sdata2`
  - assembler directive 355
  - section 269, 328
    - pointed to by `$23` 379
- search path
  - header files 44
  - library files 395
  - libraries 29
- `.section`
  - assembler directive 328, 355
- section (`__attribute__` keyword) 157
- `.section` assembler directive
  - aligning ELF 328
  - using `istring` 255
- section classes
  - BTEXT
    - alternative specifications 423
  - CODE, default attributes 258
  - CONST
    - alternative specifications 422
    - default attributes 258
    - value of RW 264
    - with `const` variables 269
    - with `-Xconst-in-text` option 269
  - DATA
    - alternative specifications 422
    - locating initialized vs. uninitialized 265
    - with linker created symbol, `_edata` 379
  - DATA, default attributes 258
  - SCONST
    - default attributes 258
    - value of RW 264
    - with `-Xconst-in-text` mask bits 269
  - SDATA, default attributes 258
  - STRING
    - default attributes 258
    - with `-Xconst-in-text` mask bits 269
  - TEXT, alternative specifications 422
  - user-defined 258
- `.section n` assembler directive 356
- section `.warning` 384
- section-definition
  - See linker command file, section-definition 418
- `.sectionlink` assembler directive 357
- sections
  - `.abs.nnnnnnnn`
    - absolute sections 329
    - definition 353
    - producing, `.org` 329
  - absolute, advantages 266
  - alignment of output sections 403
  - `.bss`
    - clearing using `init.c` 281
    - common blocks appended to 381
    - common blocks appending to 381
    - common symbols allocating 320, 322
    - common symbols allocating for use by linker 320
    - controlling allocation of uninitialized variables 69
    - displaying size, `ddump -S` 463
    - holding common blocks not defined in `.text` or `.data` 378
    - holds common blocks not defined in `.text` or `.data` 378
    - `.lcomm` assembler directive allocating 351
    - linker allocating storage for common symbols 322
    - `-R`, `-v` suppressing 462
    - switching output 342
    - `-Xlocal-data-area` may suppress

- storage 101
- classes
  - CONST
    - Xconst-in-data same as -Xconst-in-text=0 270
  - SCONST
    - "text" or "data" 269
    - section 118
  - SDATA
    - section 118
  - STRING
    - "text" or "data" 269
    - value of RW 264
  - user-defined 256
  - X options direct addressing mode 262
- COMDAT
  - 'o' type in .section assembler directive 356
  - definition COMDAT section
    - See also* sections
  - incremental linking, -r5 397
  - treatment by linker 382
  - with implicit templates 244
- COMM, allocation of static variables 258
- COMMENT
  - linker, specifications 422
- .comment
  - appending character string, .ident
    - assembler directive 348
  - with -s linker option 397
- COMMON
  - explicit placement 421
  - linker 381
- .data 269
  - allocation of static variables 258
  - allocation of user-defined sections 258
  - copying initial values to, using init.c 281
  - displaying size, ddump -S 463
  - r13 register as a pointer to 272
  - restrictions on using -Xcode-relative-near-all 272
  - using -Bd to allocate 393
  - using -N to allocate immediately after
    - .text 396
  - using -N to place immediately after
    - .text 393
  - with -Xbss-off compiler option 69
  - Xlocal-data-area 101
- .fini in crt0.s 281
- .frame\_info 384
- .init in crt0.s 281
- .line 633
- OPTIONAL 423
- order, ensuring with GROUP 426
- padding and fill 328
- placement, with prototypes 267
- pragma 147
- predefined 256
- .rdata 269
  - allocation of const variables 258
  - allocation of strings 258
- removing unused 404
- .rodata 269
- .sbss 327, 379
  - "small" common blocks appending 382
  - allocating 355
  - allocation of static variables 258
  - R, -v suppressing 462
- .sbss, "small" common blocks appended to 382
- SCOMMON 382
  - explicit placement 421
- .sdata 269, 328
  - pointed to by a5 379
- .sdata2 269, 328
  - pointed to by \$23 379
- .shstrtab string table 635
- .strtab string table 635
- .symtab 633
- .text
  - Bt, use with 393
  - displaying size, ddump -S 463
  - use -N to allocate immediately before
    - .data 396
  - Xstrings-in-text 277
- types
  - BSS 422
  - TEXT 379
- SECTIONS command 416, 418
  - GROUP used within 418
- seed4 function 516
- seed48 function 532, 542, 549, 561

- SEEK\_CUR constant 543
- SEEK\_END constant 543
- SEEK\_SET constant 543
- select target 302
  - configuration 23, 29
- separate compilation 128
- .set (equ) assembler directive 358
- .set (let) assembler directive 358
- .set assembler directive 357
  - alternative to .equ 358
  - and -Xset-reorder 314
  - at 357
  - instead of .equ 346
  - macro 357
  - mips16 357
  - mips32 357
  - noat 357
  - nomacro 357
  - symbol, define 320
  - symbol, define, alternative to .equ directive 358
- .set option assembler directives available 357
- setbuf function 561
- setenv function, implementation-defined behavior 615
- setjmp function 501, 542, 561
  - avoiding for safety 249
  - avoiding to improve optimization 205
  - compatibility 604
  - definition under <setjmp.h> header file 499
  - Xjumpbug-size, with 95
- setlocale function 561
- setup program
  - initialize arguments, variables and files in an embedded environment 294
  - output used by init.c 282
- setvbuf function 562
- shared libraries
  - .a and .so files 405
  - Bsymbolic option 394
  - rpath option 397
  - soname option 398
  - Xbind-lazy option 399
  - Xdynamic option 401
  - Xexclude-libs option 402
  - Xexclude-symbols option 402
  - Xpic option 111
  - Xshared option 405
  - Xstatic option 405
- short
  - initialized data in .sdata section 328
  - uninitialized data in .sbss section 327
- .short assembler directive 358
- short type bit-fields 180
- .shstrtab string table section 635
- SIGABRT signal 506
- sig\_atomic\_t type 501
- sigjmpbuf type 501
- siglongjmp function 501
- signal function 291, 563
- signed keyword
  - and compatibility mode 602
  - in basic data types 178
  - using to make bit-fields signed 180
- \_\_SIGNED\_CHARS\_\_ preprocessor predefined macro 133
- sigsetjmp function 501
- sigset\_t type 501
- simple execution environment 27
- simple libc.a subdirectory 488
- simple target execution environment, basic character input/output 27
- simple/libc.a subdirectory 13
- simulator windiss 469
- sin function 563
- sinf function 563
- SING constant 545
- single quote escape sequence, ' 325
- sinh function 563
- sinhf function 564
- .size assembler directive 358
- size of
  - character constant in C and C++ 242
  - enum in C, C++ 242
- sizeof
  - operator 126, 161
    - defining, stddef.h function 502
    - defining, stdio.h function 502
    - defining, stdlib.h function 502
- SZEOF pseudo function, definition 416

- `.sizeof.section-name` symbol created by linker 379
- `size_t` type
  - `stddef.h` 502
  - `stdlib.h` 502
  - `string.h` 502
- `.skip` assembler directive 329, 358
- `.skip size`, p. 34 342
- Small Constant Area
  - not supported traditionally 258
  - `_SDA2_BASE_` symbol
    - \$23 register points to 195
    - defined by linker 195
  - `-Xsmall-const` defines variable size 277
- small constant static variables 118
- Small Data Area 380
  - data missing from 259
  - excluding symbols 260
  - fast access even with `-Xdata-relative-far` 77
  - `_SDA_BASE_` symbol
    - \$28 register points to 196
    - defined by linker 196
  - with `-Xdata-relative-far` 263, 273
  - `-Xdata-relative-far`, with 263, 273
  - `-Xsmall-data` defines variable size 277
- small variables in SDA \$28 register points to 196
- `.so` files, *see* libraries, shared
- `__softfp` preprocessor predefined macro 133
- software floating point
  - float values returned in \$2, double values in \$2/\$3 193
- `-soname` linker option 398
- sorted sections, input section order, definition 383
- source, including in assembly code, `-Xpass-`
  - source 110
- `.space` assembler directive 359
- space optimization 213
- spaces between operands
  - allowing, `-Xspace-on` 314
  - not allowed, `-Xspace-off` 314
- `__SP_END` symbol, stack end initialized to
  - in `bubble.c` 412
- `__SP_INIT` symbol, stack start initialized to 283
  - in `bubble.c` 412
- `sprintf` function 564, 580
- `sqrt` function 564
- `sqrtf` function 564
- `srand` function 565
- `srand48` function 516, 532, 542, 549, 565
- `src`
  - directory, source files 287
  - subdirectory 12
- `-ss` option 397
- `sscanf` function 565, 580
- `ssize_t` type, defining, `stdio.h` function 502
- stack
  - alignment 191
  - initialization, by `__SP_INIT` symbol 283
    - in `bubble.c` 412
  - layout 190
  - overflow check, `-Xstack-probe` 119
  - pointer 196, 619
- standard
  - addressing mode
    - See also* addressing modes
  - header files, table of 498
- standard addressing mode 268
- standards
  - C++, conformance to 6
  - conformance to 6, 601
- "start" label in `crt0.s` 280
- `.startof.section-name` symbol created by linker 379
- startup
  - module
    - See* `crt0.o` startup module
- startup and termination 278
  - `crt0.s` 278
- startup module `-l:crt0.o`, specifying with `-YP` option 389
- statements
  - `asm` string, disabling optimizations 173
  - assignment with `-WD` compiler option 49
  - configuration language
    - `break` 600
    - `case` 600
    - `exit` 598
    - `include`, definition 599
    - `print` 599
    - `switch` 599
  - for initialization part scope 87
  - `switch`

- implementation-defined behavior 612
  - table vs. compares 122
- static
  - allocate variables 186
  - data 147
  - function optimization 220
  - function, outside any function, but inside a C++
    - class definition 187
  - keyword 203, 381
  - member 187
    - function 182
    - mangling 246
  - member function 182
  - objects 243
  - variables 138
    - constructors 243
    - destructors 243
    - initializers 273
    - modify with asm macro 168
    - vs. local 202
- static const variable with -Xcode-relative-far 73
- stdarg function 191
- \_\_STDC\_\_ macro 133
- stderr 525, 557
  - buffering 120
  - declaring, stdio.h function 502
  - redirect to file, -@E 54
- stdin file 530, 559
  - declaring, stdio.h function 502
- stdio function 533
- \_\_STD\_\_n termination functions 284
- stdout file 402, 552, 555
  - declaring, stdio.h function 502
- stdout redirect to file, -@E 54
- step function 513, 565
- sterror messages, implementation-defined
  - behavior 614
- \_stext and stext symbols created by linker 379
- \_STI\_\_n initialization functions 284
- stop on warning 406
- storage
  - classes, as permitted by scope 186, 187
  - mode for assembler macro parameters,
    - con 169
  - mode line 168
  - reserve 329
- STORE statement 421
- str\* declaration under <string.h> header file 499
- strcat function 565
- strchr function 566
- strcmp function 543, 566, 572
- strcoll function 562, 566, 572
- strcpy function 566
- strcspn function 567
- strdup function 567
- strerror function 567
- strftime function 562, 567
- Strict ANSI
  - C mode 80
  - C/C++ mode 120
  - \_\_STRICT\_ANSI\_\_ macro 133
- .string assembler directive 359
- string constants 76
  - assigning to variables 303, 325
  - configuration language 596
  - Xcharset-ascii 70
  - Xswap-cr 122
- STRING section class
  - See section classes
  - "text" or "data" 269
  - value of RW 264
  - with -Xconst-in-text mask bits 269
  - Xconst-in-data same as -Xconst-in-text=0 270
- strings
  - alignment, -Xstring-align 121
  - #ident 90
  - location, -Xconst-in-... 75
  - quoting on command line 37
- strlen function 568
- strncat function 569
- strncmp function 569
- strncpy function 569
- strpbrk function 569
- strrchr function 570
- strspn function 570
- strstr function 570
- .strtab string table section 635
- strtod function 570
- strtok function 571
- strtol function 571

- strtoul function 572
- struct
  - lconv 540
  - member 180
  - return type 194
  - scope in C++ versus C 242
- structure member alignment, -Xstruct-min-align, set minimum 122
- structures
  - align pragma 137
  - alignment 181, 182
  - alignment of members
    - changing with -Xbit-fields-compress-... 66
    - Xmember-max-align 104
    - Xstruct-max-align 104
    - Xstruct-min-align 122
  - assignment, -Xstruct-assign-split-... 121
  - byte-swapping 151
  - enum uses smallest type in packed 144
  - illegal references, error treatment of 603
  - implementation-defined behavior 611
  - initialization, -Xbottom-up-init 68
  - initialized, warning in PCC mode 602
  - initializers, incomplete parsing 603
  - maximum alignment 143, 151
  - members to registers optimization 212
  - minimum alignment 143, 151
  - pack pragma 143
  - \_\_packed\_\_ keyword 151
  - packed keyword 143, 151
  - padding 144
    - See also \_\_packed\_\_ keyword
  - minimize 181
  - with a zero-length bit-field 181
  - reducing size with -Xbit-fields-compress-... 66
  - return type 194
  - size 182
    - argument, -Xstruc-arg-warning 121
  - volatile member access not atomic in packed structures 144
- strxfrm function 562, 572
- .strz assembler directive 359
- subdirectories
  - host\_dir 11
  - name under version\_path 10
- include, standard header files for user programs 12
- target 12
- subprograms run by driver program, table of 21
- .subtitle assembler directive 359
- subtitle, defining, -Xsubtitle 315
- SVID reference 505
- swab function 572
- switch statements
  - configuration language 599
  - implementation-defined behavior 612
- .symbol assembler directive 358
- symbol table
  - including
    - all locals, -Xstrip-locals-off 314
    - certain locals, -Xstrip-temps-off 315
  - suppressing
    - all locals, -Xstrip-locals 314
    - certain locals, -Xstrip-temps 315
- symbols
  - "declared" when the assembler recognizes it as a symbol of the program 260, 320
  - "defined" when a value is associated with it 260, 320
  - .comm treating as undefined global 322
  - common
    - declaring, .comm assembler directive 321
    - storage allocated by linker 322
  - created by linker 260, 378
  - entry point 322
  - external
    - common 321
    - examples 321
    - ordinary 321
  - forcing linker to define 398
  - global
    - defining with =: 321
    - undefined, if not defined in same file 322
  - GNU style 323
  - linker command file 260, 414
  - local
    - generic style 322
    - GNU style 323
    - n\$ 322



- renaming in linker output 397
- restrictions 320
- syntax rules 320
- undefined, flagged in symbol table 321
- underscores added, -Xunderscore-... 124
- valid characters 320
- .symtab section 633
- syntax
  - assembler lines 317
  - comments 319
  - constants, integral 323
  - direct assignment statements 320
  - external symbols 321
  - floating point constants 325
  - format of an assembly language line 317
  - labels 318
  - local symbols 322
    - generic style 322
    - GNU style 323
  - opcode 319
  - operand field 319
  - symbols 320
- SYS functions provided by system 505
- sys\_errlist variable 551
- sys\_nerr variable 551
- system function, implementation-defined
  - behavior 615

## T

- T option 305
- t option 48, 305, 398, 591
  - changing, dctrl 30
  - ddump 463
  - setting configuration variables 588
  - table of values 24
- tab stops, default, -Xtab-size 315
- tail call optimization 213
- tail recursion optimization 209
- tan function 572
- tanf function 573
- tanh function 573
- tanhf function 573
- target
  - communicating with 291
  - configuration
    - selecting 23, 29
    - examples 28
  - configuration, changing the default 29
  - dependent optimization 221
  - environment variables 294
  - input/output support, selecting with environ
    - part of -t option 27
  - operating system support, special configuration
    - file selecting with environ part of -t
      - option 27
  - predefined files 294
  - processor, selecting 24
  - program arguments 294
  - select 302
  - subdirectory 12
  - target-dependent options
    - Refer to target User's Manual
    - Refer to release notes
  - tdelete function 573
  - tell function 574
  - templates
    - C++ keywords 242
    - class 243
    - function 243
    - instantiation
      - dplus, in 243
      - Ximplicit-templates-off 91
  - tempnam function 574
  - temporary
    - assembly file 95
    - files, DIABTMPDIR environment variable 17
    - registers 194, 618
  - .text assembler directive 359
  - .text section
    - See sections
    - Bt, use with 393
    - displaying size, ddump -S 463
    - use -N to allocate immediately before
      - .data 396
    - Xstrings-in-text 277
  - TEXT section class
    - See section classes
  - TEXT section type 379

tfnd function 574  
this C++ keyword 242  
thread-safe operation (multi-tasking support) 293  
throw C++ keyword 83, 206, 242, 245  
time function 291, 549, 574  
\_\_TIME\_\_ macro 133  
    precompiled headers 251  
.title assembler directive 359  
title, defining, -Xtitle 315  
TLOSS constant 545  
TMPDIR environment variable 452  
tmpfile function 575  
tmpnam function 575  
toascii function 575  
tolower function 576  
toupper function 576  
try C++ keyword 83, 206, 242, 245  
try keyword, disabling exceptions 83  
tsearch function 577  
.ttl assembler directive 360  
-ttof 48  
-ttof assembler, compiler, linker option 24  
-ttof option, target processor component 27  
-ttof:-cross option, part of libc.a library 289  
twalk function 577  
.type assembler directive 360  
typedef scope in C++ versus C 242  
typeid expression 245  
type\_info class definition 245  
typeinfo& expressions 245  
typeinfo.h C++ header file 245  
\_\_typeof\_\_ keyword 152  
types 501  
    bool  
        - Xbool-off disables 68  
        \_\_bool preprocessor predefined  
            macro 131  
        set type for 68  
    defining, fpos\_t function 502  
    div\_t 502, 515  
    generate debug information for unreferenced  
        types 79  
    identification, typeid 245  
    jmpbuf 501  
    ldiv\_t 502

ptfdiff 502  
sig\_atomic\_t 501  
sigjmpbuf 501  
sigset\_t 501  
size\_t  
    defining, stdio.h function 502  
    stddef.h 502  
    stdlib.h 502  
    string.h 502  
VISIT 577  
wchar, \_\_wchar\_t preprocessor predefined  
    macro 134  
tzset function 577

## U

-U option 48  
-u option 398  
    ddump 461, 462, 464  
.uhalf assembler directive 360  
.ulong assembler directive 360  
#unassert preprocessor directive 134  
#undef preprocessor directive 48  
undefined  
    global symbol 322  
    symbols, flagging in the symbol table 321  
    variable propagation optimization 216  
UNDERFLOW constant 545  
ungetc function 578  
uninitialized data  
    .bss section 327  
    containing in particular section, with  
        ustring 255  
unions  
    alignment 181  
    implementation-defined behavior 611  
    initialized, warning in PCC mode 602  
    return type 194  
    size 181  
UNIX  
    configuration variable DCONFIG 16  
    default installation pathname 10  
    directory separator character 597  
    environment variable DIABTMPDIR 17

- reference 505
- setting environment variables 16
- standard name, location of main configuration file 590
- unlink function 578
  - RAM-disk support, removing a file 290
- \_unordered function 578
- unsigned
  - keyword, in basic data types 178
  - long long variable type 151
- unused assignment deletion optimization 217
- use scratch registers for variables optimization 218
- user modifications 278
- user.conf configuration file
  - description 12
  - dtools.conf configuration file, simplified structure 592
- user-defined section class 256
  - See section classes
- use\_section pragma 253
- .ushort assembler directives 360
- using C++ keyword 107
- .uword assembler directive 361

## V

- V option 48, 305, 398
  - ddump 463
- v option 48
  - ddump 461, 462, 464
- va\_arg macro 501
- va\_end macro 501
- va\_list type 501
- values
  - double returned in \$2/\$3 193
  - float returned in \$2 193
  - floating point returned in \$f0 register with hardware floating point 193
  - long long returned in \$2/\$3 193
- vararg macros 162
- varargs function 191
- variable live range optimization 214
- variables
  - absolute, accessing at specific addresses 292
  - absolute, accessing with symbolic debugger 266
  - access at specific addresses 291
  - allocation on stack, -Xlocals-on-stack 101
  - assigning string constants to 303, 325
  - automatic 138
  - binary representation of 160
  - configuration language 596
  - conservative access of static and global variables 75
  - const
    - moving from "text" to "data" 269
    - Xdata-relative-far, with 77
    - Xdata-relative-near, with 77
  - constructor 243
  - destructor 243
  - embedded environment, initialize in setup.c 294
  - errno 498, 500, 505, 507, 508, 510, 518, 521, 527, 545, 551, 614
    - \_\_errno\_fn 506
    - preserving 506
  - extern 187
  - global
    - absolute sections 266, 292
    - allocating to register 138
    - modifying with asm macro 168
    - optimizing in conditionals 70
    - vs. local 202
    - Xsmall-const 118
    - Xsmall-data 118
  - global\_register pragma used to control allocation 138
  - initial values copying from "rom" to "ram" 281
  - initialization of locals, -Xinit-locals 92
  - local 211
  - locating initialized vs. uninitialized 265
  - locating specific address 291
  - location, #pragma section 147
  - long long 151
  - \_\_no\_malloc\_warning 557
  - register 138, 187
  - small constant static 118
  - small in SDA, \$28 register points to 196
  - static 138

- modify with asm macro 168
- vs. local 202
- static const
  - Xcode-relative-far, with 73
- string constants 303, 325
- sys\_errlist 551
- sys\_nerr 551
- unsigned long long 151
- volatile 104
- va\_start macro 501, 578, 580
- version number, displaying 48
- version\_path 10
  - directory 45
  - subdirectories & important files 11
- vertical tab escape sequence, '\v' 324
- vfprintf function 578
- vfscanf function 579
- virtual
  - base class 182
    - one extra argument added for each 193
    - pointers, added to a derived class 184
  - function table 182, 184
  - key functions, generating 185
- virtual C++ keyword 242
- virtual function table
  - array of pointers to functions 184
- VISIT type 577
- void keyword 242
- void pointers
  - arithmetic 126
- volatile
  - data 277
  - keyword 104, 204, 236, 293
    - and compatibility mode 602
    - inline assembler 167, 173
    - use for variables 277
  - member access not atomic in packed structures 144
- vprintf function 579
- vr4133 processor bug
  - assembler option 309
  - driver option 46
- vscanf function 580
- vsprintf function 580
- vsscanf function 580

- VV option 48
- VxWorks
  - C libraries 28, 484, 503
  - C++ libraries 240
  - execution environment 28
  - kernel mode 28
  - RTP applications
    - Bsymbolic option 394
    - rpath option 397
    - soname option 398
    - Xbind-lazy option 399
    - Xdynamic option 401
    - Xexclude-libs option 402
    - Xexclude-symbols option 402
    - Xpic option 111
    - Xshared option 405
    - Xstatic option 405
  - rtp execution environment 28
  - user mode 28

## W

- W a option 48
- W as option 48
- W D option 49
- W l option 49
- W ld option 49
- W m option changes default linker command file 49, 390
- w option 53
  - ddump 463
- W s option changes default startup file 49, 280, 390
- W x,arguments option 51
- W x,ext compiler option 52
- W x,filename option 50
- #warn preprocessor directive 137
- #warning preprocessor directive 137
- .warning assembler directive 361
- .warning section 384
- WC option 596
  - DCONFIG 591
  - default DCONFIG if not used 16
  - setting configuration language variables 588
  - specify configuration file 50

- use for DCONFIG 50
- vs. -WDDCONFIG 589
- \_\_wchar\_t preprocessor predefined macro 134
- wcstombs function 148, 580
- wctomb function 581
- WD environment\_variable command-line option
  - overriding values of variables 30
- WD option 50, 305, 589, 596, 597
  - overriding environment variable value 16
  - setting configuration language variable 588
- WD variable option
  - overriding configuration variable 30
- WDDCONFIG option equivalent to -WC 589
- WDDENVIRON option, setting library search path 27
- WDDOBJECT option 305
- .weak assembler directive 361
- weak pragma 148
  - COMDAT symbol may be treated as 383
- whole-program optimization
  - See cross-module optimization
- .width assembler directive 361
- windiss
  - compiling 472
  - disassembler mode
    - batch 476
    - interactive 477
  - v specify processor variant 477
- execution environment, pseudo-value 490
- simulator and disassembler 469
- simulator mode
  - a cache simulation 470
  - b load binary file 472
  - d debug using mask 472
  - e entry point 474
  - E specify endianness 474
  - h load hex file 474
  - M memory mask 474
  - m memory specification 474
  - ma automatic memory allocation 474
  - mm memory map 474
  - N windows priority 474
  - q quiet mode 475
  - s clock speed 475
  - S stack address 475

- t target processor 475
- V print version 475
- windiss/libwindiss.a library 486
- Windows
  - configuration variable DCONFIG 16
  - directory separator character 597
  - environment variables
    - DIABTMPDIR 17
    - setting 16
  - installation 10
- Wm compiler option 287
- .word assembler directive 361
- write function 581
  - RAM-disk support, writing a buffer 290

## X

- x option, ddump 461
- X options
  - Xblock-count 68
  - disable 55
  - switch-table 122
  - X 306, 398
  - x 306
  - Xa
    - See -Xdialect-k-and-r 80
  - Xaddr-... 64
  - Xaddr 276
  - Xaddr-code 262
  - Xaddr-const 262
  - Xaddr-data 261, 262
  - Xaddr-sdata 262
  - Xaddr-string 262
  - Xaddr-user 262
  - Xaddr-underscore 64
  - Xalign-... 65
  - Xalign-... 65
  - Xalign-fill-text 307
  - Xalign-min packed structures 144
  - Xalign-power2 307, 341
  - Xalign-value 307, 341
  - Xall-far-code-relative
    - See also -Xcode-relative-far 73
  - Xall-near-code-relative

- See also -Xcode-relative-near-all 74
- Xansi
    - See also -Xdialect-k-and-r 80
  - Xargs-... 66
  - Xarray-align-min 66
  - Xascii-charset
    - See also -Xcharset-ascii 70
  - Xase-dsp 307
  - Xase-mt 308
  - Xasm-debug-... 308
  - Xauto-align 308
  - Xbind-lazy 399
  - Xbitfield-compress
    - See --Xbit-fields-compress 67
  - Xbit-fields-... 66, 67
  - Xbit-fields-signed 180, 237
  - Xblock-count 11, 85, 220, 296
    - D-BCNT requirement 456
    - \_\_dbini and \_\_dbexit functions requirement 458
  - Xbool-is-... 68
  - Xbool-off 131
  - Xbottom-up-init 68
  - Xbss-... 69
  - Xbss-common-off 381
  - Xc
    - See -Xdialect-strict-ansi 80
  - Xc++-abr 69
  - Xc++-old 70
    - old preprocessor 112
  - Xcache-optimization 400
  - Xcga-min-use 70
  - Xchar-... 70, 178, 179
  - Xcharset-ascii 70
  - Xcheck-input-patterns 400
  - Xcheck-overlapping 400
  - Xclass-type-name-visible 71
  - Xclib-optim-off 71
  - Xcmo-... 72
    - and cross-module optimization 207
  - Xc-new 72
  - Xcode-absolute-... 72
  - Xcode-absolute-far 262
  - Xcode-absolute-near 262
  - Xcode-relative-... 277
    - Xcode-relative-far 73, 262, 263, 272, 273
    - Xcode-relative-far-all 262, 272, 273
    - Xcode-relative-near 73, 262, 272
    - Xcode-relative-near-all 262, 272
  - Xcomdat
    - in table of options related to template instantiation 244
    - run-time type information collapsed by 116
  - Xcomdat-info-file 75
  - Xcompress-debug-info 400
  - Xconservative-static-live 75
  - Xconst-in-... 75
  - Xconst-in-data 270
  - Xconst-in-text 258, 264, 269, 277
  - Xconventions-n32 76
  - Xcpp-dump-symbols 76
    - old preprocessor 112
  - Xcpp-no-space 76
  - Xcpu-... 308
  - Xcpu-mips32v2 308
  - Xdata-absolute-... 76
  - Xdata-absolute-far 263
  - Xdata-absolute-near 263
  - Xdata-relative-... 77, 277
  - Xdata-relative-far 263, 272, 273
  - Xdata-relative-near 263, 272
  - Xdebug-... 79
  - Xdebug-align 77
  - Xdebug-dwarf-... 78
  - Xdebug-inline-on 78
  - Xdebug-local-all 78
  - Xdebug-local-cie 78
  - Xdefault-align 308, 346
  - Xdialect-... 79
  - Xdialect-ansi 133, 601
    - See also -Xfp-min-prec-long-double 89
  - Xdialect-c89 79
  - Xdialect-c99 80
  - Xdialect-k-and-r 79, 601
  - Xdialect-pcc 205, 602
  - Xdialect-strict-ansi 80, 133, 166, 601
  - Xdigraphs-... 80
  - Xdollar-in-ident 81, 276
  - Xdont-die 401

- Xdont-link 401
- Xdynamic 401
- Xdynamic-init 81
- Xelf 401
- Xelf-rela-... 401
- Xendian-little 82
- Xenum-is-... 82, 178
- Xenum-is-int 179
- Xenum-is-small 178, 179
- Xexception
  - See also* -Xexceptions-off 83
- Xexceptions 245
- Xexceptions-... 83
- Xexclude-libs 402
- Xexclude-symbols 402
- Xexplicit-inline-factor 84
- Xexpl-instantiations 402
  - in table of options related to template instantiation 244
- Xextend-args 84, 89
- Xfar-code-relative
  - See* -Xcode-relative-far 73
- Xfar-data-relative
  - See* -Xdata-relative-far 77
- Xfeedback 85, 220, 296
- Xfeedback-... 86
- Xfix-vr4133 309
- Xforce 87
- Xforce-prototypes 87
- Xforeign-as-ld 87
- Xfor-init-scope-... 87
- Xfp-... 88
- Xfp-fast 85
- Xfp-normal 85
- Xfp-pedantic 85
- Xframe-info 89
- Xfull-pathname 89
- Xgcc-options-... 89
- Xgenerate-paddr 402
- Xgenerate-vmap 402
- Xglobals-volatile 104
- Xgnu-locals-... 309
- Xgnu-locals-off 323
- Xheader-... 309, 310
- Xheader-format 315
- Xhi-mark
  - See* -Xfeedback-frequent 86
- Xident-... 90
- Xieee754-pedantic 90
- Ximplicit-templates-... 91
  - in table of options related to template instantiation 243
- Ximport 91
- Xincfile-missing-ignore 91
- Xinit-... 92
- Xinit-section-default-pri 93
- Xinit-value 93
- Xinline 93, 200
  - inlining method 210
- Xinline-explicit-force 94
- Xint-reciprocal 94, 118
- Xintrinsic-mask 95
- Xjmpbuf-size 95
- Xk-and-r
  - See* -Xdialect-k-and-r 80
- Xkeep-assembly-file 95
- Xkeep-object-file 95
- Xkeywords 95, 152
- Xkill-opt 96, 208
- Xkill-reorder 96, 221
- Xlabel-colon 310, 318, 339
- Xlabel-colon, allowing assembler directives to start in column one 174
- Xlabel-colon-off 310, 339
- Xleading-underscore
  - See* -Xunderscore-... 124
- Xlibc 97
- Xlicense-proxy-use 97
- Xlicense-wait 98
- Xline-format 311
- Xlink-time-lint 98
- Xlint 98, 229
- Xlist-... 311
- Xlist-file-extension=... 312
- Xlit-marg-... 312
- Xllen 313
- Xlocal-data-area 100, 270
- Xlocal-data-area-static-only 101
- Xlocals-on-stack 101, 187
- Xlocal-struct

- See Xlocal-data-area 100
- Xlo-mark
  - See -Xfeedback-seldom 86
- Xmacro-arg-space-... 313, 367
- Xmacro-in-pragma 101
  - old preprocessor 112
- Xmacro-undefined-warn 101
- Xmake-dependency 102
  - old preprocessor 112
- Xmake-dependency-... 103
  - old preprocessor 112
- Xmax-inst-level 104
- Xmember-max-align 104, 144, 277
- Xmemory-is-volatile 104, 277
- Xmin-align
  - See -Xalign-min 66
- Xmips16-hw-fp-call 105
- Xmips-mad 105
- Xmips-movc 105
- Xmips-mul 105
- Xmismatch-warning 106, 603
  - and -e option 106
  - e option 43
- Xmnem-diab 313
- Xmode-64bit 106
- Xname-... 106
- Xnamespace-... 107
- Xnear-code-relative
  - See also -Xcode-relative-near 74
- Xnear-data-relative
  - See also -Xdata-relative-near 77
- Xnested-interrupts 108
- Xno-bool
  - See -Xbool-off 68
- Xno-bss
  - See -Xbss-off 69
- Xno-common
  - See -Xbss-common-off 69
- Xno-diagraphs
  - See -Xdigraphs-off 80
- Xno-double
  - See -Xfp-float-only 88
- Xno-ident
  - See -Xident-off 90
- Xno-implicit-templates
  - See -Ximplicit-templates... 91
- Xno-long-double
  - See -Xfp-long-double-off 88
- Xno-optimized-debug
  - See -X optimized-debug ... 109
- Xno-recognize-lib
  - See -Xclib-optim-off 72
- Xno-rtti
  - See -Xrtti-... 116
- Xno-wchar
  - See -Xwchar-t-... 126
- XO 17, 46, 51, 52, 85, 96, 108, 109, 115, 123, 201
  - inlines functions 210
  - sets -Xinline 94
- Xold-align 403
- Xold-inline-asm-casting 108
- Xold-scoping
  - See -Xfor-init-scope-... 87
- Xopt-count 109
- Xoptimized-debug-... 109
- Xoptimized-load 403
- Xpage-skip 313
- Xparse-size 109, 200, 608
- Xpass-source 41, 110, 129
- Xpcc
  - See -Xdialect-pcc 80
- Xpch-... 110
- Xpic 111
- Xplen 313
- Xpointers-volatile 104
- Xpragma-section-... 111
- Xprefix-underscore-... 403
- Xprepare-compress 314
- Xpreprocess-assembly 111
- Xpreprocessor-lineno-off 112
- Xpreprocessor-old 112
- Xprof-all 112
- Xprof-all-fast 112
- Xprof-count 112
- Xprof-coverage 112
- Xprof-exec 113
- Xprof-feedback 113
- Xprof-snapshot 115
- Xprof-time 113
- Xprof-time-fast 113



- Xput-const-in-text 77
- Xremove-unused-sections 404
- Xrescan-... 404
- Xrescan-libraries 388
- Xrestart 115
- Xrtc 115
- Xrtc=4 equivalent to -Xstack-probe 119
- Xrtti-... 115
- Xsection-align 405
- Xsection-pad 116
- Xsection-split 116, 428
- Xsect-pri-... 117
- Xset-noreorder 314
- Xset-reorder 314
- Xshared 405
- Xshow-configuration 117
- Xshow-inst 117
- Xshow-target 118
- Xsigned-bitfields
  - See also* -Xbit-fields-signed 67
- Xsigned-char
  - See also* -Xchar-signed 71
- Xsize-opt 118, 201, 277
- Xsmall-const 118, 258, 277, 380
- Xsmall-data 100, 118, 258, 277, 380
- Xsmall-data, r13 register points to 196
- Xsoft-float 119
- Xsort-frame-info 405
- Xspace-... 314
- Xspace-off 317, 339
- Xstack-probe 119
- Xstatic 405
- Xstatic-addr-... 119
- Xstatics-volatile 104
- Xstderr-fully-buffered 120
- Xstop-on-redeclaration 406
- Xstop-on-warning 120, 406
- Xstrict-ansi 120
  - See also* -Xdialect-strict-ansi 80
- Xstrict-bitfield-promotions 120
- Xstring-align 121
- Xstrings-in-text 270
- Xstrip-... 314
- Xstruct-... 121
- Xstruct-max-align

- See also* -Xmember-max-align 104
- Xstruct-min-align 122, 277
- Xsubtitle 315
- Xsuppress-dot-... 406
- Xsuppress-path 406
- Xsuppress-section-names 406
- Xsuppress-underscore-... 406
- Xsuppress-warnings 122
- Xswap-cr-nl 122
- Xsyntax-warning-... 123
- Xt
  - See also* -Xdialect-k-and-r 80
- Xtab-size 315
- Xtarget 123
- Xtest-at-... 123
- Xtitle 315
- Xtrailing-underscore
  - See also* -Xunderscore-... 124
- Xtruncate 124
- Xunderscore-... 124
- Xunroll 125, 216
- Xunroll-size 125, 200, 216
- Xunsigned-bit-fields
  - See also* -Xbit-fields-unsigned 67
- Xunsigned-bitfields
  - See also* -Xbit-fields-unsigned 67
- Xunsigned-char
  - See also* -Xchar-unsigned 71
- Xunused-sections-... 407
- Xuse-double
  - See also* -Xfp-min-prec-double 88
  - See also* -Xfp-min-prec-long-double 89
- Xuse-float
  - See also* -Xfp-min-prec-float 88
- Xuse-init
  - See also* -Xinit-section 93
- Xusing-std-... 125
- Xvoid-ptr-arith-ok 126
- Xwarn-use-greg 315
- Xwchar-off 134
- Xwchar\_t-... 126
- X options-Xlicense-proxy-path 98
- .xdef assembler directive 321, 361
  - declaring ordinary external symbols 321
- .xref assembler directive 361, 382

## Y

- Y I option [45, 53](#)
- Y L option [53](#)
- Y L option, search path for -l [395, 398](#)
- y option, ddump [464](#)
- Y P option [53](#)
- Y P option, search path for -l [389, 395, 398](#)
- Y U option [53](#)
- Y U option, search path for -l [395, 398](#)
- y0 function [581](#)
- y0f function [582](#)
- y1 function [582](#)
- y1f function [582](#)
- yn function [582](#)
- ynf function [583](#)
- yvals.h [241](#)

## Z

- z option
  - ddump [463](#)
- z option, ddump [463](#)